



An Oshkosh Corporation Company

Service and Maintenance Manual

Models **600A** **600AJ**

S/N 0300080000
to Present

P/N - 3121201

December 10, 2012

ANSI

CE



An Oshkosh Corporation Company

SECTION A. INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

A GENERAL

This section contains the general safety precautions which must be observed during maintenance of the aerial platform. It is of utmost importance that maintenance personnel pay strict attention to these warnings and precautions to avoid possible injury to themselves or others, or damage to the equipment. A maintenance program must be followed to ensure that the machine is safe to operate.

⚠ WARNING

MODIFICATION OR ALTERATION OF AN AERIAL WORK PLATFORM SHALL BE MADE ONLY WITH WRITTEN PERMISSION FROM THE MANUFACTURER.

The specific precautions to be observed during maintenance are inserted at the appropriate point in the manual. These precautions are, for the most part, those that apply when servicing hydraulic and larger machine component parts.

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

⚠ WARNING

SINCE THE MACHINE MANUFACTURER HAS NO DIRECT CONTROL OVER THE FIELD INSPECTION AND MAINTENANCE, SAFETY IN THIS AREA RESPONSIBILITY OF THE OWNER/OPERATOR.

B HYDRAULIC SYSTEM SAFETY

It should be noted that the machines hydraulic systems operate at extremely high potentially dangerous pressures. Every effort should be made to relieve any system pressure prior to disconnecting or removing any portion of the system.

Relieve system pressure by cycling the applicable control several times with the engine stopped and ignition on, to direct any line pressure back into the reservoir. Pressure feed lines to system components can then be disconnected with minimal fluid loss.

C MAINTENANCE

⚠ WARNING

FAILURE TO COMPLY WITH SAFETY PRECAUTIONS LISTED IN THIS SECTION COULD RESULT IN MACHINE DAMAGE, PERSONNEL INJURY OR DEATH AND IS A SAFETY VIOLATION.

- ENSURE REPLACEMENT PARTS OR COMPONENTS ARE IDENTICAL OR EQUIVALENT TO ORIGINAL PARTS OR COMPONENTS.
- NO SMOKING IS MANDATORY. NEVER REFUEL DURING ELECTRICAL STORMS. ENSURE THAT FUEL CAP IS CLOSED AND SECURE AT ALL OTHER TIMES.
- REMOVE ALL RINGS, WATCHES AND JEWELRY WHEN PERFORMING ANY MAINTENANCE.
- DO NOT WEAR LONG HAIR UNRESTRAINED, OR LOOSE-FITTING CLOTHING AND NECKTIES WHICH ARE APT TO BECOME CAUGHT ON OR ENTANGLED IN EQUIPMENT.
- OBSERVE AND OBEY ALL WARNINGS AND CAUTIONS ON MACHINE AND IN SERVICEMANUAL.
- KEEP OIL, GREASE, WATER, ETC. WIPED FROM STANDING SURFACES AND HAND HOLDS.
- USE CAUTION WHEN CHECKING A HOT, PRESSURIZED COOLANT SYSTEM.
- NEVER WORK UNDER AN ELEVATED BOOM UNTIL BOOM HAS BEEN SAFELY RESTRAINED FROM ANY MOVEMENT BY BLOCKING OR OVERHEAD SLING, OR BOOM SAFETY PROP HAS BEEN ENGAGED.
- BEFORE MAKING ADJUSTMENTS, LUBRICATING OR PERFORMING ANY OTHER MAINTENANCE, SHUT OFF ALL POWER CONTROLS.
- BATTERY SHOULD ALWAYS BE DISCONNECTED DURING REPLACEMENT OF ELECTRICAL COMPONENTS.
- KEEP ALL SUPPORT EQUIPMENT AND ATTACHMENTS STOWED IN THEIR PROPER PLACE.
- USE ONLY APPROVED, NONFLAMMABLE CLEANING SOLVENTS.

REVISION LOG

Original Issue	- October 15, 2004
Revised	- June 10, 2005
Revised	- October 6, 2005
Revised	- March 2, 2006
Revised	- December 4, 2007
Revised	- April 1, 2008
Revised	- December 10, 2012

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	1-1
B	Hydraulic System Safety	1-1
C	Maintenance	1-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating specifications	1-1
1.2	Capacities	1-1
1.3	Component Data	1-1
	Engine Data	1-1
	Tires	1-3
	Drive System	1-3
	Swing System	1-3
	Pumps	1-3
	Hydraulic Filters	1-3
	Dimensional Data	1-3
1.4	Function Speeds	1-4
	Machine Orientation When Doing Speed Tests	1-4
	Test Notes	1-4
1.5	Torque Requirements	1-4
1.6	Lubrication	1-5
	Hydraulic Oil	1-5
1.7	Pressure Settings	1-5
1.8	Cylinder Specifications	1-5
1.9	Major Component Weights	1-6
1.10	Critical Stability Weights	1-7
1.11	Serial Number Locations	1-7
1.12	Lubrication & Maintenance	1-8
	Draining Oil Build Up From The Propane Regulator	1-12
	Propane Fuel Filter Replacement	1-13
	Propane Fuel System Pressure Relief	1-14
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventative Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-3
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-3
	Battery	2-3
	Lubrication and Servicing	2-3

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
2.3	Lubrication and Information	2-3
	Hydraulic System	2-3
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4
2.4	Cylinder Drift Test	2-4
	Platform Drift	2-4
	Cylinder Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-5
2.6	Welding on JLG Equipment	2-5
	Do the Following When Welding on JLG Equipment	2-5
	Do NOT Do the Following When Welding on JLG Equipment	2-5
SECTION 3 - CHASSIS & TURNTABLE		
3.1	Tires & Wheels	3-1
	Tire Inflation	3-1
	Tire Damage	3-1
	Wheel and Tire Replacement	3-1
	Wheel Installation	3-1
3.2	Drive Torque hub	3-2
	Roll, Leak and Brake Testing	3-2
	Tightening and Torquing Bolts	3-3
	Main Disassembly	3-3
	Input Carrier Disassembly	3-7
	Hub-Spindle Disassembly	3-8
	Spindle-Brake Disassembly	3-9
	Cover Disassembly	3-11
	Input Carrier Sub-Assembly	3-12
	Output Planet Gear Sub-Assembly	3-12
	Spindle - Brake Sub-Assembly	3-12
	Hub-Spindle Sub-Assembly	3-13
	Cover Sub-Assembly	3-14
	Main Assembly	3-14
	Integral Brake Check	3-14
3.3	Drive Brake - Mico (S/N 56718 to 81836)	3-18
	Disassembly	3-18
	Assembly	3-18
	Bleeding	3-20
3.4	Free Wheeling Option	3-21
	To Disengage Drive Motors and Brakes (Free Wheel) for Towing, etc.	3-21
	To Engage Drive Motors and Brakes (Normal Operation)	3-21
3.5	Drive Motor - 4WD (Prior to S/N 81836)	3-21
	Spare Parts Kits	3-21
	Replacing the Drive Shaft Seal	3-23
	Disassembly and Assembly	3-24
	Assembly Notes	3-27
	Taper Roller Bearing Initial Tension	3-29
	Testing and Setup	3-29
3.6	Drive Motor - 2WD (Prior to S/N 81836)	3-30
	Shaft Seal Replacement	3-30

SECTION NO.	TITLE	PAGE NO.
3.7	Drive Motor (S/N 81836 to Present)	3-30
	Description	3-30
	Shaft Seal Replacement	3-31
	Troubleshooting	3-32
	Loop Flushing Valve	3-33
	Disassembly	3-34
	Inspection	3-38
	Assembly	3-40
	Initial Start-up Procedures	3-45
3.8	Oscillating Axle Bleeding Procedure and Lockout Test	3-46
	Lockout Cylinder Bleeding	3-46
	Oscillating Axle Lockout Test	3-46
3.9	Swing Hub	3-47
	Adjustment Procedures	3-47
	Disassembly	3-48
	Main Assembly Procedure	3-48
	Hub Shaft Sub-Assembly	3-51
	Carrier Sub-Assembly	3-53
3.10	Swing Bearing	3-56
	Turntable Bearing Mounting Bolt Condition Check	3-56
	Wear Tolerance	3-56
	Swing Bearing Replacement	3-58
	Swing Bearing Torque Values	3-59
3.11	Swing Brake - Mico	3-60
	Disassembly	3-60
	Inspection	3-60
	Assembly	3-60
3.12	Rotary Coupling - s/n 81836 to Present	3-62
3.13	Generator	3-67
	Every 250 hours	3-67
	Every 500 hours	3-67
	Overload Protection	3-67
	Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings	3-67
3.14	Spark Arrester Cleaning Instructions	3-69
3.15	Dual Fuel System	3-69
	Changing from Gasoline to LP Gas	3-69
	Changing from LP Gas to Gasoline	3-69
3.16	Ford EFI Engine	3-69
	Performing Diagnostics	3-69
	ECM AND SENSORS	3-70
	Fuel System	3-76
3.17	Ford LPG System	3-81
	Description	3-81
	Regulator	3-81
	Megajector	3-81
	Mixer	3-81
	Lockoff Solenoid	3-83
	Megajector Diagnostic Code Descriptions	3-83
3.18	Deutz EMR 2 (S/N 84711 to Present)	3-86
3.19	GM Engine General Maintenance	3-99
	Maintenance of the Drive Belt	3-99
	Engine Electrical System Maintenance	3-99
	Checking/Filling Engine Oil Level	3-99
	Changing The Engine Oil	3-100
	Coolant Fill Procedure - Dual Fuel Engine	3-100

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
3.20	GM Engine Dual Fuel System	3-101
	Fuel Filter	3-102
	Electric Lock Off	3-102
	EPR Assembly	3-102
	Low Pressure Regulator (LPR)	3-103
	Air Fuel Mixer	3-103
	Electronic Throttle Control (ETC)	3-104
	Engine Control Module	3-104
	Heated Exhaust Gas Oxygen Sensor	3-105
	Gasoline Multi Point Fuel Injection System (MPFI)	3-105
	Gasoline Fuel Pump	3-105
	Gasoline Pressure And Temperature Sensor Manifold	3-105
	Fuel Filter	3-106
	Fuel Injector Rail	3-106
	Fuel Injector	3-106
3.21	GM Engine Fuel System Repair	3-106
	Propane Fuel System Pressure Relief	3-106
	Propane Fuel System Leak Test	3-106
	Propane Fuel Filter Replacement	3-107
	Electronic Pressure Regulator (EPR) Assembly Replacement	3-107
	Temperature Manifold Absolute Pressure (TMAP) Sensor	3-109
	Electronic Throttle Control Replacement	3-109
	Mixer Replacement	3-110
	Coolant Hose Replacement	3-111
	Vapor Hose Replacement	3-111
	Engine Control Module Replacement	3-111
	Heated Exhaust Gas Oxygen Sensor Replacement	3-111
3.22	LP Gas Fitting Inspection	3-112
3.23	GM Engine LPG Fuel System Diagnosis	3-113
	Fuel System Description	3-113
	Diagnostic Aids	3-113
SECTION 4 - BOOM & PLATFORM		
4.1	Wear Pads	4-1
	Tower Boom	4-1
	Main Boom	4-1
4.2	Boom Maintenance	4-3
	Removal	4-3
	Disassembly of Boom Sections	4-4
	Inspection	4-4
	Assembly	4-5
	Installation	4-5
4.3	Tower Boom	4-6
	Removal	4-6
	Disassembly	4-7
	Inspection	4-8
	Assembly	4-8
	Installation	4-9
4.4	Boom Cleanliness Guidelines	4-9
4.5	Articulating Jib Boom	4-10
	Removal	4-10
	Disassembly	4-10
	Inspection	4-10
	Assembly	4-10
4.6	Limit Switches and Cam Valve Adjustment	4-11

SECTION NO.	TITLE	PAGE NO.
4.7	Platform	4-14
	Platform Sections Replacement	4-14
4.8	Rotator - Helac (Prior to S/N 0300132474)	4-14
	Disassembly	4-14
	Inspection	4-16
	Assembly	4-16
4.9	Rotary Actuator (S/N 0300132474 to Present)	4-17
	Theory of Operation	4-17
	Required Tools	4-18
	Disassembly	4-21
	Inspection	4-25
	Assembly	4-25
	Installing Counterbalance Valve	4-30
	Testing the Actuator	4-31
	Installation and Bleeding	4-31
	Troubleshooting	4-32
4.10	Foot Switch Adjustment	4-33
4.11	Boom Synchronizing Procedure	4-33
 SECTION 5 - HYDRAULICS		
5.1	Lubricating O-Rings in the Hydraulic System	5-1
	Cup and Brush	5-1
	Dip Method	5-2
	Spray Method	5-2
	Brush-on Method	5-2
5.2	Cylinders - Theory of Operation	5-3
	Systems Incorporating Double Acting Cylinders	5-3
	Systems Incorporating Holding Valves	5-3
5.3	Cylinder Checking Procedure	5-3
	Cylinders Without Counterbalance Valves - Master Cylinder and Steer Cylinder	5-3
	Cylinders With Single Counterbalance Valve	5-3
	Cylinders With Dual Counterbalance Valves	5-4
5.4	Cylinder Repair	5-4
	Disassembly	5-4
	Cleaning and Inspection	5-6
	Assembly	5-7
5.5	Cylinder Removal and Installation	5-10
	Main Boom Telescope Cylinder Removal	5-10
	Main Boom Telescope Cylinder Installation	5-10
	Main Boom Lift Cylinder Removal	5-11
	Main Boom Lift Cylinder Installation	5-12
	Upright Level Cylinder Removal	5-12
	Upright Level Cylinder Installation	5-14
	Tower Boom Lift Cylinder Removal	5-15
	Tower Lift Cylinder Installation	5-16
	Tower Telescope Cylinder Removal	5-16
	Tower Telescope Cylinder Installation	5-16
5.6	Variable Displacement pump (M46 series)	5-27
	Troubleshooting	5-27
	Inspections and Adjustments	5-30
	Minor Repair and Replacement	5-33
5.7	Valves - Theory of Operation	5-37
	Solenoid Control Valve - Rexroth	5-37
	Relief Valves	5-37

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
5.8	Pressure Setting Procedures	5-38
	Main Relief, Steer, Swing and Lift Down	5-38
	Platform Level	5-38
	Articulating Jib Boom (If Equipped)	5-38
	4 Wheel Steer (If Equipped)	5-42
5.9	Hydraulic Component Start-Up Procedures and Recommendations	5-42
5.10	Hydraulic Pump W/hayes Pump Drive Coupling Lubrication.	5-43
SECTION 6 - JLG CONTROL SYSTEM		
6.1	Introduction	6-1
6.2	To Connect the JLG Control System Analyzer	6-3
6.3	Using the Analyzer	6-3
6.4	Changing the Access Level of the Hand Held Analyzer	6-5
6.5	Adjusting Parameters Using the Hand Held Analyzer	6-7
6.6	Machine Setup	6-8
6.7	Level Vehicle Description	6-8
6.8	Machine Personality Settings	6-17
6.9	Analyzer Diagnostics Menu Structure.	6-56
SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS		
7.1	General	7-1
7.2	Multimeter Basics	7-1
	Grounding	7-1
	Backprobing	7-1
	Min/Max	7-1
	Polarity	7-1
	Scale	7-1
	Voltage Measurement	7-1
	Resistance Measurement	7-2
	Continuity Measurement	7-2
	Current Measurement	7-3
7.3	Applying Silicone Dielectric Compound to Electrical Connections	7-3
7.4	AMP Connector	7-4
	Applying Silicone Dielectric Compound to AMP Connectors.	7-4
	Assembly	7-4
	Disassembly.	7-6
	Wedge Lock.	7-6
	Service - Voltage Reading	7-6
7.5	Deutsch Connectors	7-8
	DT/DTP Series Assembly.	7-8
	DT/DTP Series Disassembly	7-8
	HD30/HDP20 Series Assembly	7-9
	HD30/HDP20 Series Disassembly.	7-9

FIGURE NO.	TITLE	PAGE NO.
1-1.	Serial Number Locations	1-7
1-2.	Lubrication & Maintenance Point Location	1-8
1-3.	Deutz Engine Dipstick	1-11
1-4.	Filter Lock Assembly	1-13
1-5.	Torque Chart (SAE Fasteners - Sheet 1 of 7)	1-15
1-6.	Torque Chart (SAE Fasteners - Sheet 2 of 7)	1-16
1-7.	Torque Chart (SAE Fasteners - Sheet 3 of 7)	1-17
1-8.	Torque Chart (SAE Fasteners - Sheet 4 of 7)	1-18
1-9.	Torque Chart (METRIC Fasteners - Sheet 5 of 7)	1-19
1-10.	Torque Chart (METRIC Fasteners - Sheet 6 of 7)	1-20
1-11.	Torque Chart (METRIC Fasteners - Sheet 7 of 7)	1-21
2-1.	Engine Operating Temperature Specifications - Deutz	2-9
2-2.	Engine Operating Temperature Specifications - Ford	2-10
2-3.	Engine Operating Temperature Specifications - Caterpillar	2-11
2-4.	Engine Operating Temperature Specifications - GM	2-12
3-1.	Main Disassembly	3-4
3-2.	Input Carrier	3-5
3-3.	Planet Gear Sub Assembly	3-6
3-4.	Input Carrier	3-7
3-5.	Planet Gear Subassembly	3-7
3-6.	Hub Spindle	3-8
3-7.	Spindle Brake	3-9
3-8.	Coupling Subassembly	3-10
3-9.	Cover	3-11
3-10.	Hub Assembly	3-15
3-11.	Bearing Cup Pressing Tool	3-16
3-12.	Seal Pressing Tool	3-16
3-13.	Bearing Cup Pressing Tool	3-17
3-14.	Drift Pin for Lining Up Thrust Washers with Output Planet Gear	3-17
3-15.	Drive Brake - Mico	3-19
3-16.	Disconnecting the Drive Hubs	3-21
3-17.	Flow Control Pilot Valves	3-28
3-18.	Drive Motor Cross Section	3-30
3-19.	Removing the Shaft Seal	3-31
3-20.	Loop Flushing Spool	3-33
3-21.	Loop Flushing Spool	3-34
3-22.	Plugs, Fittings, and Speed Sensor	3-34
3-23.	End Cap	3-35
3-24.	Valve Plate & Rear Shaft Bearing	3-35
3-25.	Cylinder Kit	3-36
3-26.	Shaft Seal	3-36
3-27.	Shaft & Front Bearing	3-36
3-28.	Swash Plate & Servo Piston	3-37
3-29.	Cylinder Kit Disassembly	3-37
3-30.	Servo Piston	3-40
3-31.	Cylinder Kit Assembly	3-41
3-32.	Swash Plate and Journal Bearing	3-41

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
3-33.	Shaft and Front Bearing	3-42
3-34.	Cylinder Kit Installation	3-42
3-35.	Servo Spring and Minimum Angle Stop	3-42
3-36.	Valve Plate and Rear Bearing	3-43
3-37.	End Cap.	3-43
3-38.	Shaft Seal	3-44
3-39.	Plugs and Fittings Installation	3-44
3-40.	Loop Flushing Spool	3-45
3-41.	Swing Torque Hub Adjustment.	3-47
3-42.	Swing Drive Hub (Fairfield)	3-55
3-43.	Swing Bearing Bolt Feeler Gauge Check.	3-56
3-44.	Swing Bearing Tolerance Boom Placement	3-57
3-45.	Swing Bearing Tolerance Measuring Point	3-58
3-46.	Swing Bearing Torque Sequence.	3-59
3-47.	Swing Brake Assembly (Mico)	3-61
3-48.	Rotary Coupling - Sheet 1 of 2	3-63
3-49.	Rotary Coupling - Sheet 2 of 2	3-64
3-50.	Rotary Coupling Port Location - 2WS	3-65
3-51.	Rotary Coupling Port Location - 4WS	3-66
3-52.	Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings	3-68
3-53.	EFI Component Location	3-73
3-54.	Typical Fuel System	3-77
3-55.	Deutz Sensors for JLG Control System	3-85
3-56.	EMR 2 Engine Side Equipment.	3-87
3-57.	Deutz EMR 2 Troubleshooting Flow Chart	3-88
3-58.	Deutz EMR 2 Vehicle Side Connection Diagram	3-89
3-59.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 1 of 2	3-90
3-60.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 2 of 2	3-91
3-61.	EMR 2 Engine Plug Pin Identification	3-92
3-62.	EMR 2 Vehicle Plug Pin Identification	3-93
3-63.	EMR2 Fault Codes - Sheet 1 of 5	3-94
3-64.	EMR2 Fault Codes - Sheet 2 of 5	3-95
3-65.	EMR2 Fault Codes - Sheet 3 of 5	3-96
3-66.	EMR2 Fault Codes - Sheet 4 of 5	3-97
3-67.	EMR2 Fault Codes - Sheet 5 of 5	3-98
3-68.	Engine Oil Dip Stick	3-99
3-69.	Electric Fuel Lock Off	3-102
3-70.	EPR Assembly	3-102
3-71.	Low Pressure Regulators	3-103
3-72.	Air Fuel Mixer.	3-103
3-73.	ETC throttle control device	3-104
3-74.	LPG Engine Control Unit (ECM)	3-104
3-75.	ECM Assembly	3-104
3-76.	Heated Exhaust Gas Oxygen Sensor (HEGO)	3-105
3-77.	Gasoline Fuel Pressure and Temperature Manifold Assembly	3-105

FIGURE NO.	TITLE	PAGE NO.
3-78.	Filter Lock Assembly	3-107
3-79.	EPR Assembly	3-107
3-80.	Pressure Regulator Section	3-108
3-81.	(TMAP) Sensor & Electronic Throttle Control (ETC)	3-109
3-82.	Mixer Assembly	3-110
3-83.	LP Gas Fitting Components	3-112
3-84.	Hood Mounting Bracket Clearance	3-112
3-85.	EPR Assembly	3-113
4-1.	Location and Thickness of Wear Pads	4-1
4-2.	Boom Powertrack Installation	4-2
4-3.	Reassembly of Components - Rotator and Slave Leveling Cylinder	4-3
4-4.	Location of Components - Boom Powertrack	4-4
4-5.	Location of Components - Upright	4-6
4-6.	Location of Components - Tower Boom	4-7
4-7.	Location of Components - Tower Boom Powertrack	4-7
4-8.	Location of Components - Articulating Jib Boom	4-10
4-9.	Boom Limit Switch Adjustments	4-12
4-10.	Fiberglass Bar Installation	4-13
4-11.	Platform Section Replacement	4-14
4-13.	Removing Portion of End Cap	4-14
4-14.	Heating Setscrew	4-14
4-15.	Removing Setscrew	4-14
4-12.	Rotator Assembly (Helac)	4-15
4-16.	Removing End Cap	4-16
4-17.	Removing Shaft from Housing	4-16
4-18.	Removing Sleeve from Housing	4-16
4-19.	Actuator Timing	4-17
4-20.	Rotary Actuator - Exploded View	4-19
4-21.	Rotary Actuator - Assembly Drawing	4-20
4-22.	Rotator Counterbalance Valve	4-30
4-23.	Platform Support Torque Values	4-33
5-1.	Cylinder Barrel Support	5-5
5-2.	Cap Screw Removal	5-5
5-3.	Cylinder Rod Support	5-5
5-4.	Tapered Bushing Removal	5-6
5-5.	Composite Bearing Installation	5-6
5-6.	Rod Seal Installation	5-7
5-7.	Poly-Pak Piston Seal Installation	5-7
5-8.	Wiper Seal Installation	5-7
5-9.	Installation of Head Seal Kit	5-7
5-10.	Piston Seal Kit Installation	5-8
5-11.	Tapered Bushing Installation	5-8
5-12.	Seating the Tapered Bearing	5-9
5-13.	Rod Assembly Installation	5-9
5-14.	Location of Components - Telescope and Lift Cylinder	5-11
5-15.	Leveling Cylinder Removal	5-12
5-16.	Overriding the Plunger Valve	5-12
5-17.	Boom Positioning and Support, Cylinder Repair	5-13
5-18.	Tower Telescope Cylinder Removal	5-15

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
5-19.	Axle Lockout Cylinder	5-17
5-20.	Level Cylinder	5-18
5-21.	Jib Lift Cylinder	5-19
5-22.	Master Cylinder	5-20
5-23.	Steer Cylinder	5-21
5-24.	Level (Upright) Cylinder	5-22
5-25.	Main Boom Lift Cylinder	5-23
5-26.	Tower Boom Lift Cylinder	5-24
5-27.	Main Boom Telescope Cylinder	5-25
5-28.	Tower Boom Telescope Cylinder	5-26
5-29.	Troubleshooting - Neutral Difficult or Impossible to Find	5-27
5-30.	Troubleshooting - System Operating Hot	5-28
5-31.	Troubleshooting - Transmission Operates in One Direction Only	5-28
5-32.	Troubleshooting - System Response is Sluggish	5-29
5-33.	Troubleshooting - System Will Not Operate in Either Direction	5-30
5-34.	Variable Displacement Pump	5-33
5-35.	Articulating Jib Boom Pressure Adjustments	5-38
5-36.	Main Control Valve Pressure Adjustments - Sheet 1 of 2	5-39
5-37.	Main Control Valve Pressure Adjustments - Sheet 2 of 2	5-40
5-38.	Location of Components - Main Control Valve	5-41
6-1.	Hand Held Analyzer	6-1
6-2.	ADE Block Diagram	6-2
6-3.	Analyzer Connecting Points	6-4
6-4.	Control Module Location	6-6
6-5.	Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 1 of 4	6-9
6-6.	Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 2 of 4	6-10
6-7.	Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 3 of 4	6-11
6-8.	Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 4 of 4	6-12
6-9.	Analyzer Flow Chart, Version 5.X Software - Sheet 1 of 4	6-13
6-10.	Analyzer Flow Chart, Version 5.X Software - Sheet 2 of 4	6-14
6-11.	Analyzer Flow Chart, Version 5.X Software - Sheet 3 of 4	6-15
6-12.	Analyzer Flow Chart, Version 5.X Software - Sheet 4 of 4	6-16
7-1.	Voltage Measurement (DC)	7-1
7-2.	Resistance Measurement	7-2
7-3.	Continuity Measurement	7-2
7-4.	Current Measurement (DC)	7-3
7-5.	Connector Assembly Figure 1	7-4
7-6.	AMP Connector	7-4
7-7.	Connector Assembly Figure 2	7-5
7-8.	Connector Assembly Figure 3	7-5
7-9.	Connector Assembly Figure 4	7-5
7-10.	Connector Disassembly	7-6
7-11.	Connector Installation	7-7
7-12.	DT/DTP Contact Installation	7-8
7-13.	DT/DTP Contact Removal	7-8
7-14.	HD/HDP Contact Installation	7-9
7-15.	HD/HDP Locking Contacts Into Position	7-9
7-16.	HD/HDP Contact Removal	7-9
7-17.	HD/HDP Unlocking Contacts	7-9

FIGURE NO.	TITLE	PAGE NO.
7-18.	Electrical Harness - S/N 80000 to 87000 - Sheet 1 of 2	7-10
7-19.	Electrical Harness - S/N 80000 to 87000 - Sheet 2 of 2	7-11
7-20.	Electrical Harness - S/N 87000 to Present - Sheet 1 of 2	7-12
7-21.	Electrical Harness - S/N 87000 to Present - Sheet 2 of 2	7-13
7-22.	Electrical Schematic - ADE - Sheet 1 of 6	7-14
7-23.	Electrical Schematic - ADE - Sheet 2 of 6	7-15
7-24.	Electrical Schematic - ADE - Sheet 3 of 6	7-16
7-25.	Electrical Schematic - ADE - Sheet 4 of 6	7-17
7-26.	Electrical Schematic - ADE - Sheet 5 of 6	7-18
7-27.	Electrical Schematic - ADE - Sheet 6 of 6	7-19
7-28.	Hydraulic Schematic - Sheet 1 of 6	7-20
7-29.	Hydraulic Schematic - Sheet 2 of 6	7-21
7-30.	Hydraulic Schematic - Sheet 3 of 6	7-22
7-31.	Hydraulic Schematic - Sheet 4 of 6	7-23
7-32.	Hydraulic Schematic - Sheet 5 of 6	7-24
7-33.	Hydraulic Schematic - Sheet 6 of 6	7-25

LIST OF TABLES

TABLE NO.	TITLE	PAGE NO.
1-1	Operating Specifications	1-1
1-2	Capacities	1-1
1-3	Ford LRG-425 Specifications	1-1
1-4	Deutz F4M2011 Specifications	1-2
1-5	Deutz D2011L04 Specifications	1-2
1-6	Caterpillar 3044C Specifications	1-2
1-7	GM 3.0L	1-2
1-8	Tire Specifications	1-3
1-9	Drive System	1-3
1-10	Swing System	1-3
1-11	Pumps	1-3
1-12	Pumps	1-3
1-13	Dimensional Data	1-3
1-14	Function Speeds (In Seconds)	1-4
1-15	Torque Requirements	1-4
1-16	Hydraulic Oil	1-5
1-17	Mobilfluid 424 Specs.	1-5
1-18	Mobil DTE 13M Specs.	1-5
1-19	Pressure Settings	1-5
1-20	Cylinder Specifications - 600A	1-5
1-21	Cylinder Specifications - 600AJ	1-6
1-22	Major Component Weights - 600A	1-6
1-23	Major Component Weights - 600AJ	1-6
1-24	Critical Stability Weights - 600A	1-7
1-25	Critical Stability Weights - 600AJ	1-7
1-26	Lubrication Specifications	1-8
2-1	Inspection and Maintenance	2-2
2-2	Cylinder Drift	2-5
2-3	Inspection and Preventive Maintenance Schedule	2-6
3-1	Wheel Torque Chart	3-2
3-2	Troubleshooting	3-20
3-3	Excessive Noise and/or Vibration	3-32
3-4	System Operating Hot	3-32
3-5	Won't Shift or Slow to Start	3-32
3-6	Displacement Identifiers	3-36
3-7	Slipper Foot Thickness & End Play	3-38
3-8	Cylinder Block Measurements	3-38
3-9	Coupling Port Information Table - 2WS	3-62
3-10	Coupling Port Information Table - 4WS	3-62
3-11	ECM Diagnostic Trouble Codes	3-71
3-12	LPF Fuel System Diagnosis	3-114
3-13	Symptom Diagnosis	3-117
3-14	DTC to SPN/FMI Cross Reference Chart	3-125
4-1	Troubleshooting	4-32
5-1	Holding Valve Torque Specifications	5-9
5-2	Cylinder Head and Tapered Bushing Torque Specifications	5-10
6-1	Personality Ranges/Defaults	6-17
6-2	Help Fault Codes, Displayed Faults, and Descriptions	6-20
6-3	Machine Configuration Programming Information Prior to Software Version P5.3	6-31
6-4	Machine Configuration Programming Information Software Version P5.3 to P6.1	6-35
6-5	Machine Configuration Programming Information Software Version P6.1 to Present	6-40
6-6	Analyzer Fault Code Listing	6-48
6-7	Adjustments - Personality Descriptions	6-56
6-8	Diagnostic Menu Descriptions	6-59

SECTION 1. SPECIFICATIONS

1.1 OPERATING SPECIFICATIONS

Table 1-1. Operating Specifications

Maximum Work Load (Capacity) Unrestricted:	500 lb (230 kg)
Restricted:	1000 lb (450 kg)
Maximum Travel Grade (Gradeability) 2WD	30%
4WD	45%
Maximum Travel Grade (Side Slope)	5°
Turning Radius - (outside) 2WS	17 ft. 8 in. (5.38 m)
4WS	11 ft. 8 in. (3.56 m)
Turning Radius - (outside) narrow chassis 2WS	16 ft. 6 in. (5.03 m)
4WS	11 ft. 2 in. (3.4 m)
Turning Radius - (inside) 2WS	11 ft. 5 in. (3.48 m)
4WS	5 ft. 6 in. (1.68 m)
Turning Radius - (inside) narrow chassis 2WS	12 ft. 2 in. (3.71 m)
4WS	5 ft. 7 in. (1.7 m)
Maximum Tire Load:	11,500 lbs. (5227 kg)
Ground Bearing Pressure 600A	77 psi (5.4 kg/cm ²)
600AJ	75 psi (5.3 kg/cm ²)
600A - narrow chassis	94 psi (6.6 kg/cm ²)
600AJ - narrow chassis	94 psi (6.6 kg/cm ²)
Maximum Drive Speed - A Models 2WD	3.6 MPH (5.80 Km/hr.)
4WD	4 MPH (6.44 Km/hr.)
Gross Machine Weight (Approximate) 600A	21,500 lbs. (9,752 kg)
600AJ	22,200 lbs. (10,025 kg)
600A - narrow chassis	23,900 lbs. (10,841 kg)
600AJ - narrow chassis	24,000 lbs. (10,886 kg)

1.2 CAPACITIES

Table 1-2. Capacities

Fuel Tank	30 U.S. Gallons (113.6 L)
Hydraulic Oil Tank	30.6 Gallons (115.8 L) with 10% air space
Hydraulic System (Including Tank)	36.72 Gallons (139 L)
Torque Hub, Drive*	17 ounces (0.50 L)
Engine Crankcase Ford LRG-425 Gas w/Filter	4.5 quarts (4.25L)
Deutz F4M2011F Diesel w/Filter	11 quarts (10.5 L)
Caterpillar 3044C Diesel w/Filter	10.6 quarts (10 L)
GM 3.0L w/Filter	4.5 qts. (4.25 L)
Cooling System	16 Quarts (15.14 L.)
*Torque hubs should be one half full of lubricant.	

1.3 COMPONENT DATA

Engine Data

Table 1-3. Ford LRG-425 Specifications

Fuel	Gasoline
Crankcase Capacity	4.5 Quarts (4.25 L) w/Filter
Idle RPM	1000
Low RPM	1800
High RPM	2800
Alternator	40 Amp, Belt Drive
Battery	85 Amphour, 550 Cold Cranking Amps, 12 VDC
Fuel Consumption Low RPM	3.45 GPH (13.06 lph)
High RPM	4.60 GPH (17.41 lph)
Horsepower	54 @ 2400 RPM, full load
Cooling System	16 Quarts (15.14 L.)
Spark Plug	AWSF-52-C
Spark Plug Gap	0.044 in. (1.117 mm)

SECTION 1 - SPECIFICATIONS

Table 1-4. Deutz F4M2011 Specifications

Fuel	Diesel
Oil Capacity	
Cooling System	5 Quarts (4.5 L)
Crankcase w/Filter	11 Quarts (10.5 L)
Total Capacity	16 Quarts (15 L)
Idle RPM	1000
Low RPM	1800
High RPM	2800
Alternator	60 Amp, belt drive
Battery	1000 Cold Cranking Amps, 210 Minutes Reserve Capacity, 12 VDC
Fuel Consumption	
Low RPM	1.90 GPH (7.19 lph)
High RPM	2.50 GPH (9.46 lph)
Horsepower	65 @ 3000 RPM, full load

Table 1-5. Deutz D2011L04 Specifications

Fuel	Diesel
Oil Capacity	
Cooling System	5 Quarts (4.5 L)
Crankcase	11 Quarts (10.5 L) w/Filter
Total Capacity	16 Quarts (15 L)
Idle RPM	1000
Low RPM	1800
High RPM	2500
Alternator	60 Amp, belt drive
Battery	950 Cold Cranking Amps, 205 Minutes Reserve Capacity, 12 VDC
Fuel Consumption	
Low RPM	1.90 GPH (7.19 lph)
High RPM	2.50 GPH (9.46 lph)
Horsepower	49 @ 2500 RPM, full load

Table 1-6. Caterpillar 3044C Specifications

Type	Four Stroke Cycle
Cylinders	4 in-line
Bore	3.70 inch (94 mm)
Stroke	4.72 inch (120 mm)
Aspiration	turbocharged
Compression ratio	19:1
Displacement	203 in ³ (3.33 L)
Firing Order	1-3-4-2
Rotation (viewed from flywheel)	Counterclockwise
Oil Capacity (w/filter)	10.6 quarts (10 L)
Cooling System (Engine Only)	5.8 quarts (5.5 L)
Idle RPM	1000
Low RPM	1800
High RPM	2800
Alternator	60 Amp, belt drive
Battery	930 Cold Cranking Amps, 205 Minutes Reserve Capacity, 12 VDC

Table 1-7. GM 3.0L

Fuel	Gasoline or Gasoline/LP Gas
No. of Cylinders	4
BHP	
Gasoline	83 hp @ 3000 rpm
LP	75 hp @ 3000 rpm
Bore	4.0 in. (101.6 mm)
Stroke	3.6 in. (91.44 mm)
Displacement	181 cu.in. (3.0 L, 2966 cc)
Oil Capacity w/filter	4.5 qts. (4.25 L)
Minimum Oil Pressure	
at idle	6 psi (0.4 Bar) @ 1000 rpm
Hot	18 psi (1.2 Bar) @ 2000 rpm
Compression Ratio	9.2:1
Firing Order	1-3-4-2
Max. RPM	2800

Tires

Table 1-8. Tire Specifications

Size	14x17.5	14x17.5	14x17.5	IN355/ 55D625	IN355/ 55D625	18x625
Load Range	G	G	*	G	G	H
Ply Rating	14	14	N/A	14	14	16
Tire Pres- sure	90 PSI (6 Bar)	Foam- Filled	Air-Boss	90 PSI (6 Bar)	90 PSI (6 Bar)	75 PSI (5.2 Bar)

* Load Capacity - 11,800 lb. (5353 kg) -
Static

Drive System

Table 1-9. Drive System

Drive Motor Displacement	2.8 cu. in. max. 1.1 cu. in. min. (46 cm ³] max. 18 cm ³] min.)
Drive Hub Ratio	39.96:1
Drive Brake	Automatic spring applied, hydraulically released disc brakes

Swing System

Table 1-10. Swing System

Swing Motor Displacement	4.62 cu. in. (75 cm ³)
Swing Brake	Automatic spring applied hydraulically released disc brakes
Swing Hub Ratio	50:1
Hydraulic Gear Pump @ 1800 RPM	7.9 GPM (29.90 lpm)
Pump Displacement	1.02 cu. in. (16 cm ³)
Rotation	Clockwise

Pumps

Table 1-11. Pumps

Hydraulic Gear Pump	
Output @ 1800 RPM	7.9 GPM (29.90 lpm)
Displacement	1.02 cu. in. (16 cm ³)
Rotation	Clockwise
Auxiliary Power Pump	
Output	2.6 gpm 1200 psi (9.8 lpm @82.7 BAR)
Pump Displacement	0.244 cu. in. (14 cm ³)
Motor Type	DC
Rotation	Clockwise

Hydraulic Filters

Table 1-12. Pumps

Return - Bypass Type	10 Microns Absolute
Charge	10 Microns Absolute
Hydraulic Strainers (In Tank)	30 Microns

Dimensional Data

Table 1-13. Dimensional Data

Machine Height (Stowed)	8 ft. 3.75 in. (2.53 m)
Machine Length (Stowed) 600A Over Drive Axle 600AJ Over Drive Axle	26 ft. 5 in. (8.05 m) 28 ft. 11.4375 in. (8.82 m)
Machine Width Standard Narrow Chassis	8 ft. (2.44 m) 7 ft. (2.13 m)
Wheelbase	8 ft. 0 in. (2.44 m)
Boom Elevation - 600A	+60 ft. 5 3/8 in. (18.42 m) -11 in. (0.28 m)
Boom Elevation - 600AJ	+60 ft. 6 3/4 in. (18.46 m) -2 ft. 8 13/16 in. (0.83 m)

1.4 FUNCTION SPEEDS

Machine Orientation When Doing Speed Tests

Lift: Boom Retracted. Telescope Retracted. Lift Up, Record Time, Lift Down, Record Time.

Swing: Boom at Full Elevation. Telescope Retracted. Swing the Turntable off center and stop. Swing the opposite direction and start the test when the turntable is centered up. This eliminates ramp up and down on the controller affecting times.

Telescope: Boom at Full Elevation; Telescope Retracted; Telescope Out, Record Time. Telescope In, Record Time.

Drive: Test to be done on a smooth level surface. Drive Select Switch should be set to High Speed. Start approximately 25 ft. (7.62 m) from the starting point so that the unit is at maximum speed when starting the test. Results should be recorded for a 200 ft. (60.96 m) course. Drive Forward, Record Time. Drive Reverse, Record Time.

Drive (Above Horizontal): Test should be done on a smooth level surface. Drive Select Switch should be set to Low Engine. The boom should be raised above horizontal. Results should be recorded for a 50 ft. (15.24 m) course. Drive Forward, Record Time. Drive Reverse, Record Time.

Platform Rotate: Platform level and completely rotated one direction. Rotate the opposite direction, Record Time. Rotate the other direction, Record Time.

Articulating Jib: Platform level and centered with the boom. Start with the Jib down. Jib Up, Record Time. Jib Down, Record Time.

Lower Lift: Upper boom horizontal, telescoped in, Lower Lift up, Record Time. Lower Lift Down, Record Time.

Lower Telescope: Lower Lift fully elevated, Upper Boom horizontal, telescoped in. Lower Tele Out, Record Time. Lower Tele In, Record Time.

Test Notes

1. Stop watch should be started with the function, not with the controller or switch.
2. All speed tests are run from the platform. These speeds do not reflect the ground control operation.
3. The platform speed knob control must be at full speed (turned clockwise completely).
4. Function speeds may vary due to cold, thick hydraulic oil. Test should be run with the oil temperature above 100° F (38° C).

Table 1-14. Function Speeds (In Seconds)

Function	Speed
Lift Up	26-32
Lift Down	26-32
Swing Right & Left*	79-101
Telescope Out	35-50
Telescope In	22-30
Platform Rotate Right & Left**	16-25
Jib Up	22-34
Jib Down	16-26
Lower Lift Up	37-50
Lower Lift Down	28-38
Lower Telescope Out	15-23
Lower Telescope In	09-15
Drive Forward & Reverse (2WD & 4WD) Deutz Engines	33-37
Drive Forward & Reverse (2WD & 4WD) Other Engines	30-34
Drive Above Horizontal Forward & Reverse (2WD & 4WD)	46-54
*Max 10% Difference Between Left & Right	
**Max 15% Difference Between Left & Right	

4150501 - D

1.5 TORQUE REQUIREMENTS

Table 1-15. Torque Requirements

Description	Torque Value (Dry)	Interval Hours
Bearing To Chassis	190 ft. lbs. (260 Nm) See Note	50/600*
Bearing To Turntable	190 ft. lbs. (260 Nm) See Note	50/600*
Wire Rope	15 ft. lbs (20 Nm)	150
Wheel Lugs	170 ft. lbs. (231 Nm)	150
Engine Mounting Bolts	165 ft. lbs. (231 Nm)	A/R
Engine Manifold Mounting Bolts	30 ft. lbs. (42 Nm)	A/R
*Check swing bearing bolts for security after first 50 hours of operation and every 600 hours thereafter. (See Swing Bearing in Section 3.)		
NOTE: When maintenance becomes necessary or a fastener has loosened, refer to the Torque Chart to determine proper torque value.		

1.6 LUBRICATION

Hydraulic Oil

Table 1-16. Hydraulic Oil

HYDRAULIC SYSTEM OPERATING TEMPERATURE RANGE	SAE VISCOSITY GRADE
+0° to +180° F (-18° C to +83° C)	10W
+0° F to +210° F (-18° C to +99° C)	10W-20, 10W-30
+50° F to +210° F (+10° C to +210° C)	20W-20

NOTE: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity index of 152.

Table 1-17. Mobilfluid 424 Specs

SAE Grade	10W30
Gravity, API	29.0
Density, Lb/Gal. 60°F	7.35
Pour Point, Max	-46°F (-43°C)
Flash Point, Min.	442°F (228°C)
Viscosity	
Brookfield, cP at -18°C	2700
at 40° C	55 cSt
at 100° C	9.3 cSt
Viscosity Index	152

NOTE: When temperatures remain below 20° F (-7 degrees C), JLG Industries recommends the use of Mobil DTE 13M.

Table 1-18. Mobil DTE 13M Specs

ISO Viscosity Grade	#32
Specific Gravity	0.877
Pour Point, Max	-40°F (-40°C)
Flash Point, Min.	330°F (166°C)
Viscosity	
at 40° C	33cSt
at 100° C	6.6 cSt
at 100° F	169 SUS
at 210° F	48 SUS
cp at -20° F	6,200
Viscosity Index	140

Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. If use of hydraulic oil other than Kendall Hyken 052 or Mobilfluid 424 is desired, contact JLG Industries for proper recommendations.

1.7 PRESSURE SETTINGS

Table 1-19. Pressure Settings

Main Relief	3000 PSI (206.85 Bar)
Upper Boom Lift Down	1200 PSI (83 Bar)
Swing	1700 PSI (117.2 Bar)
Platform Level Forward	2800 PSI (193 Bar)
Platform Level Backward	1800 PSI (124 Bar)
Steer	1800 PSI (124 Bar)
Steer Reliefs - 4WS Front & Rear	2500 PSI (172 Bar)
Articulating Jib Boom Up	1500 PSI (103 Bar)
Articulating Jib Boom Down	1200 PSI (83 Bar)

1.8 CYLINDER SPECIFICATIONS

Table 1-20. Cylinder Specifications - 600A

DESCRIPTION	BORE	STROKE	ROD DIA.
Lower Lift	6.5 (165.1)	34.0625 (865.2)	2.5 (63.5)
Tower Telescope	3 (76.2)	63.75 (1619.3)	2 (50.8)
Upright Level	6 (152.4)	34.625 (879.5)	3 (76.2)
Upper Lift	4 (101.6)	36.625 (930.3)	2.5 (63.5)
Upper Telescope	3 (76.2)	177.75 (4514.9)	2 (50.8)
Steer (2WD/ 2WS)	2.5 (63.5)	8.812 (204.7)	1.25 (31.8)
Steer (4WD/ 2WS)	2.5 (63.5)	10.75 (273.1)	1.25 (31.8)
Lockout (2WD)	3.5 (88.9)	3.875 (98.4)	2.5 (63.5)
Lockout (4WD)	3.5 (88.9)	3.875 (98.4)	2.5 (63.5)
Master	3 (76.2)	8.5 (215.9)	1.5 (38.1)
Slave	3 (76.2)	8.5 (215.9)	1.5 (38.1)

SECTION 1 - SPECIFICATIONS

Table 1-21. Cylinder Specifications - 600AJ

DESRIPTON	BORE	STROKE	ROD DIA.
Lower Lift	6.5 (165.1)	34.0625 (865.2)	2.5 (63.5)
Tower Tele- scope	3 (76.2)	63.75 (1619.3)	2 (50.8)
Upright Level	6 (152.4)	34.625 (879.5)	3 (76.2)
Upper Lift	4 (101.6)	36.625 (930.3)	2.5 (63.5)
Upper Tele- scope	3 (76.2)	134.375 (3413.1)	2 (50.8)
Steer (2WD/ 2WSI)	2.5 (63.5)	8.812 (204.7)	1.25 (31.8)
Steer (4WD/ 2WS)	2.5 (63.5)	10.75 (273.1)	1.25 (31.8)
Lockout (2WD)	3.5 (88.9)	3.875 (98.4)	2.5 (63.5)
Lockout (4WD)	3.5 (88.9)	3.875 (98.4)	2.5 (63.5)
Master	3.5 (88.9)	13.0625 (331.8)	1.5 (38.1)
Slave	3.5 (88.9)	13.0625 (331.8)	1.5 (38.1)
Lift (Articulat- ing Jib Boom)	3 (76.2)	25.5 (647.7)	1.5 (38.1)

1.9 MAJOR COMPONENT WEIGHTS

Table 1-22. Major Component Weights - 600A

	LB.	KG.
Platform Control Console	250	113
Platform Level Cylinder	46	21
Main Boom (Includes Lift Cyl., Rotator, and Support)	1832	831
Upright including Master Cylinder	547	248
Upright Level Cylinder	316	143
Tower Boom Complete	1218	553
Turntable Complete (including engine)	9240	4191
Chassis Complete (w/pneumatic tires)	6834	3100
Chassis Complete (w/foam-filled tires)	7918	3592
Pneumatic Tire & Wheel Assembly	235	107
Foam-filled Tire & Wheel Assembly	440	200
Segmented Tire & Wheel Assembly	320	145.5
Machine Complete (GVW) - 2WD w/pneumatic tires	20700	9390
Machine Complete (GVW) - 4WD w/pneumatic tires	21150	9594

Table 1-23. Major Component Weights - 600AJ

	LB.	KG.
Platform Control Console	250	113
Platform Level Cylinder	60	27
Main Boom (Includes Lift Cyl., Rotator, and Support)	1685	764
Upright including Master Cylinder	547	248
Upright Level Cylinder	316	143
Tower Boom Complete	1218	553
Turntable Complete (including engine)	9740	4418
Chassis Complete (w/pneumatic tires)	6834	3100
Chassis Complete (w/foam-filled tires)	7918	3592
Pneumatic Tire & Wheel Assembly	235	107
Foam-filled Tire & Wheel Assembly	440	200
Segmented Tire & Wheel Assembly	320	145.5
Machine Complete (GVW) - 2WD w/pneumatic tires	22100	10025
Machine Complete (GVW) - 4WD w/pneumatic tires	22295	10113

1.10 CRITICAL STABILITY WEIGHTS

⚠ WARNING

DO NOT REPLACE ITEMS CRITICAL TO STABILITY WITH ITEMS OF DIFFERENT WEIGHT OR SPECIFICATION (FOR EXAMPLE: BATTERIES, FILLED TIRES, COUNTERWEIGHT, ENGINE & PLATFORM) DO NOT MODIFY UNIT IN ANY WAY TO AFFECT STABILITY.

Table 1-24. Critical Stability Weights - 600A

		LB.	KG.
Tire and Wheel (Ballasted Only)	Size (14-17.5)	165	75
Engine	Ford	460	209
	Deutz	534	242
	Continental	558	253
Counterweight	Weight	5700	2586
Platform	6 ft. (1.83 M)	205	93
	8 ft. (2.44 M)	230	105

Table 1-25. Critical Stability Weights - 600AJ

		LB.	KG.
Tire and Wheel (Ballasted Only)	Size (14-17.5)	165	75
Engine	Ford	460	209
	Deutz	534	242
	Continental	558	253
Counterweight	Weight	6200	2812
Platform	6 ft. (1.83 M)	205	93
	8 ft. (2.44 M)	230	105

1.11 SERIAL NUMBER LOCATIONS

A serial number plate is affixed to the left rear side of the frame. If the serial number plate is damaged or missing, the machine serial number is stamped on the left side of the frame.

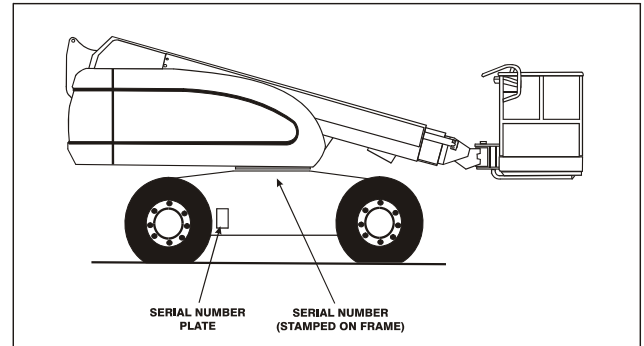


Figure 1-1. Serial Number Locations

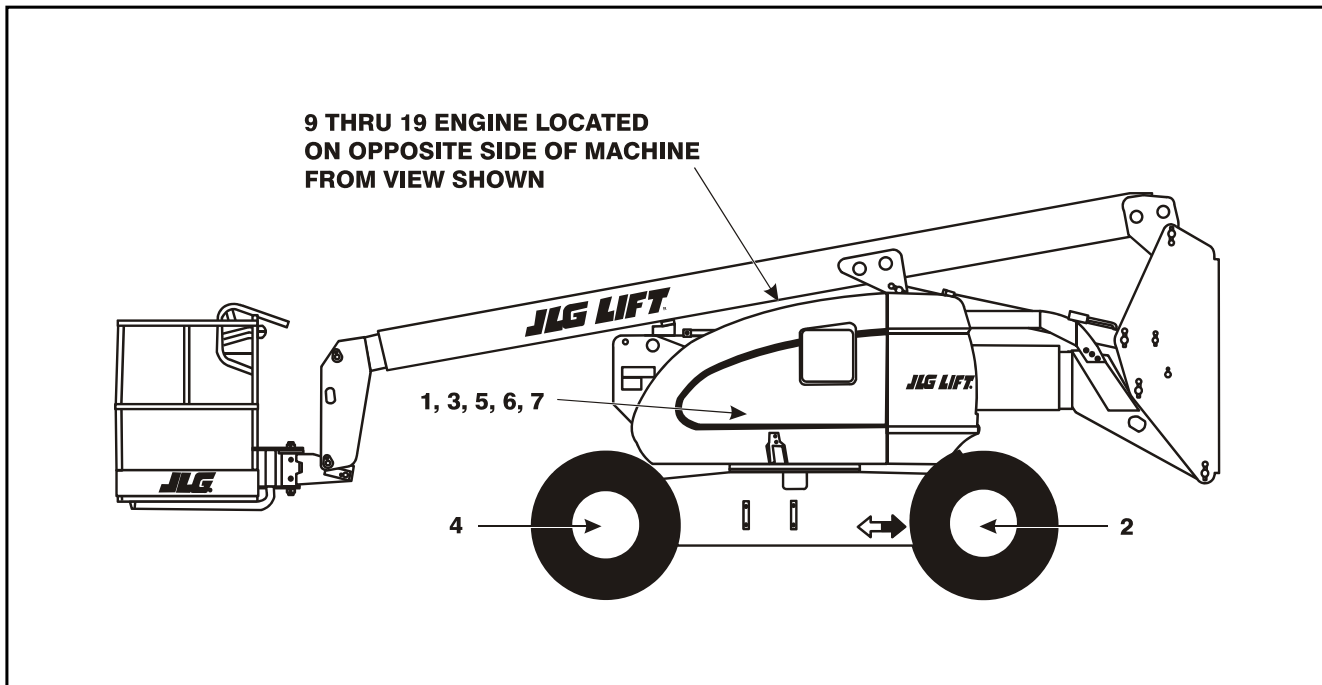


Figure 1-2. Lubrication & Maintenance Point Location

1.12 LUBRICATION & MAINTENANCE

NOTE: The following numbers correspond to those in Figure 1-2., Lubrication & Maintenance Point Location.


Table 1-26. Lubrication Specifications

KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350° F (177° C). Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.)
EPGL	Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105
HO	Hydraulic Oil. API service classification GL-3, e.g. Mobilfluid 424.
EO	Engine (crankcase) Oil. Gas - API SF, SH, SG class, MIL-L-2104. Diesel - API CC/CD class, MIL-L-2104B/MIL-L-2104C.

NOTICE


LUBRICATION INTERVALS ARE BASED ON MACHINE OPERATION UNDER NORMAL CONDITIONS. FOR MACHINES USED IN MULTI-SHIFT OPERATIONS AND/OR EXPOSED TO HOSTILE ENVIRONMENTS OR CONDITIONS, LUBRICATION FREQUENCIES MUST BE INCREASED ACCORDINGLY.

1. Swing Bearing

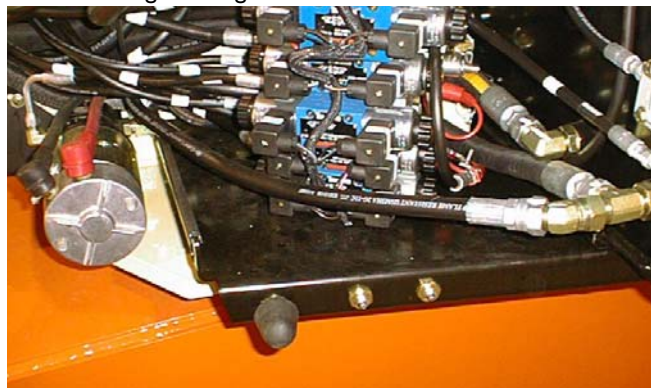


Lube Point(s) - 2 Grease Fittings
 Capacity - A/R
 Lube - MPG
 Interval - Every 3 months or 150 hrs of operation
 Comments - Remote Access

2. Wheel Bearings

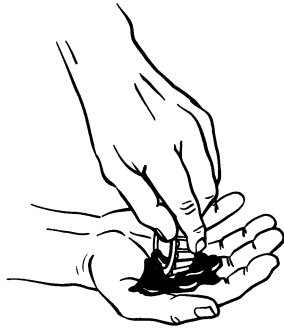


Lube Point(s) - Repack
Capacity - A/R
Lube - MPG
Interval - Every 2 years or 1200 hours of operation

3. Swing Drive Hub

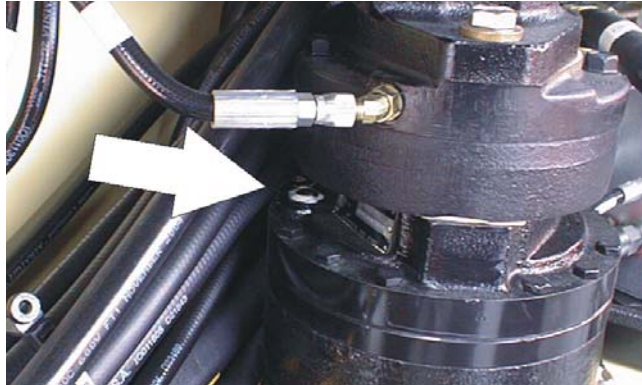


Lube Point(s) - Level/Fill Plug
Capacity - 17 oz. (1/2 Full)
Lube - EPGL
Interval - Check level every 3 months or 150 hrs of operation; change every 2 years or 1200 hours of operation

4. Wheel Drive Hub

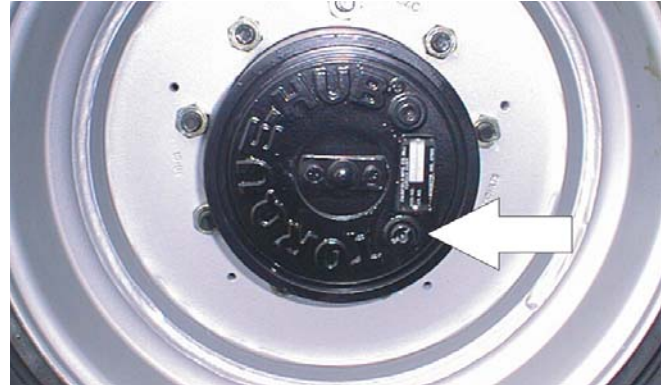

Lube Point(s) - Level/Fill Plug
Capacity - 17 oz. (1/2 Full)
Lube - EPGL
Interval - Check level every 3 months or 150 hrs of operation; change every 2 years or 1200 hours of operation

5. Hydraulic Return Filter

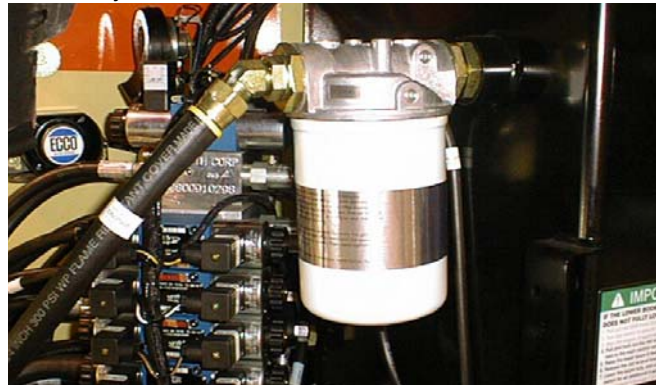

Interval - Change after first 50 hrs. and every 6 months or 300 hrs. thereafter or as indicated by Condition Indicator.


SECTION 1 - SPECIFICATIONS

6. Hydraulic Charge Filter



Interval - Change after first 50 hrs. and every 6 months or 300 hrs. thereafter or as indicated by Condition Indicator.

7. Hydraulic Tank

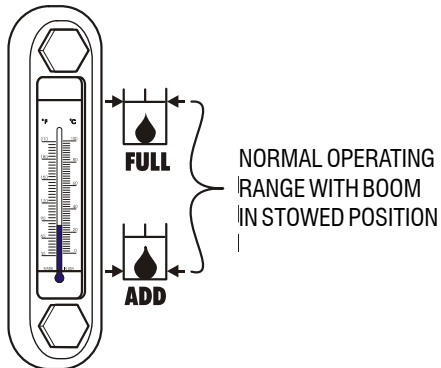

Lube Point(s) - Fill Cap


Capacity - 31 gal. (117.3 L) Tank; 37.2 gal. (140.8 L) System

Lube - HO

Interval - Check Level daily; Change every 2 years or 1200 hours of operation.

8. Suction Strainers (in tank)


REMOVE FILL CAP PLATE FROM TANK TO GAIN ACCESS TO STRAINERS

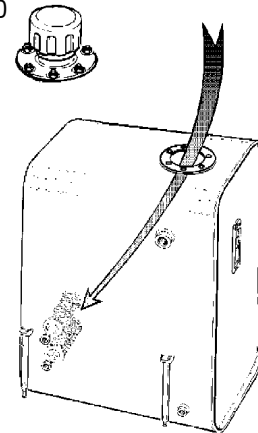

Lube Point(s) - 2

Interval - Every 2 years or 1200 hours of operation, remove and clean at time of hydraulic oil change.

9. Oil Change w/Filter - Ford LRG425

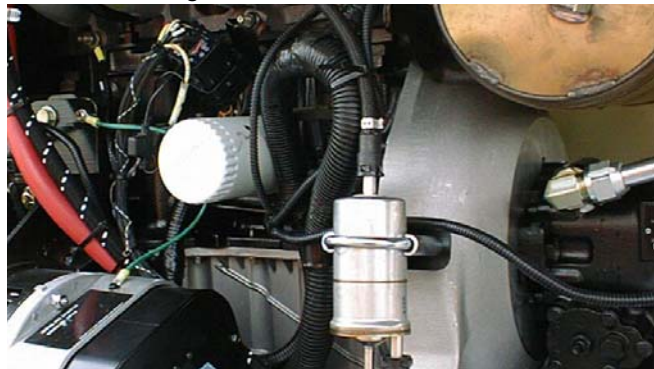

Lube Point(s) - Fill Cap/Spin-on Element

Capacity - 4.5 Quarts

Lube - EO

Interval - 3 Months or 150 hours of operation

Comments - Check level daily/Change in accordance with engine manual.

10. Oil Change w/Filter - Deutz



Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 11 Quarts Crankcase; 5 Quarts Cooler
 Lube - EO
 Interval - Every Year or 1200 hours of operation
 Comments - Check oil level, fill oil to max marking on the dipstick. Check level daily/Change in accordance with engine manual. Refer to Figure 1-3., Deutz Engine Dipstick.

11. Oil Change w/Filter - Caterpillar


Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 10.6 Quarts
 Lube - EO
 Interval - 3 Months or 150 hours of operation
 Comments - Check level daily/Change in accordance with engine manual.

12. Oil Change w/Filter - GM



Lube Point(s) - Fill Cap/Spin-on Element (JLG P/N 7027965)
 Capacity - 4.5 qt. (4.25 L) w/filter
 Lube - EO
 Interval - 3 Months or 150 hours of operation
 Comments - Check level daily/Change in accordance with engine manual.

13. Fuel Filter - Ford

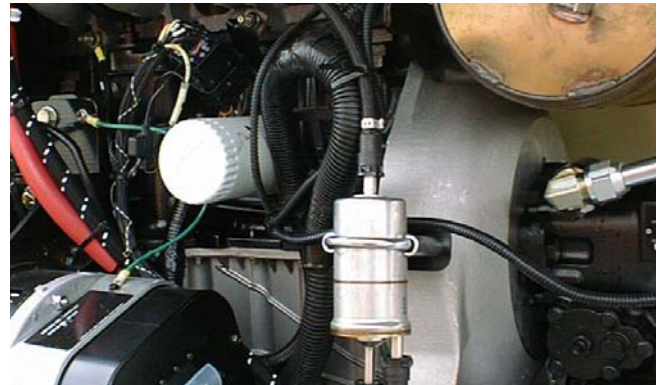

Lube Point(s) - Replaceable Element
 Interval - Every Year or 1200 hours of operation


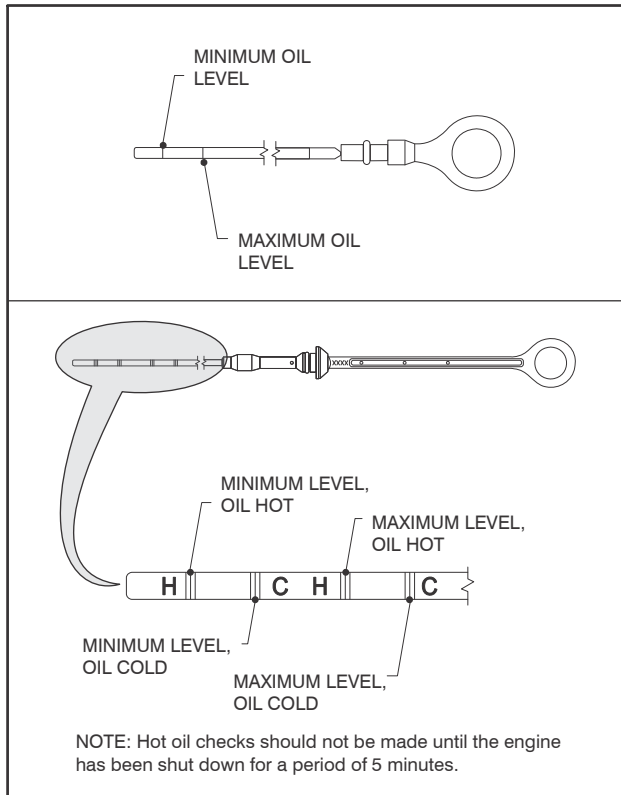


Figure 1-3. Deutz Engine Dipstick

SECTION 1 - SPECIFICATIONS

14. Fuel Filter - Deutz

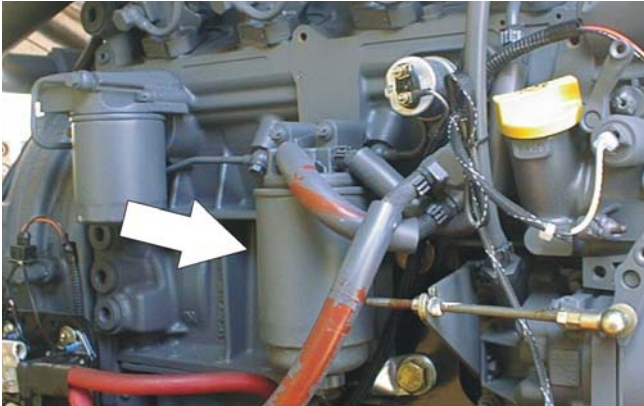

Lube Point(s) - Replaceable Element
Interval - Every Year or 600 hours of operation


15. Fuel Filter - Caterpillar

Lube Point(s) - Replaceable Element
Interval - Every Year or 600 hours of operation

16. Fuel Filter (Gasoline) - GM


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation

17. Air Filter

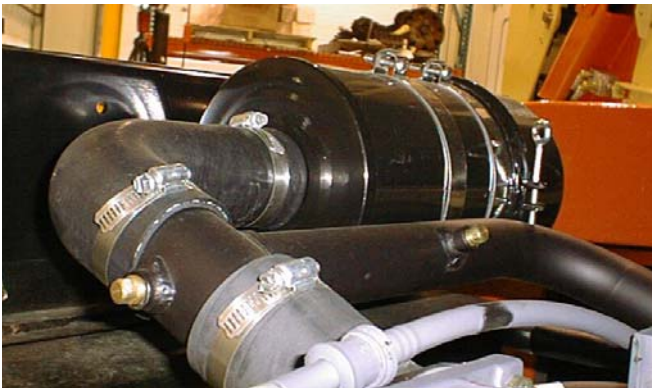

Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator

18. Electronic Pressure Regulator (LP only)

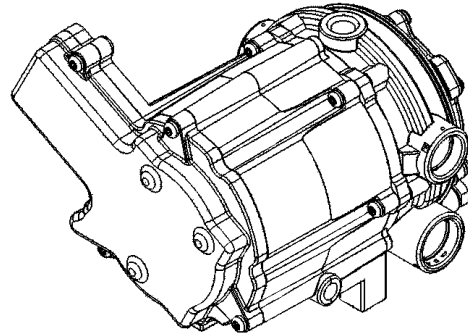

Interval - 3 Months or 150 hours of operation
Comments - Drain oil build up. Refer to Draining Oil Build Up From The Propane Regulator

19. Fuel Filter (Propane) - GM Engine



Interval - 3 Months or 150 hours of operation
Comments - Replace filter. Refer to Propane Fuel Filter Replacement

Draining Oil Build Up From The Propane Regulator

During the course of normal operation oils may build inside the primary and secondary chambers of the propane pressure regulator. These oils may be a result of poor fuel quality, contamination of the fuel supply chain, or regional variation in the make up of the fuel. If the build up of the oil is significant this can effect the operation of the fuel control system. Refer to Section 1.12, Lubrication & Maintenance for maintenance intervals. More frequent draining may be required if the fuel supply has been contaminated.

NOTICE


FOR BEST RESULTS WARM THE ENGINE TO OPERATING TEMPERATURE BEFORE DRAINING. THIS WILL ALLOW THE OILS TO BE LIQUID AND FLOW FREELY FROM THE REGULATOR.

1. Move the equipment to a well ventilated area. Ensure there are no external ignition sources.

2. Start the engine and bring to operating temperature.
3. With the engine running, close the manual tank valve and run the engine out of fuel.
4. Push in the Emergency Switch once the engine stops.
5. Disconnect the electrical connection to the LPG fuel temperature sensor in the auxiliary fuel port of the EPR.




6. Remove the retainer clip for the LPG fuel temperature sensor and remove the sensor from the regulator body.

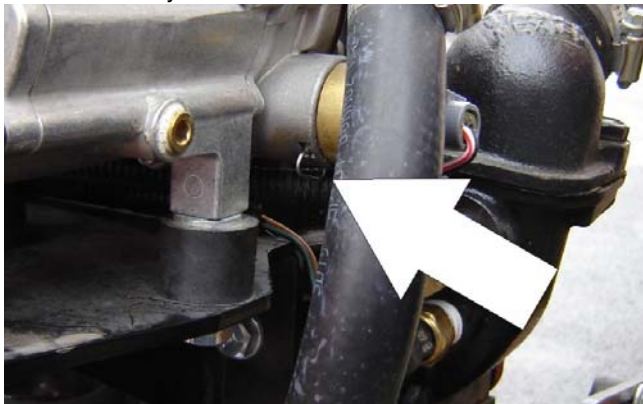

NOTE: Have a small container ready to collect oil that will drain freely from the regulator at this point.

7. Once all of the oil has been drained, reinstall the LPG fuel temperature sensor and reconnect the electrical connector.
8. Open the fuel tank manual valve.
9. Start the engine and verify all connections are secure.
10. Dispose of any drained oil in a safe and proper fashion.

Propane Fuel Filter Replacement

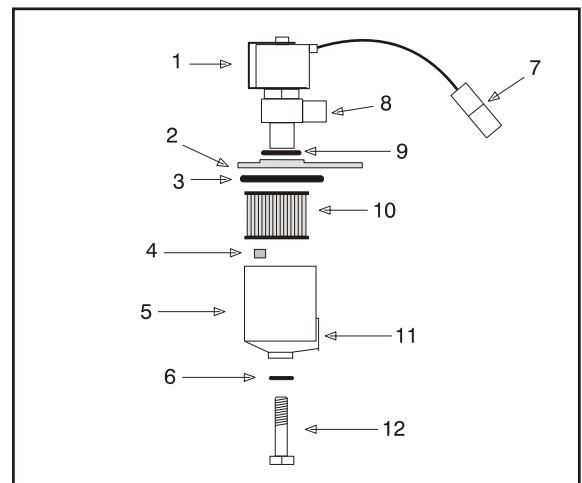

- | | |
|-------------------------------|-------------------------|
| 1. Electric Lock Off Solenoid | 7. Electrical Connector |
| 2. Mounting Plate | 8. Fuel Outlet |
| 3. Housing Seal | 9. O-ring |
| 4. Filter Magnet | 10. Filter |
| 5. Filter Housing | 11. Fuel Inlet |
| 6. Seal | 12. Retaining Bolt |

Figure 1-4. Filter Lock Assembly

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly loosen the Filter housing retaining bolt and remove it.
4. Pull the filter housing from the Electric lock off assembly .
5. Locate Filter magnet and remove it.
6. Remove the filter from the housing.
7. Remove and discard the housing seal.
8. Remove and discard the retaining bolt seal.
9. Remove and discard mounting plate to lock off O-ring seal.

INSTALLATION

NOTICE

BE SURE TO REINSTALL THE FILTER MAGNET INTO THE HOUSING BEFORE INSTALLING NEW SEAL

1. Install the mounting plate to lock off O-ring seal.
2. Install the retaining bolt seal.
3. Install the housing seal.
4. Drop the magnet into the bottom of the filter housing.
5. Install the filter into the housing.
6. Install the retaining bolt into the filter housing.
7. Install the filter up to the bottom of the electric lock off.
8. Tighten the filter retaining bolt to 106 in lbs (12 Nm).
9. Open manual shut-off valve. Start the vehicle and leak check the propane fuel system at each serviced fitting. Refer to Propane Fuel System Leak Test.

Propane Fuel System Pressure Relief

CAUTION

THE PROPANE FUEL SYSTEM OPERATES AT PRESSURES UP TO 312 PSI (21.5 BAR). TO MINIMIZE THE RISK OF FIRE AND PERSONAL INJURY, RELIEVE THE PROPANE FUEL SYSTEM PRESSURE (WHERE APPLICABLE) BEFORE SERVICING THE PROPANE FUEL SYSTEM COMPONENTS.

To relieve propane fuel system pressure:

1. Close the manual shut-off valve on the propane fuel tank.
2. Start and run the vehicle until the engine stalls.
3. Turn the ignition switch OFF.

CAUTION

RESIDUAL VAPOR PRESSURE WILL BE PRESENT IN THE FUEL SYSTEM. ENSURE THE WORK AREA IS WELL VENTILATED BEFORE DISCONNECTING ANY FUEL LINE.

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)

SAE GRADE 5 BOLTS & GRADE 2 NUTS

Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	Torque (Dry)		Torque Lubricated		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140)		Torque (Loctite® 262™ or Vibra-TITE™ 131)	
					IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
		In	Sq In	LB								
4	40	0.1120	0.00604	380	8	0.9	6	0.7				
	48	0.1120	0.00661	420	9	1.0	7	0.8				
6	32	0.1380	0.00909	580	16	1.8	12	1.4				
	40	0.1380	0.01015	610	18	2.0	13	1.5				
8	32	0.1640	0.01400	900	30	3.4	22	2.5				
	36	0.1640	0.01474	940	31	3.5	23	2.6				
10	24	0.1900	0.01750	1120	43	4.8	32	3.5				
	32	0.1900	0.02000	1285	49	5.5	36	4				
1/4	20	0.2500	0.0318	2020	96	10.8	75	9	105	12		
	28	0.2500	0.0364	2320	120	13.5	86	10	135	15		
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
5/16	18	0.3125	0.0524	3340	17	23	13	18	19	26	16	22
	24	0.3125	0.0580	3700	19	26	14	19	21	29	17	23
3/8	16	0.3750	0.0775	4940	30	41	23	31	35	48	28	38
	24	0.3750	0.0878	5600	35	47	25	34	40	54	32	43
7/16	14	0.4375	0.1063	6800	50	68	35	47	55	75	45	61
	20	0.4375	0.1187	7550	55	75	40	54	60	82	50	68
1/2	13	0.5000	0.1419	9050	75	102	55	75	85	116	68	92
	20	0.5000	0.1599	10700	90	122	65	88	100	136	80	108
9/16	12	0.5625	0.1820	11600	110	149	80	108	120	163	98	133
	18	0.5625	0.2030	12950	120	163	90	122	135	184	109	148
5/8	11	0.6250	0.2260	14400	150	203	110	149	165	224	135	183
	18	0.6250	0.2560	16300	170	230	130	176	190	258	153	207
3/4	10	0.7500	0.3340	21300	260	353	200	271	285	388	240	325
	16	0.7500	0.3730	23800	300	407	220	298	330	449	268	363
7/8	9	0.8750	0.4620	29400	430	583	320	434	475	646	386	523
	14	0.8750	0.5090	32400	470	637	350	475	520	707	425	576
1	8	1.0000	0.6060	38600	640	868	480	651	675	918	579	785
	12	1.0000	0.6630	42200	700	949	530	719	735	1000	633	858
1 1/8	7	1.1250	0.7630	42300	800	1085	600	813	840	1142	714	968
	12	1.1250	0.8560	47500	880	1193	660	895	925	1258	802	1087
1 1/4	7	1.2500	0.9690	53800	1120	1518	840	1139	1175	1598	1009	1368
	12	1.2500	1.0730	59600	1240	1681	920	1247	1300	1768	1118	1516
1 3/8	6	1.3750	1.1550	64100	1460	1979	1100	1491	1525	2074	1322	1792
	12	1.3750	1.3150	73000	1680	2278	1260	1708	1750	2380	1506	2042
1 1/2	6	1.5000	1.4050	78000	1940	2630	1460	1979	2025	2754	1755	2379
	12	1.5000	1.5800	87700	2200	2983	1640	2224	2300	3128	1974	2676

NO. 500059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

REFERENCE JLG ANEROBIC THREAD LOCKING COMPOUND				
JLG P/N	Loctite® P/N		ND Industries P/N	Description
0100011	242™		Vibra-TITE™ 121	Medium Strength (Blue)
0100019	271™		Vibra-TITE™ 140	High Strength (Red)
0100071	262™		Vibra-TITE™ 131	Medium - High Strength (Red)

Figure 1-5. Torque Chart (SAE Fasteners - Sheet 1 of 7)

SECTION 1 - SPECIFICATIONS

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)										
SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*										
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263) K= 0.20		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K=.18		Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15	
					IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
4	40	0.1120	0.00604							
	48	0.1120	0.00661							
6	32	0.1380	0.00909							
	40	0.1380	0.01015							
8	32	0.1640	0.01400							
	36	0.1640	0.01474	1320	43	5				
10	24	0.1900	0.01750	1580	60	7				
	32	0.1900	0.02000	1800	68	8				
1/4	20	0.2500	0.0318	2860	143	16	129	15		
	28	0.2500	0.0364	3280	164	19	148	17		
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
5/16	18	0.3125	0.0524	4720	25	35	20	25	20	25
	24	0.3125	0.0580	5220	25	35	25	35	20	25
3/8	16	0.3750	0.0775	7000	45	60	40	55	35	50
	24	0.3750	0.0878	7900	50	70	45	60	35	50
7/16	14	0.4375	0.1063	9550	70	95	65	90	50	70
	20	0.4375	0.1187	10700	80	110	70	95	60	80
1/2	13	0.5000	0.1419	12750	105	145	95	130	80	110
	20	0.5000	0.1599	14400	120	165	110	150	90	120
9/16	12	0.5625	0.1820	16400	155	210	140	190	115	155
	18	0.5625	0.2030	18250	170	230	155	210	130	175
5/8	11	0.6250	0.2260	20350	210	285	190	260	160	220
	18	0.6250	0.2560	23000	240	325	215	290	180	245
3/4	10	0.7500	0.3340	30100	375	510	340	460	280	380
	16	0.7500	0.3730	33600	420	570	380	515	315	430
7/8	9	0.8750	0.4620	41600	605	825	545	740	455	620
	14	0.8750	0.5090	45800	670	910	600	815	500	680
1	8	1.0000	0.6060	51500	860	1170	770	1045	645	875
	12	1.0000	0.6630	59700	995	1355	895	1215	745	1015
1 1/8	7	1.1250	0.7630	68700	1290	1755	1160	1580	965	1310
	12	1.1250	0.8560	77000	1445	1965	1300	1770	1085	1475
1 1/4	7	1.2500	0.9690	87200	1815	2470	1635	2225	1365	1855
	12	1.2500	1.0730	96600	2015	2740	1810	2460	1510	2055
1 3/8	6	1.3750	1.1550	104000	2385	3245	2145	2915	1785	2430
	12	1.3750	1.3150	118100	2705	3680	2435	3310	2030	2760
1 1/2	6	1.5000	1.4050	126500	3165	4305	2845	3870	2370	3225
	12	1.5000	1.5800	142200	3555	4835	3200	4350	2665	3625

NO. 500059 REV. J

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

Figure 1-6. Torque Chart (SAE Fasteners - Sheet 2 of 7)

SOCKET HEAD CAP SCREWS										
Magni Coating (Ref 4150701)*										
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load See Note 4	Torque (Dry) K = .17		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85® K=0.16		Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15	
					IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
		In	Sq In	LB						
4	40	0.1120	0.00604							
	48	0.1120	0.00661							
6	32	0.1380	0.00909							
	40	0.1380	0.01015							
8	32	0.1640	0.01400							
	36	0.1640	0.01474							
10	24	0.1900	0.01750							
	32	0.1900	0.02000							
1/4	20	0.2500	0.0318	2860	122	14	114	13		
	28	0.2500	0.0364	3280	139	16	131	15		
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
5/16	18	0.3125	0.0524	4720	20	25	20	25	20	25
	24	0.3125	0.0580	5220	25	35	20	25	20	25
3/8	16	0.3750	0.0775	7000	35	50	35	50	35	50
	24	0.3750	0.0878	7900	40	55	40	55	35	50
7/16	14	0.4375	0.1063	9550	60	80	55	75	50	70
	20	0.4375	0.1187	10700	65	90	60	80	60	80
1/2	13	0.5000	0.1419	12750	90	120	85	115	80	110
	20	0.5000	0.1599	14400	100	135	95	130	90	120
9/16	12	0.5625	0.1820	16400	130	175	125	170	115	155
	18	0.5625	0.2030	18250	145	195	135	185	130	175
5/8	11	0.6250	0.2260	20350	180	245	170	230	160	220
	18	0.6250	0.2560	23000	205	280	190	260	180	245
3/4	10	0.7500	0.3340	30100	320	435	300	410	280	380
	16	0.7500	0.3730	33600	355	485	335	455	315	430
7/8	9	0.8750	0.4620	41600	515	700	485	660	455	620
	14	0.8750	0.5090	45800	570	775	535	730	500	680
1	8	1.0000	0.6060	51500	730	995	685	930	645	875
	12	1.0000	0.6630	59700	845	1150	795	1080	745	1015
1 1/8	7	1.1250	0.7630	68700	1095	1490	1030	1400	965	1310
	12	1.1250	0.8560	77000	1225	1665	1155	1570	1085	1475
1 1/4	7	1.2500	0.9690	87200	1545	2100	1455	1980	1365	1855
	12	1.2500	1.0730	96600	1710	2325	1610	2190	1510	2055
1 3/8	6	1.3750	1.1550	104000	2025	2755	1905	2590	1785	2430
	12	1.3750	1.3150	118100	2300	3130	2165	2945	2030	2760
1 1/2	6	1.5000	1.4050	126500	2690	3660	2530	3440	2370	3225
	12	1.5000	1.5800	142200	3020	4105	2845	3870	2665	3625

NO. 5000059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-7. Torque Chart (SAE Fasteners - Sheet 3 of 7)

SECTION 1 - SPECIFICATIONS

SOCKET HEAD CAP SCREWS										
Zinc Yellow Chromate Fasteners (Ref 4150707)*										
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load See Note 4	Torque (Dry) K = .20		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85® K=0.18		Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15	
					IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
		In	Sq In	LB						
4	40	0.1120	0.00604							
	48	0.1120	0.00661							
6	32	0.1380	0.00909							
	40	0.1380	0.01015							
8	32	0.1640	0.01400							
	36	0.1640	0.01474							
10	24	0.1900	0.01750							
	32	0.1900	0.02000							
1/4	20	0.2500	0.0318	2860	143	16	129	15		
	28	0.2500	0.0364	3280	164	19	148	17		
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
5/16	18	0.3125	0.0524	4720	25	35	20	25	20	25
	24	0.3125	0.0580	5220	25	35	25	35	20	25
3/8	16	0.3750	0.0775	7000	45	60	40	55	35	50
	24	0.3750	0.0878	7900	50	70	45	60	35	50
7/16	14	0.4375	0.1063	9550	70	95	65	90	50	70
	20	0.4375	0.1187	10700	80	110	70	95	60	80
1/2	13	0.5000	0.1419	12750	105	145	95	130	80	110
	20	0.5000	0.1599	14400	120	165	110	150	90	120
9/16	12	0.5625	0.1820	16400	155	210	140	190	115	155
	18	0.5625	0.2030	18250	170	230	155	210	130	175
5/8	11	0.6250	0.2260	20350	210	285	190	260	160	220
	18	0.6250	0.2560	23000	240	325	215	290	180	245
3/4	10	0.7500	0.3340	30100	375	510	340	460	280	380
	16	0.7500	0.3730	33600	420	570	380	515	315	430
7/8	9	0.8750	0.4620	41600	605	825	545	740	455	620
	14	0.8750	0.5090	45800	670	910	600	815	500	680
1	8	1.0000	0.6060	51500	860	1170	775	1055	645	875
	12	1.0000	0.6630	59700	995	1355	895	1215	745	1015
1 1/8	7	1.1250	0.7630	68700	1290	1755	1160	1580	965	1310
	12	1.1250	0.8560	77000	1445	1965	1300	1770	1085	1475
1 1/4	7	1.2500	0.9690	87200	1815	2470	1635	2225	1365	1855
	12	1.2500	1.0730	96600	2015	2740	1810	2460	1510	2055
1 3/8	6	1.3750	1.1550	104000	2385	3245	2145	2915	1785	2430
	12	1.3750	1.3150	118100	2705	3680	2435	3310	2030	2760
1 1/2	6	1.5000	1.4050	126500	3165	4305	2845	3870	2370	3225
	12	1.5000	1.5800	142200	3555	4835	3200	4350	2665	3625

NO. 500059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-8. Torque Chart (SAE Fasteners - Sheet 4 of 7)

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)							
CLASS 8.8 METRIC BOLTS CLASS 8 METRIC NUTS							
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263™)	Torque (Lub)	Torque (Loctite® 262™ OR Vibra-TITE™ 131)	Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140)
		Sq mm	KN	[N.m]	[N.m]	[N.m]	[N.m]
3	0.5	5.03	2.19	1.3	1.0	1.2	1.4
3.5	0.6	6.78	2.95	2.1	1.6	1.9	2.3
4	0.7	8.78	3.82	3.1	2.3	2.8	3.4
5	0.8	14.20	6.18	6.2	4.6	5.6	6.8
6	1	20.10	8.74	11	7.9	9.4	12
7	1	28.90	12.6	18	13	16	19
8	1.25	36.60	15.9	26	19	23	28
10	1.5	58.00	25.2	50	38	45	55
12	1.75	84.30	36.7	88	66	79	97
14	2	115	50.0	140	105	126	154
16	2	157	68.3	219	164	197	241
18	2.5	192	83.5	301	226	271	331
20	2.5	245	106.5	426	320	383	469
22	2.5	303	132.0	581	436	523	639
24	3	353	153.5	737	553	663	811
27	3	459	199.5	1080	810	970	1130
30	3.5	561	244.0	1460	1100	1320	1530
33	3.5	694	302.0	1990	1490	1790	2090
36	4	817	355.5	2560	1920	2300	2690
42	4.5	1120	487.0	4090	3070	3680	4290

NO. 500059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-9. Torque Chart (METRIC Fasteners - Sheet 5 of 7)

SECTION 1 - SPECIFICATIONS

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)						
CLASS 10.9 METRIC BOLTS CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAP SCREWS M3 - M5*						
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263™) K = 0.20	Torque (Lub OR Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K= 0.18	Torque (Loctite® 262™ OR Vibra-TITE™ 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	3.13			
3.5	0.6	6.78	4.22			
4	0.7	8.78	5.47			
5	0.8	14.20	8.85			
6	1	20.10	12.5			
7	1	28.90	18.0	25.2	22.7	18.9
8	1.25	36.60	22.8	36.5	32.8	27.4
10	1.5	58.00	36.1	70	65	55
12	1.75	84.30	52.5	125	115	95
14	2	115	71.6	200	180	150
16	2	157	97.8	315	280	235
18	2.5	192	119.5	430	385	325
20	2.5	245	152.5	610	550	460
22	2.5	303	189.0	830	750	625
24	3	353	222.0	1065	960	800
27	3	459	286.0	1545	1390	1160
30	3.5	561	349.5	2095	1885	1575
33	3.5	694	432.5	2855	2570	2140
36	4	817	509.0	3665	3300	2750
42	4.5	1120	698.0	5865	5275	4395

NO. 500059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-10. Torque Chart (METRIC Fasteners - Sheet 6 of 7)

Magni Coating (Ref 4150701)*						
CLASS 12.9 SOCKET HEAD CAP SCREWS M6 AND ABOVE*						
Size	PITCH	Tensile Stress Area	Clamp Load See Note 4	Torque (Dry or Loctite® 263™) K = .17	Torque (Lub OR Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K = .16	Torque (Loctite® 262™ OR Vibra-TITE™ 131) K = .15
		Sq mm	kN	[N.m]	[N.m]	[N.m]
3	0.5	5.03				
3.5	0.6	6.78				
4	0.7	8.78				
5	0.8	14.20				
6	1	20.10	12.5	13	12	11
7	1	28.90	18.0	21	20	19
8	1.25	36.60	22.8	31	29	27
10	1.5	58.00	36.1	61	58	54
12	1.75	84.30	52.5	105	100	95
14	2	115	71.6	170	160	150
16	2	157	97.8	265	250	235
18	2.5	192	119.5	365	345	325
20	2.5	245	152.5	520	490	460
22	2.5	303	189.0	705	665	625
24	3	353	220.0	900	845	790
27	3	459	286.0	1315	1235	1160
30	3.5	561	349.5	1780	1680	1575
33	3.5	694	432.5	2425	2285	2140
36	4	817	509.0	3115	2930	2750
42	4.5	1120	698.0	4985	4690	4395

NO. 500059 REV. J

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-11. Torque Chart (METRIC Fasteners - Sheet 7 of 7)

SECTION 2. GENERAL

2.1 MACHINE PREPARATION, INSPECTION, AND MAINTENANCE

General

This section provides the necessary information needed by those personnel that are responsible to place the machine in operation readiness and maintain its safe operating condition. For maximum service life and safe operation, ensure that all the necessary inspections and maintenance have been completed before placing the machine into service.

Preparation, Inspection, and Maintenance

It is important to establish and conform to a comprehensive inspection and preventive maintenance program. The following table outlines the periodic machine inspections and maintenance recommended by JLG Industries, Inc. Consult your national, regional, or local regulations for further requirements for aerial work platforms. The frequency of inspections and maintenance must be increased as environment, severity and frequency of usage requires.

Pre-Start Inspection

It is the User's or Operator's primary responsibility to perform a Pre-Start Inspection of the machine prior to use daily or at each change of operator. Reference the Operator's and Safety Manual for completion procedures for the Pre-Start Inspection. The Operator and Safety Manual must be read in its entirety and understood prior to performing the Pre-Start Inspection.

Pre-Delivery Inspection and Frequent Inspection

The Pre-Delivery Inspection and Frequent Inspection shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

The Pre-Delivery Inspection and Frequent Inspection procedures are performed in the same manner, but at different times. The Pre-Delivery Inspection shall be performed prior to each sale, lease, or rental delivery. The Frequent Inspection shall be accomplished for each machine in service for 3 months or 150 hours (whichever comes first); out of service for a period of more than 3 months; or when purchased used. The frequency of this inspection must be increased as environment, severity and frequency of usage requires.

Reference the JLG Pre-Delivery and Frequent Inspection Form and the Inspection and Preventative Maintenance Schedule for items requiring inspection during the performance of these inspections. Reference the appropriate areas of this manual for servicing and maintenance procedures.

Annual Machine Inspection

The Annual Machine Inspection must be performed by a Factory-Certified Service Technician on an annual basis, no later than thirteen (13) months from the date of the prior Annual Machine Inspection. JLG Industries, Inc. recognizes a Factory-Certified Service Technician as a person who has successfully completed the JLG Service Training School for the subject JLG product model. Reference the machine Service and Maintenance Manual and appropriate JLG inspection form for performance of this inspection.

Reference the JLG Annual Machine Inspection Form and the Inspection and Preventative Maintenance Schedule for items requiring inspection during the performance of this inspection. Reference the appropriate areas of this manual for servicing and maintenance procedures.

For the purpose of receiving safety-related bulletins, it is important that JLG Industries, Inc. has updated ownership information for each machine. When performing each Annual Machine Inspection, notify JLG Industries, Inc. of the current machine ownership.

Preventative Maintenance

In conjunction with the specified inspections, maintenance shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

Reference the Preventative Maintenance Schedule and the appropriate areas of this manual for servicing and maintenance procedures. The frequency of service and maintenance must be increased as environment, severity and frequency of usage requires.

Table 2-1. Inspection and Maintenance

Type	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Prior to use each day; or At each Operator change.	User or Operator	User or Operator	Operator and Safety Manual
Pre-Delivery Inspection	Prior to each sale, lease, or rental delivery.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Frequent Inspection	In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or Purchased used.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Annual Machine Inspection	Annually, no later than 13 months from the date of the prior inspection.	Owner, Dealer, or User	Factory-Certified Service Technician	Service and Maintenance Manual and applicable JLG inspection form.
Preventative Maintenance	At intervals as specified in the Service and Maintenance Manual.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual

2.2 SERVICE AND GUIDELINES

General

The following information is provided to assist you in the use and application of servicing and maintenance procedures contained in this book.

Safety and Workmanship

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

Cleanliness

1. The most important single item in preserving the long service life of a machine is to keep dirt and foreign materials out of the vital components. Precautions have been taken to safeguard against this. Shields, covers, seals, and filters are provided to keep air, fuel, and oil supplies clean; however, these items must be maintained on a scheduled basis in order to function properly.

2. At any time when air, fuel, or oil lines are disconnected, clear adjacent areas as well as the openings and fittings themselves. As soon as a line or component is disconnected, cap or cover all openings to prevent entry of foreign matter.
3. Clean and inspect all parts during servicing or maintenance, and assure that all passages and openings are unobstructed. Cover all parts to keep them clean. Be sure all parts are clean before they are installed. New parts should remain in their containers until they are ready to be used.

Components Removal and Installation

1. Use adjustable lifting devices, whenever possible, if mechanical assistance is required. All slings (chains, cables, etc.) should be parallel to each other and as near perpendicular as possible to top of part being lifted.
2. Should it be necessary to remove a component on an angle, keep in mind that the capacity of an eye-bolt or similar bracket lessens, as the angle between the supporting structure and the component becomes less than 90 degrees.
3. If a part resists removal, check to see whether all nuts, bolts, cables, brackets, wiring, etc., have been removed and that no adjacent parts are interfering.

Component Disassembly and Reassembly

When disassembling or reassembling a component, complete the procedural steps in sequence. Do not partially disassemble or assemble one part, then start on another. Always recheck your work to assure that nothing has been overlooked. Do not make any adjustments, other than those recommended, without obtaining proper approval.

Pressure-Fit Parts

When assembling pressure-fit parts, use an anti-seize or molybdenum disulfide base compound to lubricate the mating surface.

Bearings

1. When a bearing is removed, cover it to keep out dirt and abrasives. Clean bearings in nonflammable cleaning solvent and allow to drip dry. Compressed air can be used but do not spin the bearing.
2. Discard bearings if the races and balls (or rollers) are pitted, scored, or burned.
3. If bearing is found to be serviceable, apply a light coat of oil and wrap it in clean (waxed) paper. Do not unwrap reusable or new bearings until they are ready to install.
4. Lubricate new or used serviceable bearings before installation. When pressing a bearing into a retainer or bore, apply pressure to the outer race. If the bearing is to be installed on a shaft, apply pressure to the inner race.

Gaskets

Check that holes in gaskets align with openings in the mating parts. If it becomes necessary to hand-fabricate a gasket, use gasket material or stock of equivalent material and thickness. Be sure to cut holes in the right location, as blank gaskets can cause serious system damage.

Bolt Usage and Torque Application

1. Use bolts of proper length. A bolt which is too long will bottom before the head is tight against its related part. If a bolt is too short, there will not be enough thread area to engage and hold the part properly. When replacing bolts, use only those having the same specifications of the original, or one which is equivalent.
2. Unless specific torque requirements are given within the text, standard torque values should be used on heat-treated bolts, studs, and steel nuts, in accordance with recommended shop practices. (See Torque Chart Section 1.)

Hydraulic Lines and Electrical Wiring

Clearly mark or tag hydraulic lines and electrical wiring, as well as their receptacles, when disconnecting or removing them from the unit. This will assure that they are correctly reinstalled.

Hydraulic System

1. Keep the system clean. If evidence of metal or rubber particles are found in the hydraulic system, drain and flush the entire system.
2. Disassemble and reassemble parts on clean work surface. Clean all metal parts with non-flammable cleaning solvent. Lubricate components, as required, to aid assembly.

Lubrication

Service applicable components with the amount, type, and grade of lubricant recommended in this manual, at the specified intervals. When recommended lubricants are not available, consult your local supplier for an equivalent that meets or exceeds the specifications listed.

Battery

Clean battery, using a non-metallic brush and a solution of baking soda and water. Rinse with clean water. After cleaning, thoroughly dry battery and coat terminals with an anti corrosion compound.

Lubrication and Servicing

Components and assemblies requiring lubrication and servicing are shown in the Lubrication Chart in Section 1.

2.3 LUBRICATION AND INFORMATION

Hydraulic System

1. The primary enemy of a hydraulic system is contamination. Contaminants enter the system by various means, e.g., using inadequate hydraulic oil, allowing moisture, grease, filings, sealing components, sand, etc., to enter when performing maintenance, or by permitting the pump to cavitate due to insufficient system warm-up or leaks in the pump supply (suction) lines.
2. The design and manufacturing tolerances of the component working parts are very close, therefore, even the smallest amount of dirt or foreign matter entering a system can cause wear or damage to the components and generally results in faulty operation. Every precaution must be taken to keep hydraulic oil clean, including reserve oil in storage. Hydraulic system filters should be checked, cleaned, and/or replaced as necessary, at the speci-

SECTION 2 - GENERAL

fied intervals required in the Lubrication Chart in Section 1. Always examine filters for evidence of metal particles.

3. Cloudy oils indicate a high moisture content which permits organic growth, resulting in oxidation or corrosion. If this condition occurs, the system must be drained, flushed, and refilled with clean oil.
4. It is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. Good grade mineral oils, with viscosities suited to the ambient temperatures in which the machine is operating, are recommended for use.

NOTE: *Metal particles may appear in the oil or filters of new machines due to the wear-in of meshing components.*

Hydraulic Oil

1. Refer to Section 1 for recommendations for viscosity ranges.
2. JLG recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity of 10W-30 and a viscosity index of 152.

NOTE: *Start-up of hydraulic system with oil temperatures below -15 degrees F (-26 degrees C) is not recommended. If it is necessary to start the system in a sub-zero environment, it will be necessary to heat the oil with a low density, 100VAC heater to a minimum temperature of -15 degrees F (-26 degrees C).*

3. The only exception to the above is to drain and fill the system with Mobil DTE 13 oil or its equivalent. This will allow start up at temperatures down to -20 degrees F (-29 degrees C). However, use of this oil will give poor performance at temperatures above 120 degrees F (49 degrees C). Systems using DTE 13 oil should not be operated at temperatures above 200 degrees F (94 degrees C) under any condition.

Changing Hydraulic Oil

1. Use of any of the recommended crankcase or hydraulic oils eliminates the need for changing the oil on a regular basis. However, filter elements must be changed after the first 50 hours of operation and every 300 hours thereafter. If it is necessary to change the oil, use only those oils meeting or exceeding the specifications appearing in this manual. If unable to obtain the same type of oil supplied with the machine, consult local supplier for assistance in selecting the proper equivalent. Avoid mixing petroleum and synthetic base oils. JLG Industries recommends changing the hydraulic oil annually.

2. Use every precaution to keep the hydraulic oil clean. If the oil must be poured from the original container into another, be sure to clean all possible contaminants from the service container. Always clean the mesh element of the filter and replace the cartridge any time the system oil is changed.
3. While the unit is shut down, a good preventive maintenance measure is to make a thorough inspection of all hydraulic components, lines, fittings, etc., as well as a functional check of each system, before placing the machine back in service.

Lubrication Specifications

Specified lubricants, as recommended by the component manufacturers, are always the best choice, however, multi-purpose greases usually have the qualities which meet a variety of single purpose grease requirements. Should any question arise, regarding the use of greases in maintenance stock, consult your local supplier for evaluation. Refer to Section 1 for an explanation of the lubricant key designations appearing in the Lubrication Chart.

2.4 CYLINDER DRIFT TEST

Maximum acceptable cylinder drift is to be measured using the following methods.

Platform Drift

Measure the drift of the platform to the ground. Lower booms (if equipped) slightly elevated, upper boom fully extended with the rated load in the platform and power off. Maximum allowable drift is 2 inches (5 cm) in 10 minutes. If the machine does not pass this test, proceed with the following.

Cylinder Drift

Table 2-2. Cylinder Drift

Cylinder Bore Diameter		Max. Acceptable Drift in 10 Minutes	
inches	mm	inches	mm
3	76.2	0.026	0.66
3.5	89	0.019	0.48
4	101.6	0.015	0.38
5	127	0.009	0.22
6	152.4	0.006	0.15
7	177.8	0.005	0.13
8	203.2	0.0038	0.10
9	228.6	0.0030	0.08

Drift is to be measured at the cylinder rod with a calibrated dial indicator. The cylinder oil must be at ambient temperature and temperature stabilized.

The cylinder must have the normal load, which is the normal platform load applied.

If the cylinder passes this test, it is acceptable.

NOTE: This information is based on 6 drops per minute cylinder leakage.

2.5 PINS AND COMPOSITE BEARING REPAIR GUIDELINES

Filament wound bearings.

1. Pinned joints should be disassembled and inspected if the following occurs:
 - a. Excessive sloppiness in joints.
 - b. Noise originating from the joint during operation.
2. Filament wound bearings should be replaced if any of the following is observed:
 - a. Frayed or separated fibers on the liner surface.
 - b. Cracked or damaged liner backing.
 - c. Bearings that have moved or spun in their housing.
 - d. Debris embedded in liner surface.
3. Pins should be replaced if any of the following is observed (pin should be properly cleaned prior to inspection):
 - a. Detectable wear in the bearing area.
 - b. Flaking, peeling, scoring, or scratches on the pin surface.
 - c. Rusting of the pin in the bearing area.

4. Re-assembly of pinned joints using filament wound bearings.
 - a. Housing should be blown out to remove all dirt and debris...bearings and bearing housings must be free of all contamination.
 - b. Bearing / pins should be cleaned with a solvent to remove all grease and oil...filament wound bearing are a dry joint and should not be lubricated.
 - c. Pins should be inspected to ensure it is free of burrs, nicks, and scratches which would damage the bearing during installation and operation.

2.6 WELDING ON JLG EQUIPMENT

NOTE: This instruction applies to repairs, or modifications to the machine and to welding performed from the machine on an external structure, or component,

Do the Following When Welding on JLG Equipment

- Disconnect the battery.
- Disconnect the moment pin connection (where fitted)
- Ground only to structure being welded.

Do NOT Do the Following When Welding on JLG Equipment

- Ground on frame and weld on any other area than the chassis.
- Ground on turntable and weld on any other area than the turntable.
- Ground on the platform/support and weld on any other area than the platform/support.
- Ground on a specific boom section and weld on any other area than that specific boom section.
- Allow pins, wear pads, wire ropes, bearings, gearing, seals, valves, electrical wiring, or hoses to be between the grounding position and the welded area.

⚠ CAUTION

FAILURE TO COMPLY WITH THE ABOVE REQUIREMENTS MAY RESULT IN COMPONENT DAMAGE (I.E. ELECTRONIC MODULES, SWING BEARING, COLLECTOR RING, BOOM WIRE ROPES ETC.)

SECTION 2 - GENERAL

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL					
	Pre-Start ¹ Inspection	Weekly Preventive Maintenance	Monthly Preventive Maintenance	Pre-Delivery ² or Frequent ³ Inspection	Annual ⁴ (Yearly) Inspection	Every 2 Years
Boom Assembly	9					
Boom Weldments				1,2,4	1,2,4	
Hose/Cable Carrier Installations				1,2,9,12	1,2,9,12	
Pivot Pins and Pin Retainers				1,2	1,2	
Sheaves, Sheave Pins				1,2	1,2	
Bearings				1,2	1,2	
Wear Pads				1,2	1,2	
Covers or Shields				1,2	1,2	
Extend/Retract Chain or Cable Systems				1,2,3	1,2,3	
Platform Assembly	9					
Platform	1,2				1,2	
Railing	1,2			1	1,2	
Gate			5	1	1,5	
Floor	1,2			1	1,2	
Rotator		9,5		15		
Lanyard Anchorage Point	2			1,2,10	1,2,10	
Turntable Assembly	9					
Swing Bearing or Worm Gear				1,2,14	1,2,3,13,14	
Oil Coupling		9				
Swing Drive System						
Turntable Lock				1,2,5	1,2,5	
Hood, Hood Props, Hood Latches				5	1,2,5	
Chassis Assembly	9					
Tires	1	16,17		16,17,18	16,17,18	
Wheel Nuts/Bolts	1	15		15	15	
Wheel Bearings						14,24
Oscillating Axle/Lockout Cylinder Systems					5,8	
Outrigger or Extendable Axle Systems				5,8	5,8	
Steer Components						
Drive Motors						
Torque Hubs				11	11	
Functions/Controls	9					
Platform Controls	5	5		6	6	

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL					
	Pre-Start ¹ Inspection	Weekly Preventive Maintenance	Monthly Preventive Maintenance	Pre-Delivery ² or Frequent ³ Inspection	Annual ⁴ (Yearly) Inspection	Every 2 Years
Ground Controls	5	5		6	6	
Function Control Locks, Guards, or Detents	1,5	1,5		5	5	
Footswitch	1,5			5	5	
Emergency Stop Switches (Ground & Platform)	5			5	5	
Function Limit or Cutout Switch Systems				5	5	
Capacity Indicator					5	
Drive Brakes				5		
Swing Brakes				5		
Boom Synchronization/Sequencing Systems					5	
Manual Descent or Auxiliary Power				5	5	
Power System	9					
Engine Idle, Throttle, and RPM				3	3	
Engine Fluids (Oil, Coolant, Fuel)	11	9,11		11	11	
Air/Fuel Filter		1,7		7	7	
Exhaust System			1,9	9	9	
Batteries	5	1,9			19	
Battery Fluid		11		11	11	
Battery Charger		5			5	
Fuel Reservoir, Cap, and Breather	11,9		2	1,5	1,5	
Hydraulic/Electric System	9					
Hydraulic Pumps		1,9		1,2,9		
Hydraulic Cylinders		1,9,7	2	1,2,9	1,2,9	
Cylinder Attachment Pins and Pin Retainers		1,9		1,2	1,2	
Hydraulic Hoses, Lines, and Fittings		1,9	12	1,2,9,12	1,2,9,12	
Hydraulic Reservoir, Cap, and Breather	11	1,9	2	1,5	1,5	24
Hydraulic Filter		1,9		7	7	
Hydraulic Fluid	11			7,11	7,11	
Electrical Connections		1		20	20	
Instruments, Gauges, Switches, Lights, Horn		1			5,23	
General						
Operators and Safety Manuals in Storage Box	21			21	21	
ANSI and EMI Manuals/Handbooks Installed					21	
Capacity Decals Installed, Secure, Legible	21			21	21	
All Decals/Placards Installed, Secure, Legible	21			21	21	

SECTION 2 - GENERAL

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL					
	Pre-Start ¹ Inspection	Weekly Preventive Maintenance	Monthly Preventive Maintenance	Pre-Delivery ² or Frequent ³ Inspection	Annual ⁴ (Yearly) Inspection	Every 2 Years
Walk-Around Inspection Performed	21					
Annual Machine Inspection Due				21		
No Unauthorized Modifications or Additions				21	21	
All Relevant Safety Publications Incorporated				21	21	
General Structural Condition and Welds				2,4	2,4	
All Fasteners, Pins, Shields, and Covers				1,2	1,2	
Grease and Lubricate to Specifications				22	22	
Function Test of All Systems	21			21	21, 22	
Paint and Appearance				7	7	
Stamp Inspection Date on Frame					22	
Notify JLG of Machine Ownership					22	

Footnotes:

¹ Prior to use each day; or at each Operator change


² Prior to each sale, lease, or delivery

³ In service for 3 months or 150 Hours; or Out of service for 3 months or more; or Purchased used

⁴ Annually, no later than 13 months from the date of the prior inspection

Performance Codes:


- 1 - Check for proper and secure installation
- 2 - Visual inspection for damage, cracks, distortion or excessive wear
- 3 - Check for proper adjustment
- 4 - Check for cracked or broken welds
- 5 - Operates Properly
- 6 - Returns to neutral or "off" position when released
- 7 - Clean and free of debris
- 8 - Interlocks function properly
- 9 - Check for signs of leakage
- 10 - Decals installed and legible
- 11 - Check for proper fluid level
- 12 - Check for chafing and proper routing
- 13 - Check for proper tolerances
- 14 - Properly lubricated
- 15 - Torqued to proper specification
- 16 - No gouges, excessive wear, or cords showing
- 17 - Properly inflated and seated around rim
- 18 - Proper and authorized components
- 19 - Fully charged
- 20 - No loose connections, corrosion, or abrasions
- 21 - Verify
- 22 - Perform
- 23 - Sealed Properly
- 24 - Drain, Clean, Refill

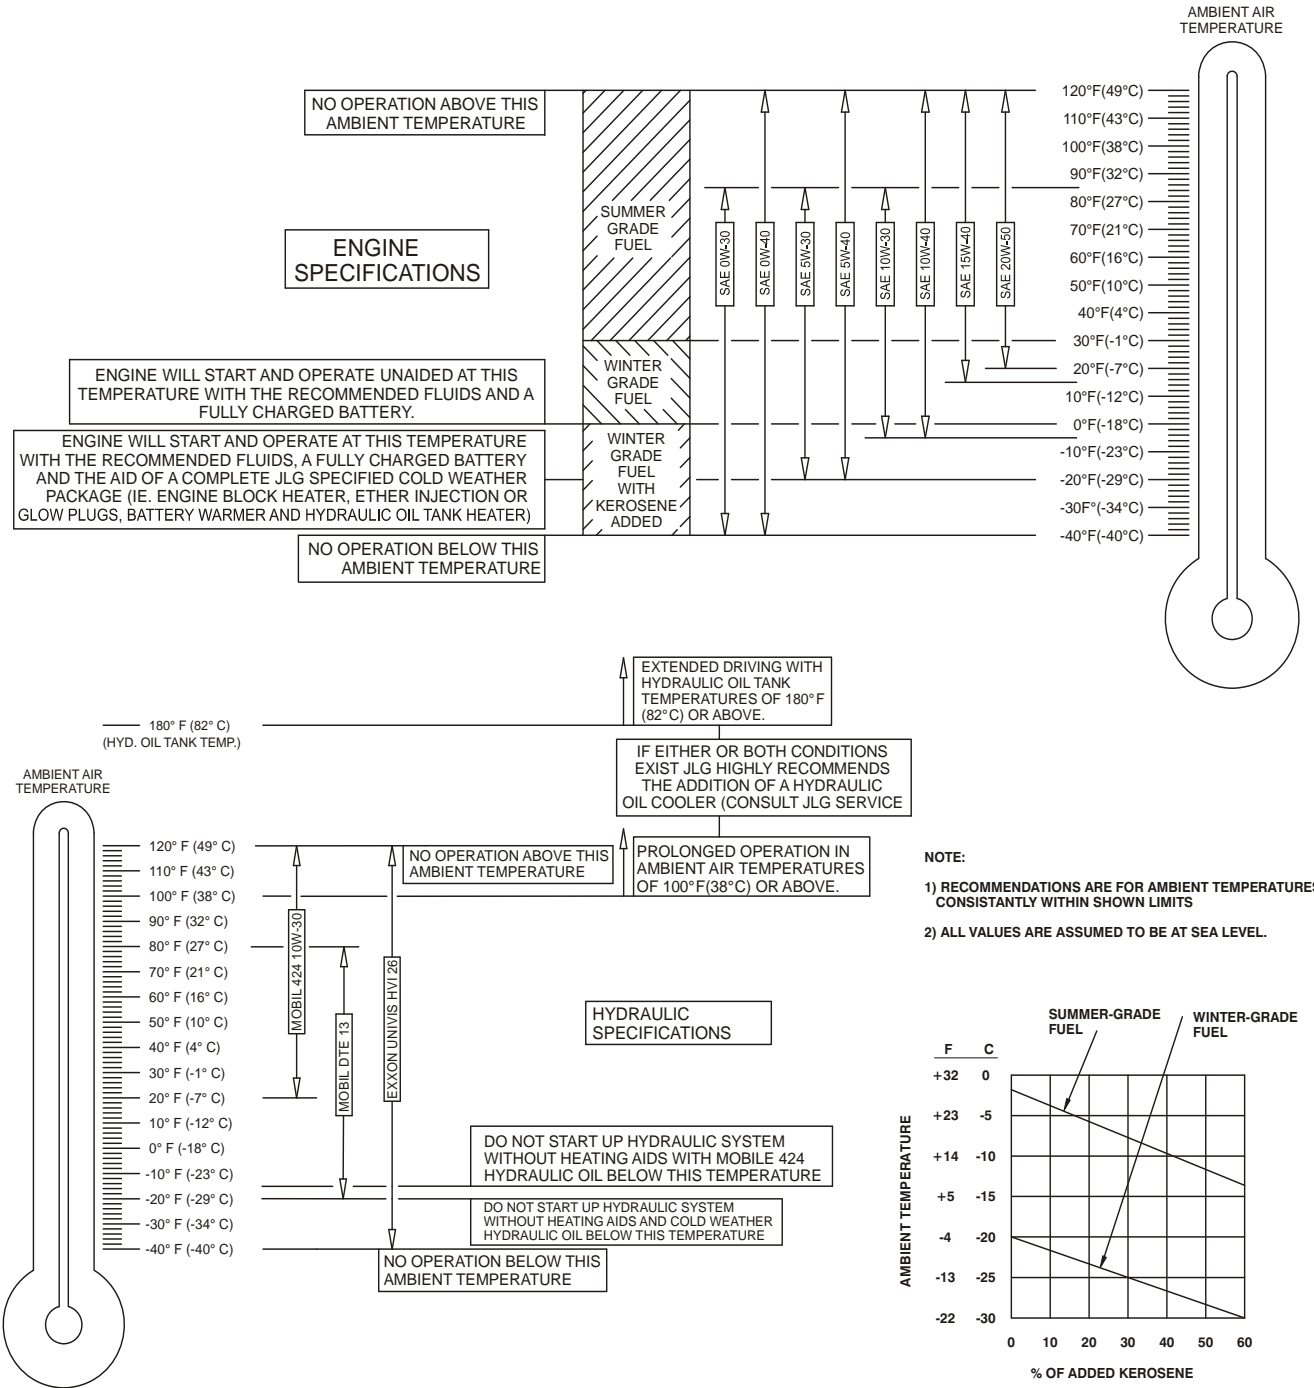

4150548 E



Figure 2-1. Engine Operating Temperature Specifications - Deutz

SECTION 2 - GENERAL

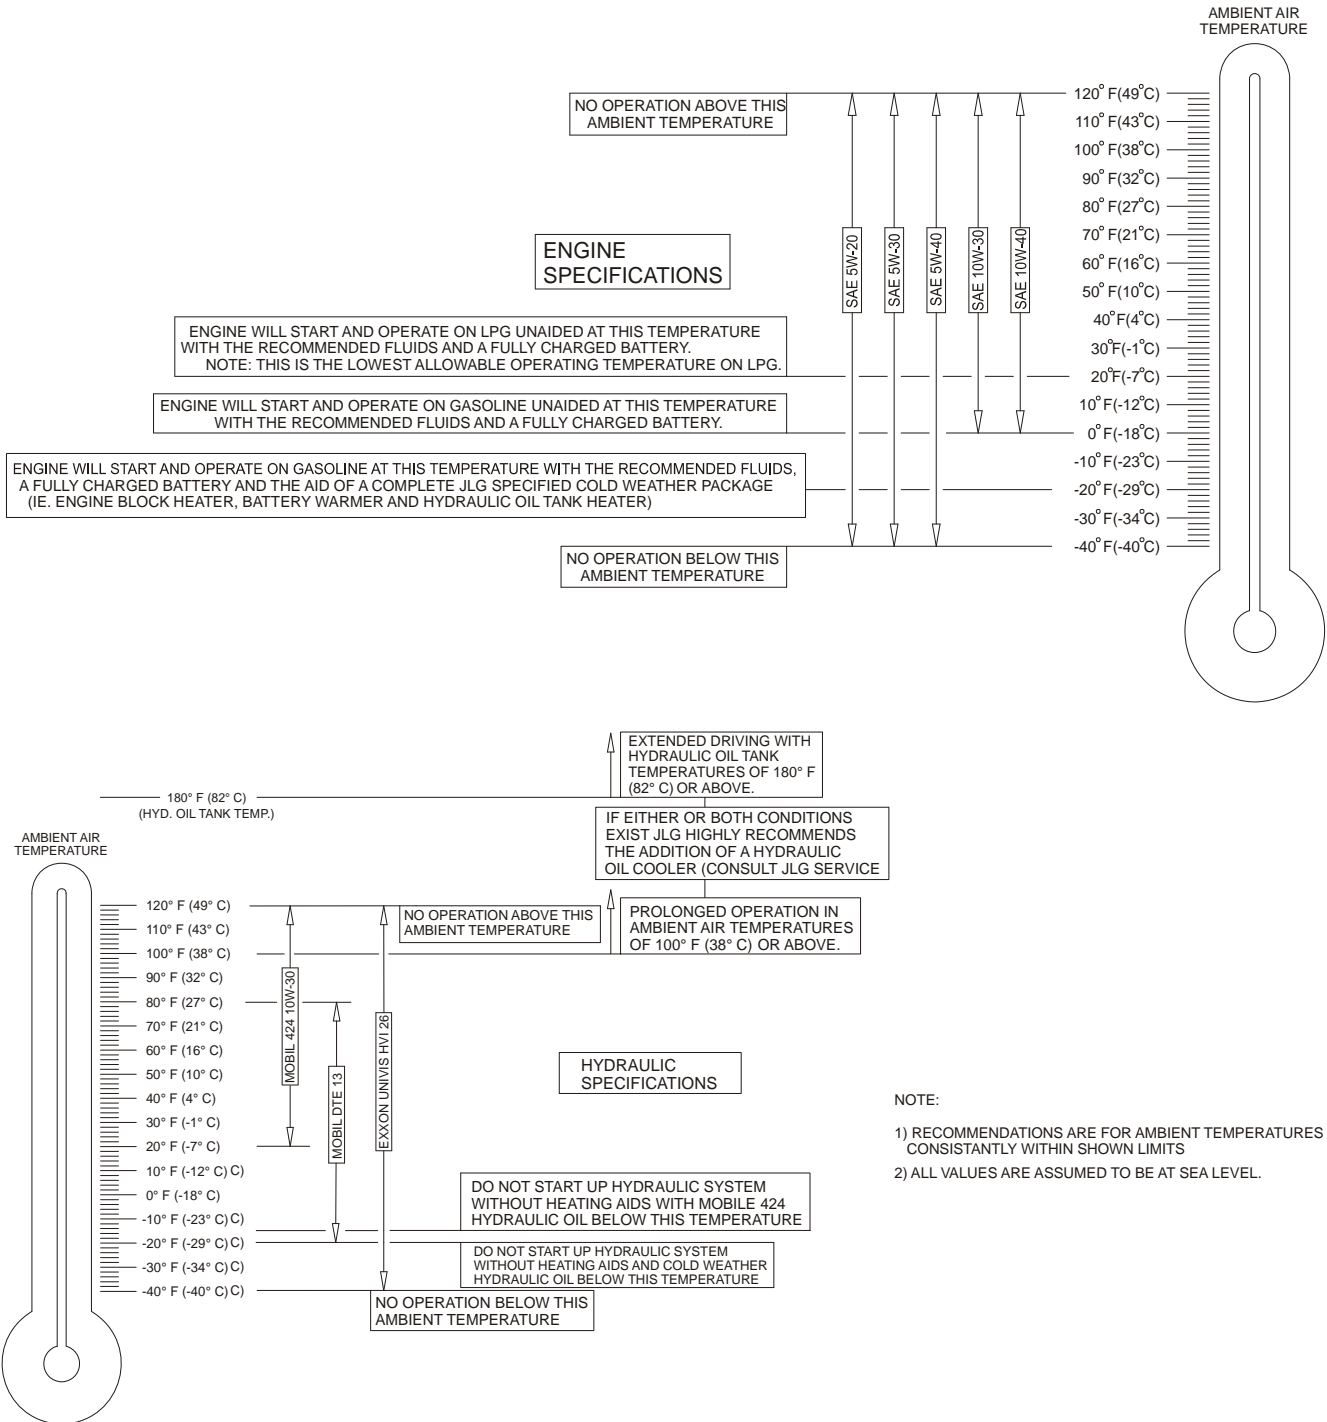

4150548 E

Figure 2-2. Engine Operating Temperature Specifications - Ford

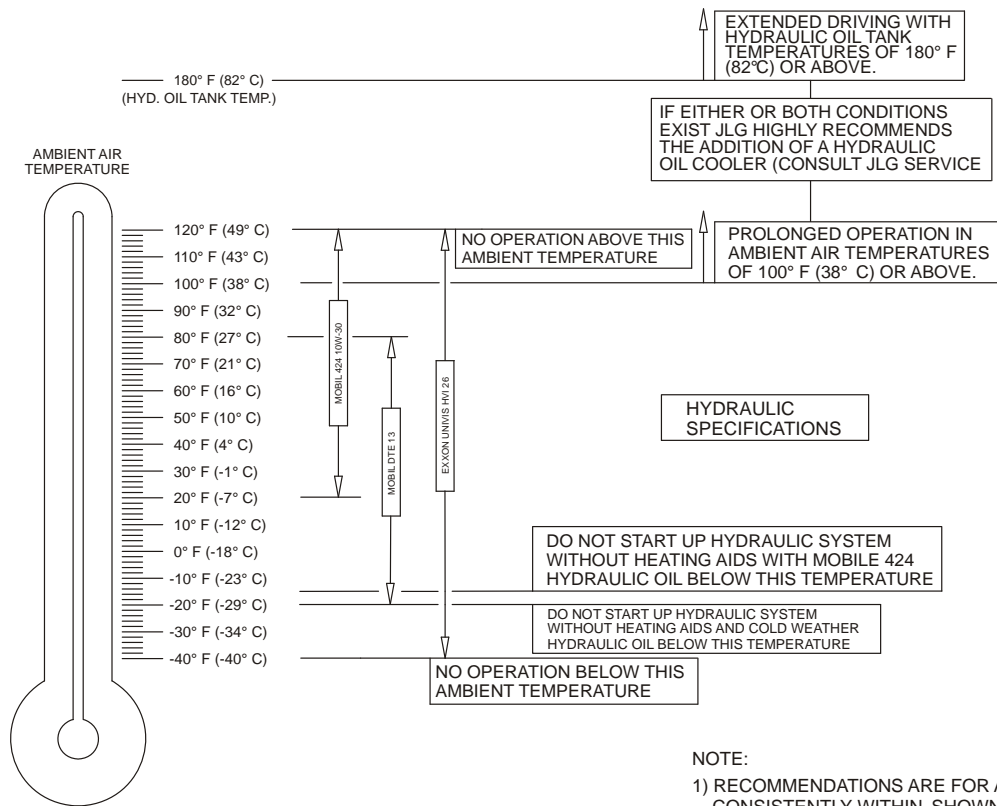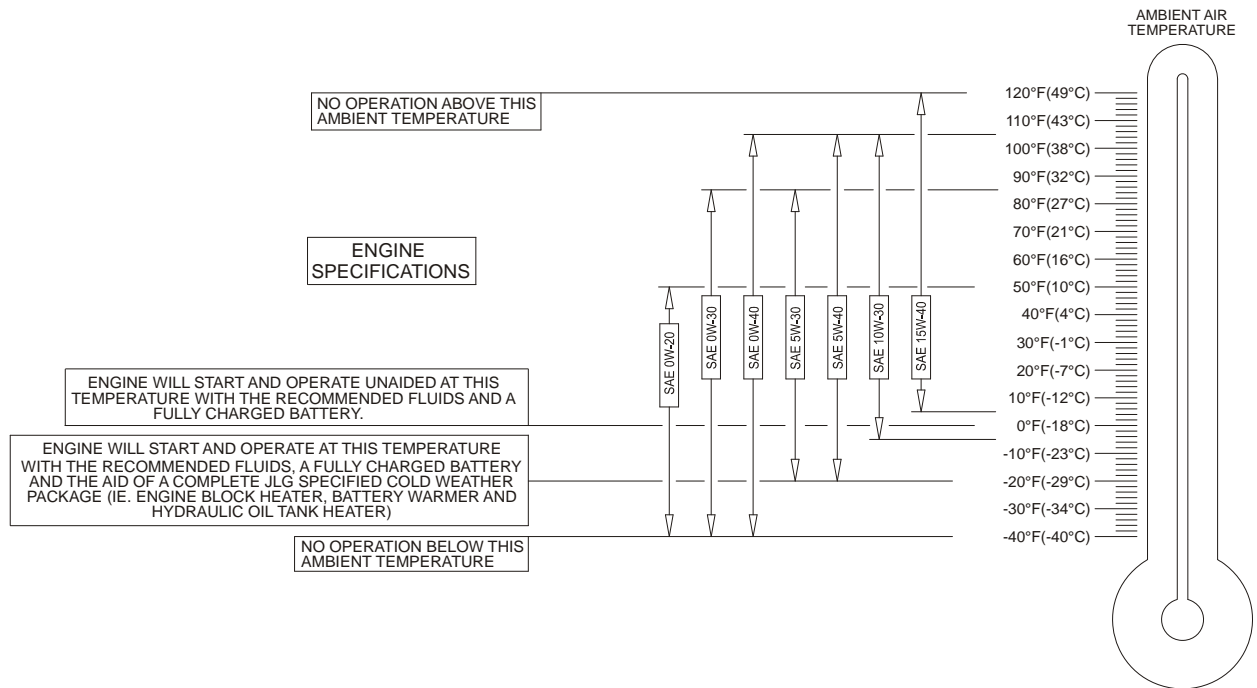


- NOTE:
- 1) RECOMMENDATIONS ARE FOR AMBIENT TEMPERATURES CONSISTENTLY WITHIN SHOWN LIMITS
 - 2) ALL VALUES ARE ASSUMED TO BE AT SEA LEVEL.

4150548 E

Figure 2-3. Engine Operating Temperature Specifications - Caterpillar

SECTION 2 - GENERAL

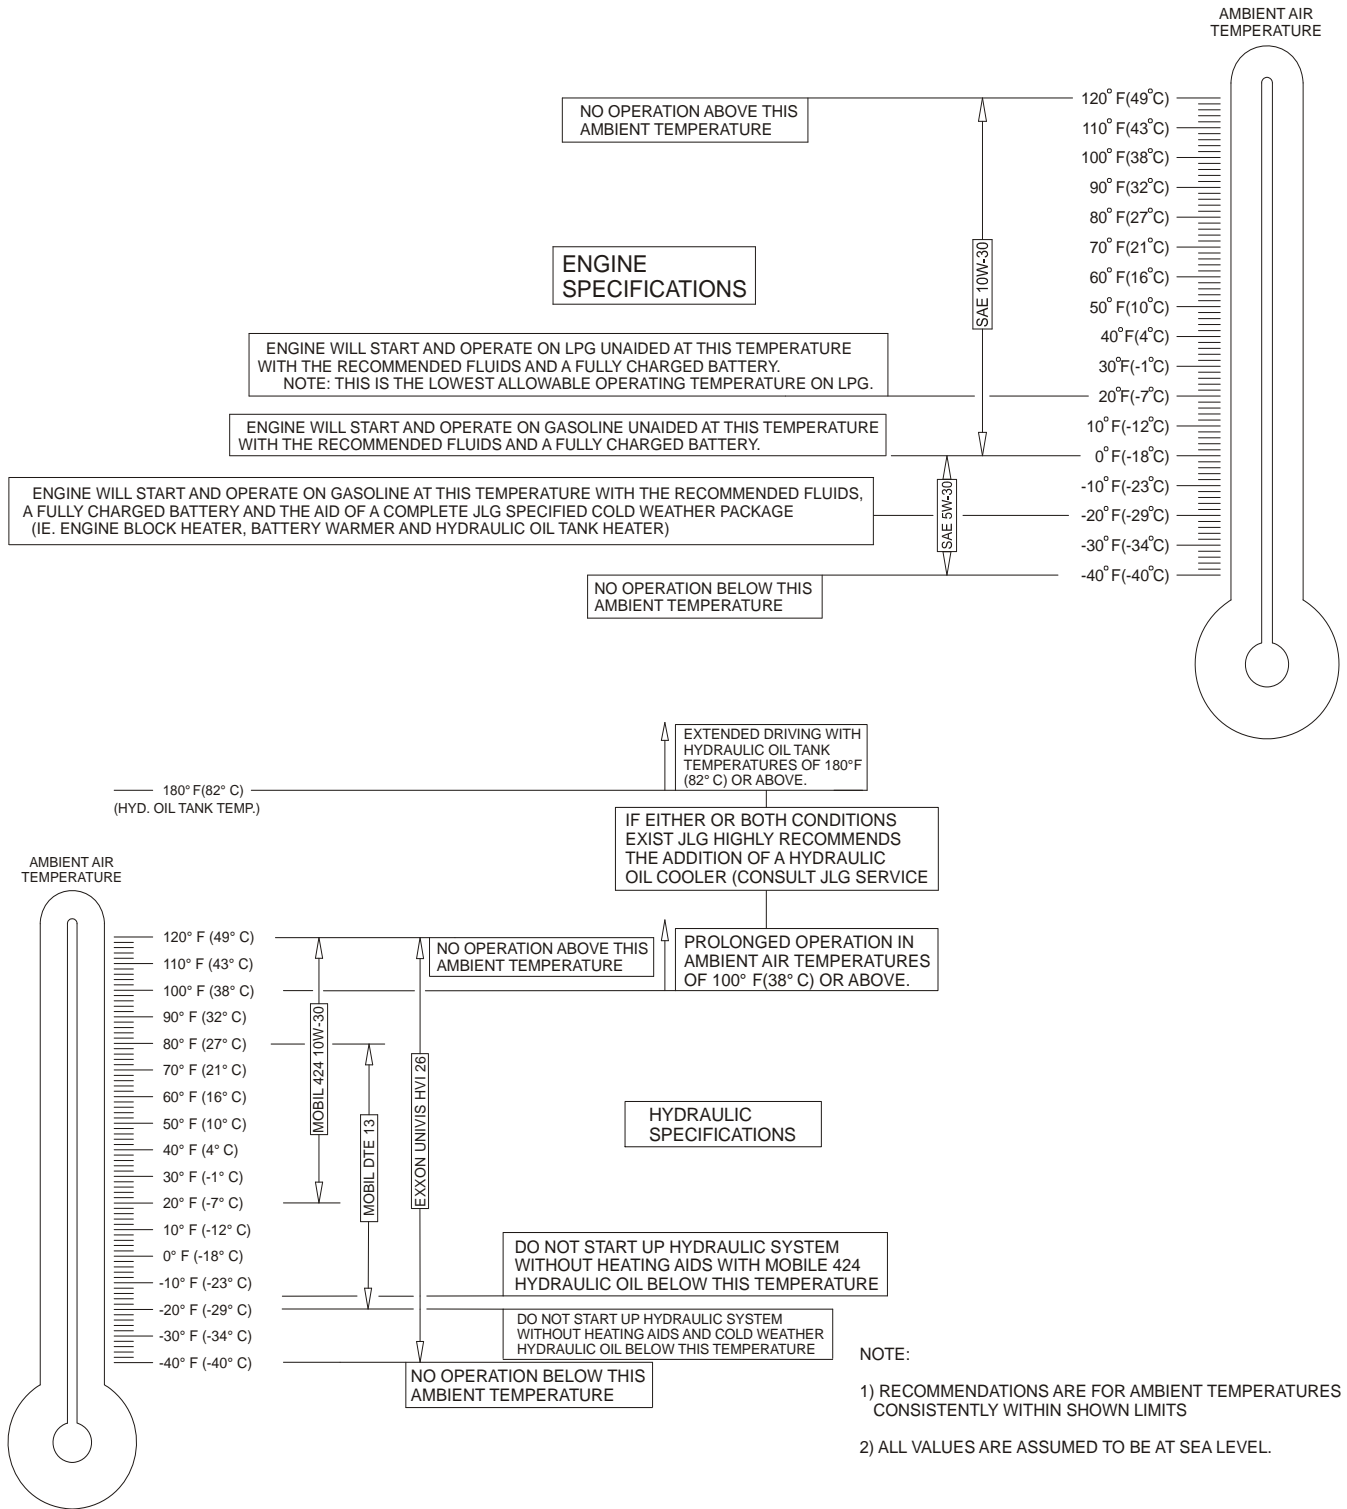

4150548 E

Figure 2-4. Engine Operating Temperature Specifications - GM

SECTION 3. CHASSIS & TURNTABLE

3.1 TIRES & WHEELS

Tire Inflation

The air pressure for pneumatic tires must be equal to the air pressure that is stenciled on the side of the JLG product or rim decal for safe and proper operational characteristics.

Tire Damage

For pneumatic tires, JLG Industries, Inc. recommends that when any cut, rip, or tear is discovered that exposes sidewall or tread area cords in the tire, measures must be taken to remove the JLG product from service immediately. Arrangements must be made for replacement of the tire or tire assembly.

For polyurethane foam filled tires, JLG Industries, Inc. recommends that when any of the following are discovered, measures must be taken to remove the JLG product from service immediately and arrangements must be made for replacement of the tire or tire assembly.

- a smooth, even cut through the cord plies which exceeds 3 inches (7.5 cm) in total length
- any tears or rips (ragged edges) in the cord plies which exceeds 1 inch (2.5 cm) in any direction
- any punctures which exceed 1 inch in diameter
- any damage to the bead area cords of the tire

If a tire is damaged but is within the above noted criteria, the tire must be inspected on a daily basis to insure the damage has not propagated beyond the allowable criteria.

Wheel and Tire Replacement

The rims installed on each product model have been designed for stability requirements which consist of track width, tire pressure, and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in an unsafe condition regarding stability.

Wheel Installation


It is extremely important to apply and maintain proper wheel mounting torque.

⚠ WARNING


WHEEL NUTS MUST BE INSTALLED AND MAINTAINED AT THE PROPER TORQUE TO PREVENT LOOSE WHEELS, BROKEN STUDS, AND POSSIBLE DANGEROUS SEPARATION OF WHEEL FROM THE AXLE. BE SURE TO USE ONLY THE NUTS MATCHED TO THE CONE ANGLE OF THE WHEEL.

Tighten the lug nuts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. If you do not have a torque wrench, tighten the fasteners with a lug wrench, then immediately have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. The proper procedure for attaching wheels is as follows:

1. Start all nuts by hand to prevent cross threading. DO NOT use a lubricant on threads or nuts.
2. Tighten nuts in the following sequence:

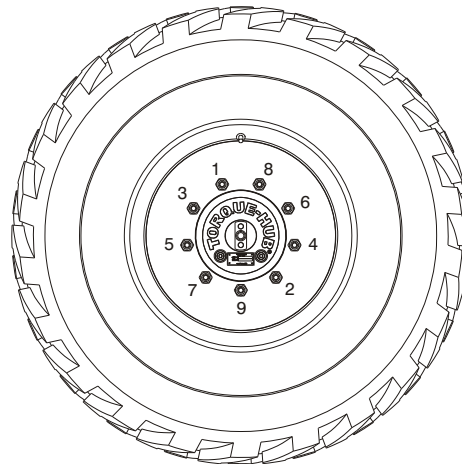

9 LUG PATTERN

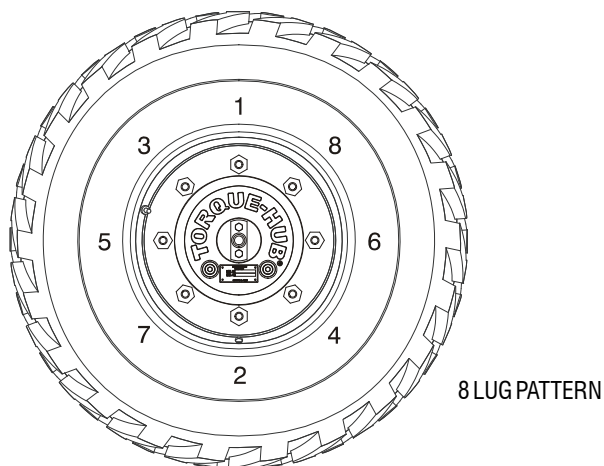

3. The tightening of the nuts should be done in stages. Following the recommended sequence, tighten nuts per wheel torque chart.

Table 3-1. Wheel Torque Chart

TORQUE SEQUENCE		
1st Stage	2nd Stage	3rd Stage
40 ft. lbs. (55 Nm)	95 ft. lbs. (130 Nm)	170 ft. lbs. (230 Nm)

4. Wheel nuts should be torqued before first road use and after each wheel removal. Check and torque every 3 months or 150 hours of operation.

3.2 DRIVE TORQUE HUB

Roll, Leak and Brake Testing

Torque-Hub units should always be roll and leak tested before disassembly and after assembly to make sure that the unit's gears, bearings and seals are working properly. The following information briefly outlines what to look for when performing these tests.

NOTE: The brake must be released before performing the roll test. This can be accomplished by either pressurizing the brake using the Brake Leak Test procedure below or by tightening the bolts into the piston through the end plate (See Brake Disassembly Procedure)

NOTE: Bolts must be removed while performing brake release test

THE ROLL TEST

The purpose of the roll test is to determine if the unit's gears are rotating freely and properly. You should be able to rotate the gears in your unit by applying constant force to the roll checker. If you feel more drag in the gears only at certain points, then the gears are not rolling freely and should be examined for improper installation or defects. Some gear packages roll with more difficulty than others. Do not be concerned if the gears in your unit seem to roll hard as long as they roll with consistency.

THE LEAK TEST (MAIN UNIT)

The purpose of a leak test is to make sure the unit is air tight. You can tell if your unit has a leak if the pressure gauge reading on your leak checking fitting starts to fall after the unit has been pressurized and allowed to equalize. Leaks will most likely occur at the pipe plugs, the main seal or wherever o-rings or gaskets are located. The exact location of a leak can usually be detected by brushing a soap and water solution around the main seal and where the o-rings or gaskets meet on the exterior of the unit, then checking for air bubbles. If a leak is detected in a seal, o-ring or gasket, the part must be replaced, and the unit rechecked. Leak test at 10 psi for 20 minutes.

THE BRAKE TEST

Reference: Sample Model 7HBE01F0B30057. The underlined letter is the brake option. Options are A, B, C, D, E, or X.

A Input Brake	2,200 in-lb (248 Nm) Static, 280 psi (19.3 bar) Full Release 3000 psi (207 bar) maximum o-ring check.
B Input Brake	1,900 in-lb (215 Nm) Static, 240 psi (16.5 bar) Full Release 3000 psi (207 bar) maximum o-ring check.
C Input Brake	1,600 in-lb (181 Nm) Static, 200 psi (13.8 bar) Full Release 3000 psi (207 bar) maximum o-ring check.
D Input Brake	1,400 in-lb (158 Nm) Static, 180 psi (12.4 bar) Full Release 3000 psi (207 bar) maximum o-ring check.
E Input Brake	1,250 in-lb (141 Nm) Static, 160 psi (11.0 bar) Full Release 3000 psi (207 bar) maximum o-ring check.
X – No Brake	

If brake does not release at these pressure values, brake has to be inspected, repaired or replaced.

NOTE: Failure to perform this test may result in damaged or ineffective brake parts.


Tightening and Torquing Bolts

If an air impact wrench is used to tighten bolts, extreme care should be taken to ensure that the bolts are not tightened beyond their specified torque.

The following steps describe how to tighten and torque bolts or socket head cap screws in a bolt circle.


1. Tighten (but do not torque) bolt "A" until snug.
2. Go to the opposite side of the bolt circle and tighten bolt "B" until equally snug.
3. Crisscross around the bolt circle and tighten remaining bolts.
4. Now use a torque wrench to apply the specified torque to bolt "A".

5. Using the same sequence, crisscross around the bolt circle and apply an equal torque to the remaining bolts.

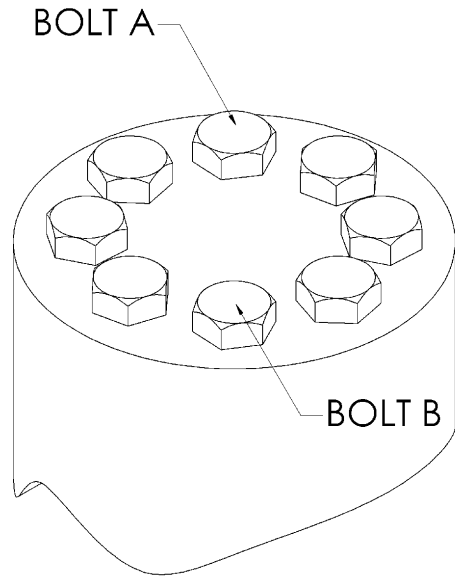


Main Disassembly

1. Perform Roll Check, Leak Check and Brake Check if applicable prior to disassembling the unit.
2. Drain oil from unit. Note the condition and volume of the oil.
3. Remove Retaining Ring (6G) by prying the open end of Retaining Ring out of the groove in the Ring Gear (1E) with a screwdriver, then grasp the loose end with pliers and pull the Retaining Ring completely out of the groove.
4. Remove the Cover Subassembly (6) from the unit. The unit can be carefully pressurized with air to pop the cover out of the unit.

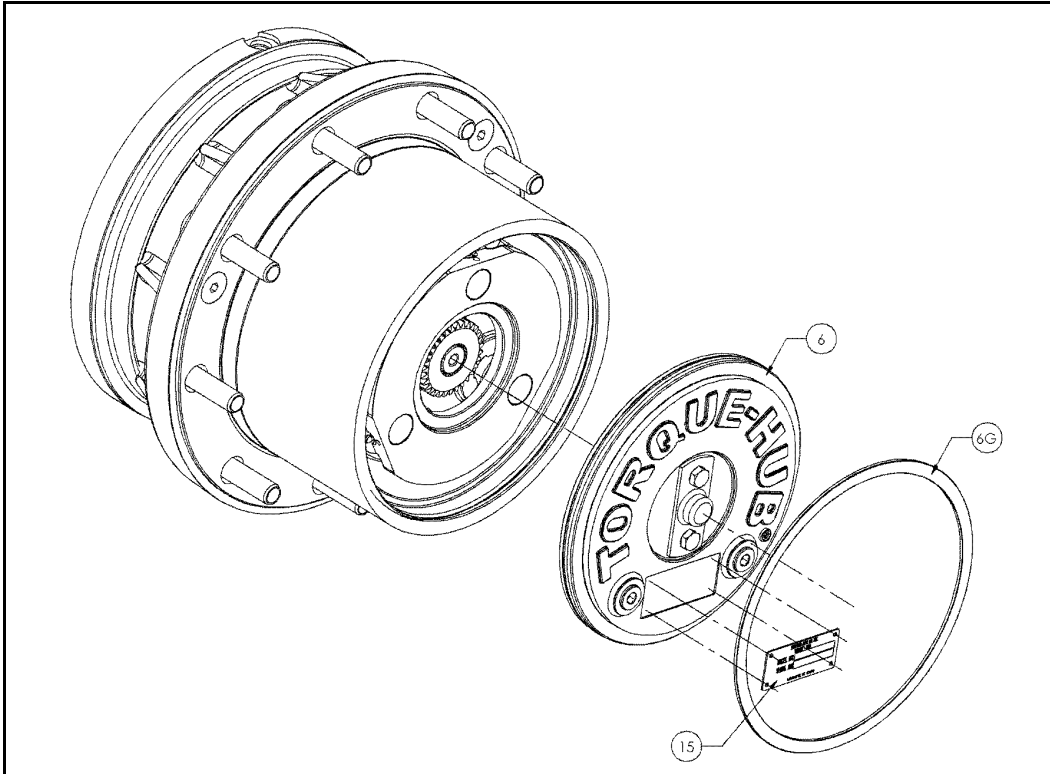

- 6. Cover
- 6G. Retaining Ring
- 15. ID Plate

Figure 3-1. Main Disassembly

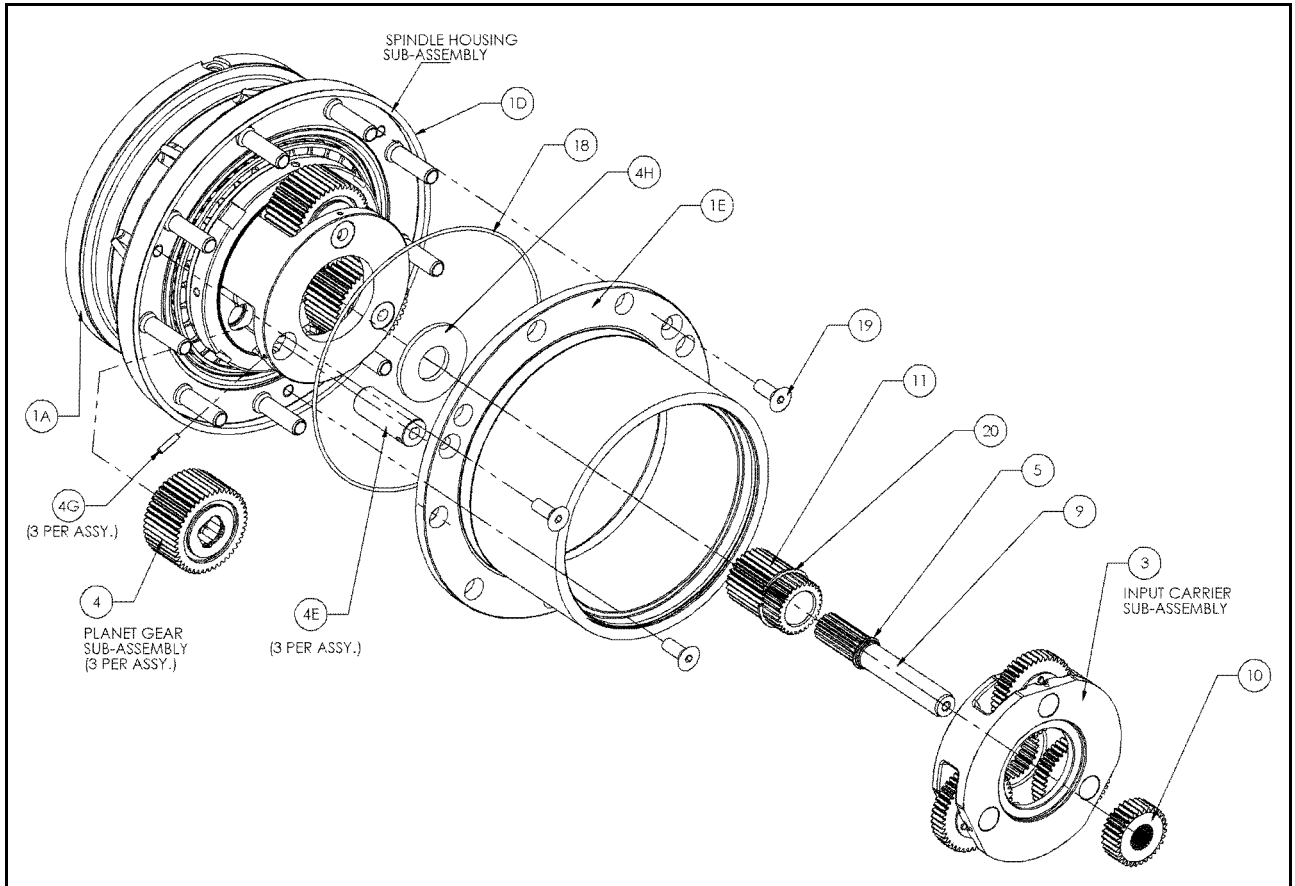


- | | | | |
|------------------|-------------------|---------------------------|--------------------|
| 1A. Spindle | 4. Planet Gear | 5. Retaining Ring | 18. O-ring |
| 1D. Housing | 4E. Planet Shaft | 9. Input Shaft | 19. Bolt |
| 1E. Ring Gear | 4G. Roll Pin | 10. First Stage Sun Gear | 20. Retaining Ring |
| 3. Input Carrier | 4H. Thrust Washer | 11. Second Stage Sun Gear | |

Figure 3-2. Input Carrier

5. Remove the First Stage Sun Gear (10) if applicable.
- NOTE:** On units with ratios greater than 36:1 numerically, there will not be a separate First Stage Sun Gear (10), as the gear teeth will be integral to the Input Shaft (9).
6. Remove the Input Carrier Subassembly (3).
 7. Remove the Input Shaft (9).
 8. Remove the Second Stage Sun Gear (11).
- NOTE:** On units with a ratio 48:1, the Sun Gear (11) and the Input Shaft (9) will need to be removed together.
9. Loosen and remove the three Flat Head Bolts (19) that retain the Ring Gear (1E) to the Housing (1G).
 10. Lift the Ring Gear (1E) off of the Housing (1D).
 11. Remove the O-ring (18) from between the Housing (1D) and the Ring Gear (1E).
 12. Using a 1/8" diameter punch, drive the Roll Pin (4G) into the Planet Shaft (4E) until it bottoms against the Spindle (1A).
 13. Grasp the Roll Pin (4G) using needle nosed pliers or some sort of hooked tool, and pull the Planet Shaft (4E) out of the Spindle (1A).
 14. Using a 1/8" diameter punch, drive the Roll Pin (4G) out of the Planet Shaft (4E).
- NOTE:** The Roll Pins (4G) should not be reused when reassembling the unit.

SECTION 3 - CHASSIS & TURNTABLE


15. Slide the Planet Gear Subassembly (4) out of the Spindle (1A) being careful to not drop the Needle Bearings (4C) in the process.
16. Remove 4 Thrust Washers (4B), 28 Needle Rollers (4C) and the Thrust Spacer (4D) from the Second Stage Planet Gear (4F).
17. Repeat Steps 12 through 16 for the remaining two Planet Gears (4F).
18. Remove the Thrust Washer (4H) from the counter-bore in the Spindle (1A).

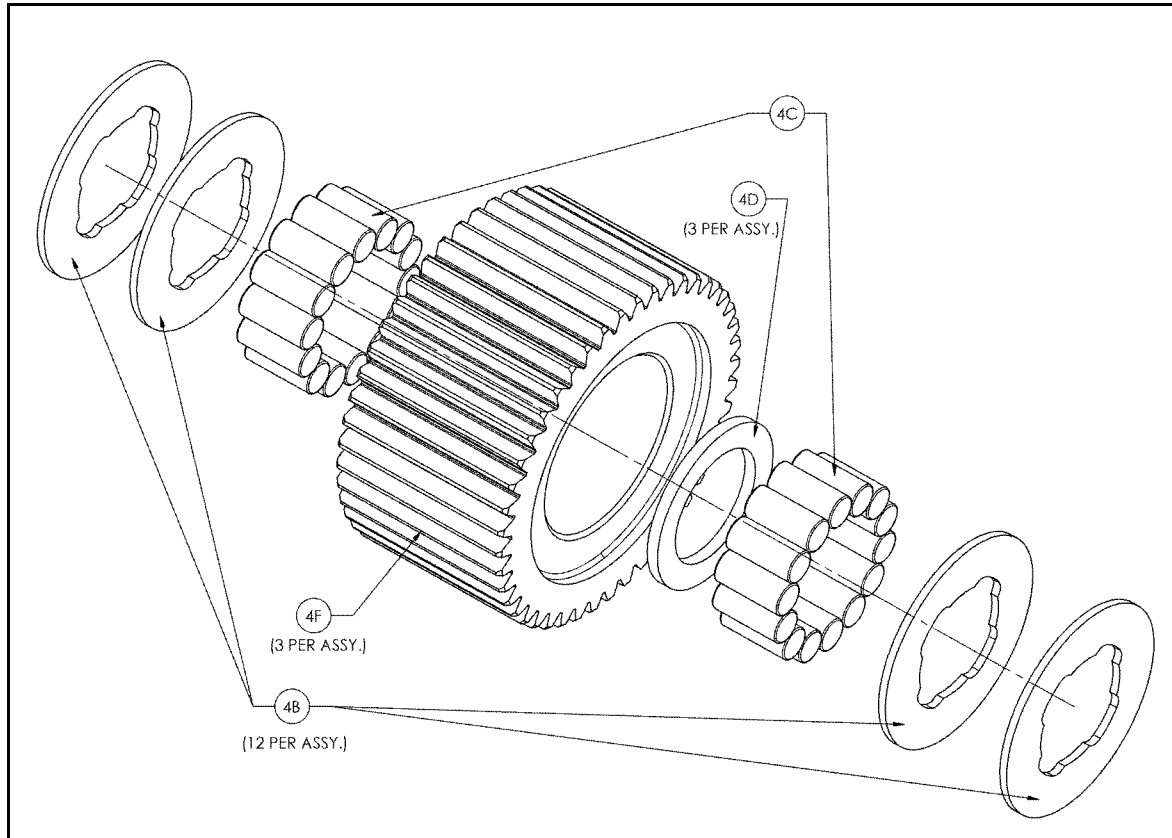

4B. Thrust Washer 4D. Thrust Spacer
4C. Needle Roller 4F. Planet Gear


Figure 3-3. Planet Gear Sub Assembly

Input Carrier Disassembly

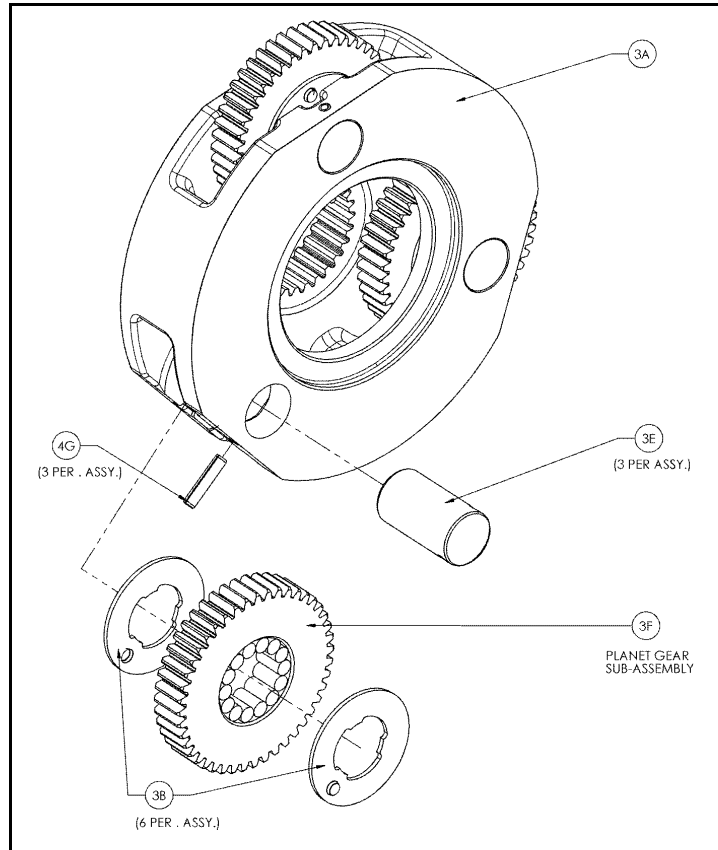

3A. Carrier
3B. Thrust Washer
3E. Planet Shaft
3F. Planet Gear
4G. Roll Pin

Figure 3-4. Input Carrier

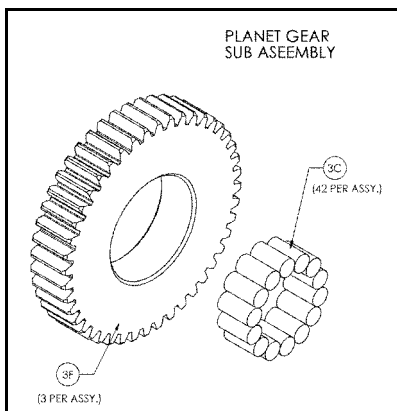

3C. Needle Bearing
3F. Planet Gear


Figure 3-5. Planet Gear Subassembly

1. Using a 1/8" diameter punch, drive the Roll Pin (4G) into the Planet Shaft (3E) until it bottoms against the Carrier (3A).
2. Using a soft face hammer, tap the Planet Shaft (3E) out of the Carrier (3A).
3. Using a 1/8" diameter punch, drive the Roll Pin (4G) out of the Planet Shaft (3E).

NOTE: The Roll Pins (4G) should not be reused when reassembling the unit.

4. Slide the Planet Gear (3F) and the two Thrust Washers (3B) out of the Carrier (3A).
5. Remove the 14 needle Bearings (3C) from the bore of the Planet Gear (3F).
6. Repeat steps 1 through 5 for each of the two remaining planet gears.

Hub-Spindle Disassembly

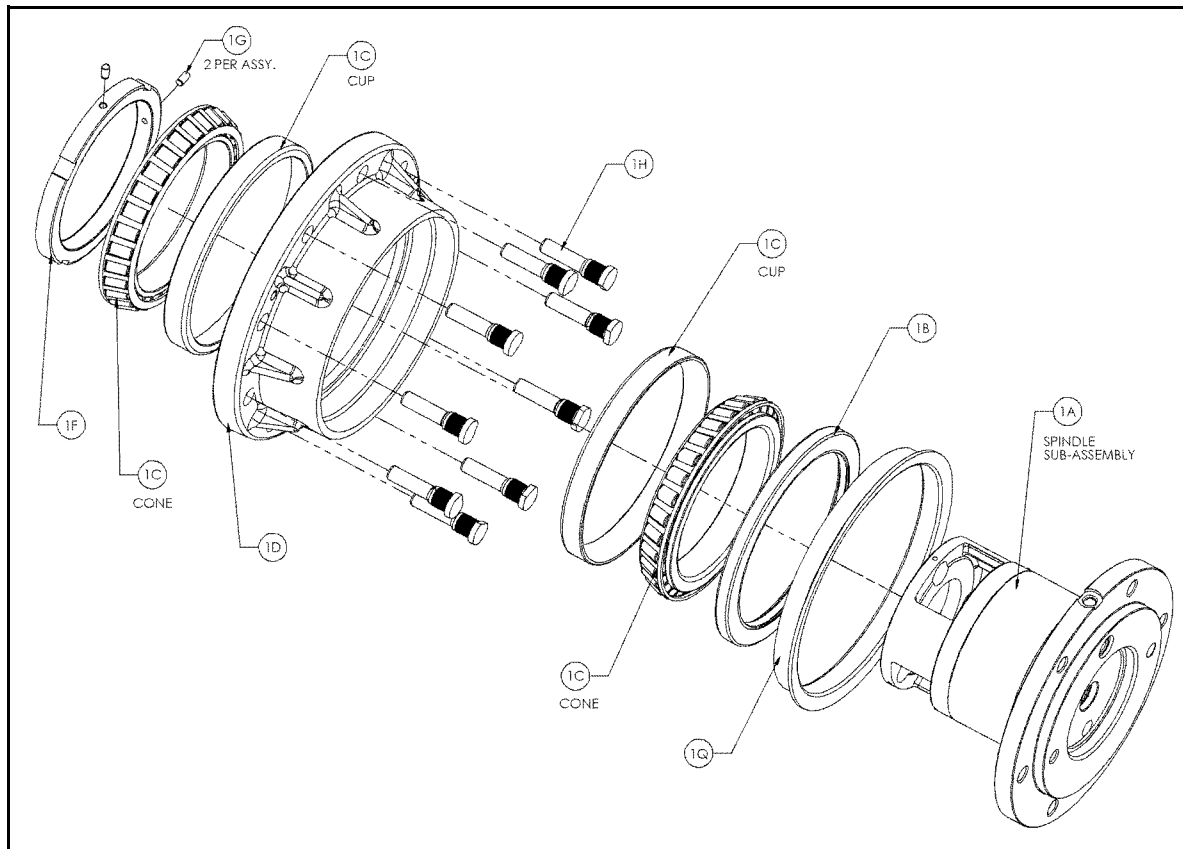


- | | |
|------------------|-----------------|
| 1A. Barrel | 1F. Bearing Nut |
| 1B. Seal | 1G. Setscrew |
| 1C. Bearing Cone | 1H. Stud |
| 1D. Hub | 1Q. Boot Seal |

Figure 3-6. Hub Spindle


1. Place unit on bench with Spindle (1A) end down.
 2. Remove 2 Set Screws (1G) and Bearing Nut (1F) using T-206569.
- NOTE:** The holes in the Bearing Nut (1F) for the Set Screws (1G) were staked for retention of the Set Screws (1G). The holes will need to be cleaned up prior to removing the Set Screws.
3. Remove "A" position Bearing Cone (1C) from Bearing Cup (1C) in Hub (1D).
 4. While supporting the unit on Hub (1D) flange, press Spindle (1A) out of Hub (1D).
 5. Lift Hub (1D) off of Spindle (1A). Remove Boot Seal (1Q) from Hub (1D) if applicable.
 6. If necessary, press 9 Studs (1H) out of Hub (1D). Locate Hub (1D) on Seal (1B) end.
 7. Remove Seal (1B) from Hub (1D).
- NOTE:** The Seal (1B) should NOT be reused when reassembling the unit.
8. Remove "B" position Bearing Cone (1C) from Bearing Cup (1C) in Hub (1D).
 9. Remove "B" position Bearing Cone (1C) from Hub (1D).
 10. Using a soft steel rod, knock both Bearing Cups (1C) out of Hub (1D).

Spindle-Brake Disassembly

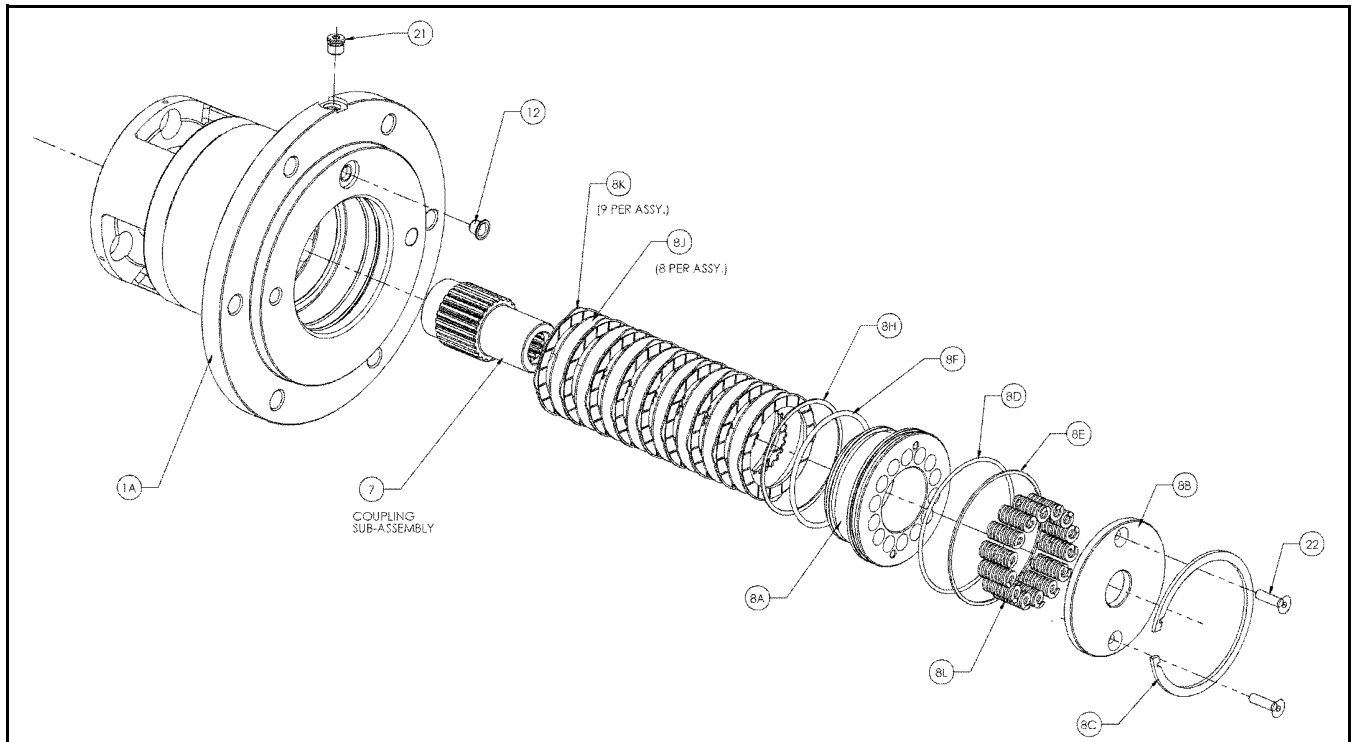

- | | | | |
|-------------------------|--------------------|------------------------|------------------------|
| 1A. Spindle | 8C. Retaining Ring | 8H. Backup Ring | 12. Plastic Plug |
| 7. Coupling Subassembly | 8D. O-Ring | 8J. Rotor | 21. Pipe Plug |
| 8A. Piston | 8E. Backup Ring | 8K. Stator | 22. Flat Head Capscrew |
| 8B. Pressure Plate | 8F. O-Ring | 8L. Compression Spring | |

Figure 3-7. Spindle Brake

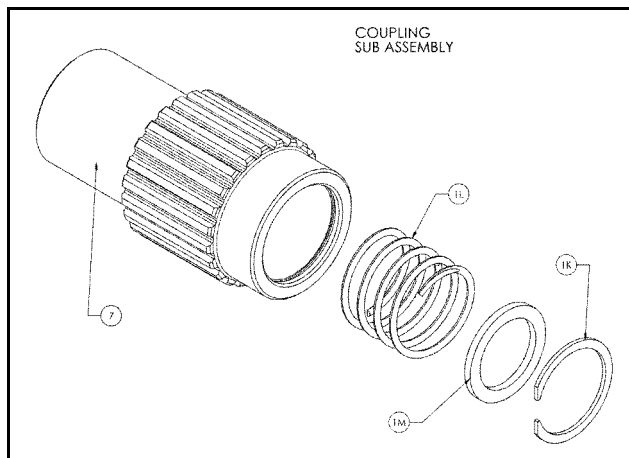

- 1K. Retaining Ring
- 1L. Spring
- 1M. Spacer
- 7. Coupling

Figure 3-8. Coupling Subassembly

NOTE: This procedure applies only to units with integral Input Brake (8).

⚠ CAUTION

EYE PROTECTION MUST BE WORN WHILE PERFORMING THE STEPS 1-3 IN THIS PROCEDURE.

1. Compress the Compression Springs (8L) by installing two 1/4-20 x 5/8" Flat Head Cap Screws (22) through Pressure Plate (8B) and into Piston (8A) and tightening incrementally until spring force has been taken off of the Retaining Ring (8C).

NOTE: Flat Head Cap Screws (22) are removed prior to shipping new units since they are for transit and service only. They are included in most brake repair kits.

2. Using retaining ring pliers, remove Retaining Ring (8C) from the groove in the Spindle (1A).


3. Back Flat Head Cap Screws (22) incrementally out of Piston (8A) until spring force is relieved from the Pressure Plate (8B). Then, remove Flat Head Cap Screws (22) and Pressure Plate (8B) from brake cavity in Spindle (1A).
4. Remove Compression Springs (8L) from Piston (8A).

⚠ CAUTION

EYE PROTECTION MUST BE WORN WHILE PERFORMING THE NEXT STEP IN THIS PROCEDURE.

5. Using an air hose, slowly and carefully pressurize the brake port in the Spindle (1A) until the Piston (8A) comes out of piston bore of Spindle (1A), Then pull the Piston (8A) the rest of the way out of the Spindle (1A) by hand.
6. Remove Backup Rings (8E) & (8H) and O-rings (8D) & (8F) from grooves in Piston (8A).
7. Remove Rotors (8J) and Stators (8K) from brake cavity in Spindle (1A).
8. Remove Coupling Subassembly (7) from brake cavity in Spindle (1A).
9. Remove Retaining Ring (1K) out of the internal groove using appropriate tool.
10. Remove the Spacer (1M) & Spring (1L) out of the bore of Coupling (7).
11. Remove Plastic Plug (12) & Pipe Plug (21) from Spindle (1A) if applicable.

Cover Disassembly

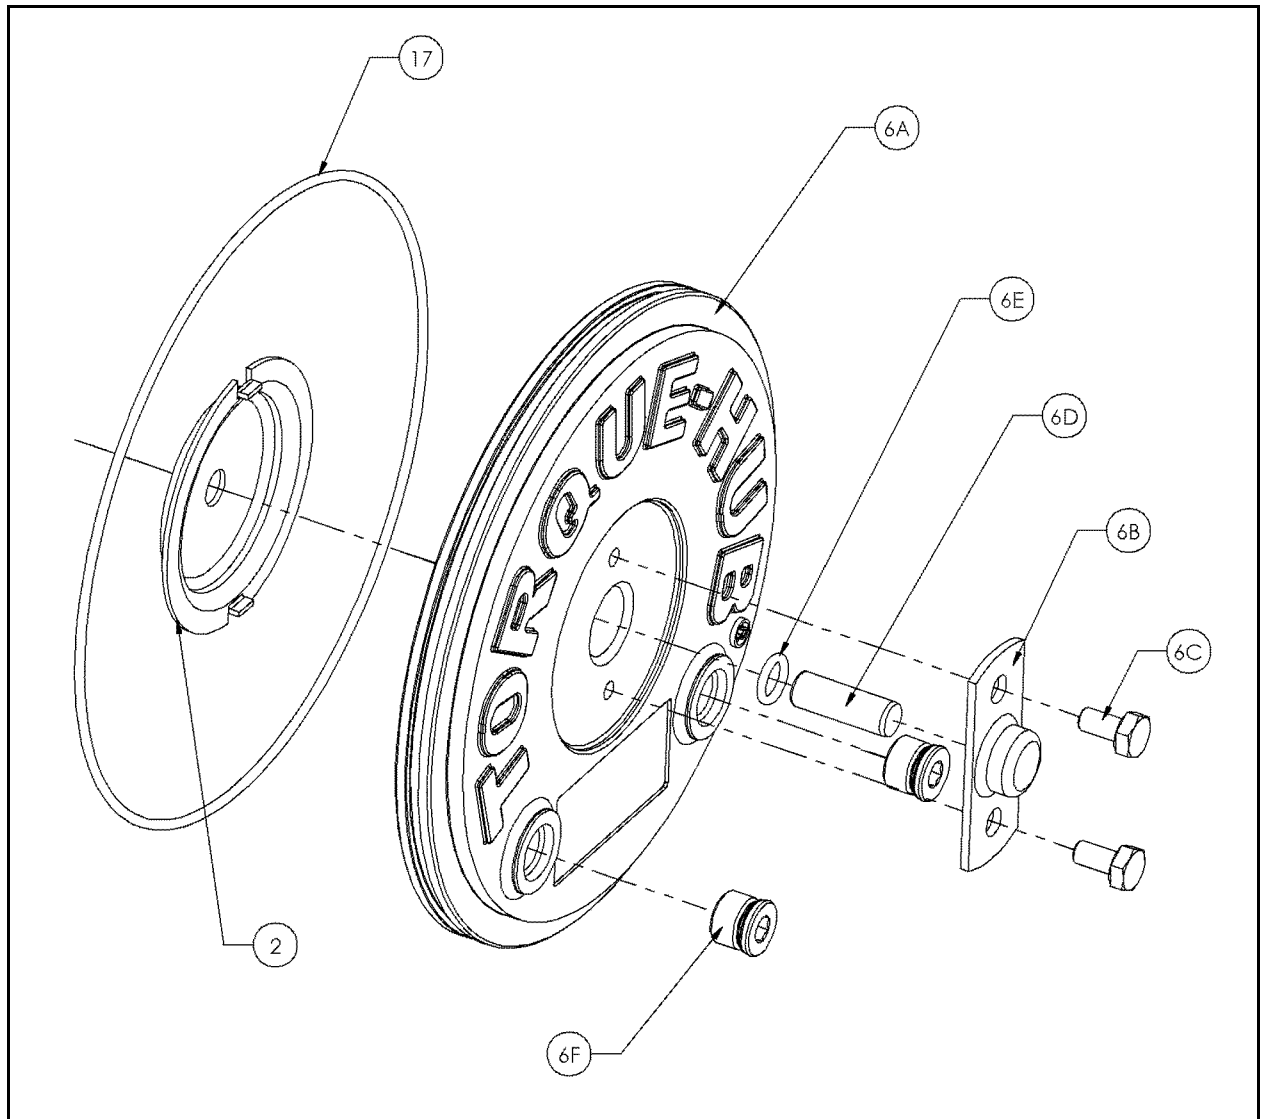

2. Thrust Washer	6D. Disengage Rod
6A. Cover	6E. O-Ring
6B. Disengage Cap	6F. Pipe Plug
6C. Bolt	17. O-Ring

Figure 3-9. Cover

1. Remove O-Ring (17) from groove in Cover (6A).
2. Remove Thrust Washer (2) from Cover (6A) pockets.
3. Unscrew two Hex Head Bolts (6C) and remove Disengage Cap (6B) from Cover (6A).
4. Pull Disengage Rod (6D) out from Cover (6A).
5. Use appropriate tool to remove O-ring (6E) from internal groove in Cover (6A).
6. Remove two O-Ring Pipe Plugs (6F) from Cover (6A).

Input Carrier Sub-Assembly

1. Apply a liberal coat of grease to the bore of one Input Planet Gear (3F).
2. Line the inside of the Planet Gear (3F) with 14 Needle Rollers (3C).

NOTE: *The last roller installed must be installed end wise. That is, the end of the last roller must be placed in between the ends of the two rollers which form the space, and then slid, parallel to the other rollers, into place.*

3. Set Carrier (3A) in an upright position.
4. Insert a Planet Shaft (3E) into the planet shaft hole in the end of the Carrier (3A) opposite the splined end. The end of the planet shaft that does NOT have the roll pin hole should be inserted into the carrier FIRST.
5. Place one Thrust Washer (3B) onto the end of Planet Shaft (3E). Make sure the flat faces towards the inside of the carrier and make sure the button fits in the pocket on the inside of the Carrier (3A) towards the OD.
6. Following the thrust washer, place Planet Gear (3F) with needle rollers, onto Planet Shaft (3E).
7. Following the planet gear, place one more Thrust Washer (3B) onto Planet Shaft (3E). Align the Thrust Washer (3B) in the same manner described in Step 5.
8. Now insert Planet Shaft (3E) through the opposite planet shaft hole on Carrier (3A). Use an alignment punch or similar tool to align the roll pin holes on Carrier (3A) and Planet Shaft (3E).

NOTE: *Be sure not to hit the Planet Gears (3F) when driving in the Roll Pins (4G).*

9. Drive Roll Pin (4G) down into the aligned roll pin holes. Pin should be flush with the flat of carrier.
10. Repeat Steps 1-9 for the installation of the two remaining Planet Gears (3F).

NOTE: *Some grease may need to be applied to the Thrust Washers (3B) to hold them in place while installing the planet gears.*

Output Planet Gear Sub-Assembly

1. Apply a liberal coat of grease to the bore of one Output Planet Gear (4F).
2. Line the inside of the Planet Gear (4F) with 14 Needle Rollers (4C).

NOTE: *The last roller installed must be installed end wise. That is, the end of the last roller must be placed in between the ends of the two rollers which form the space, and then slid, parallel to the other rollers, into place.*

3. Place Spacer (4D) into the bore of the Output Planet (4F).
4. Repeat Step 2 to put in second roll of Needle Rollers (4C).
5. Apply grease to hold two Thrust Washers (4B) together and onto Output Planet Gear (4F) counter-bore. Do the same to the other side.
6. Repeat Steps 1-5 to finish the assembly of the two remaining Output Planet Gears (4F).

Spindle - Brake Sub-Assembly

1. Place Spindle (1A) such that the flange side is up.
2. Place Stator (8K) into the Spindle (1A) scallop cuts.
3. Place Rotor (8J) on top of Stator (8K).
4. Repeat steps 2 & 3 until there are a total of 9 Stators (8K) and 8 Rotors (8J) installed.
5. Place Piston (8A) such that the smaller O.D. end is facing upward. Grease the two O-Rings and the two Backup Rings.
6. Install large Backup Ring (8E) in the large-diameter groove at the bottom of the Piston (8A).
7. Install large O-Ring (8D) in the large-diameter groove at the bottom of the Piston (8A), on top of the large Backup Ring (8E).
8. Install small O-Ring (8F) in the small-diameter groove near the top of the Piston (8A). Make sure the O-Ring is seated on the bottom of the groove.

9. Install small Backup Ring (8H) in the small-diameter groove near the top of the Piston (8A), on top of the small O-Ring (8F).
10. Insert Piston (8A) into Spindle (1A) until it contacts the Stator (8K).
11. Insert the appropriate number of Springs (8L), based on the assembly print, into Piston (8A) counterbore.
12. Place Spring (1L) into Coupling (7) counterbore. Place the Pressure plate (1M) on top of Spring (1L).
13. Use appropriate tool to install Retaining Ring (1K) into the retaining ring groove in the coupling (7) counterbore.
14. Insert Coupling sub-Assembly (7) through Rotors (8J).
15. Place Pressure Plate (8B) on top of Springs (8L).
16. Use two ¼ -20 x 0.625 flat head Cap Screws (22) by bolting the Pressure Plate (8B) and Piston (8A) together or some other appropriate tools to install Retaining Ring on top of Pressure Plate (8B) until Retaining Ring (8C) is seated.

NOTE: Remove 2 Screws from units when done, otherwise brake will not function.

17. Install Pipe Plug (21) if applicable

Hub-Spindle Sub-Assembly

NOTE: Spray a light film of oil on all component parts during assembly. Spray a generous amount of oil on bearings during installation.

1. Press Bearing Cup of part (1C), position "A", into Hub using T-158422 pressing tool.
2. Turn hub over and press Bearing Cup of part (1C), position "B", into hub using T-158422 pressing tool.(T).
3. Place Bearing Cone of part (1C), into Bearing Cup of part (1C), position "B".
4. Grease Seal (1B) lip and press seal into Hub (1D) using appropriate tool until seal is flush with end of hub.(T).
5. Place Hub (1D) into pressing base. Press nine Studs (1H) into Hub.

NOTE: Use enough pressure to press in studs. Don't use excessively high pressure to press in studs or hub may crack.

6. Set Spindle assembly (1A) on the bench with the flange down. Turn Hub (1D) over and lower onto Spindle (5). Install boot (21) if applicable.

7. Install Bearing Cone of part (1C) into Bearing Cup, position "A".
8. Apply Loctite 243 on Bearing Nut (1F) thread. Screw Nut (1F) on top of Bearing Cone of part (1C). Leave 0.003-0.005 inches endplay to check the initial rolling torque with the unit tied down. Then torque Bearing Nut (1F) until rolling torque is 40 to 50 in-lbs greater than initial rolling torque. Using tool T-206569 for the Bearing Nut.

NOTE: Final torque is initial rolling torque plus 40-50 in-lbs. E.g., if the initial rolling torque is 30 in-lbs, the final rolling torque is between 70-80 in-lbs. Be sure to rotate hub as the torque is applied to properly seat the bearing. Be sure the torque wrench is tangent to the Hub (1D) OD.

9. Using appropriate tool, install two Set Screws (1G) into Bearing Nut (1F) threaded holes. Make sure Set Screw is driven into the spindle thread. Tighten the set screws to damage the thread and stake the edge of the nut around the Set Screws (1G) so the nut will not loosen.
10. Place Thrust Washer (4H) into counterbore of Spindle (1A).
11. Place Planet Gear Sub-assembly (4) into Spindle (1A) through gap between two Studs (1H). Align the planet gear bore with one of the planet shaft holes on the spindle (1A) assembly using T-209919.
12. Insert a Planet Shaft (4E) into the planet shaft hole described in Step (11) on Spindle (1A). The end of the planet shaft that does NOT have the roll pin hole should be inserted into the Spindle FIRST.
13. Now insert Planet Shaft (4E) through the first set of Thrust Washers (4B), Planet gear, then the second set of Washers (4B). Use an alignment punch or similar tool to align roll pin holes on Spindle (1A) and Planet Shaft (4E).

NOTE: Be sure not to hit the Planet Gears (4F) when driving in Roll Pins (4G).

14. Drive Roll Pin (4G) down into the aligned roll pin holes. Pin should be flush with OD of spindle.
15. Repeat Steps (11-14) for the installation of the two remaining Planet Gears (4F).

Cover Sub-Assembly

1. Grease O-Ring (6E) and insert into internal groove in Cover (6A).
2. Assemble Disengage Cap (6B) onto Cover (6A) using two Hex Head Bolts (6C). Torque bolts to 70-80 in-lbs.
3. Insert Disengage Rod (6D) into hole in Cover (6A) until it touches the inside of the Disengage Cap (6B).

NOTE: *The Disengage Rod can be inserted either end first.*

4. Grease Face of Thrust Washer (2) and place in Cover (6A) making sure that tangs on washer seat into pockets in cover.
5. Install O-Ring Pipe Plugs (6F) into Cover (6A). The plugs should be hand tight.

Main Assembly

NOTE: *All components should receive a generous amount of lubricant oil as they are being assembled.*

1. Place Hub-Spindle Sub-Assembly on the bench.
2. Grease O-Ring (18) and place it into groove of Hub (1D).
3. Place Ring Gear (1E) onto Hub (1D). Align the three shipping Cap Screw Holes on Hub (1D) and Ring Gear (1E).
4. Install three shipping Cap Screws (19) into ring gear and hub. Torque them to 15-20 ft-lbs.
5. Place External Retaining Ring (5) over 13T spline to the retaining groove on Input Shaft (9).

NOTE: *For ratio 48:1, assemble Output Sun Gear (11) over Input Shaft (9) first, then install External Retaining Ring (5).*

6. Using appropriate tool to install Retaining Ring (20) into groove on Output Sun (11).
7. Place Input Shaft (9) spline end into mesh with Internal Coupling (7) splines.
8. With the modified spline end facing up, place the Output Gear (11) into mesh with the planet gears from the Hub-Spindle Sub-Assembly.
9. Place Input Carrier Sub-Assembly (3A) onto Output Sun Gear (11) splines. Drop Input Sun (10) into mesh with planet gears for specific ratios, if required. (No timing required).
10. Grease O-Ring (17) and insert into groove in Cover Sub-Assembly (6).

11. Install Cover Sub-Assembly (6) into Ring Gear (1E) counterbore and install Retaining Ring (6G) into groove in Ring Gear (1E).
12. Attach ID Tag (15) onto unit using Drive Screws (16).
13. Check disconnect, roll and air check unit, leak check brake, and record release pressure.
14. Insert Plastic Plug (12) into place if applicable.

Integral Brake Check


1. Using appropriate fittings, connect hydraulic line from hand pump to brake port.
2. Check to see that brake is set by trying to rotate Input Shaft (9). This can be accomplished by installing an appropriate tool (any tool that can locate on the splines of the Input Coupling (7), such as a mating splined shaft) into Input Coupling (7).
3. Bleed brake. Increase hydraulic pressure gradually while trying to rotate the input until brake just starts to release. Note this pressure. Make sure the pressure falls into the appropriate range below.

BRAKE CODE	JUST RELEASE PRESSURE RANGE	
	PSI	BAR
A	200-260	13.7-17.9
B	170-220	11.7-15.1
C	140-185	9.6-12.7
D	130-155	8.9-10.6
E	115-145	7.9-9.9

4. Increase pressure to 1,000 psi and hold for 30 seconds to check for leaks. Repair leaks if necessary.

NOTE: *Make sure that brake re-engages when pressure is released.*

NOTE: *When done, make sure Input Coupling (7) is centered in Spindle (1A) to make installation of motor possible without release of brake.*

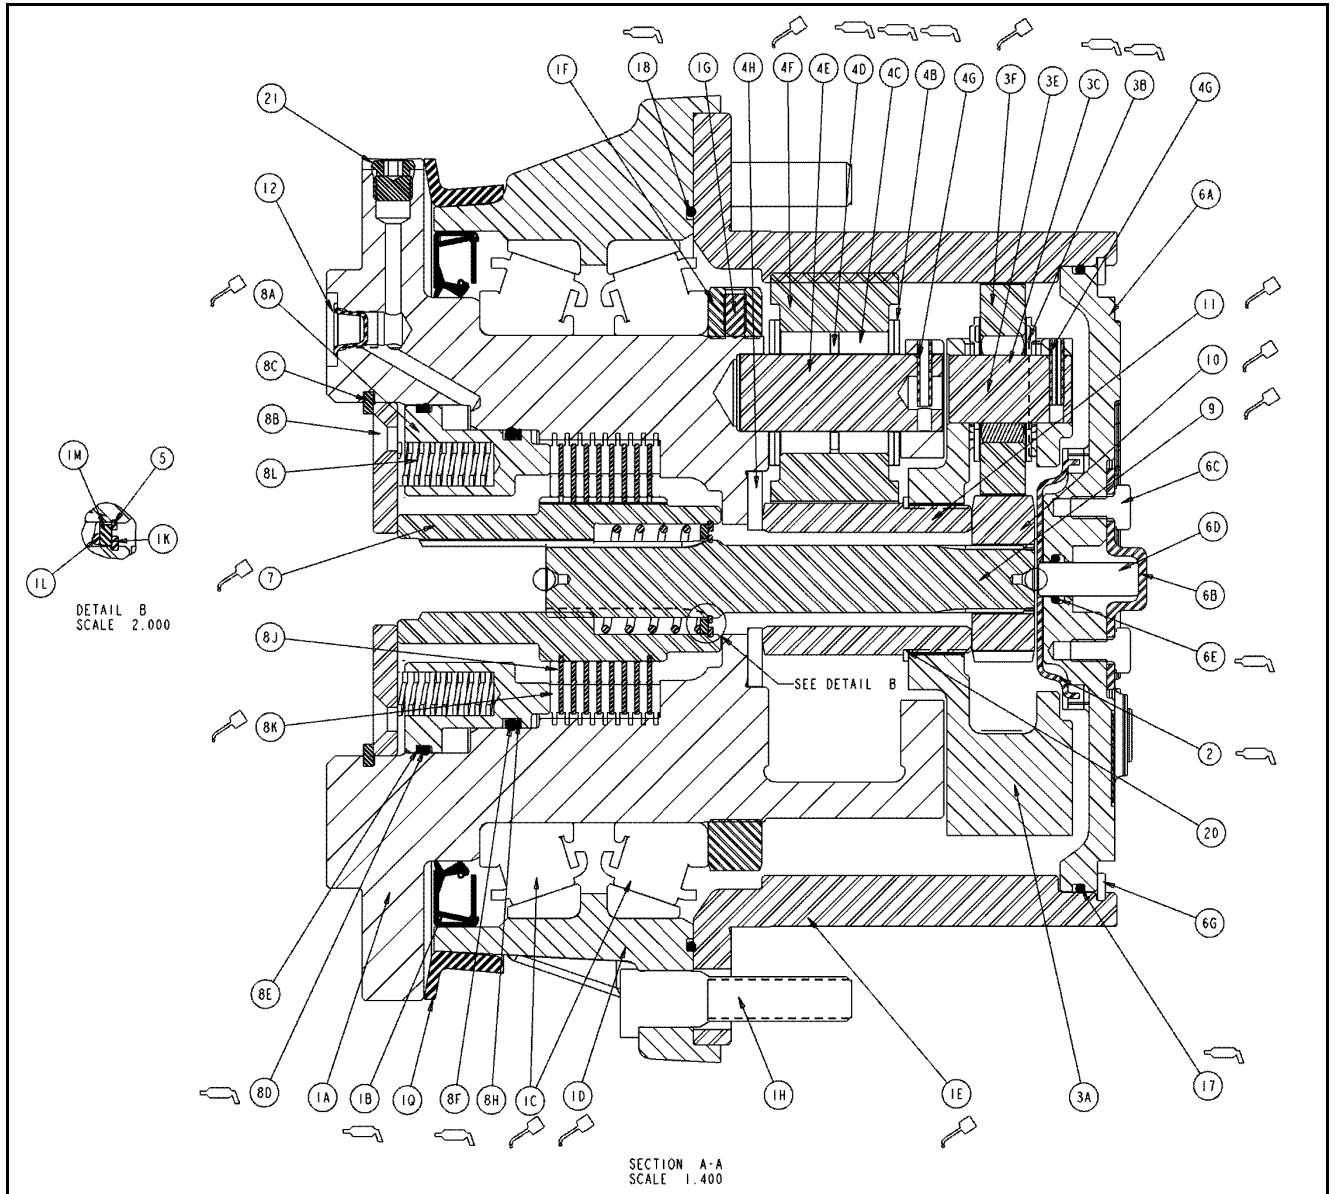

- | | | | | | |
|---------------------|--------------------|--------------------|--------------------|------------------|--------------------|
| 1A. Spindle | 1M. Thrust Washer | 4C. Needle Bearing | 6C. Bolt | 8D. O-Ring | 11. Sun Gear |
| 1B. Lip Seal | 1Q. Seal Boot | 4D. Thrust Spacer | 6D. Dowel Pin | 8E. Backup Ring | 12. Plastic Plug |
| 1C. Tapered Bearing | 2. Thrust Spacer | 4E. Planet Shaft | 6E. O-Ring | 8F. O-Ring | 15. ID Plate |
| 1D. Housing | 3A. Carrier | 4F. Planet Gear | 6F. Pipe Plug | 8H. Backup Ring | 16. Drive Screw |
| 1E. Ring Gear | 3B. Thrust Washer | 4G. Roll Pin | 6G. Retaining Ring | 8J. Brake Rotor | 17. O-Ring |
| 1F. Bearing Nut | 3C. Needle Bearing | 4H. Thrust Washer | 7. Coupling | 8K. Brake Stator | 18. O-Ring |
| 1G. Setscrew | 3E. Planet Shaft | 5. Retaining Ring | 8A. Brake Piston | 8L. Spring | 19. Bolt |
| 1H. Stud | 3F. Planet Gear | 6A. Cover | 8B. Pressure Plate | 9. Input Shaft | 20. Retaining Ring |
| 1K. Retaining Ring | 4B. Thrust Washer | 6B. Disengage Cap | 8C. Retaining Ring | 10. Sun Gear | 21. O-Ring Plug |
| 1L. Spring | | | | | |

Figure 3-10. Hub Assembly

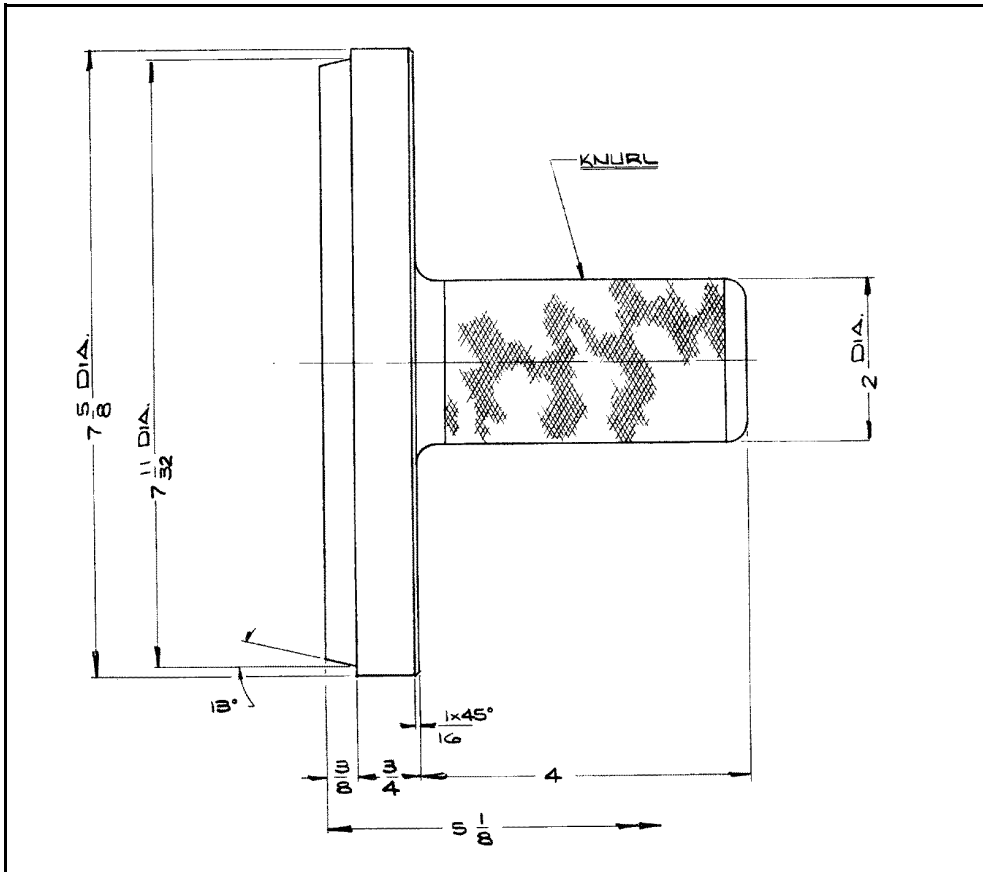


Figure 3-11. Bearing Cup Pressing Tool

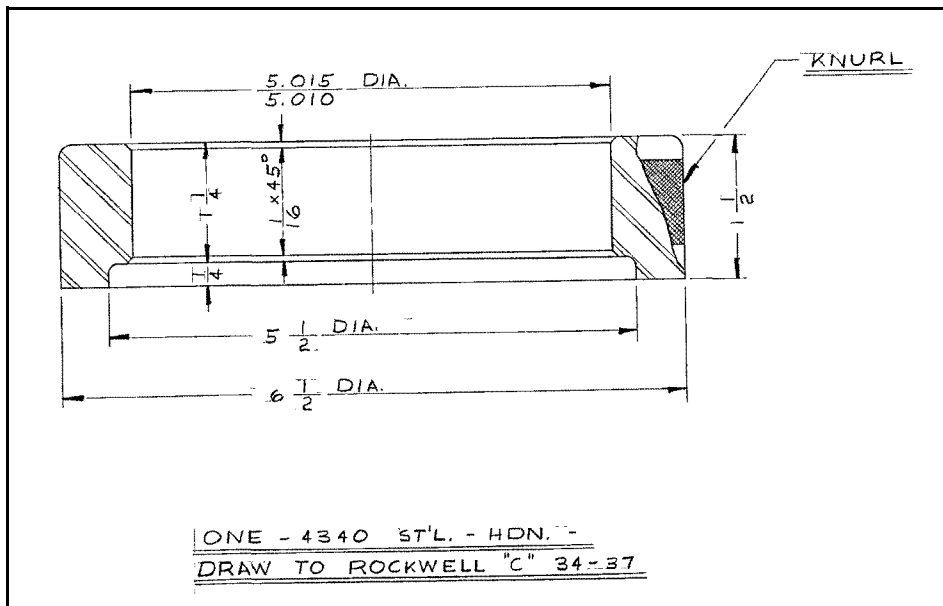


Figure 3-12. Seal Pressing Tool

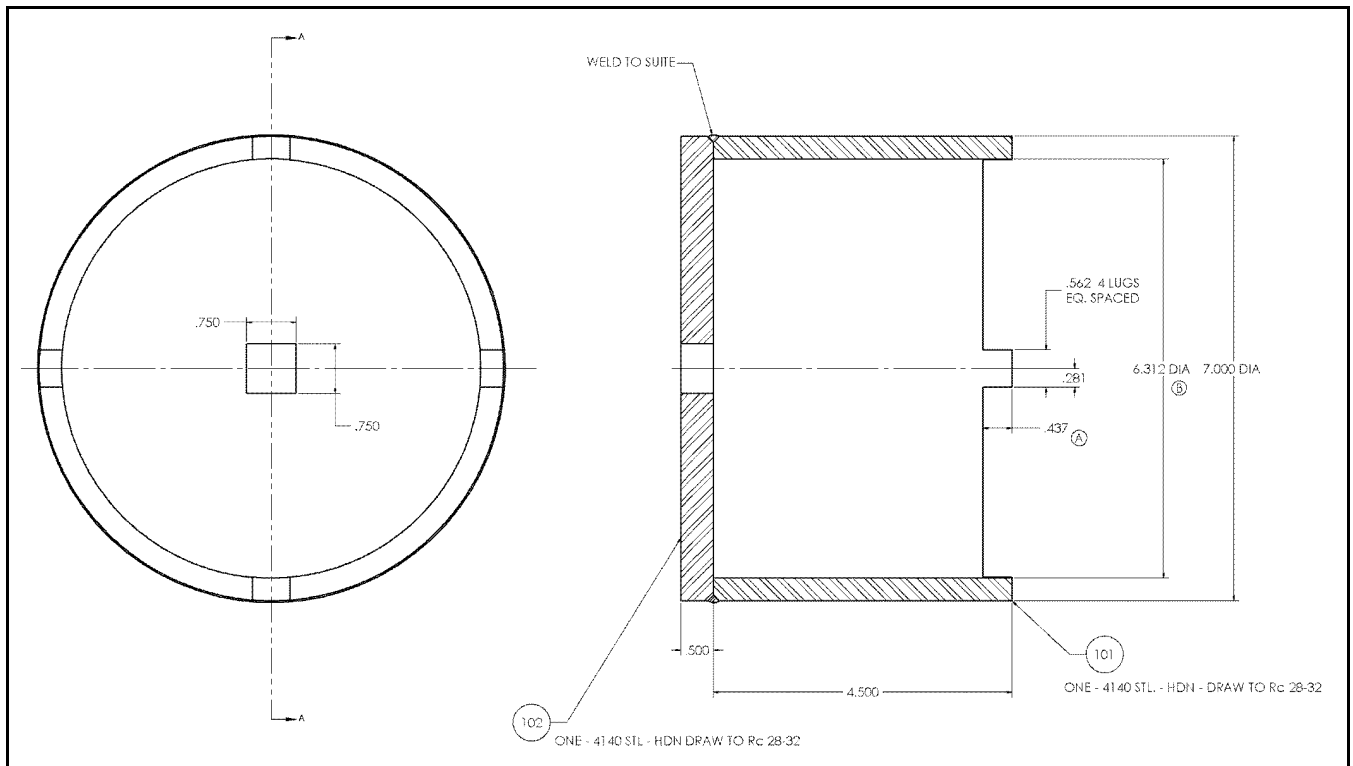


Figure 3-13. Bearing Cup Pressing Tool

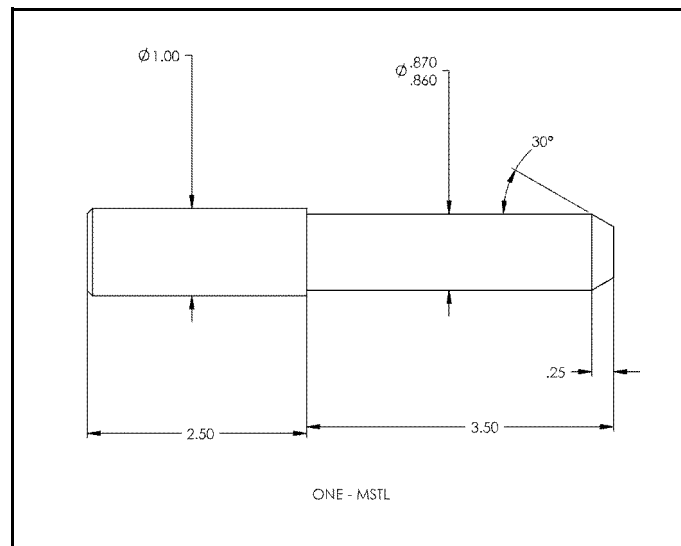


Figure 3-14. Drift Pin for Lining Up Thrust Washers with Output Planet Gear

3.3 DRIVE BRAKE - MICO (S/N 56718 TO 81836)

Disassembly

1. Remove pressure plate (3) from cover plate (16) by removing cap screws (1) and washers (2).

CAUTION

PRESSURE PLATE IS UNDER SPRING TENSION OF APPROXIMATELY 907 KGF (2000 IBS). THE TWO CAP SCREWS MUST BE LOOSENED EVENLY TO RELIEVE THIS FORCE. IF A HYDRAULIC PRESS IS AVAILABLE, 1361 KGF (3000 IBS) MINIMUM, THE PRESSURE PLATE CAN BE HELD IN POSITION WHILE REMOVING THE CAP SCREWS. COVER PLATE (16) MUST BE SUPPORTED AS SHOWN IN FIGURE 3-15.

2. Remove case seal (4) from cover plate (16).
3. Remove piston (7) from pressure plate (3).
4. Remove a-ring (5), back-up ring (6), a-ring (8) and back-up ring (9) from piston (7).
5. Remove stator disc (11), rotor disc (12) and return plate (13) from cover (16).

NOTE: Not all models use the same number of springs or spring pattern.

6. Remove dowel pins (15) and springs (14) from cover plate (16). Record this information for assembly purposes.
7. Remove retaining ring (19) from cover plate (16).
8. Remove shaft (10) by pressing or using a soft mallet on male end of shaft (10).

NOTE: Cover plate (16) must be supported as shown in FIGURE 3-15.

9. Remove retaining ring (20) from cover plate (16) and press out oil seal (17) and bearing (18) if required.

NOTE: Cover plate (16) must be supported as indicated in Figure 3-15.

Assembly

NOTICE

LUBRICATE ALL RUBBER COMPONENTS FROM REPAIR KIT WITH CLEAN TYPE FLUID USED IN THE SYSTEM.

1. Use an alkaline wash to clean parts before assembly.
2. Press oil seal (17) into cover plate (16) until it is flush with bearing shoulder. Note direction of seal.

3. Press bearing (18) into position until it bottoms out on borestep.

NOTE: Cover plate (16) must be supported as indicated in Figure 1.

4. Install retaining ring (20) in cover plate (16).
5. Press shaft (10) into bearing (18) until it bottoms on shoulder.

NOTE: Bearing (18) inner race and cover plate (16) must be supported as indicated in Figure 1 during this operation.

6. Install retaining ring (19) on shaft (10).
7. Insert dowel pins (15) and springs (14) in cover plate (16).

NOTE: Be sure to use the same number of springs and spring pattern as recorded during disassembly.

8. Position return plate (13) on springs (14).

NOTE: Discs (11 & 12) and return plate (13) must remain dry during installation. No oil residue must be allowed to contaminate disc surfaces.

9. Install rotor disc (12) and stator disc (13).
10. Install o-ring (5), back-up ring (6), a-ring (8) and back-up ring (9) on piston (7). Note order of a-rings and back-up rings. Insert piston (7) into pressure plate (3).


NOTE: Be careful not to shear o-rings or back-up rings. Be careful not to scratch or mar piston.

11. Install new case seal (4) in cover plate (16).
12. Position pressure plate (3) on cover plate (16) aligning dowel pins (15) with holes in pressure plate.
13. Install cap screws (1) and washers (2) and tighten evenly to draw pressure plate (3) to cover plate (16). Torque cap screws 65.1-67.8 N-m (48-50 lb-ft).

NOTE: A hydraulic press will simplify installation of pressure plate on cover. Clamp pressure plate in position while tightening the cap screws. Cover plate (16) must be supported as indicated in Figure 3-15.

CAUTION

IF HYDROSTATIC BENCH TESTING IS PERFORMED ON THE BRAKE ASSEMBLY, RELEASE PRESSURE MUST NOT EXCEED 134.5 BAR (500 PSI).

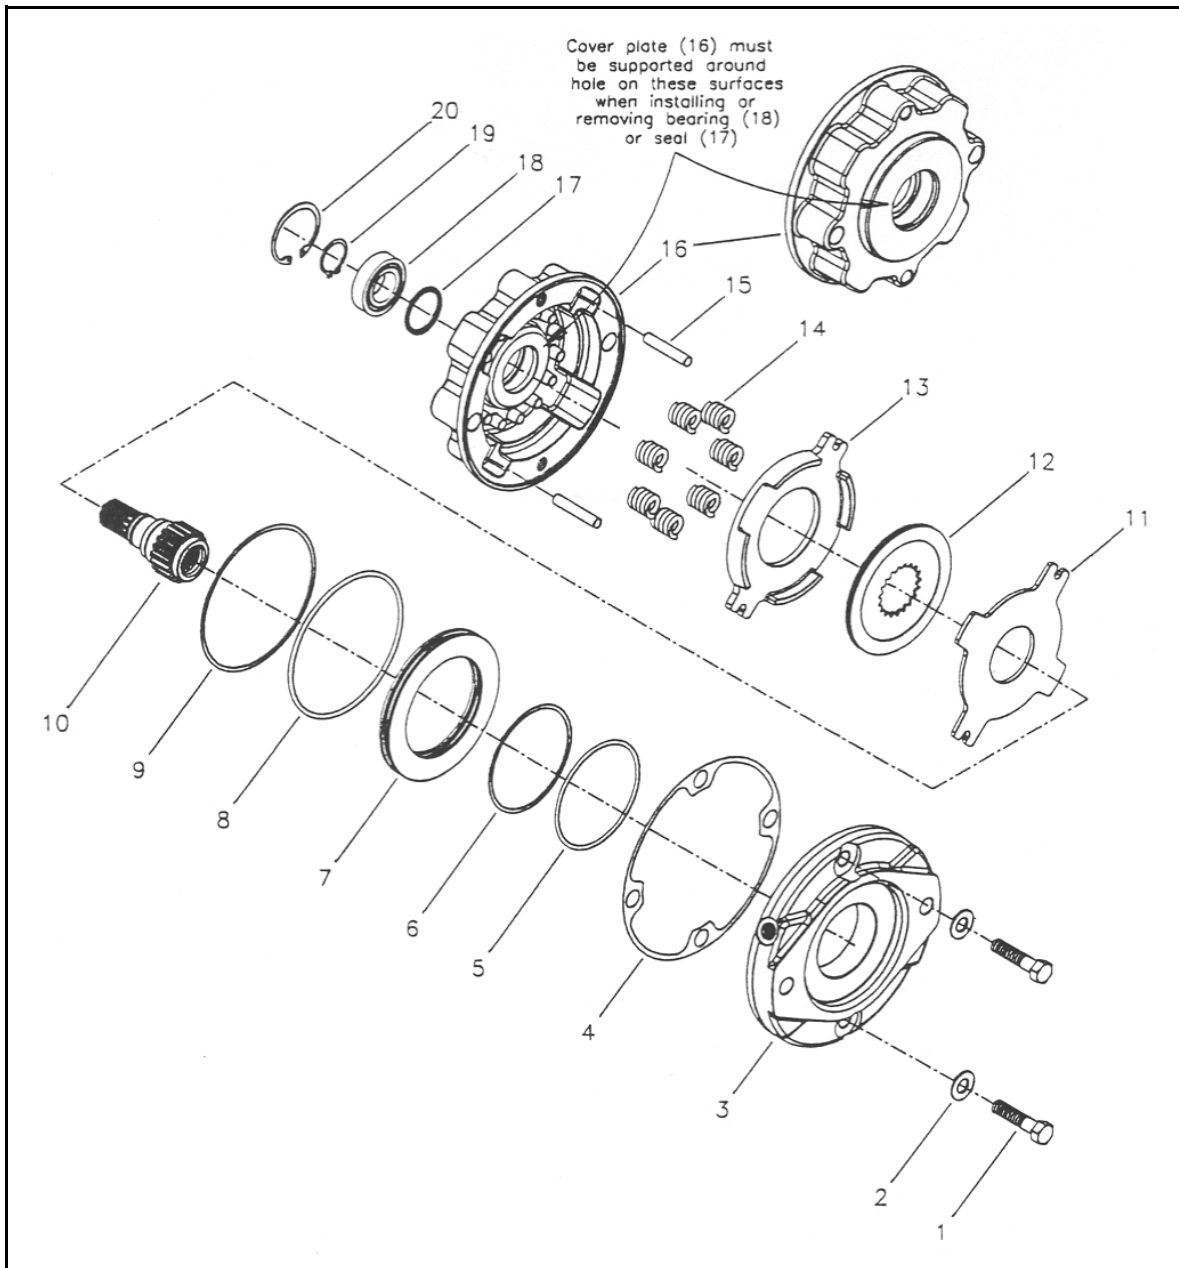

- | | | |
|-------------------|------------------|--------------------|
| 1. Capscrew | 8. O-ring | 15. Dowel Pin |
| 2. Washer | 9. Backup Ring | 16. Cover Plate |
| 3. Pressure Plate | 10. Shaft | 17. Oil Seal |
| 4. Case Seal | 11. Stator Disc | 18. Bearing |
| 5. O-ring | 12. Rotor Disc | 19. Retaining Ring |
| 6. Backup Ring | 13. Return Plate | 20. Retaining Ring |
| 7. Piston | 14. Springs | |

Figure 3-15. Drive Brake - Mico

SECTION 3 - CHASSIS & TURNTABLE

Bleeding

top port. Pressure should not exceed 100 psi (6.9 bar) during bleeding.

1. Install brake in system and connect pressure lines.
2. Bleed pressure release section of brake by pressurizing side inlet port and allowing air to escape from
3. Apply sufficient pressure to release brake and check for proper operation in system.

Table 3-2. Troubleshooting

PROBLEM	CAUSE	EXPLANATION	ACTION
Brake slips	Excessive pressure in hydraulic system	If there is back pressure in the actuation line of the brake, holding torque will be reduced.	Check filters, hose size, restrictions in other hydraulic components.
	Oil in brake if designed for dry use	Wet linings generate 67% of the dry torque rating. If the brake has oil in it, check the type of oil hydraulic or gearbox. 1. Gearbox oil 2. Hydraulic oil	Replace oil seal in brake. Check motor seal Check piston seals NOTE: <i>Internal components will need to be inspected, cleaned and replaced as required.</i>
	Disc plates worn	The thickness of the disc stack sets the torque level. A thin stack reduces torque.	Check disc thickness.
	Springs broken or have taken a permanent set	Broken or set springs can cause reduced torque - a rare occurrence.	Check release pressure. (See spring replacement).
Brake drags or runs hot	Low actuation pressure	The brake should be pressurized to minimum of 1.38 bar (20 psi) over the full release pressure under normal operating conditions. Lower pressures will cause the brake to drag thus generating heat.	Place pressure gauge in bleed port & check pressure with system on.
	Bearing failure	If the bearing should fail, a large amount of drag can be generated.	Replace bearing.
Brake will not release	Stuck or clogged valve	Brakes are designed to come on when system pressure drops below stated release pressure. If pressure cannot get to brake, the brake will not release.	Place pressure gauge in bleed port - check for adequate pressure. Replace inoperative line or component.
	Bad o-rings	If release piston will not hold pressure, brake will not release.	Replace o-rings.
	Discs frozen	These brakes are designed for only limited dynamic braking. A severe emergency stop or prolonged reduced release pressure operation may result in this type of damage.	Replace disc stack.

3.4 FREE WHEELING OPTION

To Disengage Drive Motors and Brakes (Free Wheel) for Towing, etc.

1. Chock wheels securely if not on flat level surface.
2. Disconnect both drive hubs by inverting disconnect caps in center of hubs.
3. If equipped, move steer/tow selector valve to float (tow) position by pulling valve knob out.

To Engage Drive Motors and Brakes (Normal Operation)

1. If equipped, move steer/tow valve to steer position by pushing valve knob in.
2. Connect both drive hubs by inverting disconnect cap in center of hub.
3. Remove chocks from wheels as required.


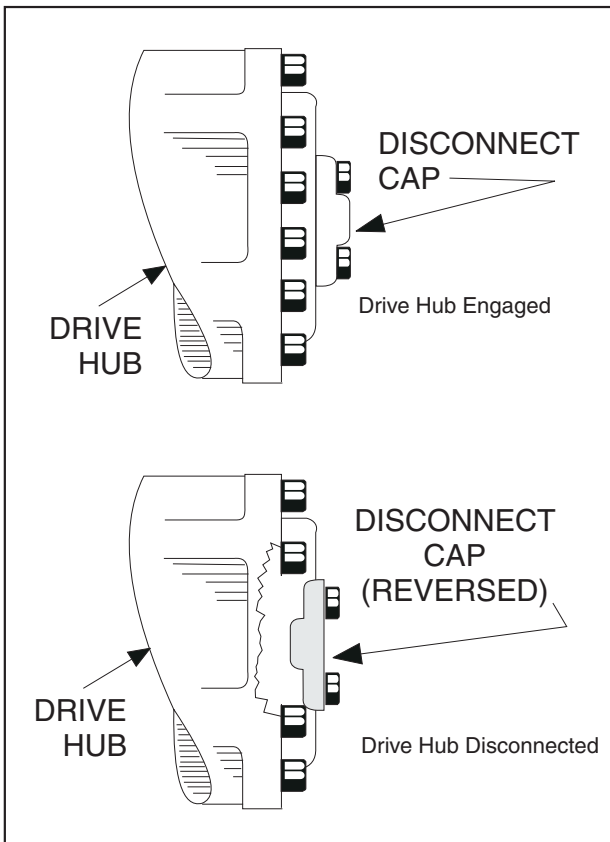


Figure 3-16. Disconnecting the Drive Hubs


3.5 DRIVE MOTOR - 4WD (PRIOR TO S/N 81836)

Spare Parts Kits

Sealing kit, existing spare parts: shaft sealing ring, 6 different O-rings and a circlip (sealing mat.: perbunan)

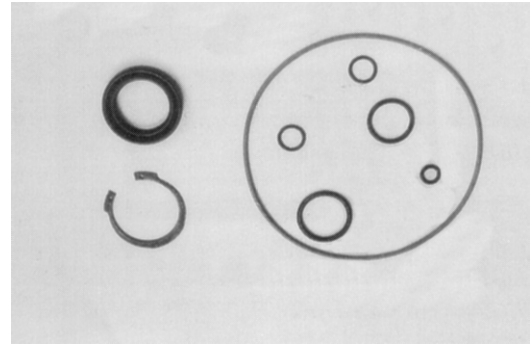

Same sealing kit like shown above only seal material changed to Viton

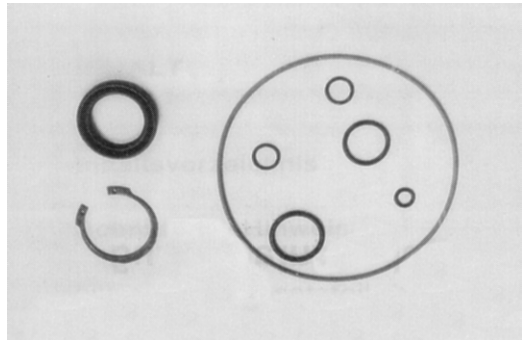


Drive shaft




SECTION 3 - CHASSIS & TURNTABLE


Bearing set/miscellaneous parts

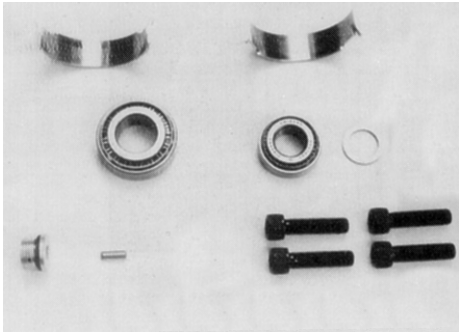


Parts of the control device: control piston, piston rod, plug, spring stopper max flow, hex. nut, and hex. head nut

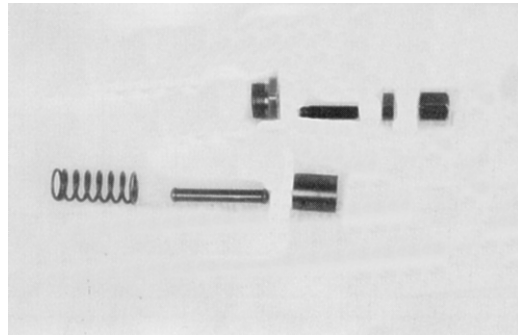


Rotary group complete 9 pistons, cylinder sub-assembly, valve plate (cw or ccw corresponding to the order) retaining plate and retaining ball.

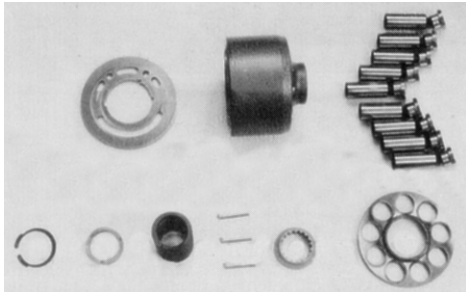

Spare parts kit DFR pilot valve

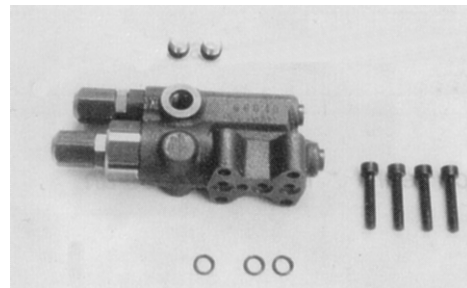


Swash Plate

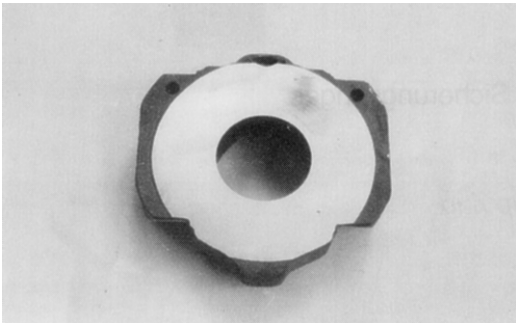

Replacing the Drive Shaft Seal


1. Remove the snap ring

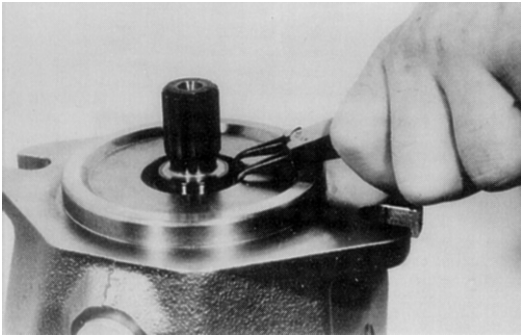

2. Change the shaft seal and check its sliding surface (drive shaft) and housing, grease the sealing ring.




3. Be careful while you seal the drive shaft, use an adhesive tape to protect the splines.

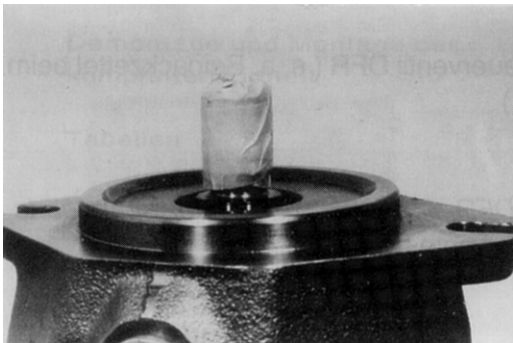

4. Assemble the sealing ring. The fitting tool will hold the sealing ring in the correct position in the pump housing.



5. Assemble the snap ring.

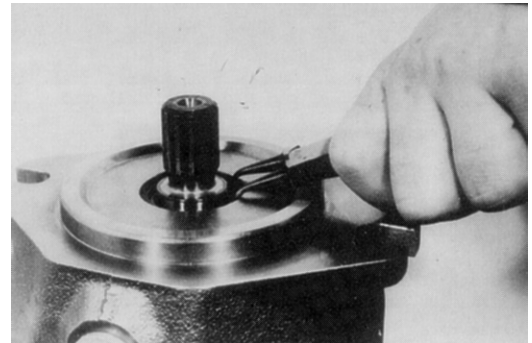


6. Assemble the snap ring in the correct position.




Disassembly and Assembly


1. Disassemble the pilot valve.

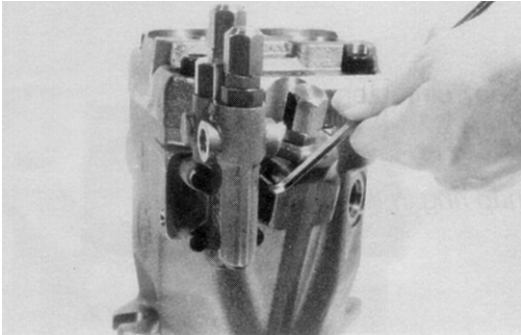


2. Mark the position of the port plate and remove the socket screw from the port plate.

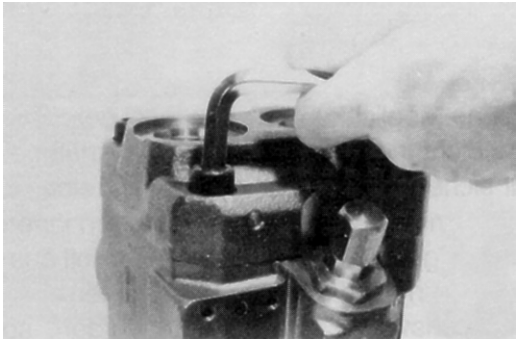


3. Remove the port plate together with the valve plate (hold the valve plate so that the plate can't fall down).

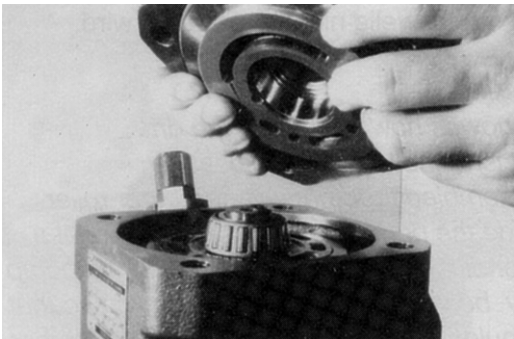

4. Remove the O-ring.

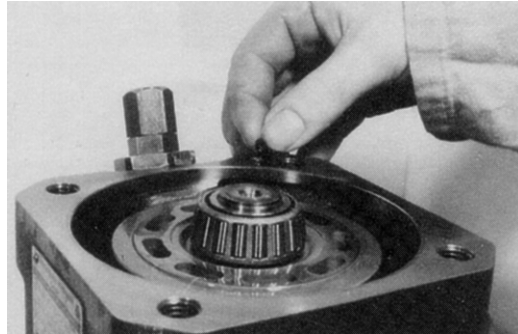


5. Disassemble the taper roller bearing.

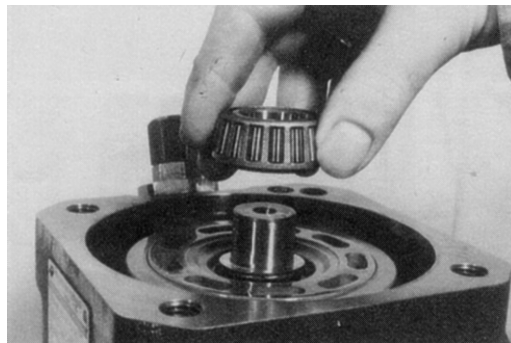


6. Remove the adjustment shim.




7. Unscrew the cap nut and remove it.

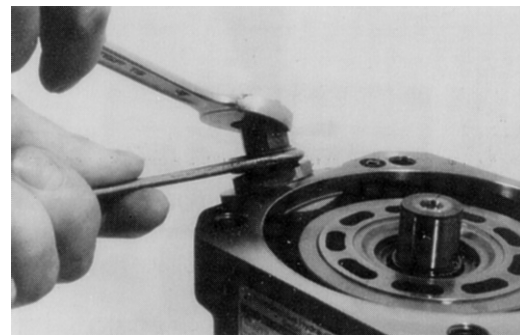

8. Loosen the retaining nut of the stopper max flow and remove it.

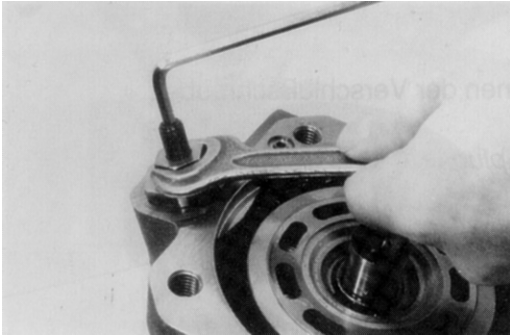


9. Turn in the stopper max flow to get swivel angle zero.

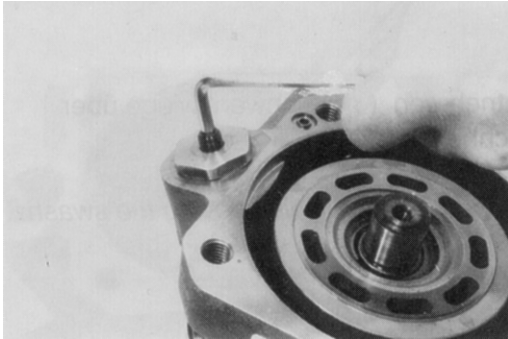

10. Disassemble the rotary group in horizontal position.



11. Disassemble the stopper - max. flow.

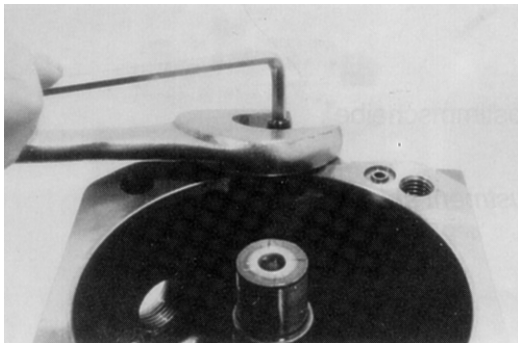


12. Remove the threaded pin (stopper - max.flow)




13. Disassemble the plug.



14. Disassemble the control piston while moving the swash plate.

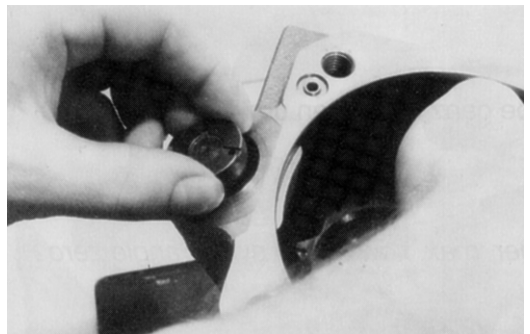


15. The swash plate must be lifted a little bit to disassemble the piston rod.

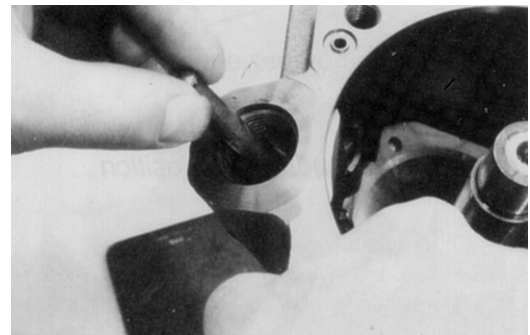


SECTION 3 - CHASSIS & TURNTABLE


16. Disassembly of the swash plate.

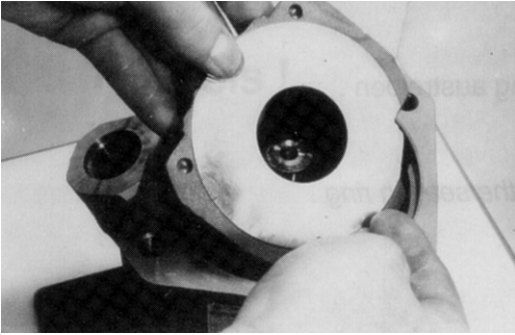


17. Remove the spring.

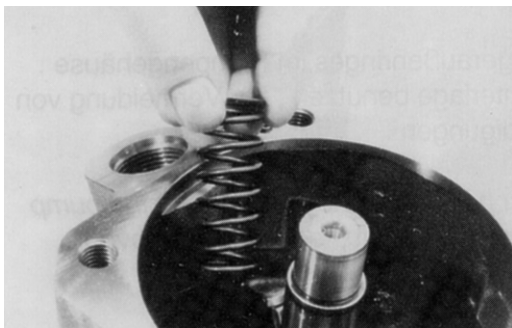

18. Remove both bearing shells.

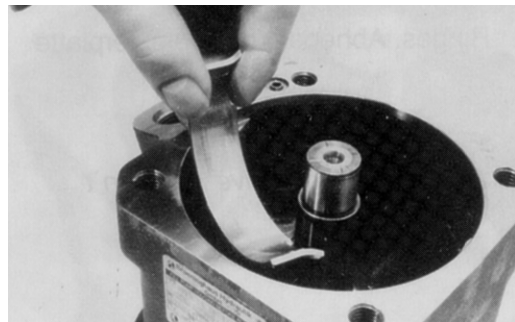

19. Remove the drive shaft.

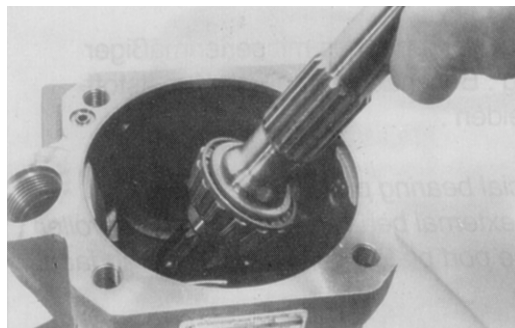


20. Remove the snap ring.




21. Disassemble the sealing ring.




22. The external front bearing ring is pulled out of the pump housing.

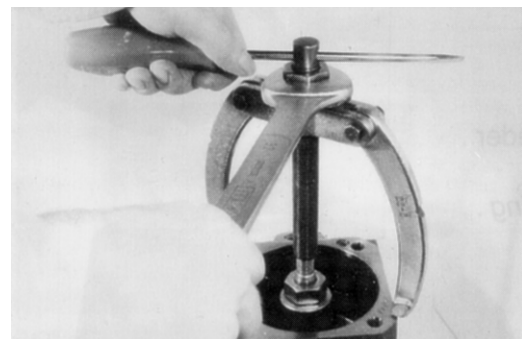


23. Remove the O-ring. Lifting of the valve plate isn't shown.

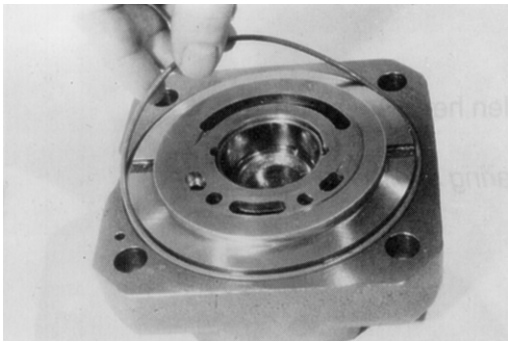

24. A usual commercial bearing puller is used to disassemble the external bearing ring of the taper roller bearing inside the port plate. Take care not to damage the surface of the port plate.

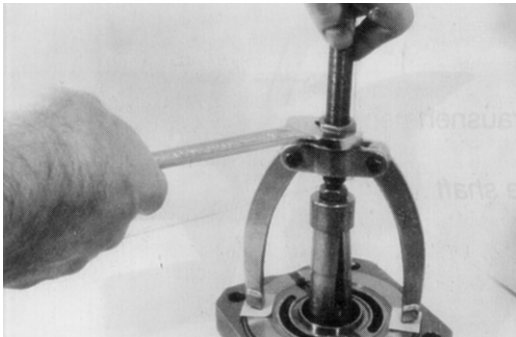


25. The spring has additional pretension while you disassemble the three pressure pins inside the cylinder.

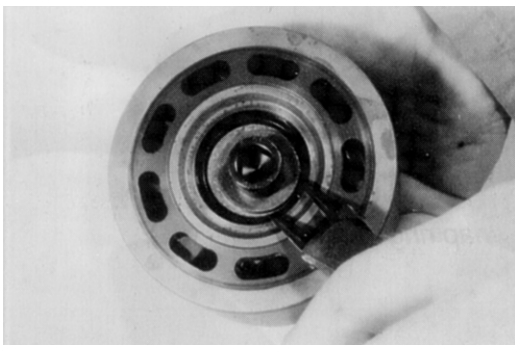


Assembly Notes


1. Measurement of the taper roller bearing pretension.

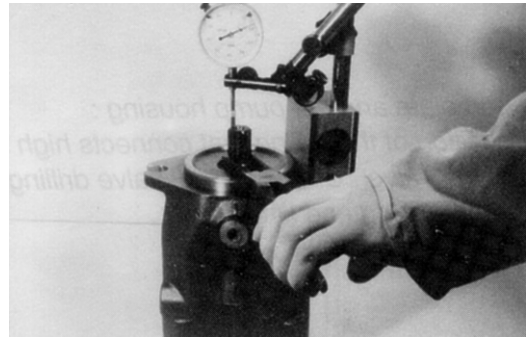

2. Note that there is a correct connection of the piston rod and the swash plate.

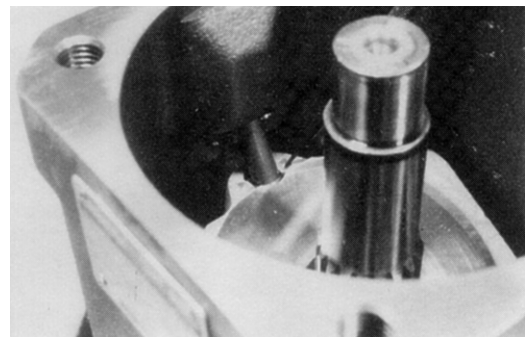


3. Pumps clockwise driven must have a position to the valve plate 4 degrees out of center in the same direction de-centered like drive direction. (Note spare parts exist as cw and ccw valve plates.)


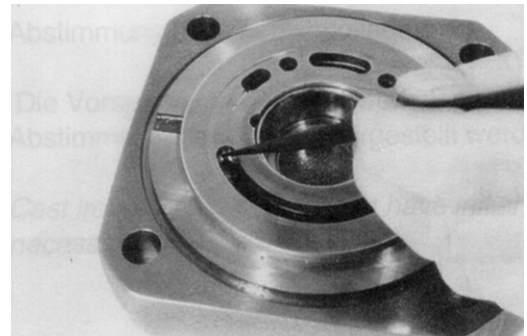


SECTION 3 - CHASSIS & TURNTABLE

all valves shown here do have open position of the orifice (see picture below "pos. of orifice").

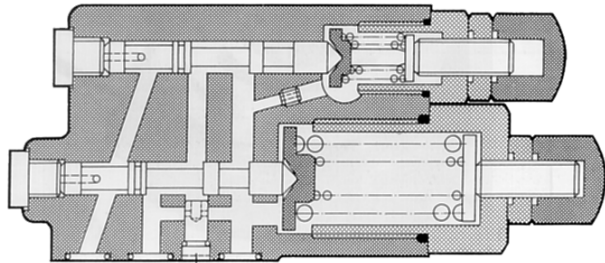


orifice 0,6mm

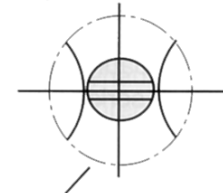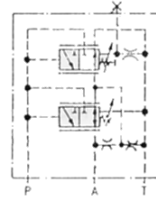


position of the orifice \varnothing 0,6

pressure compensator DR

Both X- ports are plugged .
Flow control blocked.

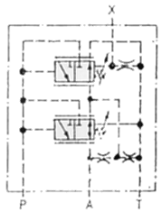


decompression - orifice


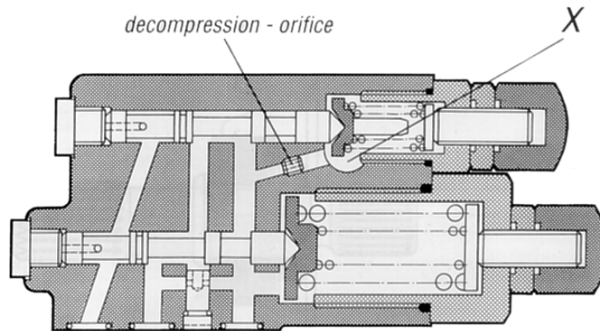


pressure compensator and flow control DFR

One X - port is plugged .

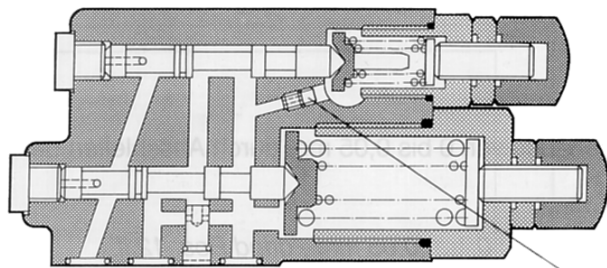


plug

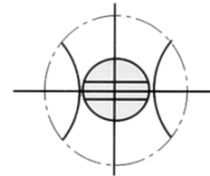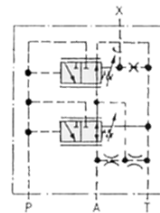

pressure compensator and flow control DFR 1

One X - port is plugged . Decompression
orifice X-T is plugged by the plug.

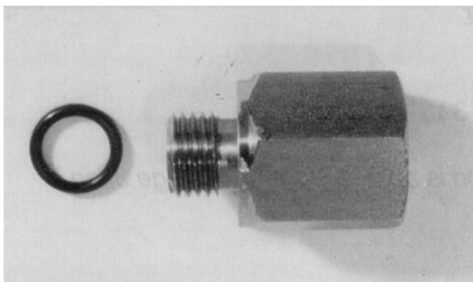


Adapter without orifice of the DFR-pilot valve , if you use
a metric pilot pipe connection X .


NOTE: Differential volume if you are rotating the threaded pin -
each rotation is appr. 3,1 cm³.

Figure 3-17. Flow Control Pilot Valves

- Pumps counterclockwise driven must have a position of the valve plate 4 degrees de-centered in ccw position.

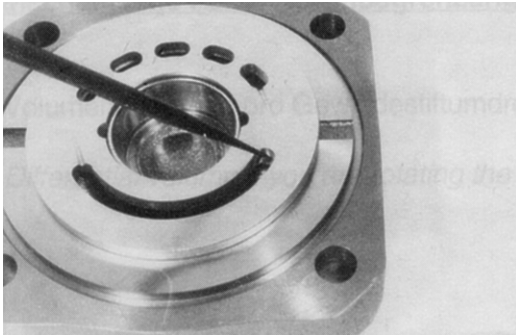


- Assembly of the port plate and the pump housing: Note the correct position of the drilling that connects high pressure to the control valve. Check control valve drill position at the pump housing and fit together.

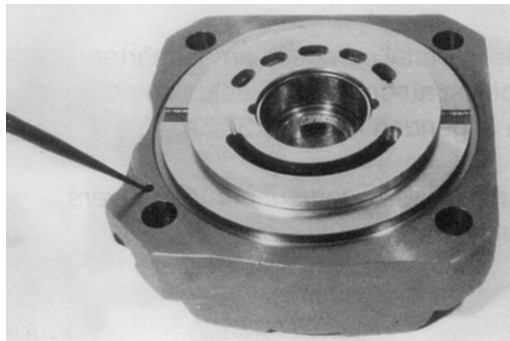


Testing and Setup


DR: When pressure line is closed adjust the pressure of the controller (if it's DFR design then open the adjustable orifice and increase force of the spring - FR -).

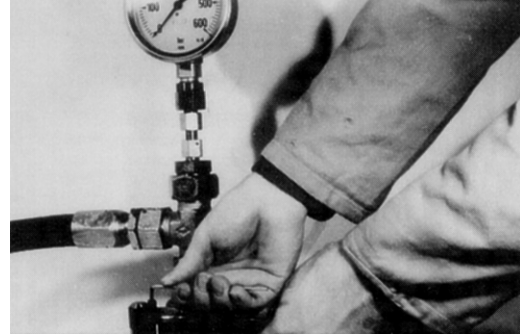

FR: If swivel angle is in the mid position adjust differential pressure 14 bar adjustable orifice is partly closed).

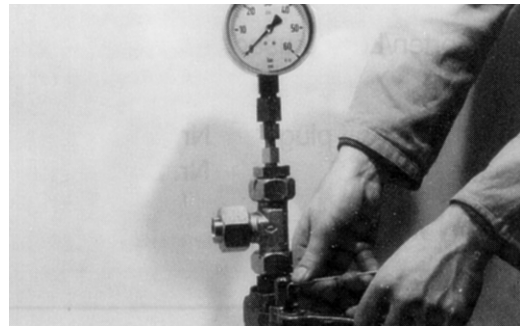


Mechanical flow limiter: While screwing in the threaded pin you will be able to reduce the flow from Vg max to 50% of Vg max.

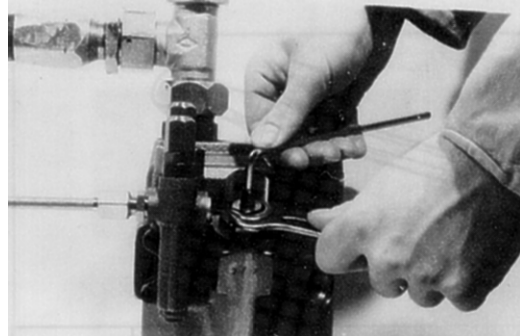

Taper Roller Bearing Initial Tension

Cast iron pump housing must have initial tension of the bearings: 0.....0,05 mm, grind Pos. 12 if necessary.

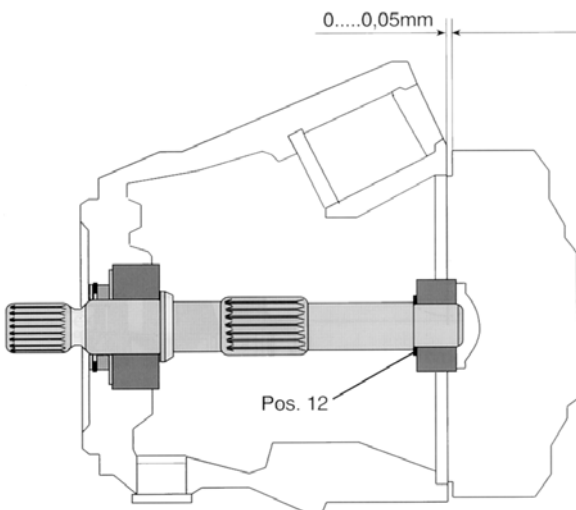


3.6 DRIVE MOTOR - 2WD (PRIOR TO S/N 81836)

Shaft Seal Replacement

Lip type shaft seals are used on the drive motors. These seals can be replaced without major disassembly of the unit. However, replacement of the shaft seal requires removal of the pump or motor from the machine.

1. Remove the retaining ring from the housing.

Carefully remove the seal from the housing bore. The face of the seal may be punctured with a sharp instrument (such as a screw driver) to aid in prying the seal out, or a slide hammer type puller may be used to remove the seal. Care must be taken not to damage the housing bore or shaft. Once removed the seal is not reusable.

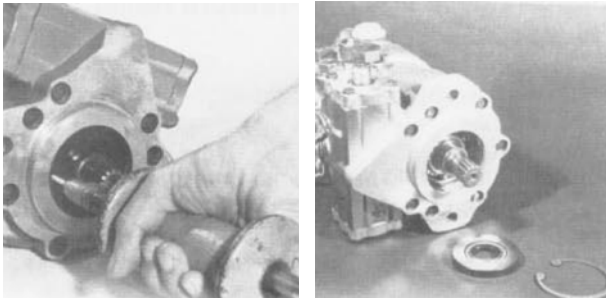

Prior to installing the new seal, inspect the sealing area on the shaft for rust, wear, or contamination. Polish the sealing area on the shaft if necessary.

Wrap the spline or key end of shaft with thin plastic to prevent damage to the seal lip during installation. Lubricate the inside diameter of the new seal with petroleum jelly.

NOTE: The outside diameter of the seal may be lightly coated with a sealant (such as Loctite High Performance Sealant #59231) prior to installation. This will aid in preventing leaks caused by damage to the housing seal bore.

Slide the new seal over the shaft and press it into the housing bore. Be careful not to damage seal. A seal installer tool can be made to aid in installing the seal.

Reinstall the seal retaining ring.

3.7 DRIVE MOTOR (S/N 81836 TO PRESENT)

Description

The drive motors are low to medium power, two-position axial piston motors incorporating an integral servo piston. They are designed for operation in both open and closed circuit applications. The standard control is a direct acting single line hydraulic control. The integral servo piston controls motor displacement.

The motors are spring biased to maximum displacement and hydraulically shifted to minimum displacement. Minimum and maximum displacement can be set with fixed internal stops. The large diameter servo piston allows smooth acceleration and deceleration with relatively large circuit orificing.


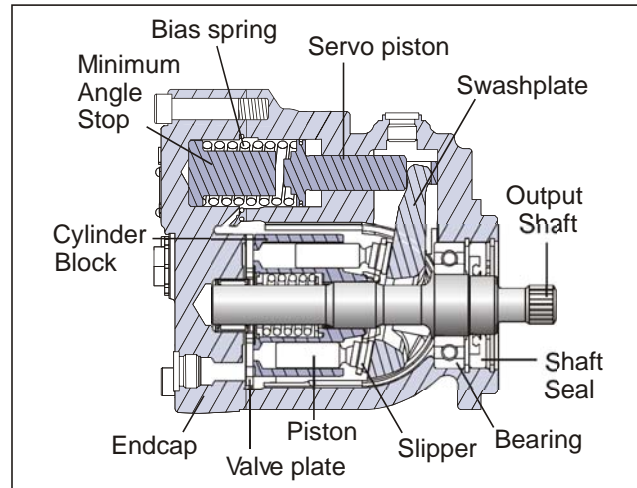


Figure 3-18. Drive Motor Cross Section

Shaft Seal Replacement

REMOVAL

1. Remove the snap ring (1) retaining the shaft seal and support washer.

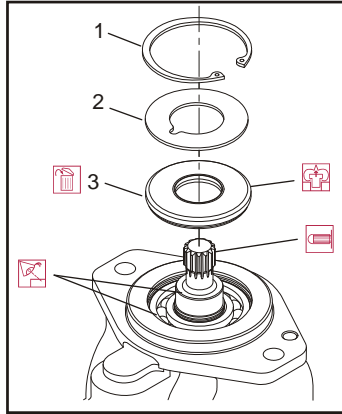

1. Snap Ring
2. Support Washer
3. Shaft Seal

Figure 3-19. Removing the Shaft Seal

2. Remove the support washer (2).
3. Carefully pry out the shaft seal (3).

To avoid damaging the shaft during removal, install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

4. Discard the seal.

INSPECT THE COMPONENTS

Inspect the new seal, the motor housing seal bore, and the sealing area on the shaft for rust, wear, and contamination. Polish the shaft and clean the housing if necessary.

INSTALLATION

1. Cover the shaft splines with an installation sleeve to protect the shaft seal during installation.
2. Install a new shaft seal with the cupped side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal.
3. Install seal support washer.
4. Install snap ring.
5. Remove the installation sleeve.

SECTION 3 - CHASSIS & TURNTABLE

Troubleshooting

Table 3-3. Excessive Noise and/or Vibration

Item	Description	Action
Check oil level in reservoir and oil supply to the motor.	Insufficient hydraulic fluid could lead to cavitation that would cause system noise.	Fill the reservoir to the proper level and ensure that oil supply to the motor is adequate and the lines are unobstructed.
Check for air in the system.	Air trapped within the system lines, or the motor itself, could result in cavitation that would cause system noise.	Ensure that all of the system lines and components are purged of air.
Inspect the output shaft couplings.	A loose or incorrect shaft coupling will produce vibrations that could result in system noise.	Ensure that the correct coupling is used and that it fits properly onto the shaft.
Inspect the output shaft alignment.	Misaligned shafts create excessive frictional vibration that could result in system noise.	Ensure that the shafts are properly aligned.
Hydraulic oil viscosity above limits.	Viscosity above acceptable limits will result in cavitation that would lead to system noise.	Replace hydraulic oil with appropriate fluid for operating conditions.

Table 3-4. System Operating Hot

Item	Description	Action
Check oil level in reservoir and oil supply to the pump.	Insufficient amount of hydraulic fluid will not meet the cooling demands of the system.	Fill the reservoir to the proper level.
Inspect the heat exchanger, (if so equipped).	If the heat exchanger fails, or becomes obstructed, it may not meet the cooling demands of the system.	Ensure that heat exchanger is receiving adequate air flow and that the heat exchanger is in good operating condition. Repair or replace as necessary.
Check the system relief valves.	If a system relief valve becomes unseated for an extended period of time or fails for any other reason, the system could become overheated.	Repair or replace any malfunctioning relief valves as applicable and verify that the loads on the machine are not excessive.


Table 3-5. Won't Shift or Slow to Start

Item	Description	Action
Check the signal line to the servo control port.	Obstructed or restricted flow through the servo control signal lines could result in slow shift or no shift conditions within the motor.	Ensure that the signal lines are not obstructed or restricted and that signal pressure is adequate to shift the motor.
Check that the correct supply and drain orifices are properly installed, and are not obstructed.	Supply and drain orifices determine the shift rate of the motor. The smaller the orifice, the longer the time it takes to shift the motor. Obstruction will also increase shift times.	Ensure that the proper control orifices are installed in the motor and verify that they are not obstructed. Clean or replace as necessary.

Loop Flushing Valve

REMOVAL

- Using a 11/16 in internal hex wrench remove plug (1) and (2).

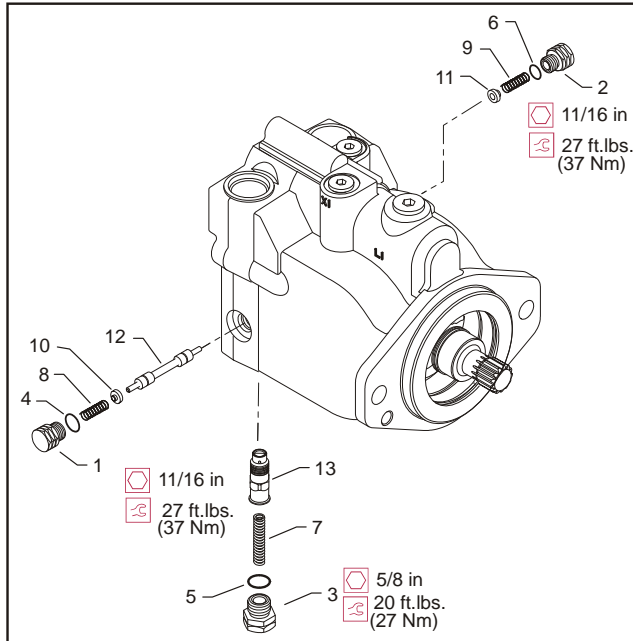

- | | | |
|-----------|------------|--------------------|
| 1. Plug | 6. O-ring | 11. Washer |
| 2. Plug | 7. Spring | 12. Shift Spool |
| 3. Plug | 8. Spring | 13. Orifice Poppet |
| 4. O-ring | 9. Spring | |
| 5. O-ring | 10. Washer | |

Figure 3-20. Loop Flushing Spool

- Using a 1/4 in hex wrench remove plug (3).
- Remove O-rings (4, 5, and 6).
- Using pliers, remove centering springs (7, 8, and 9).
- Remove spring retaining washers (10 and 11).
- Remove shift spool (12).
- Remove orifice poppet (13).

INSPECT THE COMPONENTS

Inspect new O-rings and the sealing area for rust, wear, or contamination. Also check springs and poppet for wear.

INSTALLATION

- Install orifice poppet (13).
- Install shift spool (12).
- Install spring retaining washers onto springs (10 and 11).
- Carefully install centering springs (7, 8, and 9).
- Install new O-rings (6, 4, and 5).
- Using a 1/4 in hex wrench torque plug (3) to 20 ft.lbs. (27 Nm).
- Using a 11/16 in internal hex, torque plugs (2 and 1) to 27 ft.lbs. (37 Nm).


Disassembly

NOTE: Removal of the endcap voids warranty.

During assembly, coat all moving parts with a film of clean hydraulic oil. This assures that these parts will be lubricated during start-up.

Replace all O-Rings and gaskets.


It is recommended that all O-rings be replaced. Lightly lubricate all O-rings with clean petroleum jelly prior to assembly.

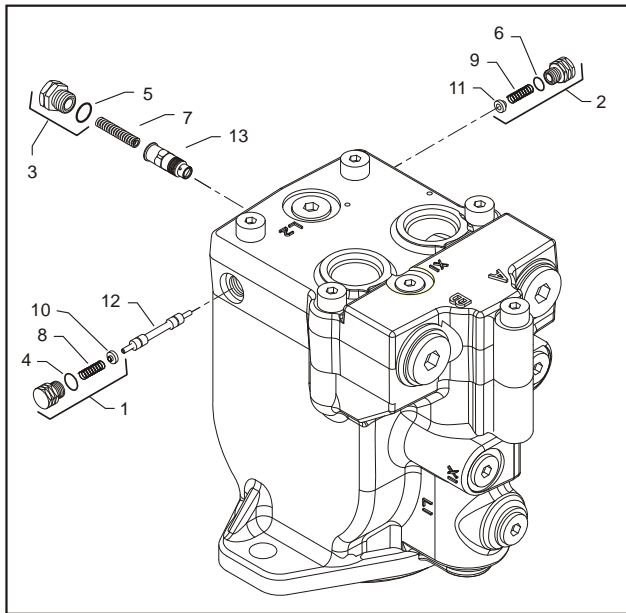

- | | | | |
|-----------|-----------|------------|--------------------|
| 1. Plug | 5. O-ring | 9. Spring | 12. Shift Spool |
| 2. Plug | 6. O-ring | 10. Washer | 13. Orifice Poppet |
| 3. Plug | 7. Spring | 11. Washer | |
| 4. O-ring | 8. Spring | | |

Figure 3-21. Loop Flushing Spool


1. Using a 11/16 in wrench remove plug (1) and (2).
2. Using a 5/8 in hex wrench remove plug (3).
3. Remove O-rings (4, 5, and 6).
4. Using pliers, remove centering springs (7, 8, and 9).
5. Remove spring retaining washers (10 and 11).
6. Remove shift spool (12).
7. Remove orifice poppet (13).

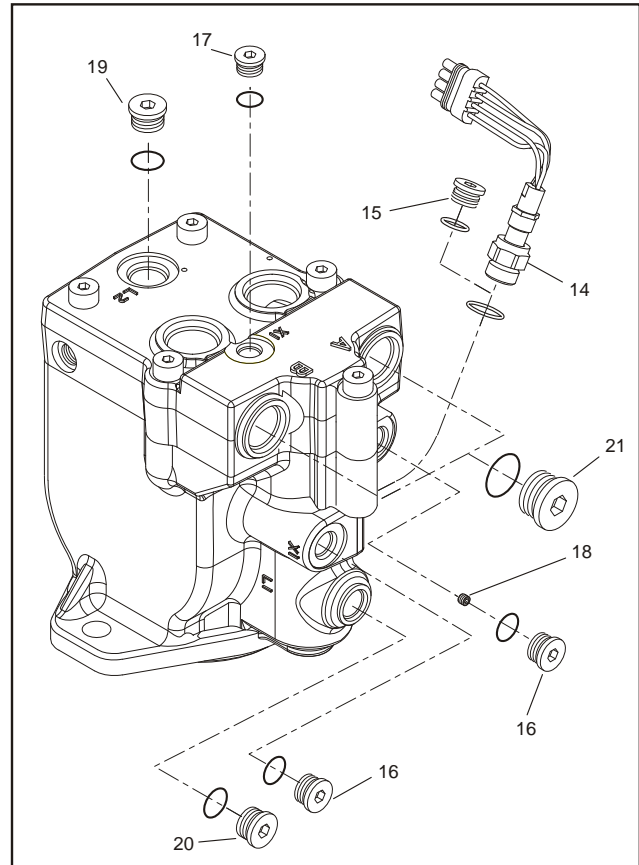

- | | |
|-----------------------|--------------------|
| 14. Lock Nut | 18. Cavity Plug |
| 15. O-ring Plug | 19. Drain Plug |
| 16. Control Line Plug | 20. Drain Plug |
| 17. Control Line Plug | 21. Work Port Plug |

Figure 3-22. Plugs, Fittings, and Speed Sensor

8. Remove all fittings from the unit. Discard any O-rings on the fittings.
9. Using an 11/16 inch hex wrench, loosen the speed sensor lock nut (14) if equipped. Then remove the speed sensor using a Vi inch hex wrench. Units without speed sensor have an O-ring plug (15) installed in that location; remove it with a Va inch internal hex wrench.
10. Using a 1/4 inch internal hex wrench, remove control line plugs (16, 17). Discard O-rings. Using a 3 mm hex wrench, remove cavity plug (18, if equipped with two-line control) from X2 cavity.
11. Using a 5/16 inch internal hex wrench, remove drain plugs (19, 20). Discard O-rings.
12. Using a 9/16 inch internal hex wrench, remove work port plugs (21, if equipped with axial ports). Discard O-rings.

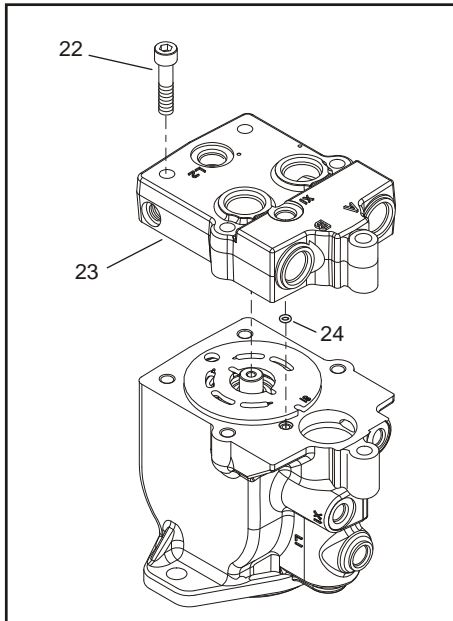


- 22. Screw
- 23. End Cap
- 24. O-ring

Figure 3-23. End Cap

13. Using an 8 mm internal hex wrench, remove the endcap screws (22).
14. Remove the endcap (23). Remove O-ring (24) from the housing or endcap.

When the endcap screws are removed, pressure from the servo spring will cause the endcap to bind on the shaft. Press down on the portion of the endcap covering the servo piston and hold the endcap level while removing.

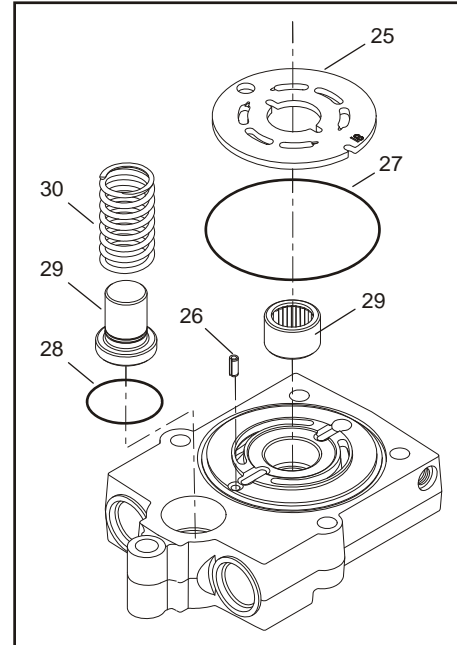

- 25. Valve Plate
- 26. End Cap
- 27. O-ring
- 28. O-ring
- 29. Angle Stop
- 30. Servo Spring

Figure 3-24. Valve Plate & Rear Shaft Bearing

NOTICE

TAKE CARE NOT TO SCRATCH THE SURFACE OF THE VALVE PLATE.

15. Remove the valve plate (25) and timing pin (26) from the endcap.


Each displacement has a unique valve plate. For identification, the last two digits of the valve plate part number are stamped on its surface.

16. Remove and discard the O-rings (27, 28).
17. Remove the rear shaft bearing (29) from the endcap with a bearing puller.

The bearing may be difficult to remove with a puller. Try this as an alternative: Pack the bearing cavity with heavy grease. After the shaft is removed, insert it into the bearing cavity and tap lightly with a soft mallet on the splined end. The grease will force the bearing out. Use caution not to drive the bearing past the rear shaft journal as the bearing may become trapped on the shaft and damaged.

SECTION 3 - CHASSIS & TURNTABLE

18. Remove minimum angle stop (29) and servo spring (30) from the housing.

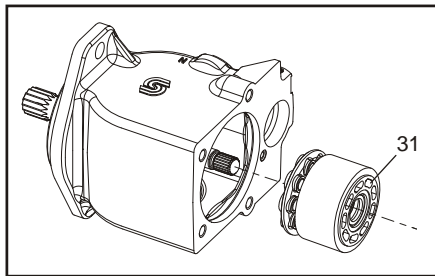

31. Cylinder Kit Assembly


Figure 3-25. Cylinder Kit

19. Turn the housing on its side and remove the cylinder kit assembly (31). Set the assembly aside, being careful not to scratch the running surface.

NOTE: Grooves on the surface of the cylinder kit identify its displacement:

Table 3-6. Displacement Identifiers

# of Grooves	Frame L	Frame K
1	25	38
2	30	45
3	35	--

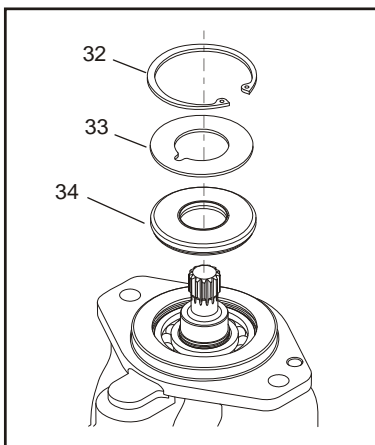


32. Snap Ring
33. Support Washer
34. Shaft Seal

Figure 3-26. Shaft Seal

20. Turn the housing over and remove the snap ring (32) retaining the shaft seal and support washer. Remove the support washer (33) and carefully pry out the shaft seal (34). Discard the seal.


To avoid damaging the shaft during seal removal. Install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

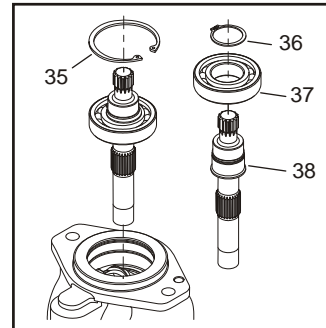

35. Inner Snap Ring
36. Snap Ring
37. Bearing
38. Shaft

Figure 3-27. Shaft & Front Bearing


21. Remove the inner snap ring (35) and the shaft / bearing assembly.
22. Remove the snap-ring (36) retaining the shaft front bearing. Pull the bearing (37) off of the shaft (38).

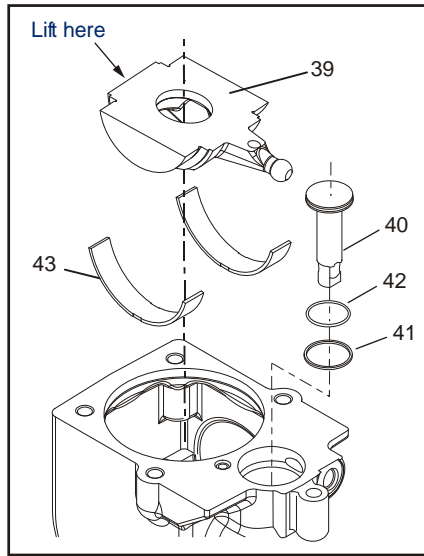

- 39. Swashplate
- 40. Servo Piston
- 41. Piston Seal
- 42. O-ring
- 43. Journal Bearings

Figure 3-28. Swash Plate & Servo Piston

23. Turn housing over and remove the swashplate (39) by lifting on the end opposite the servo lever.
24. Remove the servo piston (40). Remove the piston seal (41) and O-ring (42) from the servo piston. Discard the seal and O-ring.
25. Remove the journal bearings (43) from the housing. If the bearings are to be reused, note the location and orientation of each bearing for reassembly.

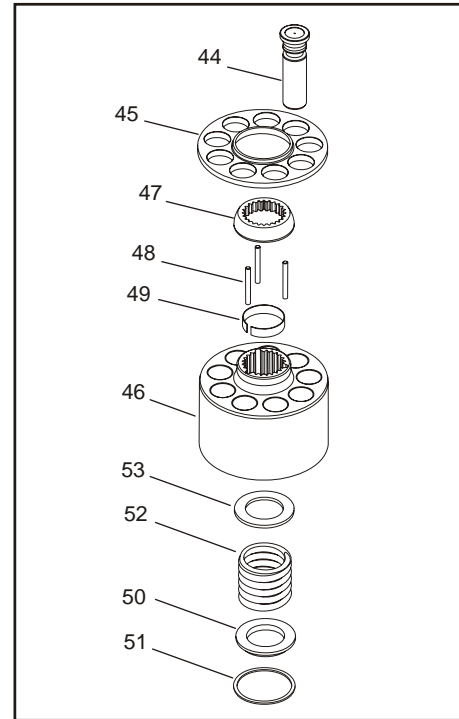

- 44. Piston
- 45. Slipper Retainer
- 46. Cylinder Block
- 47. Ball Guide
- 48. Holddown Pins
- 49. Retaining Ring
- 50. Block Spring Washer
- 51. Spiral Retaining Ring
- 52. Block Spring
- 53. Inner Block Spring Washer

Figure 3-29. Cylinder Kit Disassembly

26. Remove pistons (44) and slipper retainer (45) from the cylinder block (46).

The pistons are not selectively fitted, however units with high hourly usage may develop wear patterns. Number the pistons and bores for reassembly if they are to be reused.

27. Remove the ball guide (47), hold-down pins (48), and retaining ring (49) from the cylinder block.

NOTE: Most repairs do not require block spring removal. Perform this procedure only if you suspect problems with the block spring.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES FORCE OF ABOUT 80 TO 90 LBF (350 TO 400 N). USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO REMOVE THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS REMOVED.

SECTION 3 - CHASSIS & TURNTABLE


28. Turn the block over. Using a press, apply pressure on the block spring washer (50) to compress the block spring. Compress the spring enough to safely remove the spiral retaining ring (51). While maintaining pressure, unwind the spiral retaining ring (51). Carefully release the pressure and remove the outer block spring washer (50), block spring (52), and inner block spring washer (53) from the cylinder block.

Inspection

After disassembly, wash all parts (including the end-cap and housing) thoroughly with clean solvent and allow to air dry. Blow out oil passages in the housing and endcap with compressed air. Conduct inspection in a clean area and keep all parts free from contamination. Clean and dry parts again after any rework or resurfacing.

PISTON

Inspect the pistons for damage and discoloration. Discolored pistons may indicate excessive heat; do not reuse.

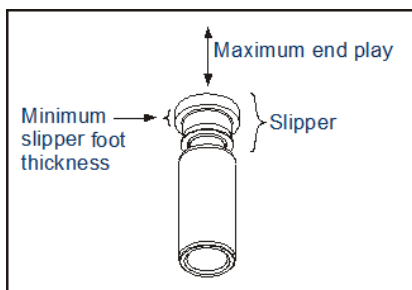

SLIPPERS

Inspect the running surface of the slippers. Replace any piston assemblies with scored or excessively rounded slipper edges. Measure the slipper foot thickness. Replace any piston assemblies with excessively worn slippers. Check the slipper axial end-play. Replace any piston assemblies with excessive end-play.

Minimum slipper foot thickness and maximum axial end-play are given in the table below.

Table 3-7. Slipper Foot Thickness & End Play


Measurement		L Frame	K Frame
Slipper Foot Thickness	mm (in.)	2.71 (0.11)	4.07 (0.16)
Piston/Slipper End Play		0.15 (0.006)	

CYLINDER BLOCK

Measure the cylinder block height. Replace blocks worn beyond the minimum height specification. Inspect the running surface of the cylinder block. Replace or resurface worn or scratched blocks. Blocks may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the block height below the minimum specification. Table 3-8, Cylinder Block Measurements.


Table 3-8. Cylinder Block Measurements

Measurement	L25	L30	L35	K38	K45
Minimum Cylinder Block Height (A)	50.8 (2.00)	50.8 (2.00)	50.8 (2.00)	54.4 (2.14)	54.4 (2.14)
Cylinder Block Surface Flatness	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)

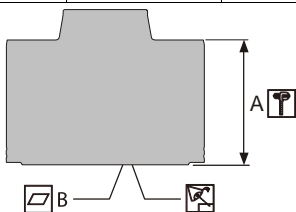


BALL GUIDE AND SLIPPER RETAINER

Inspect the ball guide and slipper retainer for damage, discoloration, or excessive wear. A discolored ball guide or slipper retainer indicates excessive heat. Do not reuse.

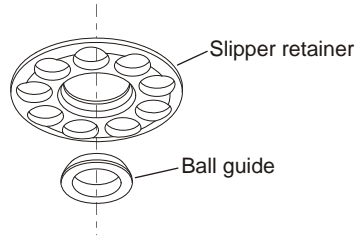

VALVE PLATE

The condition of the valve plate is critical to the efficiency of the motor. Inspect the valve plate surfaces carefully for excessive wear, grooves, or scratches. Replace or resurface grooved or scratched valve plates. Measure the valve plate thickness and replace if worn beyond the minimum specification. Valve plates may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the thickness below the minimum specification.

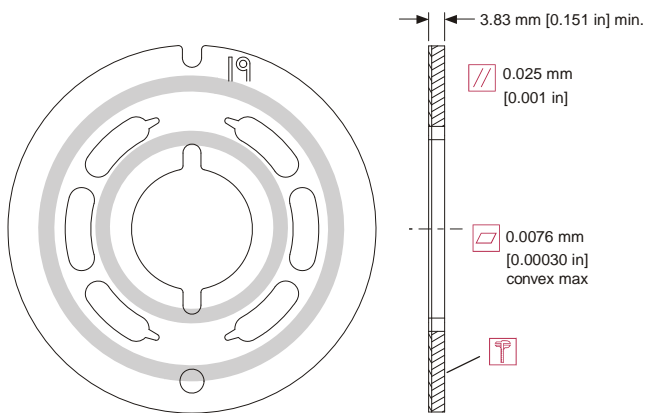


SWASHPLATE AND JOURNAL BEARINGS

Inspect the running face, servo ball-joint, and swashplate journal surfaces for damage or excessive wear. Some material transfer may appear on these surfaces and is acceptable providing the surface condition meets specifications shown. Measure the swashplate thickness from the journals to the running face. Replace swashplate if damaged or worn beyond minimum specification.

SERVO PISTON AND MINIMUM ANGLE STOP

Inspect the minimum angle stop, servo piston head, and servo piston ball-socket for damage or excessive wear.


Replace swashplate if the difference in thickness from one side to the other exceeds specification.

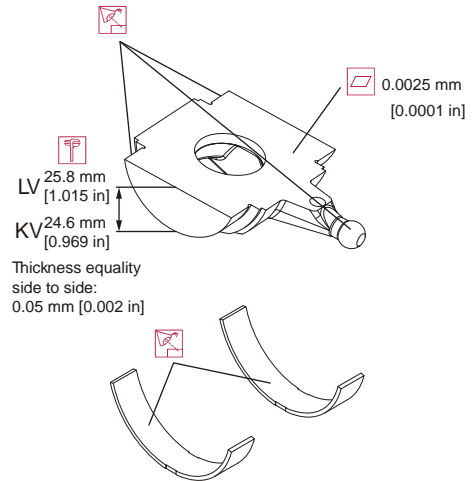

Inspect the journal bearings for damage or excessive wear. Replace journal bearings if scratched, warped, or excessively worn. The polymer wear layer must be smooth and intact.

SHAFT BEARINGS


Inspect bearings for excessive wear or contamination. Rotate the bearings while feeling for uneven movement. Bearings should spin smoothly and freely. Replace bearings that appear worn or do not rotate smoothly.

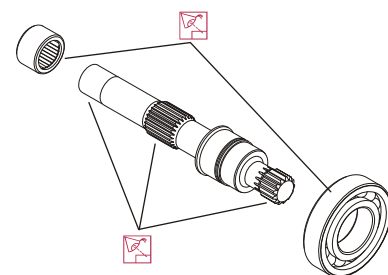

SHAFT


Inspect the motor shaft. Look for damage or excessive wear on the output and block splines. Inspect the bearing surfaces and sealing surface. Replace shafts with damaged or excessively worn splines, bearing surfaces, or sealing surfaces.

Replace if necessary.

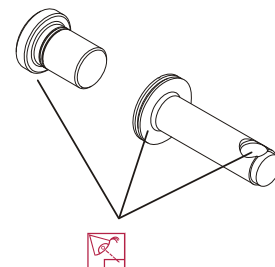

LOOP FLUSHING SPOOL


Inspect the loop flushing spool. Check for cracks or damage. Replace if necessary.

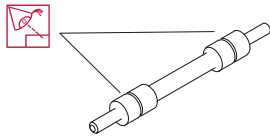

Assembly

1. Install new O-ring (1) and piston seal (2) to the servo piston (3). Install the piston seal over the O-ring.

Installing the piston seal stretches it, making it difficult to install the servo piston in its bore. Allow 30 minutes for the seal to relax after installation. To speed up seal relaxation, compress the seal by installing the piston head into the servo cavity in the end-cap and let it stand for at least five minutes.

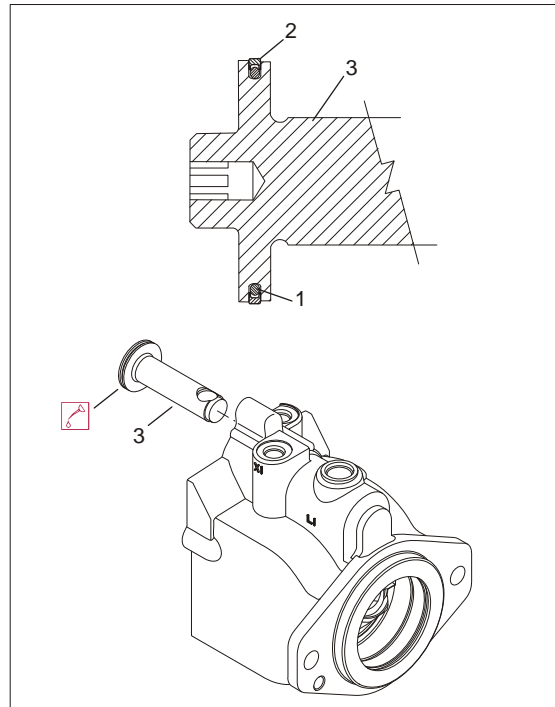

1. O-ring
2. Piston Seal
3. Servo Piston

Figure 3-30. Servo Piston


2. After piston seal has relaxed, lubricate and install servo piston into the housing bore. Align the piston with the ball socket facing the inside of the housing.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES ABOUT 80 TO 90 LBF (350 TO 400 N) OF FORCE. USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO INSTALL THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS INSTALLED.

3. Install the inner block spring washer (4), block spring (5), and outer washer (6) into the cylinder block. Using a press, compress the block spring

enough to expose the retaining ring groove. Wind the spiral retaining ring (7) into the groove in the cylinder block.

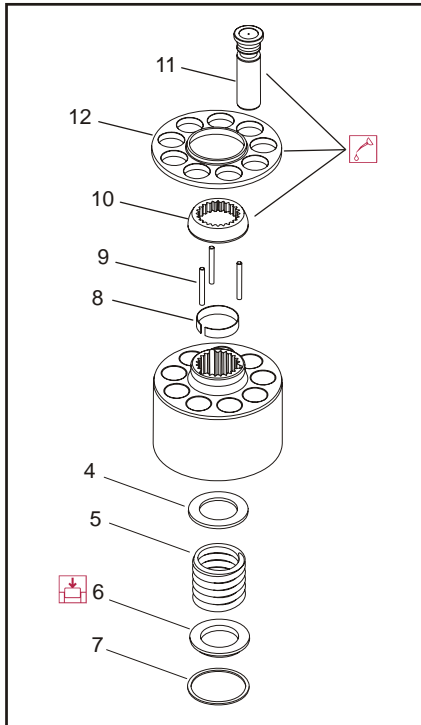


- | | |
|--------------------------|----------------------|
| 4. Block Spring Washer | 9. Holddown Pins |
| 5. Block Spring | 10. Ball Guide |
| 6. Outer Washer | 11. Piston |
| 7. Spiral Retaining Ring | 12. Slipper Retainer |
| 8. Retaining Ring | |

Figure 3-31. Cylinder Kit Assembly

- Turn the block over and install the retaining ring (8), hold-down pins (9), and ball guide (10) to the cylinder block.
- Install the pistons (11) to the slipper retainer (12). Install the piston/retainer assembly into the cylinder block. Ensure the concave surface of the retainer seats on the ball guide. If you're reusing the pistons, install them to the original block bores. Lubricate the pistons, slippers, retainer, and ball guide before assembly. Set the cylinder kit aside on a clean surface until needed.

- Install the journal bearings (13) into the housing seats. Use assembly grease to keep the bearings seated during assembly. Ensure the locating nubs drop into the cavities in the seats. If you're reusing the bearings, install them in the original location and orientation. Lubricate the journal bearings.

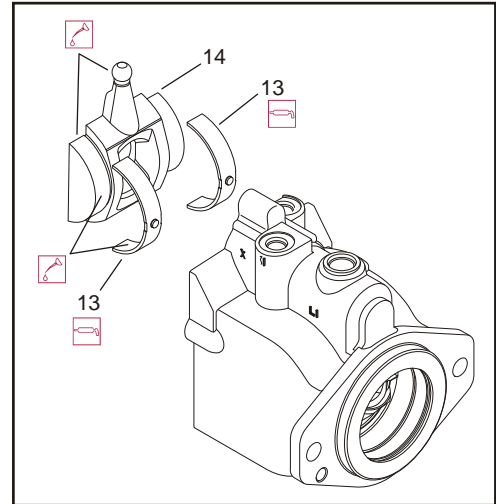


- | |
|----------------------|
| 13. Journal Bearings |
| 14. Swash Plate |

Figure 3-32. Swash Plate and Journal Bearing

- Install the swashplate (14) into the housing. Tilt the swashplate and guide the servo lever ball into its socket in the servo piston rod. Ensure the swashplate seats into the journal bearings and moves freely. Lubricate the running surface of the swashplate.

8. Press front shaft bearing (15) onto shaft (16). Press bearing onto shaft with lettering facing out. Lubricate bearing rollers. Install snap-ring (17) onto shaft.

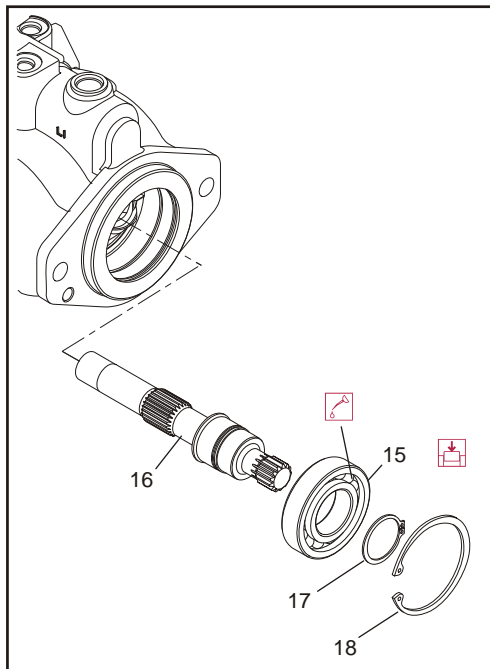


- 15. Front Shaft Bearing
- 16. Shaft
- 17. Snap Ring
- 18. Snap Ring

Figure 3-33. Shaft and Front Bearing

9. While holding the swashplate in place, turn the housing on its side. Install the install shaft/bearing assembly into housing from the flange end. Install the snap-ring (18).


10. Verify swashplate and bearings are properly seated. Install the cylinder kit (19) onto the shaft. Install with the slippers facing the swashplate. Rock the shaft to align the block splines and slide the cylinder kit into place. Orient the motor with the shaft pointing downward and verify the cylinder kit, swashplate, journal bearings, and servo piston are all secure and properly installed.

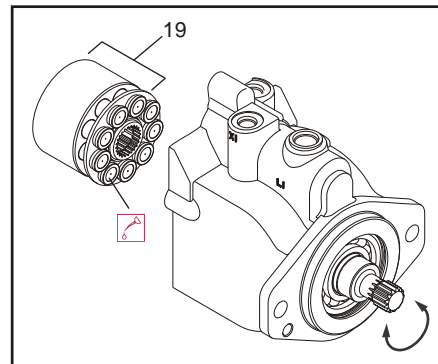

19. Cylinder Kit

Figure 3-34. Cylinder Kit Installation


11. Lubricate and install the servo spring (20), and minimum angle stop (21) into the housing bore.

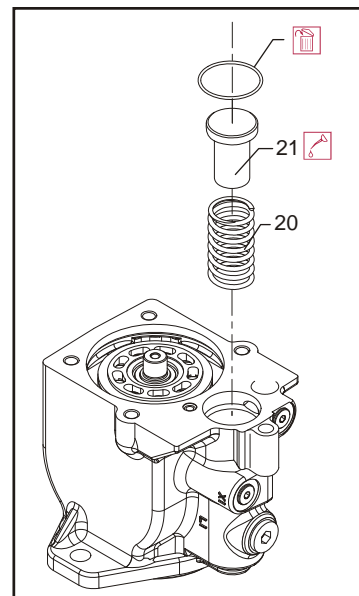

- 20. Servo Spring
- 21. Minimum Angle Stop

Figure 3-35. Servo Spring and Minimum Angle Stop

12. Press the rear shaft bearing (22) into the endcap. Install the bearing with letters facing out. Press until bearing surface is 0.08 ± 0.01 in (2 ± 0.25 mm) above endcap surface.

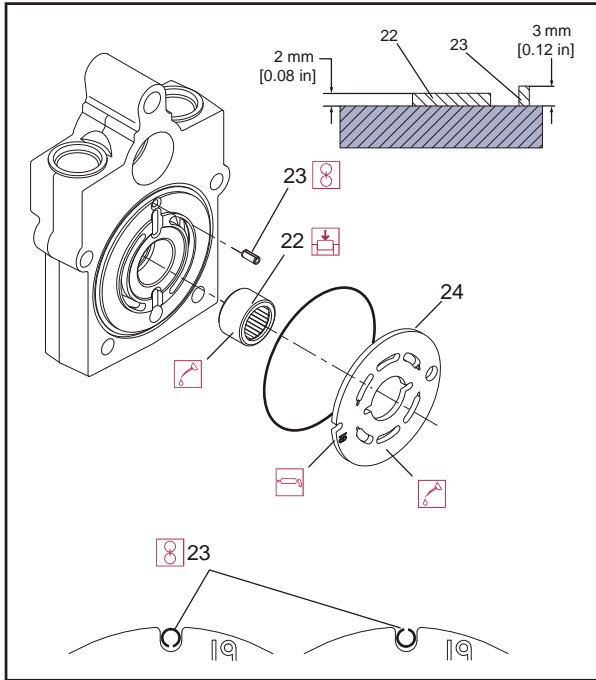


22. Rear Shaft Bearing
23. Timing Pin
24. Valve Plate

Figure 3-36. Valve Plate and Rear Bearing

13. Install timing pin (23) into its bore in the endcap. Install the pin with its groove facing toward or away from the shaft. Press the pin until the end protrudes 0.12 ± 0.01 in (3 ± 0.25 mm) above endcap surface.
14. Install the valve plate (24) onto the endcap. Install the valve plate with the yellow surface toward the cylinder block. Align the slot in the valve plate with the timing pin. Apply a liberal coat of assembly grease to the endcap side of the valve plate to keep it in place during installation.

15. Install the endcap (25) onto the housing with the endcap screws (26). Check to ensure the endcap will properly seat onto the housing without interference. Improper assembly of the internal components may prevent the endcap from seating properly. Ensure the O-rings seat properly when installing the endcap.

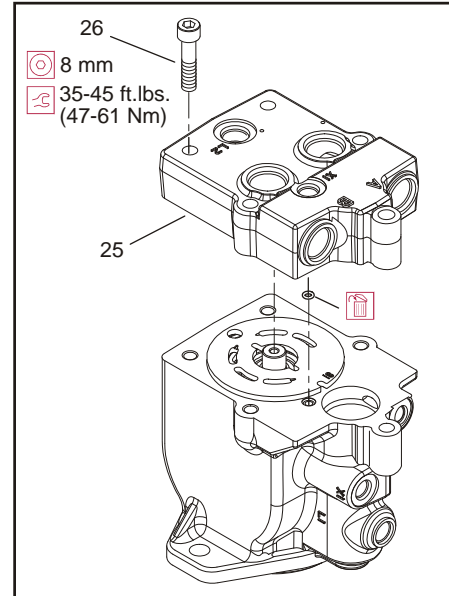


25. End Cap
26. Screw

Figure 3-37. End Cap

16. Using an 8 mm internal hex wrench, tighten the endcap screws. Tighten the screws in opposite corners slowly and evenly to compress the servo spring and properly seat the endcap. Torque endcap screws 35-45 ft.lbs. (47-61 Nm).
17. Before installing the shaft seal, ensure the shaft turns smoothly with less than 120 in.lbs. (13.5 Nm) of force. If the shaft does not turn smoothly within the specified maximum force, disassemble and check the unit.

SECTION 3 - CHASSIS & TURNTABLE

18. Cover shaft splines with an installation sleeve. Install a new shaft seal (27) with the cup side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal. Install seal support washer (28) and snap ring (29).

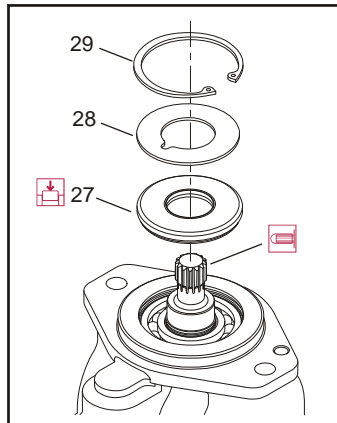

- 27. Shaft Seal
- 28. Seal Support Washer
- 29. Snap Ring

Figure 3-38. Shaft Seal

19. Install remaining plugs and fittings to the housing. Refer to the drawing below for wrench sizes and installation torques.


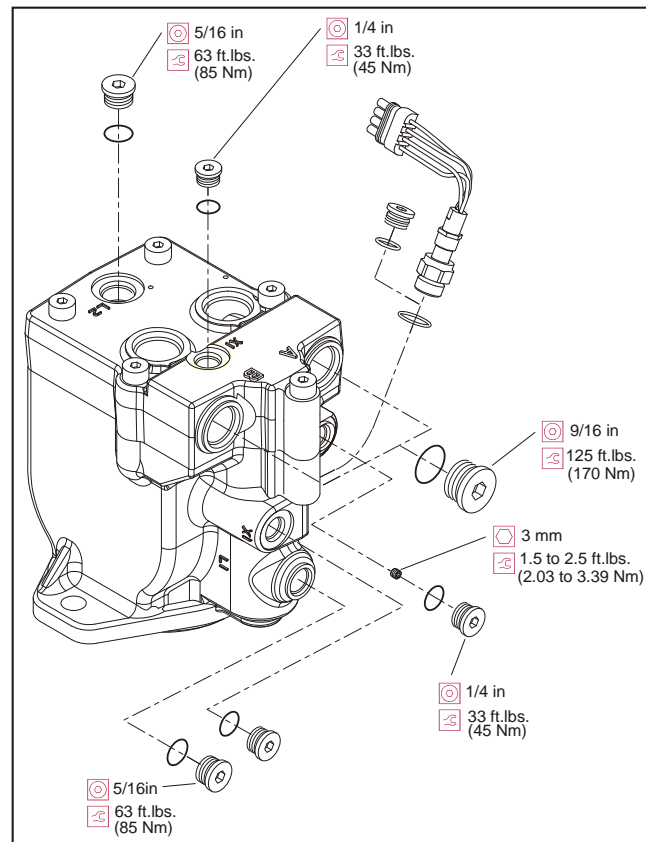


Figure 3-39. Plugs and Fittings Installation

20. Install orifice poppet (30).

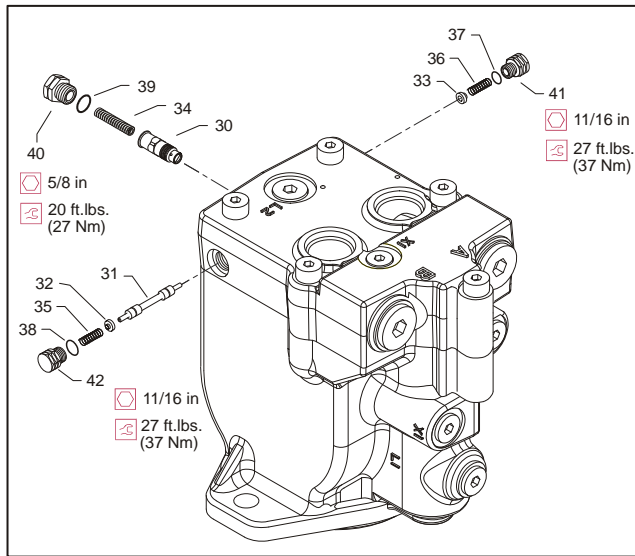

- | | | | |
|--------------------|------------|------------|----------|
| 30. Orifice Poppet | 34. Spring | 37. O-ring | 40. Plug |
| 31. Shift Spool | 35. Spring | 38. O-ring | 41. Plug |
| 32. Spring | 36. Spring | 39. O-ring | 42. Plug |
| 33. Spring | | | |

Figure 3-40. Loop Flushing Spool

21. Install shift spool (31).
22. Install spring retaining washers onto springs (32 and 33).
23. Carefully install centering springs (34, 35, and 36).
24. Install new O-rings (37, 38, and 39).
25. Using a 5/8 in wrench torque plug (40) to 20 ft.lbs. (27 Nm).
26. Using a 11/16 in wrench, torque plugs (41 and 42) to 27 ft.lbs. (37 Nm).

Initial Start-up Procedures

Follow this procedure when starting-up a new motor or when installing a motor that has been removed.

Prior to installing the motor, inspect for damage incurred during shipping. Make certain all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

1. Fill the reservoir with recommended hydraulic fluid. Always filter fluid through a 10 micron filter when pouring into the reservoir. Never reuse hydraulic fluid.
2. Fill the inlet line leading from the pump to the reservoir. Check the inlet line for properly tightened fittings and be certain it is free of restrictions and air leaks.
3. Fill the pump and motor housing with clean hydraulic fluid. Pour filtered oil directly into the upper most case drain port.
4. To ensure the pump and motor stay filled with oil, install case drain lines into the upper most case drain ports.
5. Install a 0 to 500 psi (0 to 35 bar) gauge in the charge pressure gauge port of the pump to monitor system pressure during start up.
6. While watching the pressure gauge, run the engine at the lowest possible speed until system pressure builds to normal levels (minimum 160 psi [11 bar]). Once system pressure is established, increase to full operating speed. If system pressure is not maintained, shut down the prime mover, determine cause, and take corrective action.
7. Operate the hydraulic system for at least fifteen minutes under light load conditions.
8. Check and adjust control settings as necessary after installation.
9. Shut down the prime mover and remove the pressure gauge. Replace plug at the charge pressure gauge port.
10. Check the fluid level in the reservoir; add clean filtered fluid if necessary. The motor is now ready for operation.

3.8 OSCILLATING AXLE BLEEDING PROCEDURE AND LOCKOUT TEST


Lockout Cylinder Bleeding

NOTICE

ENSURE PLATFORM IS FULLY LOWERED AND BOOM IS CENTERED OVER REAR AXLE PRIOR TO BEGINNING BLEEDING PROCEDURE.

ENSURE MACHINE IS ON A LEVEL SURFACE AND REAR WHEELS ARE BLOCKED, BRAKE WIRE IS DISCONNECTED.

1. Making sure machine is on a level surface and rear wheels are blocked, brake wire is disconnected.
2. Center boom over rear axle to make sure that the oscillation valve in the rotary coupling is activated.
3. Using a Phillips screwdriver, remove screw from connection on the brake valve and disconnect the solenoid from the valve

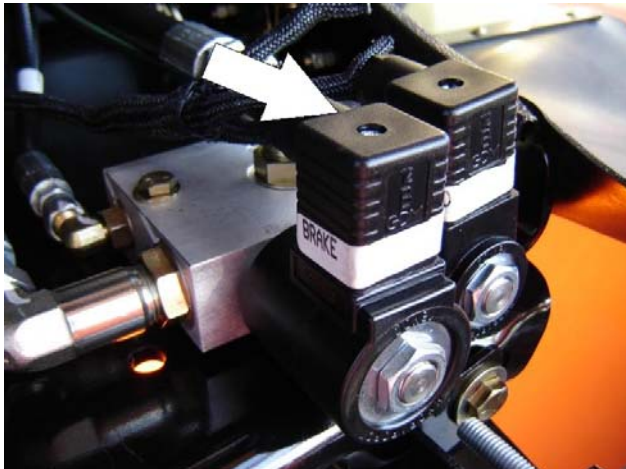

4. Place suitable containers under each lockout cylinder to catch any residual hydraulic fluid.

5. Open both bleeder screws (one on each lockout cylinder).



6. Start the engine, position drive control lever to forward or reverse.
7. Close bleeder screws when there is no more air in the hydraulic oil coming out of the bleeder valve.
8. Perform oscillating axle lockout test.
9. If necessary, repeat steps 1 thru 8.

Oscillating Axle Lockout Test

NOTICE

LOCKOUT SYSTEM TEST MUST BE PERFORMED QUARTERLY, ANY TIME A SYSTEM COMPONENT IS REPLACED, OR WHEN IMPROPER SYSTEM OPERATION IS SUSPECTED.

NOTE: Ensure boom is fully retracted, lowered, and centered between drive wheels prior to beginning lockout cylinder test.

1. Place a 6 inch (15.2 cm) high block with ascension ramp in front of left front wheel.
2. From platform control station, activate machine hydraulic system.
3. Place FUNCTION SPEED CONTROL and DRIVE SPEED/TORQUE SELECT control switches to their respective LOW positions.

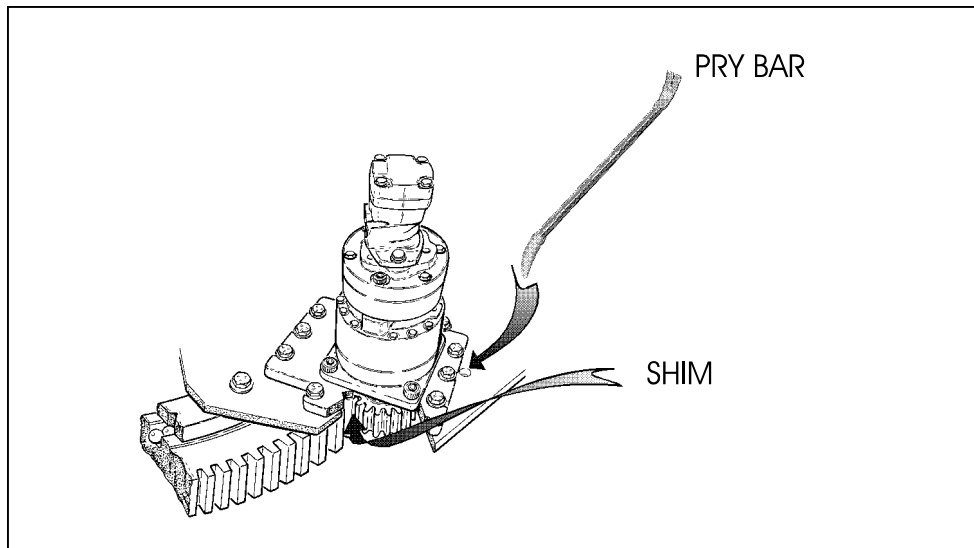


Figure 3-41. Swing Torque Hub Adjustment

4. Place DRIVE control lever to FORWARD position and carefully drive machine up ascension ramp until left front wheel is on top of block.
5. Carefully activate SWING control lever and position boom over right side of machine.
6. With boom over right side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
7. Have an assistant check to see that left front wheel remains locked in position off of ground.
8. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
9. Place the 6 inch (15.2 cm) high block with ascension ramp in front of right front wheel.
10. Place DRIVE control lever to FORWARD and carefully drive machine up ascension ramp until right front wheel is on top of block.
11. Carefully activate SWING control lever and position boom over left side of machine.
12. With boom over left side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
13. Have an assistant check to see that right front wheel remains locked in position off of ground.
14. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
15. If lockout cylinders do not function properly, have qualified personnel correct the malfunction prior to any further operation.

3.9 SWING HUB

Adjustment Procedures

NOTE: The swing bearing high spot is usually marked with a colored paint.

1. Ensure swing drive is located on bearing gear max eccentric tooth (high spot).
2. With mounting free to slide, shim between pinion and bearing gear teeth to achieve 0.008 - 0.012 in. (0.20 - 0.30 mm) backlash.
3. Install a pry bar into hole in turntable base plate and pry swing hub back tight against shim and bearing.
4. Torque bolts according to the torque chart in Section 1.

Disassembly

1. Loosen all 12 cover bolts (12)&(13) and drain the oil from the unit.
2. Remove the 12 cover bolts (12)& (13) and lift off the cover (6). Remove and discard the O-ring (5) from the counterbore of the cover (6).
3. Remove the input gear (8) and thrust washer (10).
4. Lift out the carrier assembly (3) and top thrust washer (11). The thrust washer (11) may stick to the inside of the carrier (3).
5. Remove the input thrust spacer (9).
6. Lift out the internal gear (2) and thrust washer (11). The thrust washer (11) may stick to the under side of the carrier (3).
7. Remove the retaining ring (1I) from the output shaft (1A) and discard.

⚠ CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING (1I) REMOVAL.

8. Remove bearing shim (1H) from the output shaft (1A).
9. The output shaft (1A) may now be pressed out of the hub (1G).
10. The bearing cups (1C)&(1E) will remain in hub (1G) as will bearing cone (1F). Bearing cone (1D) will remain on the same output shaft (1A). The seal (1B) will be automatically removed during this procedure.

NOTE: *If bearing replacement is necessary, the bearing cups can be removed with a slide hammer puller driven out with a punch.*


11. To remove the cluster gears (3F) from the carrier (3A), drive the anti-roll pin (3G) into the planet shaft (3E) may now be tapped out of the carrier. After planet shaft (3E) has been removed the roll pin (3G) can be driven out.
12. The cluster gear (3F) can now be removed from the carrier (3A). The thrust washers (3B) will be removed with the cluster gear (3F).
13. The needle rollers (3C) and spacer (3D) are now removed from the cluster gear (3F).

NOTICE


WHEN REBUILDING OR REPAIRING THE UNIT, THE RETAINING RING (1I), O-RINGS (5) AND SEAL (1B) SHOULD ALWAYS BE REPLACED.

Main Assembly Procedure


1. With the hub shaft sub-assembly resting on the shaft (1A) install internal gear (2). The spline of the internal gear (2) bore will mesh the spline of the output shaft (1A).

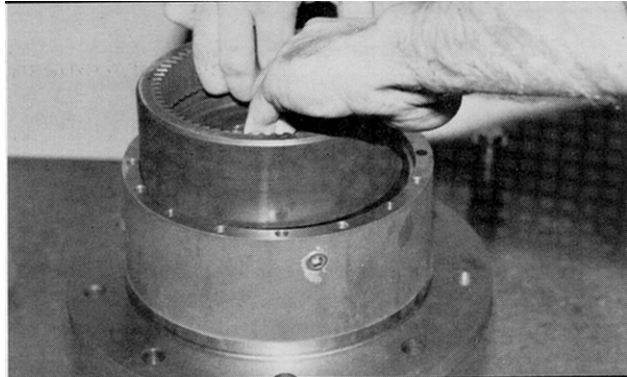


2. Thrust washer (11) is installed on the face of the output shaft (1A). Sufficient grease or petroleum jelly should be used to hold thrust washer in place.

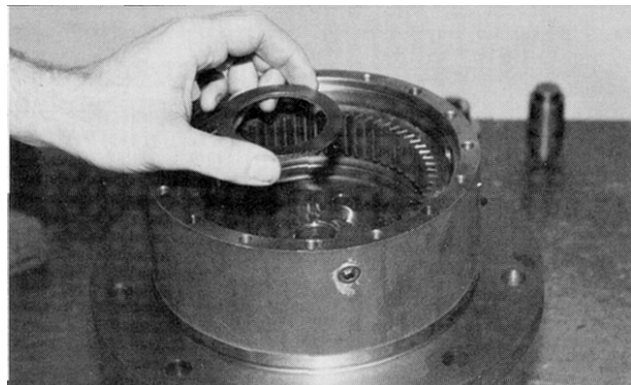


- Place O-ring (5) into hub counterbore. Use petroleum jelly to hold O-ring in place. Also at this time locate and mark the 4 counter beamed holes in the face of the hub (1G). This is for identification later in the assembly.

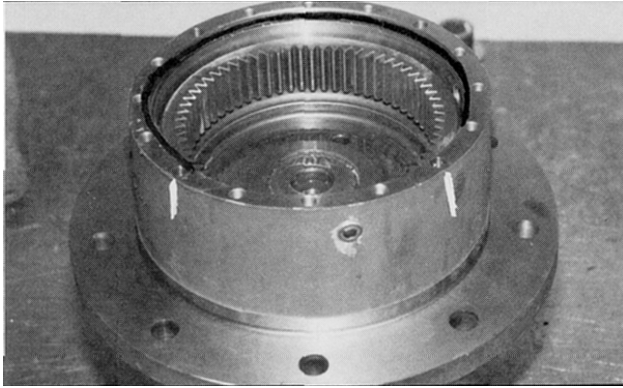


- Thrust spacer (9) is installed into the bore of the output shaft (1A). This should be a slip fit and thrust spaces should rotate in this location.

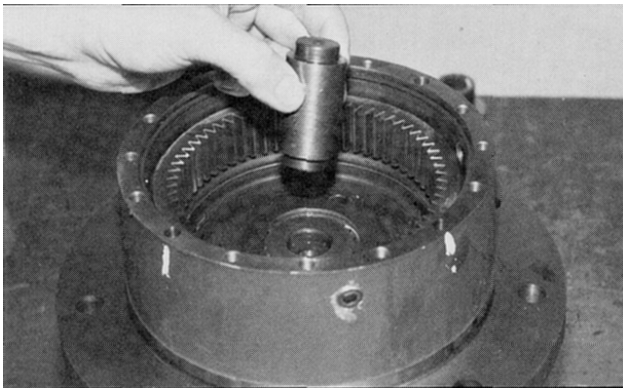


- Place carrier assembly (3) on a flat surface with the large gears (3F) up and positioned as shown. Find the punch marked tooth on each large gear (3F) and locate at 12 o'clock (straight-up) from each planet pin. Marked tooth will be located just under the carrier (3A) on upper two gears (3F).

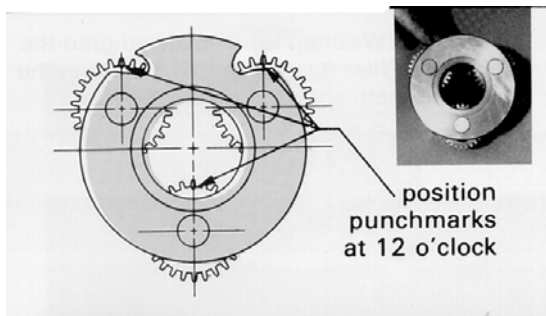

- With shoulder side of ring gear (4) facing down, place ring gear over (into mesh with) large gears. Be sure that punch marks remain in correct location during ring gear installation. The side of the ring gear with an x stamped on it should be up.

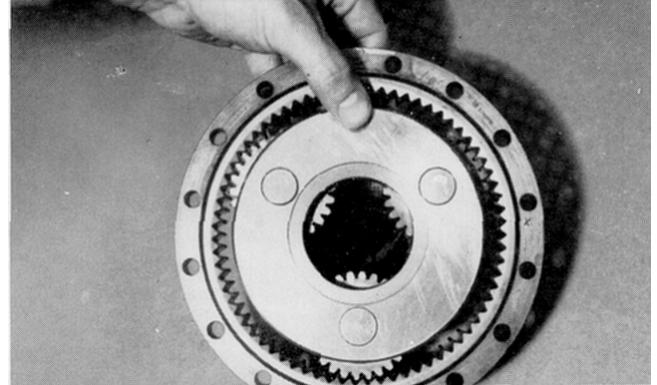


- While holding ring gear (4) and cluster gears (3F) in mesh, place small side of cluster gears (3F) into mesh with the internal gear (2) and input gear (13). On the ring gear locate the hole marked "x" over one of the marked counterbore holes (step 3) in hub (1G).

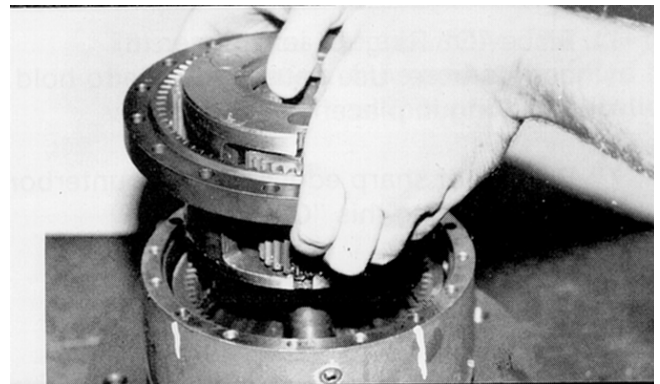


NOTE: If gears do not mesh easily or carrier assembly does not rotate freely, then remove the carrier and ring gear and check the cluster gear timing.

SECTION 3 - CHASSIS & TURNTABLE

- Input gear (8) is installed, meshing with teeth of the large diameter cluster gear (3F). The counterbore on the input gear (8) locates on the shoulder of the thrust spacer (9). This is to be a slip fit and operate freely.

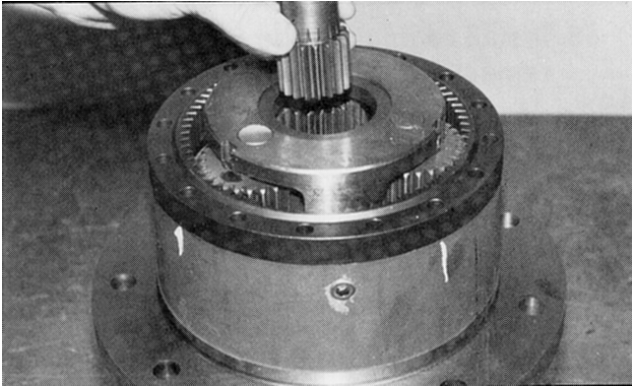

- Thrust washer (10) is installed onto the input gear (8) and should locate on the gear teeth shoulder.

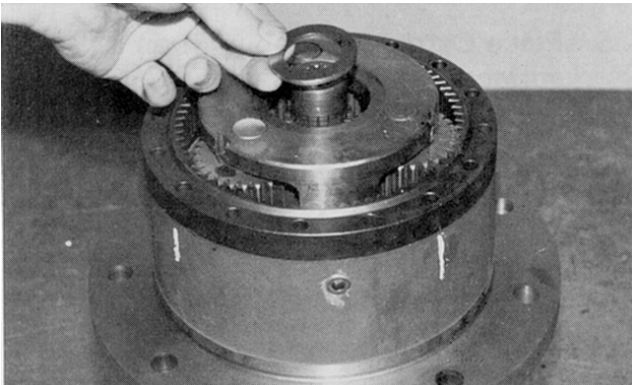


- Thrust washer (11) is installed into the counterbore of the carrier (3).




- Place O-ring (5) into cover (6) counterbore. Use petroleum jelly to hold O-ring in place.

⚠ CAUTION


BEWARE OF SHARP EDGES OF THE COUNTERBORE WHILE SEATING THIS O-RING.

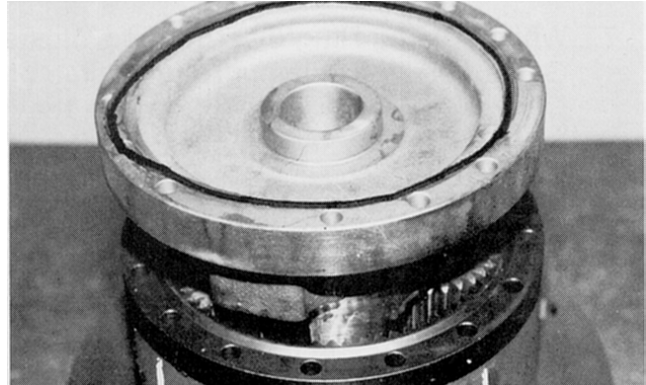


- The cover (6) is now installed on this assembly. Taking care to correctly align pipe plug hole (20) with those in the hub (1J), usually 90° to one another. Locate the 4 counterbore holes in hub (1G) (marked in step 3) and install 4 shoulder bolts (13). A slight tap with a hammer may be necessary to align shoulder bolt with hub (1G) counterbore.

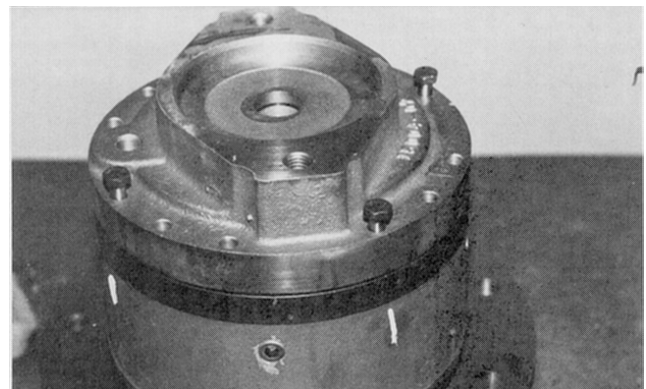


- Install regular grade 8 bolts (12) into remaining holes.

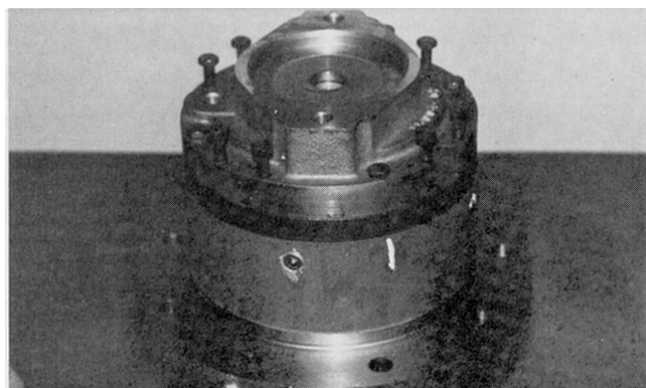


14. Pipe plugs (20) are to be installed into cover (6) using a lubricant of some sort.

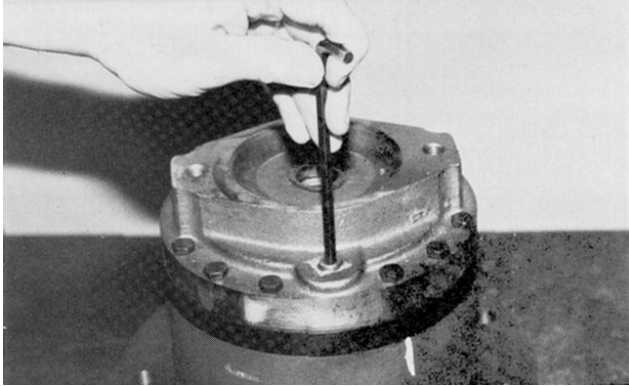


2. Press bearing cup (1C) into hub (1G) taking care to insure cup start square with the bore of the hub.

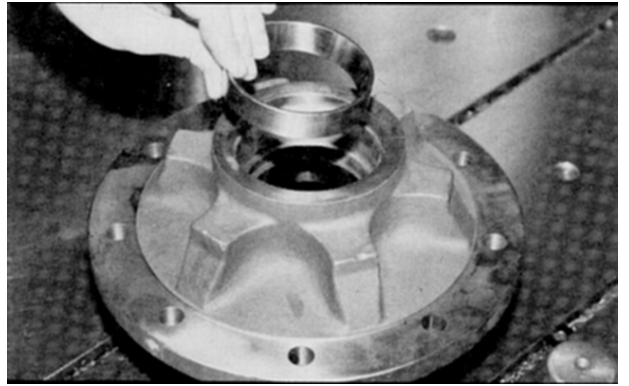

15. Torque shoulder bolts (13) to 23-27 ft./lbs. and regular grade 8 bolts (12) to 23-27 ft./lbs,

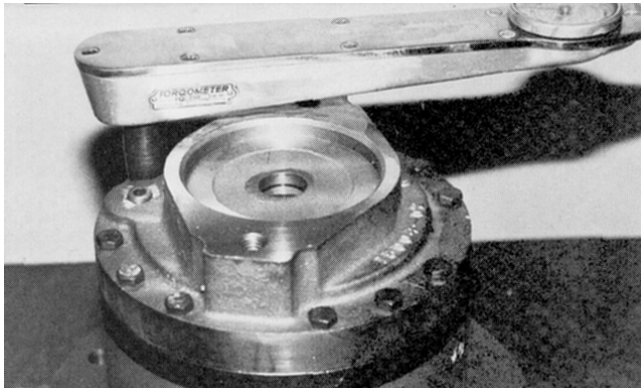

3. Invert hub (1G) and press bearing cup (1E) into inter counterbore of hub (1G).


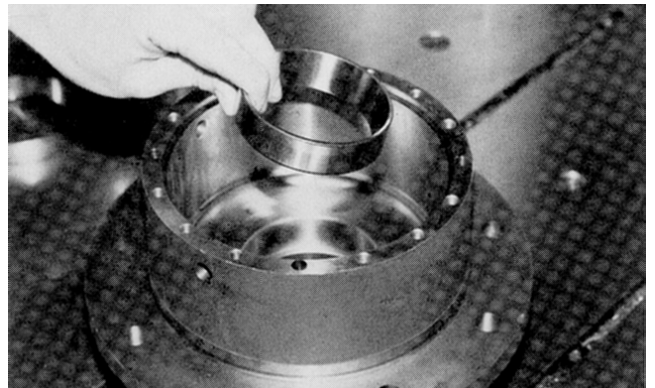


This completes the assembly. The unit must be filled one-half full of EP 90 lubricant before operation if the unit is mounted horizontally, and completely filled if mounted vertically. In vertical mounting application case oil circulation is recommended.

4. Returning the hub (1G) to locate on the large diameter end, the output shaft (1A) is carefully installed into the hub (1G).


Hub Shaft Sub-Assembly

1. Press bearing cone (1D) onto shaft (1A).

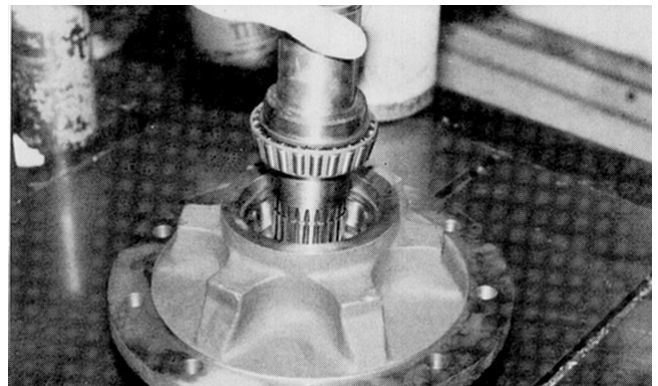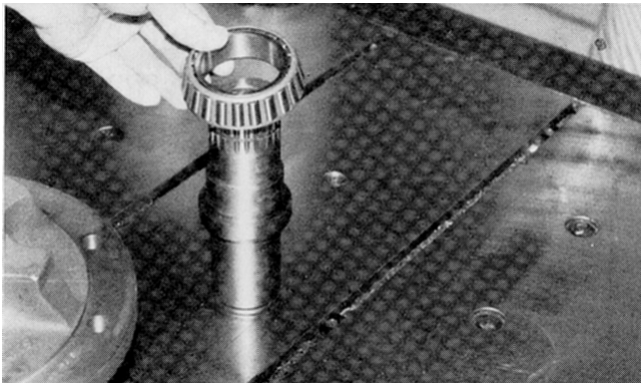


SECTION 3 - CHASSIS & TURNTABLE


5. The shaft seal (1B) is installed over the output shaft (1A) and into the counterbore of the hub (1G). Care should be taken to insure the seal (1B) is being correctly installed (smooth face up and located just flush with the counterbore face).

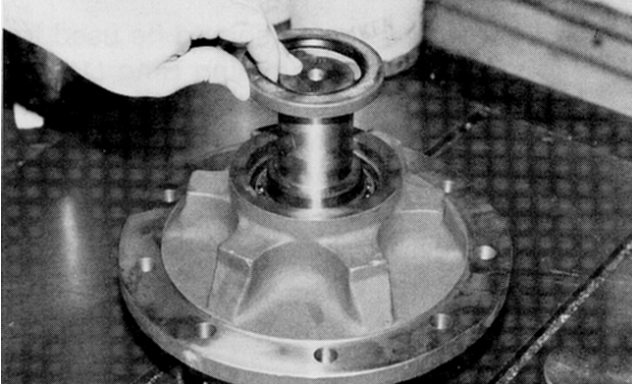

6. The bearing cone (1F) is an interference fit and has to be pressed or tapped on.

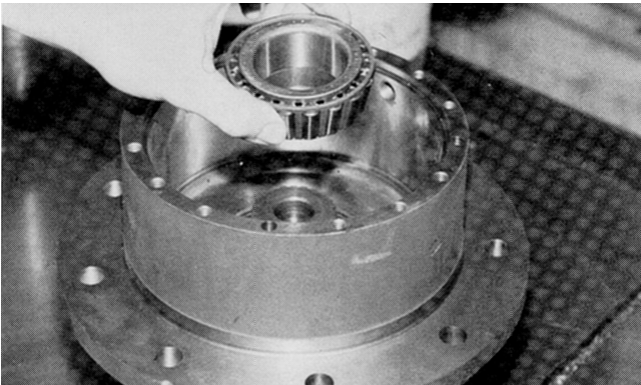

7. Pipe plugs (1J & 1K) should be checked and/ or installed at this time in the assembly.

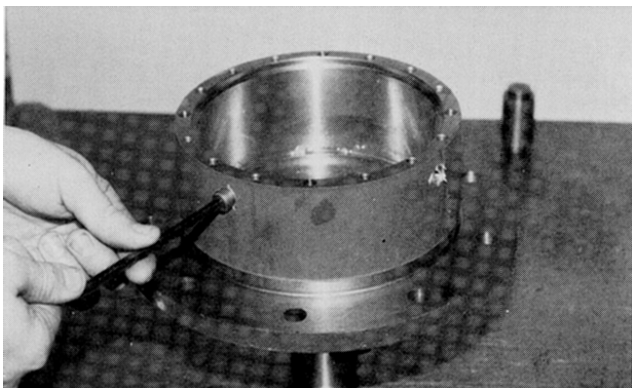


8. Bearing spacer (1H) is installed around the output shaft (1A) and locates on bearing cone (1F).



9. Retaining ring (1I) installed into groove provided in the output shaft (1A). This retaining ring (1I) should never be reused in a repair or rebuild.

⚠ CAUTION


EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

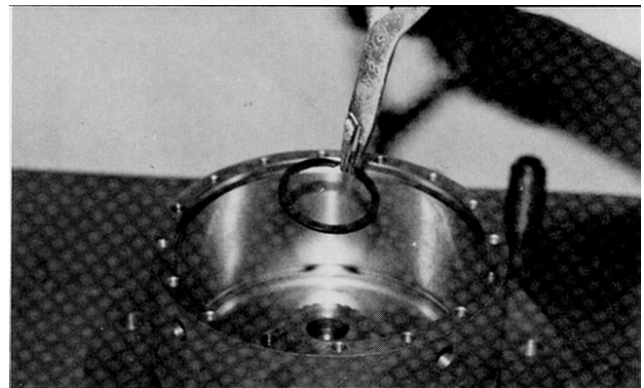


10. A soft metal punch should be used to insure that this retaining ring (1I) is completely seated in the groove of the output shaft (1A).

⚠ CAUTION

EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

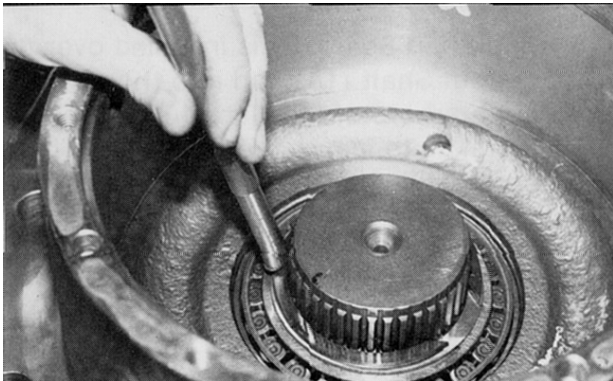

11. Upon completion of step 10, rap the internal end of the output shaft (1A) twice with a piece of soft metal rod. This will release the preload which was on the bearings.

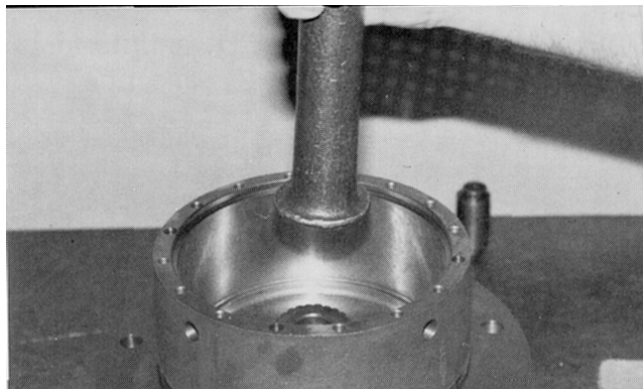


This completes the hub shaft sub-assembly —items (1A) through (1J). If this assembly is not going to be used right away, it should be oiled and covered to help prevent rusting.

Carrier Sub-Assembly


1. Apply a coat of grease or petroleum jelly to cluster gear bore.



2. Place sixteen needle rollers into cluster gear bore.

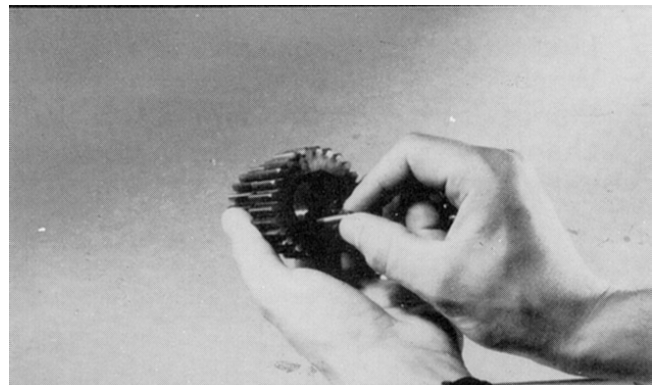


3. Place spacer washer into opposite side of cluster gear and against needle rollers.

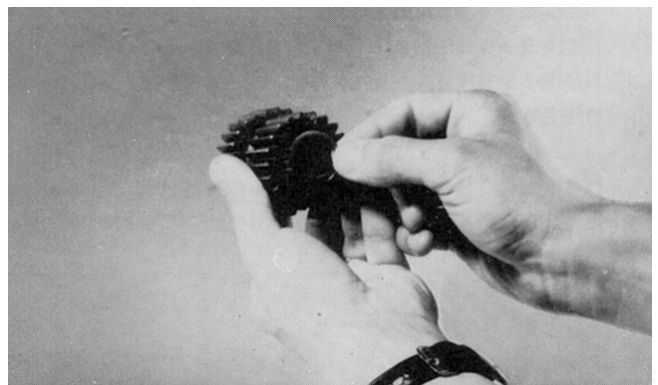


SECTION 3 - CHASSIS & TURNTABLE

4. Place second set of sixteen needle rollers into cluster gear.

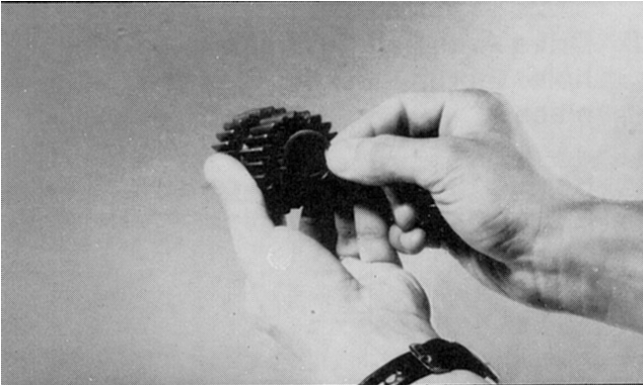


5. Apply grease or petroleum jelly to the tang side of two thrust washers. Place thrust washers against bosses in carrier with washer tang fitting into slot in carrier outside diameter.


NOTE: Some old style carriers will not have slots and tangs should be located inside boss relief.

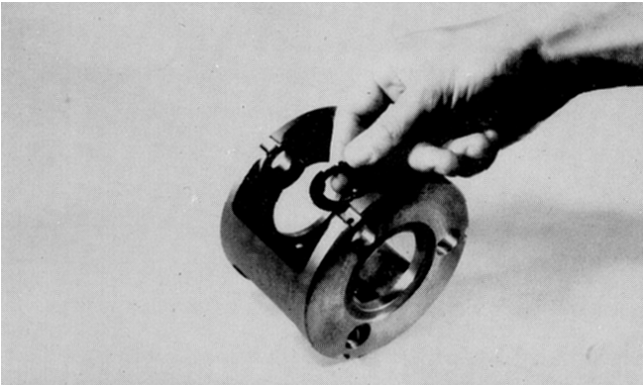


6. While keeping thrust washers in place, slide cluster gear into carrier with the larger gear on the side with the small pin hole.

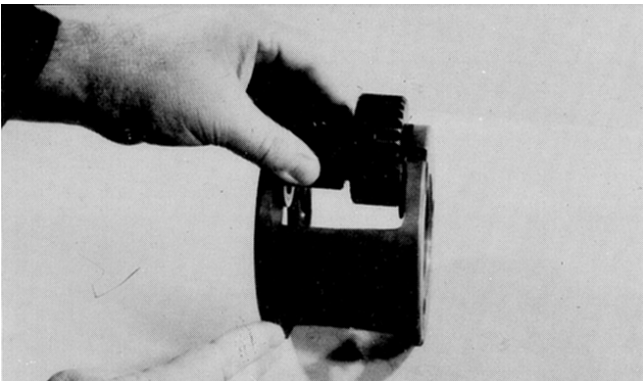

7. Line up cluster gear and thrust washer with hole in carrier and slide planet shaft through. Line up chamfered side of hole in planet shaft with pin hole in carrier.

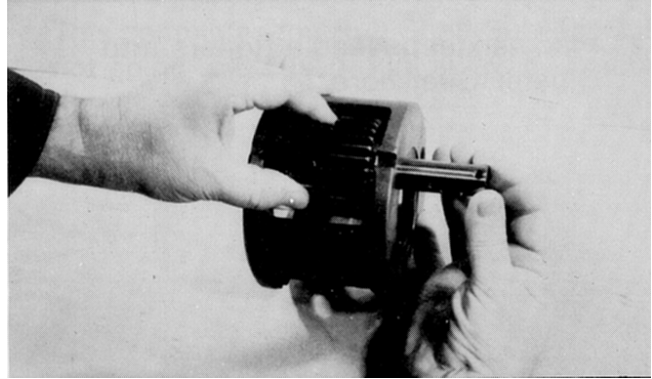

8. Drive anti-roll pin flush into carrier hole, thereby locking planet shaft into place. Repeat these steps for remaining two cluster gears to complete carrier assembly.

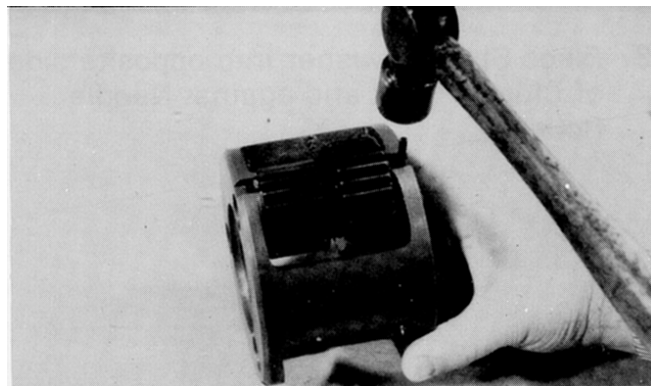

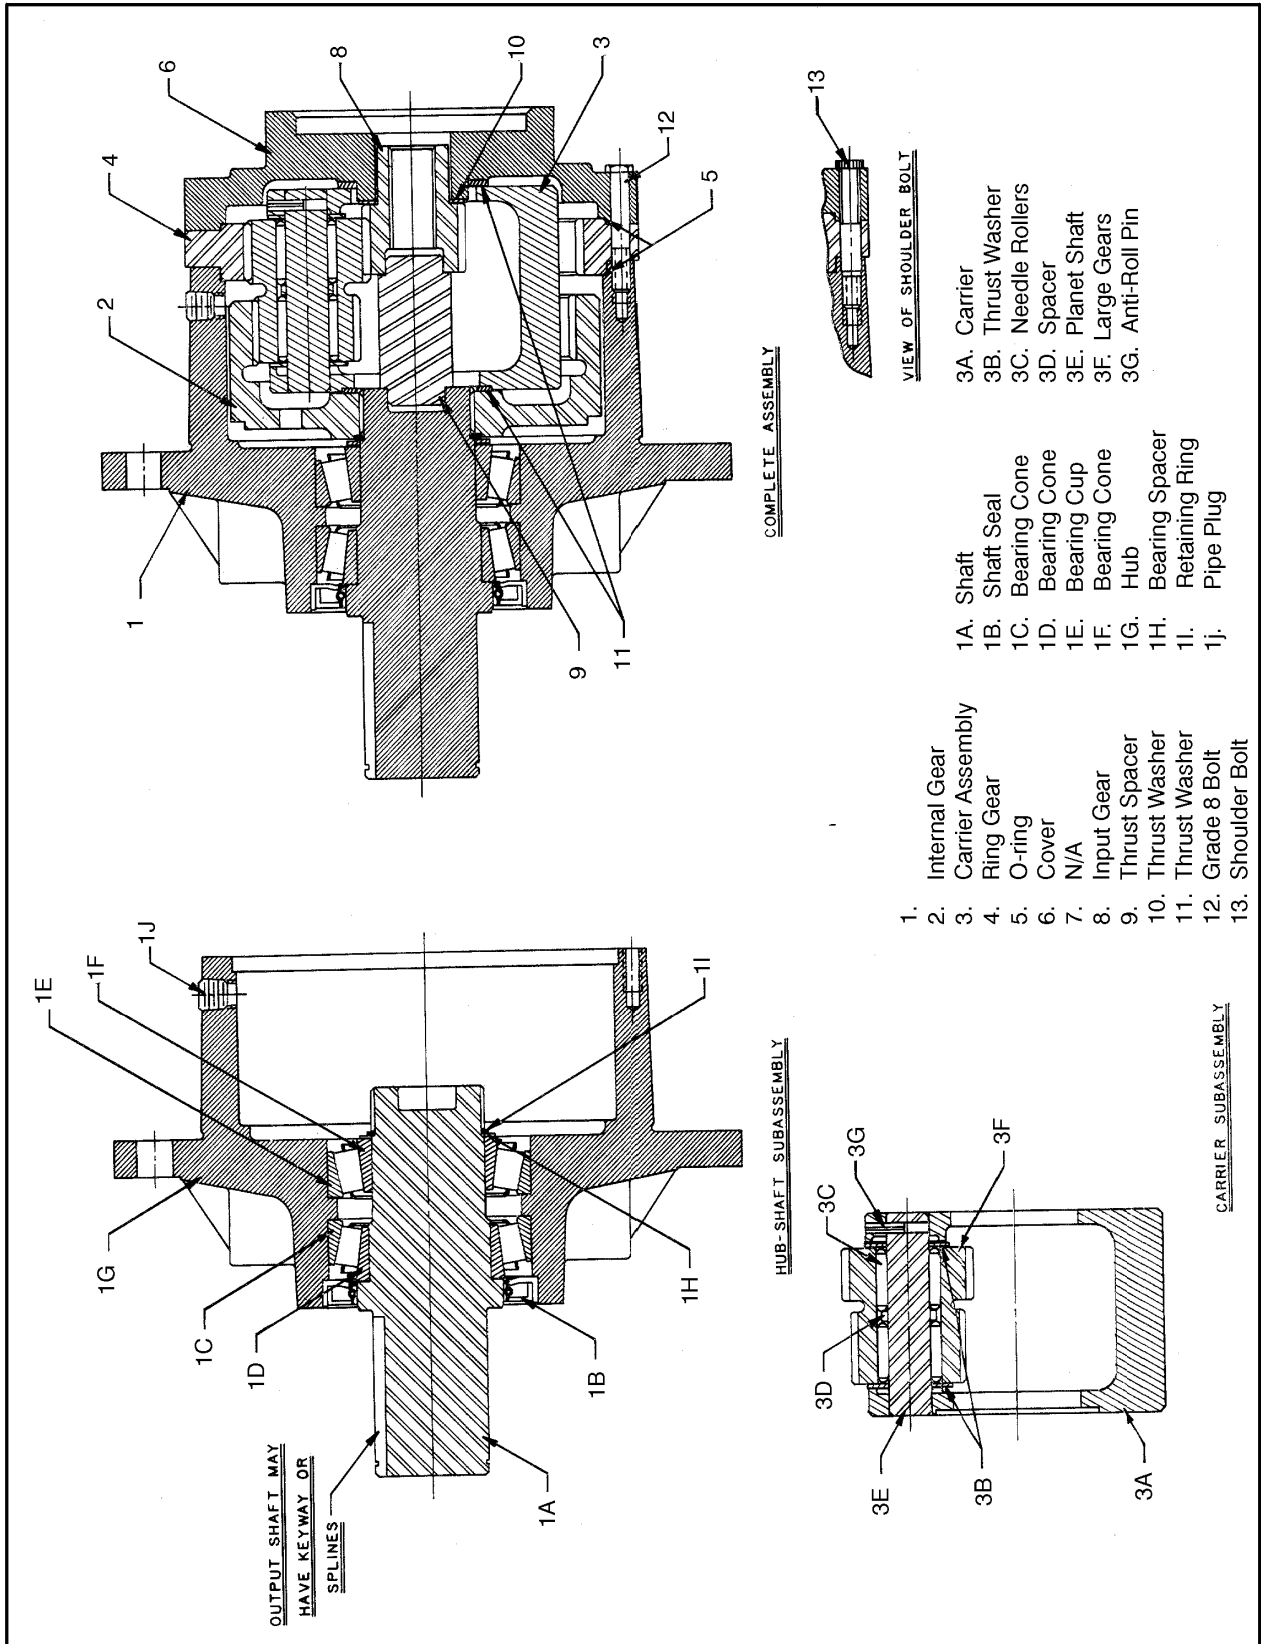


Figure 3-42. Swing Drive Hub (Fairfield)

3.10 SWING BEARING

Turntable Bearing Mounting Bolt Condition Check

NOTE: This check is designed to replace the existing bearing bolt torque checks on JLG Lifts in service. This check must be performed after the first 50 hours of machine operation and every 600 hours of machine operation thereafter. If during this check any bolts are found to be missing or loose, replace missing or loose bolts with new bolts and torque to the value specified in the torque chart, after lubricating the bolt threads with loctite #271. After replacing and retorquing bolt or bolts recheck all existing bolts for looseness.

head and hardened washer at the arrow indicated position.

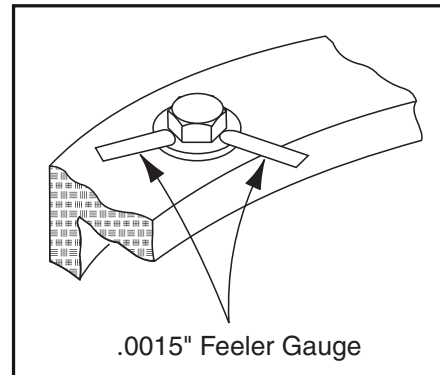


Figure 3-43. Swing Bearing Bolt Feeler Gauge Check

1. Check the frame to bearing. Attach bolts as follows:
 - a. Elevate the fully retracted boom to 70 degrees (full elevation).
 - b. At the positions indicated on Figure 3-43. try and insert the 0.0015" feeler gauge between the bolt head and hardened washer at the arrow indicated position.
 - c. Assure that the 0.0015" feeler gauge will not penetrate under the bolt head to the bolt shank.
 - d. Swing the turntable 90 degrees, and check some selected bolts at the new position.
 - e. Continue rotating the turntable at 90 degree intervals until a sampling of bolts have been checked in all quadrants.
2. Check the turntable to bearing. Attach bolts as follows:
 - a. Elevate the fully retracted boom to 70 degrees (full elevation).
 - b. At the positions indicated on Figure 3-43. try and insert the 0.0015" feeler gauge between the bolt head and hardened washer at the arrow indicated position.
 - c. Lower the boom to horizontal and fully extend the boom.
 - d. At the position indicated on Figure 3-43. try and insert the 0.0015" feeler gauge between the bolt

Wear Tolerance

1. From the underside of the machine, at rear center, with the boom fully elevated and fully retracted, as shown in and Figure 3-44., Swing Bearing Tolerance Boom Placement - Swing Bearing Tolerance Boom Placement) A, using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. (Figure 3-45., Swing Bearing Tolerance Measuring Point)
2. At the same point, with the boom at horizontal and fully extended, and the tower boom fully elevated as shown in (Figure 3-44., Swing Bearing Tolerance Boom Placement - Swing Bearing Tolerance Boom Placement) B, using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. (Figure 3-45., Swing Bearing Tolerance Measuring Point)
3. If a difference greater than 0.079 in. (2.00 mm) is determined, the swing bearing should be replaced.
4. If a difference less than 0.079 in. (2.00 mm) is determined, and any of the following conditions exist, the bearing should be removed, disassembled, and inspected for the following:
 - a. Metal particles in the grease.
 - b. Increased drive power required.
 - c. Noise.
 - d. Rough rotation.

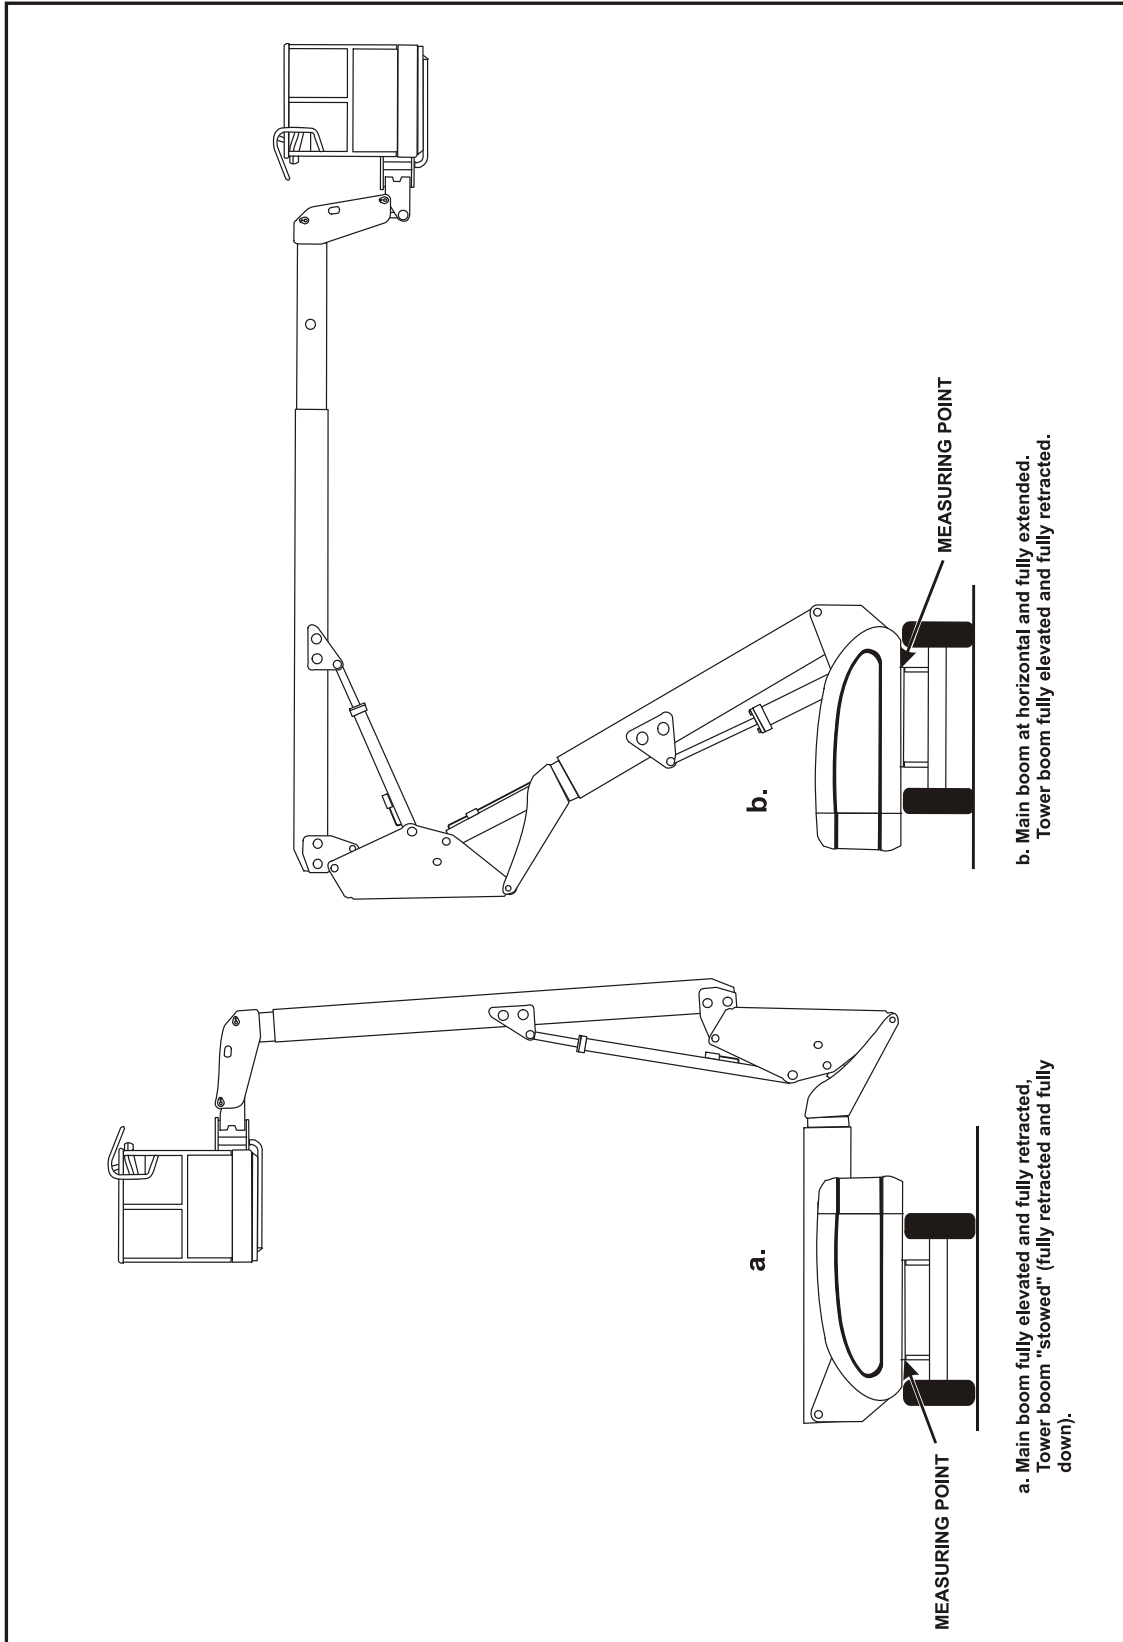


Figure 3-44. Swing Bearing Tolerance Boom Placement

SECTION 3 - CHASSIS & TURNTABLE

5. If bearing inspection shows no defects, reassemble and return to service.

NOTICE

THE SWING BEARING IS ONE OF THE MOST CRITICAL POINTS ON AN AERIAL LIFT. IT IS HERE THAT THE STRESSES OF LIFTING ARE CONCENTRATED, AT THE CENTER OF ROTATION. BECAUSE OF THIS, PROPER MAINTENANCE OF THE SWING BEARING BOLTS IS A MUST FOR SAFE OPERATION.

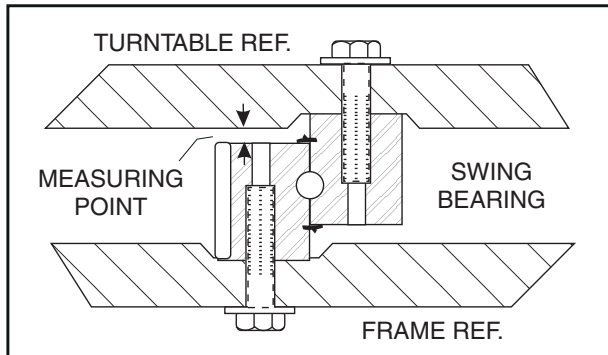


Figure 3-45. Swing Bearing Tolerance Measuring Point

Swing Bearing Replacement

1. Removal.
 - a. From Ground Control station, operate the boom adequately to provide access to frame opening or, if equipped, to rotary coupling.

WARNING

NEVER WORK BENEATH THE BOOM WITHOUT FIRST ENGAGING BOOM SAFETY PROP OR PROVIDING ADEQUATE OVERHEAD SLING SUPPORT AND/OR BLOCKING.

- b. Attach an adequate support sling to the boom and draw all slack from sling. Prop or block the boom if feasible.
- c. From inside turntable, remove mounting hardware which attach rotary coupling retaining yoke brackets to turntable.

NOTICE

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID THE ENTRY OF CONTAMINANTS INTO THE SYSTEM.

- d. Tag and disconnect the hydraulic lines from the fittings on the top of the rotary coupling. Use a suitable container to retain any residual hydraulic fluid. Immediately cap lines and ports.

- e. Attach suitable overhead lifting equipment to the base of the turntable weldment.
- f. Use a suitable tool to scribe a line on the inner race of the swing bearing and on the underside of the turntable. This will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the turntable to the bearing inner race. Discard the bolts.
- g. Use the lifting equipment to carefully lift the complete turntable assembly from the bearing. Ensure that no damage occurs to the turntable, bearing or frame-mounted components.
- h. Carefully place the turntable on a suitably supported trestle.
- i. Use a suitable tool to scribe a line on the outer race of the swing bearing and the frame. This line will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the outer race of the bearing to the frame. Discard the bolts. Use suitable lifting equipment to remove the bearing from the frame, then move the bearing to a clean, suitably supported work area.

2. Installation.

- a. Using suitable lifting equipment, carefully lower the swing bearing into position on the frame. Ensure the scribed line of the outer race of the bearing aligns with the scribed line on the frame. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the frame.

CAUTION

JLG INDUSTRIES RECOMMENDS THAT ALL REMOVED BEARING BOLTS BE DISCARDED AND REPLACED WITH NEW BOLTS. SINCE THE SWING BEARING IS THE ONLY STRUCTURAL LINK BETWEEN THE FRAME AND TURNTABLE, IT IS IMPERATIVE THAT SUCH REPLACEMENT HARDWARE MEETS JLG SPECIFICATIONS. USE OF GENUINE JLG HARDWARE IS HIGHLY RECOMMENDED.

- b. Apply a light coating of Loctite #271 to the new bearing bolts, and loosely install the bolts and washers through the frame and outer race of bearing.

CAUTION

IF COMPRESSED AIR OR ELECTRICALLY OPERATED IMPACT WRENCH IS USED FOR TIGHTENING THE BEARING ATTACHMENT BOLTS, THE TORQUE SETTING ACCURACY OF THE TOOL SHOULD BE CHECKED PRIOR TO USE.

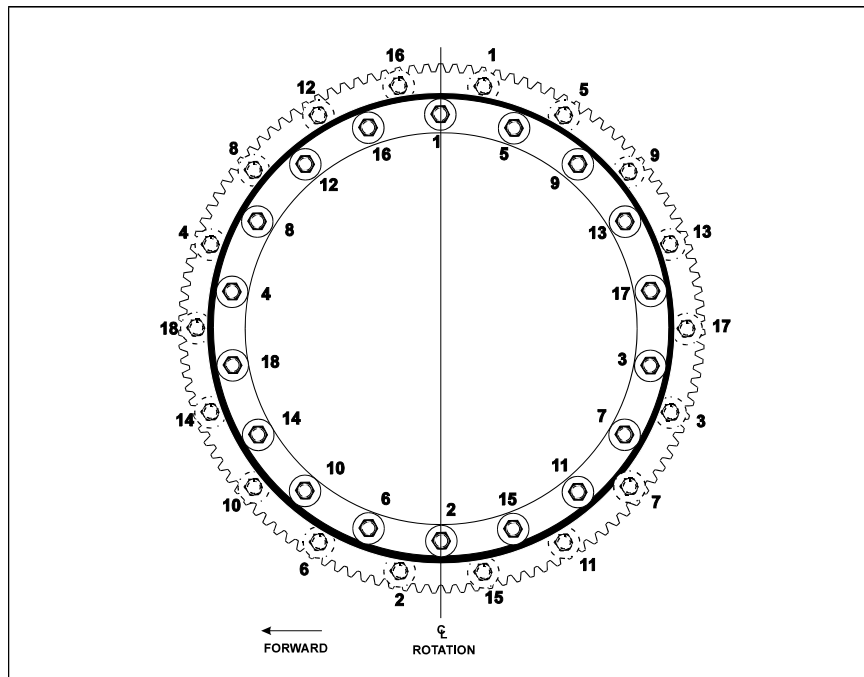


Figure 3-46. Swing Bearing Torque Sequence

- c. Refer to the Torque Sequence diagram as shown in Figure 3-46., Swing Bearing Torque Sequence. Clean any residue off the new bearing bolts, then apply a light coating of Loctite #271 and install the bolts and washers through the frame and outer race of the bearing. Tighten the bolts to an initial torque of 190 FT. LBS. (260 Nm) w/Loctite.
- d. Remove the lifting equipment from the bearing.
- e. Using suitable lifting equipment, carefully position the turntable assembly above the machine frame.
- f. Carefully lower the turntable onto the swing bearing, ensuring that the scribed line of the inner race of the bearing aligns with scribed line on the turntable. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the turntable.
- g. Clean any residue off the new bearing bolts, then apply a light coating of Loctite #271 and install the bolts and washers through the turntable and inner race of the bearing.
- h. Following the Torque Sequence diagram shown in Figure 2-49. Swing Bearing Torquing Sequence, tighten the bolts to a torque of 190 ft. lbs. (260 Nm) w/Loctite.
- i. Remove the lifting equipment.
- j. Install the rotary coupling retaining yoke brackets, apply a light coating of Loctite #242 to the

attaching bolts and secure the yoke to the turntable with the mounting hardware.

- k. Connect the hydraulic lines to the rotary coupling as tagged prior to removal.
- l. At ground control station, use boom lift control to lower boom to stowed position.
- m. Using all applicable safety precautions, activate the hydraulic system and check the swing system for proper and safe operation.

Swing Bearing Torque Values

1. Outer Race - 190 ft. lbs. (260 Nm) w/Loctite.
2. Inner Race - 190 ft. lbs. (260 Nm) w/Loctite.
3. See Swing Bearing Torquing Sequence.

⚠ WARNING

CHECK THE INNER AND OUTER SWING BEARING BOLTS FOR MISSING OR LOOSENESS AFTER FIRST 50 HOURS OF OPERATION, AND EVERY 600 HOURS THEREAFTER.

3.11 SWING BRAKE - MICO

Disassembly

1. With shaft protrusion downward, remove end cover (13) by removing capscrews (12).

⚠ CAUTION

END COVER IS UNDER SPRING TENSION OF APPROXIMATELY 2000 POUNDS (681 KG). THE FOUR CAPSCREWS SHOULD BE LOOSENEED EVENLY TO RELIEVE THIS FORCE. IF A HYDRAULIC PRESS IS AVAILABLE (3000 LBS (1362 KG) MAXIMUM), THE COVER CAN BE HELD IN POSITION WHILE REMOVING THE CAPSCREWS AND LOCKWASHERS.

2. Remove case seal (11) from housing (7) then remove bleeder screw (14) from end cover (52).
3. Remove piston (22) from end cover (13).
4. Remove o-ring (17), back-up ring (16), o-ring (19) and back-up ring (18) from piston (22).
5. Remove separators (10) from housing (52).
6. Remove stack assembly, consisting of discs (21), return plate (8) and friction discs (20) from housing (52).
7. Remove dowel pins (15), springs (5 & 6) from housing (52).
8. Remove retaining ring (3) from housing (52).
9. Remove shaft by pressing or using a soft mallet on male end of shaft (51).
10. Remove retaining ring (54) bearing (2) from shaft (51).
11. Press rotary seal (1) from housing (51).

Inspection

1. Clean all parts thoroughly.
2. Closely inspect all parts for excessive wear, cracks and chips. Replace parts as necessary.
3. Discard seals and o-rings.
4. Closely inspect bearings and bearing contact surfaces. Replace as necessary.

NOTE: Bearings may be reused if, after thorough inspection, they are found to be in good condition.

Assembly

NOTE: Lubricate all seals and o-rings with clean hydraulic oil prior to assembly.

1. Press new rotary seal (1) into housing (52). Note the direction of seal.
2. Install new bearing (2) on shaft (51).
3. Install shaft assembly and retaining ring (3) into housing (52).
4. Install dowel pins (15), spring retainer (55), and springs (5 & 6) into housing (52).

NOTE: Be sure to use the same number of springs and spring pattern as recorded during disassembly.

5. Position new large diameter return plate (8) in housing with tabs guided by dowel pins (15) until disc rests on springs (5 & 6).

NOTE: Discs (21 & 8) and friction discs (20) should remain dry during installation. Oil will contaminate disc surfaces.

6. Place new disc (20) on shaft (51) until it contacts return plate (8).
7. Add additional discs (21) as required to complete assembly.
8. Insert separators (10) in holes of return plate (8).
9. Install new o-ring (17), new back-up ring (16), new o-ring (19) and new back-up ring (18) on piston (22). Insert piston (22) into end cover (13), being careful not to shear o-rings or back-up rings.
10. Install new case seal (11) in housing (52), then install bleeder screw (14) in end cover.
11. Position end cover (13) on housing (52), aligning dowel pins (15) with holes in end cover.
12. Insert capscrews (12) and tighten evenly to draw end cover (13) to housing (52). Torque capscrews to 55 ft. lbs. (75 Nm).

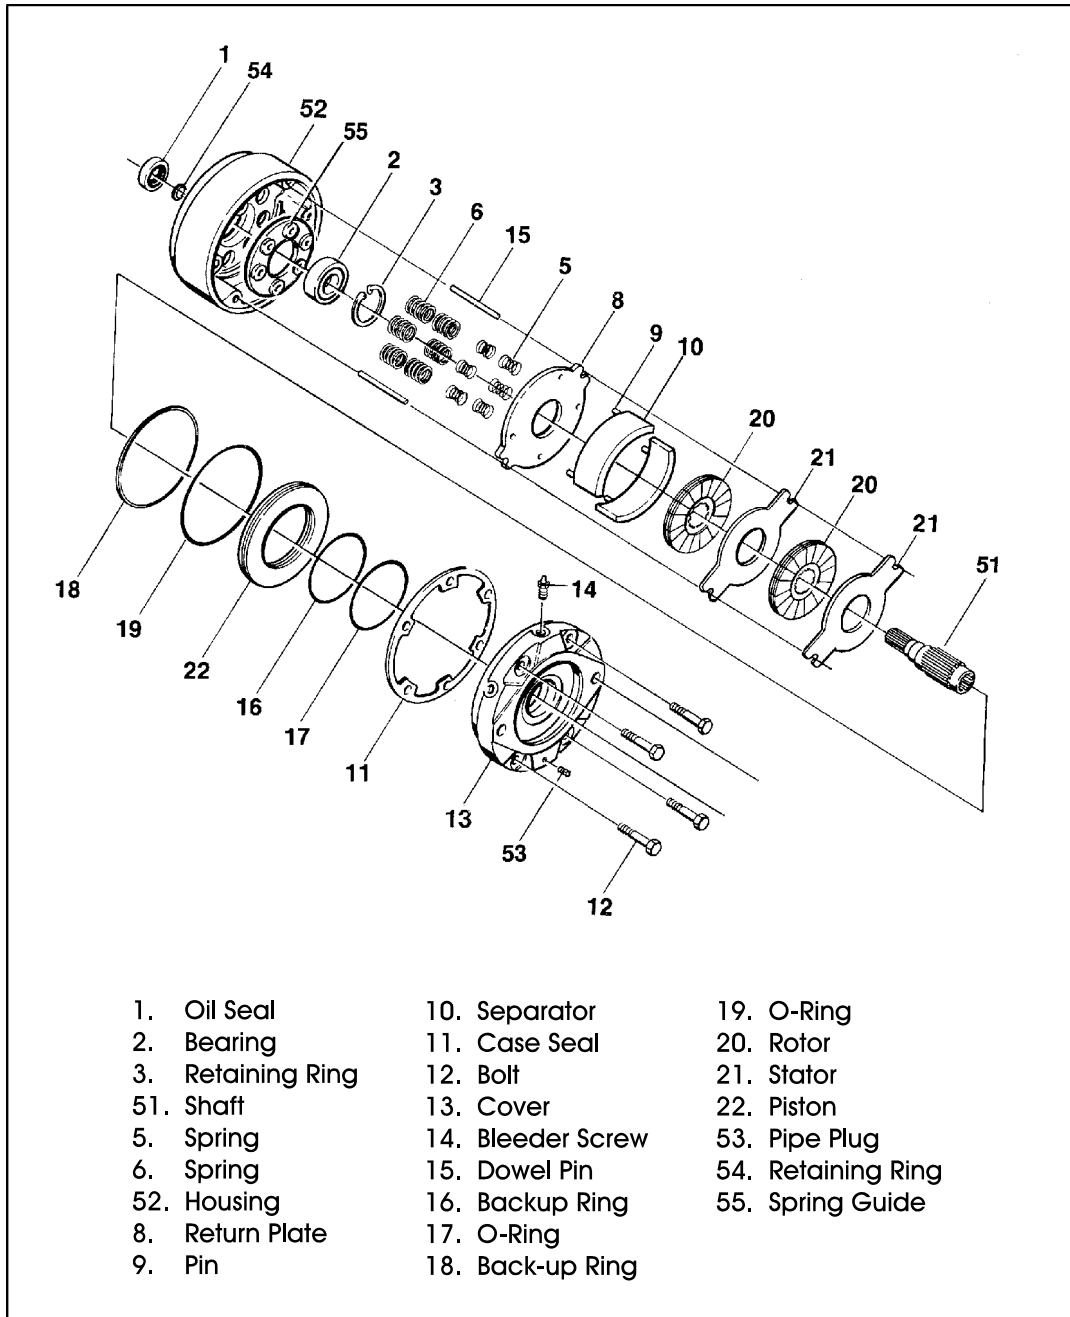


Figure 3-47. Swing Brake Assembly (Mico)

3.12 ROTARY COUPLING - S/N 81836 TO PRESENT

Use the following procedure to install the seal kit.


1. If not already removed, remove the axle oscillation valve from the cylinder barrel. The spool of the valve protrudes into the barrel and will damage the spool and seals if left in place.
2. Remove snap ring (12) from end.
3. Remove thrust ring (13) from the same end.
4. Remove center body (10) from housing (11).
5. Cut off old seals (14,15,17,18).
6. Assemble lip seals (14) in direction shown in Figure 3-49., Rotary Coupling - Sheet 2 of 2.
7. Reassemble O-ring (18).
8. Heat cap seals (17) in hydraulic oil for 5 minutes at 300° F (149° C).
9. Assemble cap seals over O-rings
10. Reinsert center body into housing (lube with hydraulic oil).
11. Replace thrust ring and snap ring.

Table 3-9. Coupling Port Information Table - 2WS

Port No.	Outlet	Port Size	Description	Operating Pressure PSI (Bar)	Proof Pressure PSI (Bar)
1	1	-8	Brake	450 (31)	675 (47)
2	2	-6	2 Speed	4500 (310)	6750 (465)
3	1	-6	Steer	2500 (172)	3750 (259)
4	1	-6	Steer	2500 (172)	3750 (259)
5	2	-6, -16	Drive Reverse	4500 (310)	6750 (465)
6	1	-16	Drive Forward	4500 (310)	6750 (465)
7	3	-8, -6	Case Drain	250 (17)	375 (26)


Table 3-10. Coupling Port Information Table - 4WS

Port No.	Outlet	Port Size	Description	Operating Pressure PSI (Bar)	Proof Pressure PSI (Bar)
1	1	-8	Brake	450 (31)	675 (47)
2	2	-6	2 Speed	4500 (310)	6750 (465)
3	1	-6	Steer	2500 (172)	3750 (259)
4	1	-6	Steer	2500 (172)	3750 (259)
5	2	-6, -16	Drive Reverse	4500 (310)	6750 (465)
6	1	-16	Drive Forward	4500 (310)	6750 (465)
7	3	-8, -6	Case Drain	250 (17)	375 (26)
8	1	-6	Steer	2500 (172)	3750 (259)
9	1	-6	Steer	2500 (172)	3750 (259)

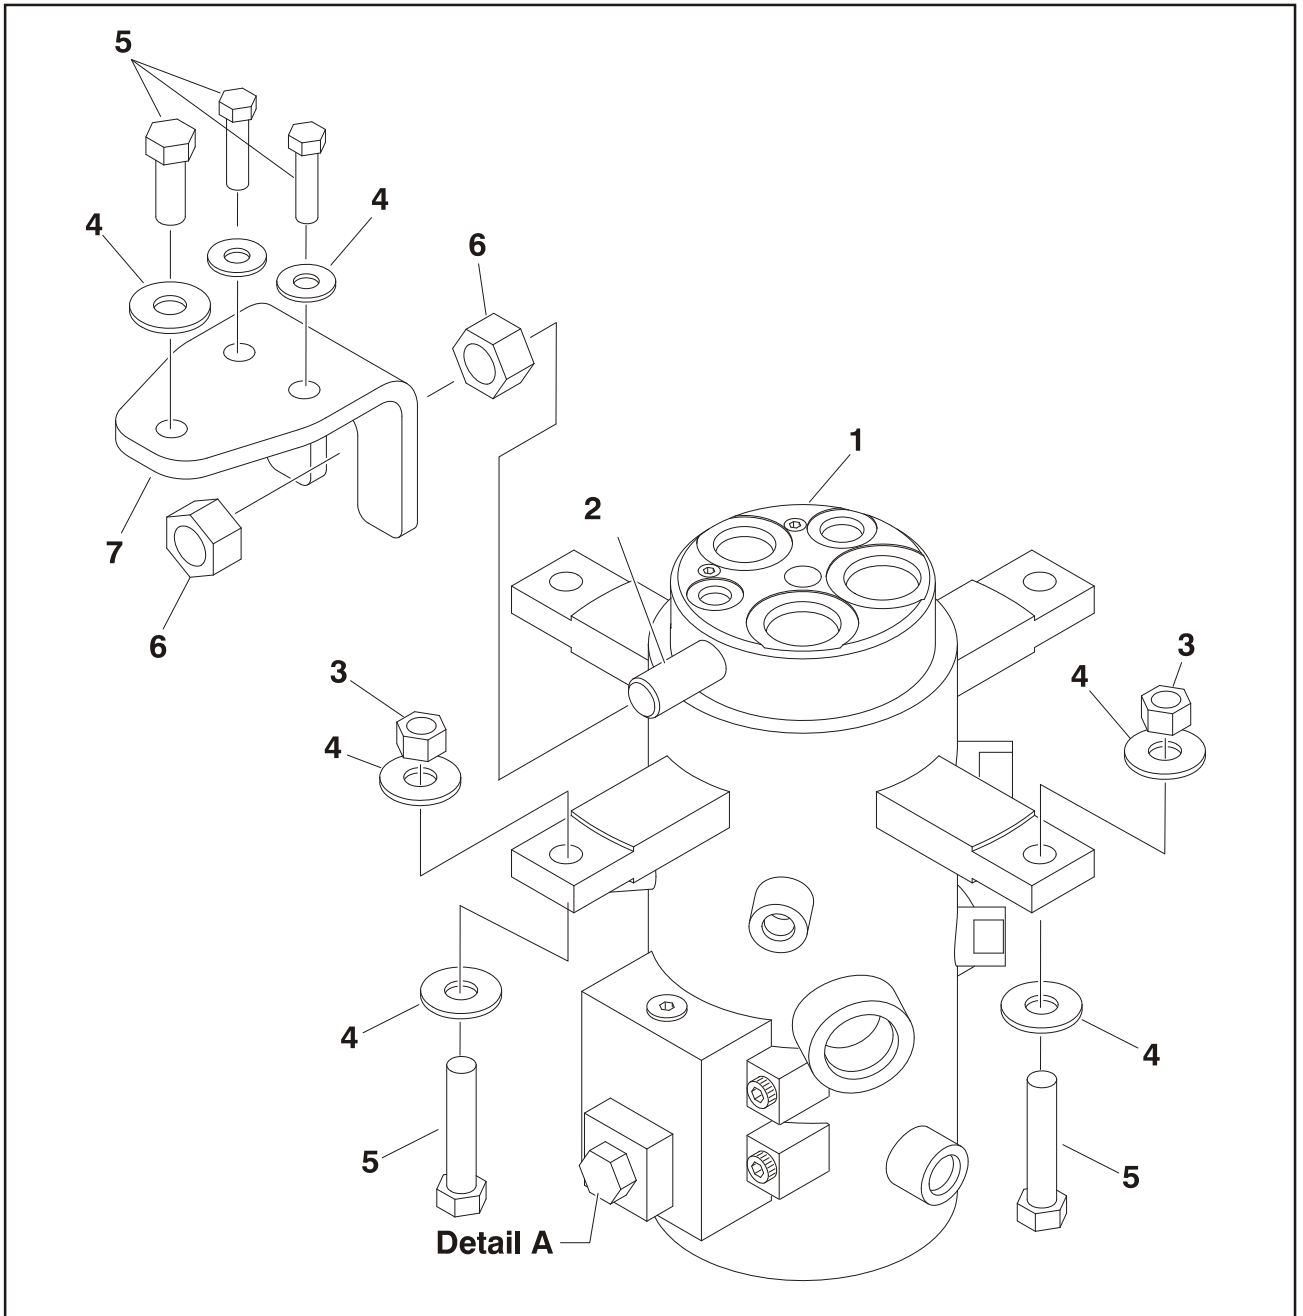

- | | |
|--------------------|------------|
| 1. Rotary Coupling | 5. Bolt |
| 2. Torque Lug | 6. Nut |
| 3. Locknut | 7. Bracket |
| 4. Flatwasher | |

Figure 3-48. Rotary Coupling - Sheet 1 of 2

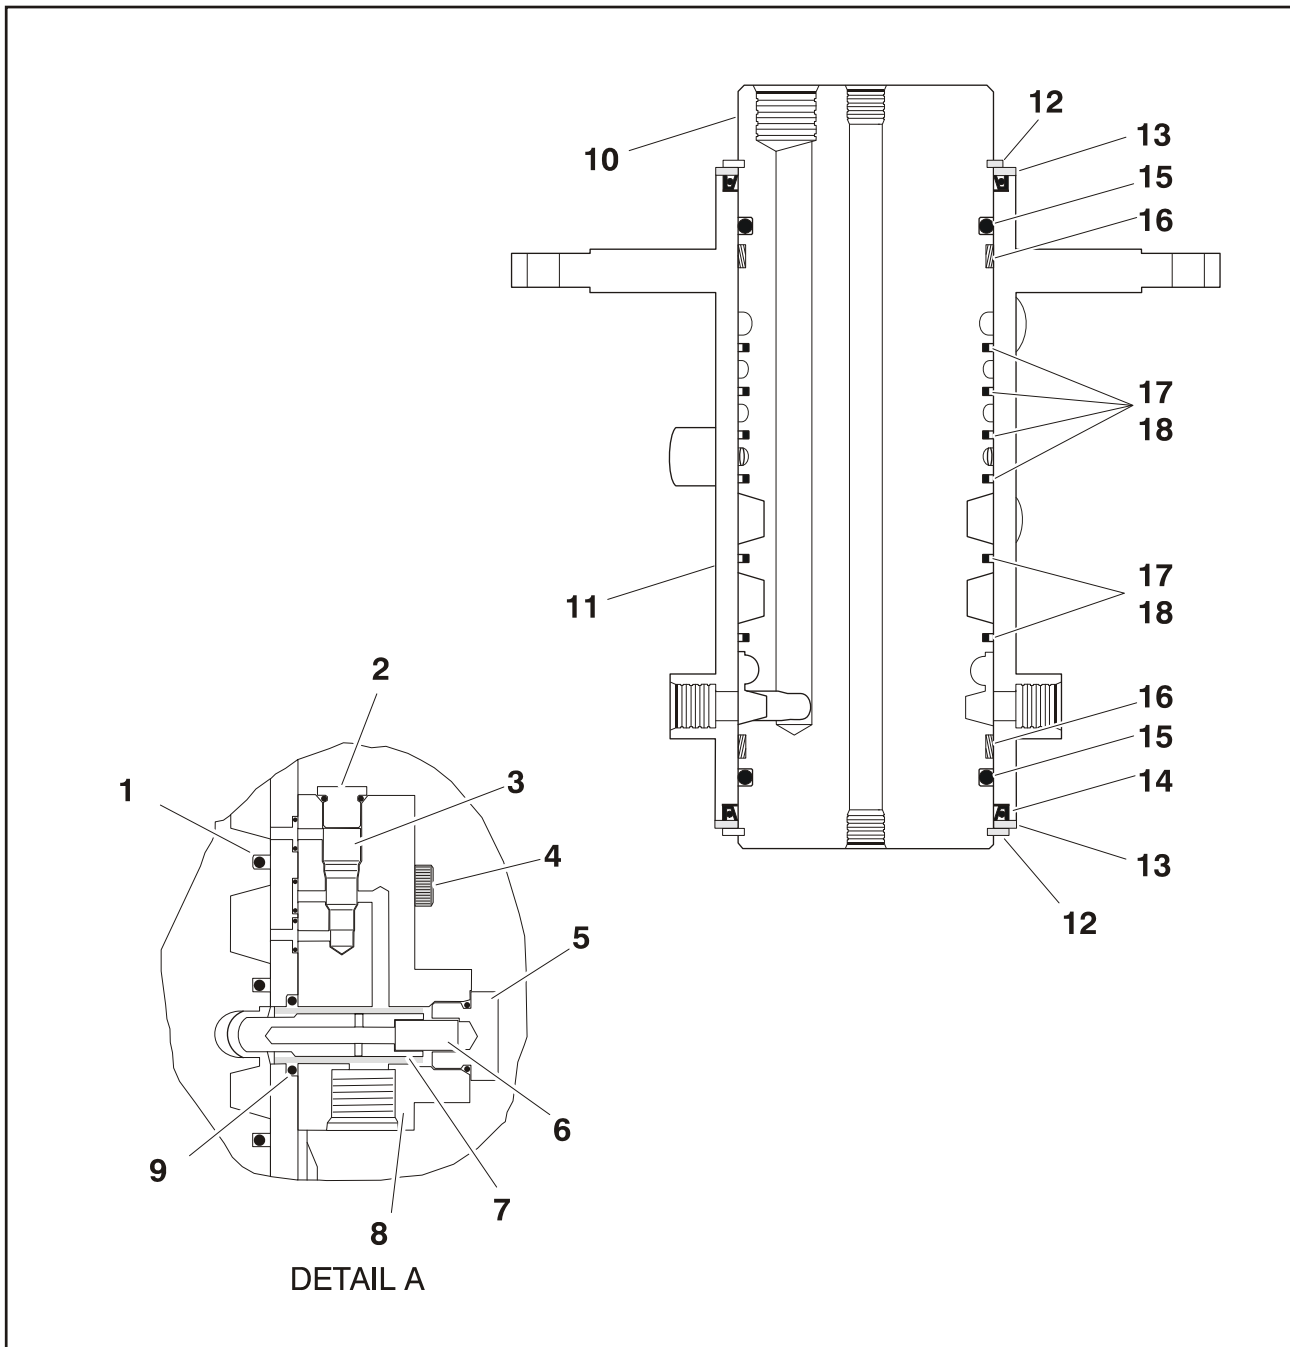

- | | | | |
|----------------|------------------------|--------------------|--------------|
| 1. O-ring | 6. Spring | 11. Housing | 16. Bearing |
| 2. Plug | 7. Valve Block Plunger | 12. Retaining Ring | 17. Cap Seal |
| 3. Check Valve | 8. Valve Block | 13. Ring | 18. O-ring |
| 4. Screw | 9. O-ring | 14. Oil Seal | |
| 5. Plug | 10. Body | 15. O-ring | |

Figure 3-49. Rotary Coupling - Sheet 2 of 2

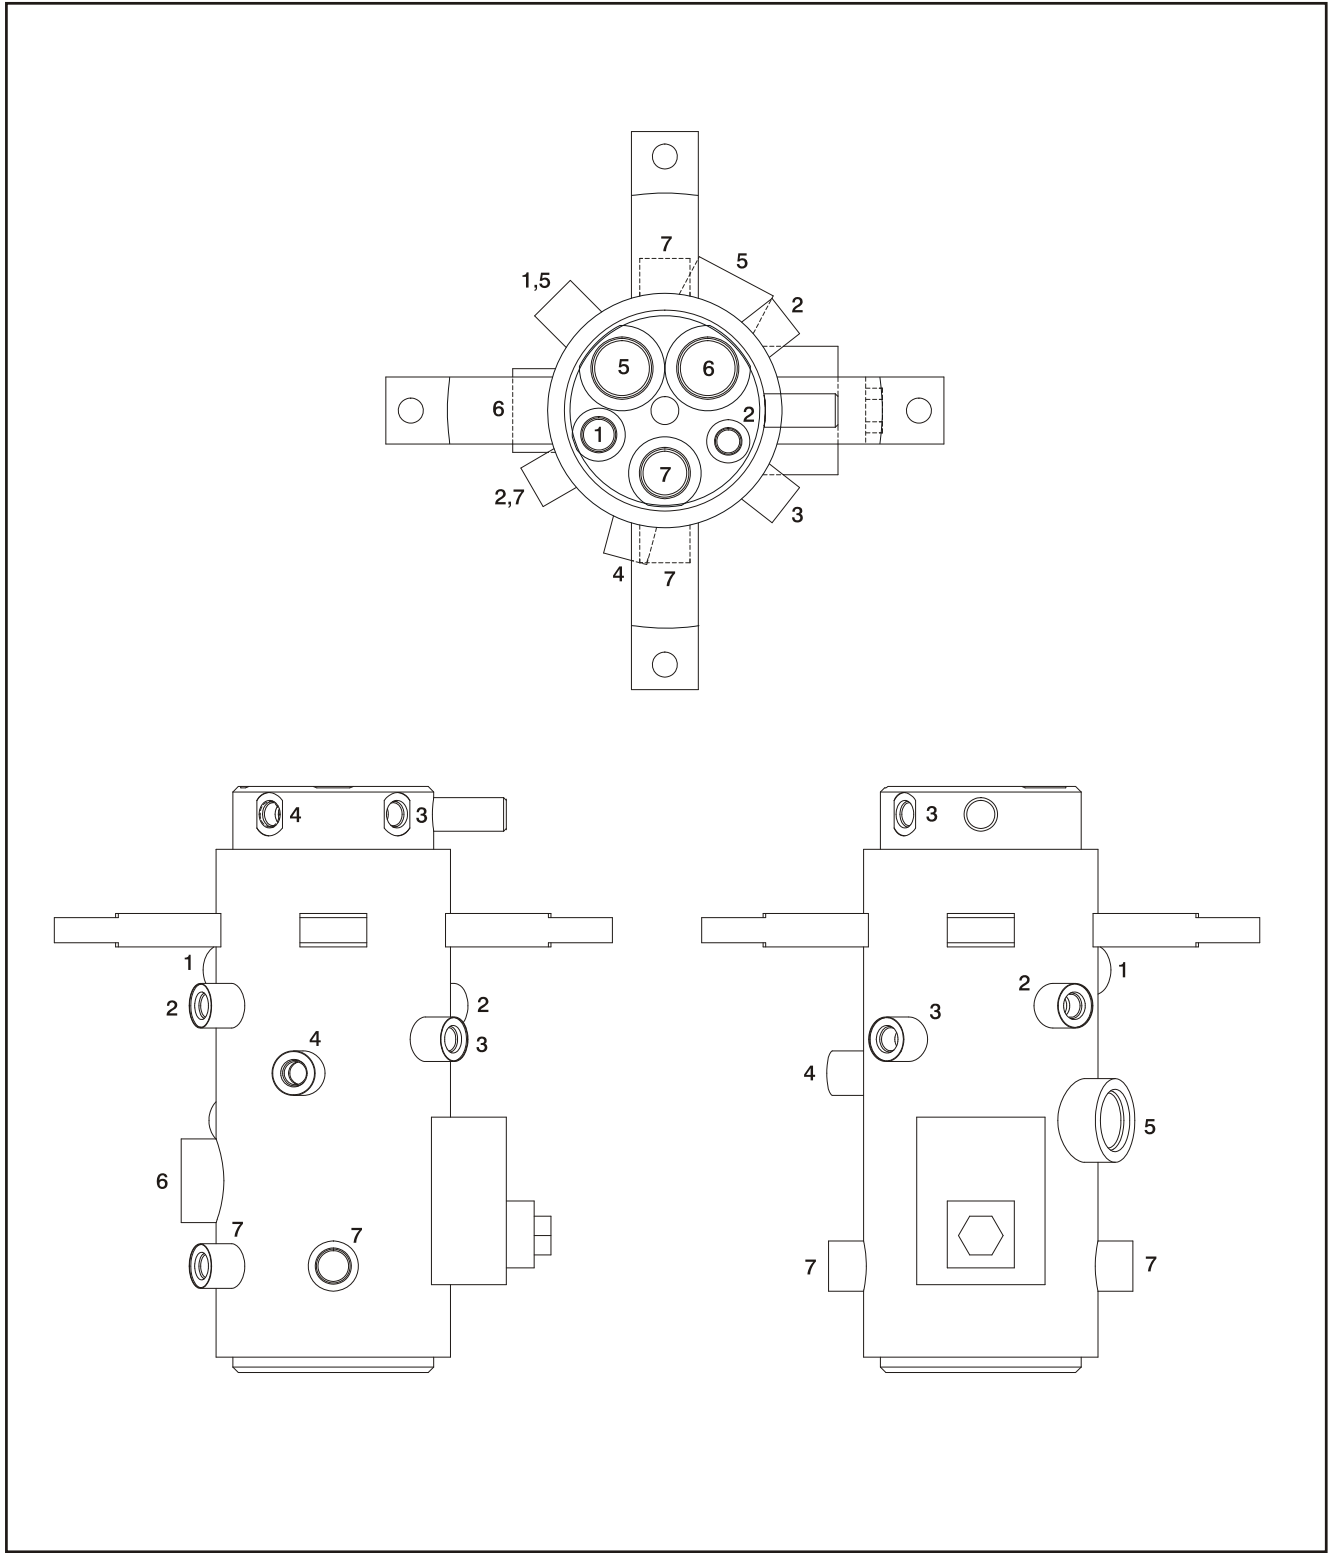


Figure 3-50. Rotary Coupling Port Location - 2WS


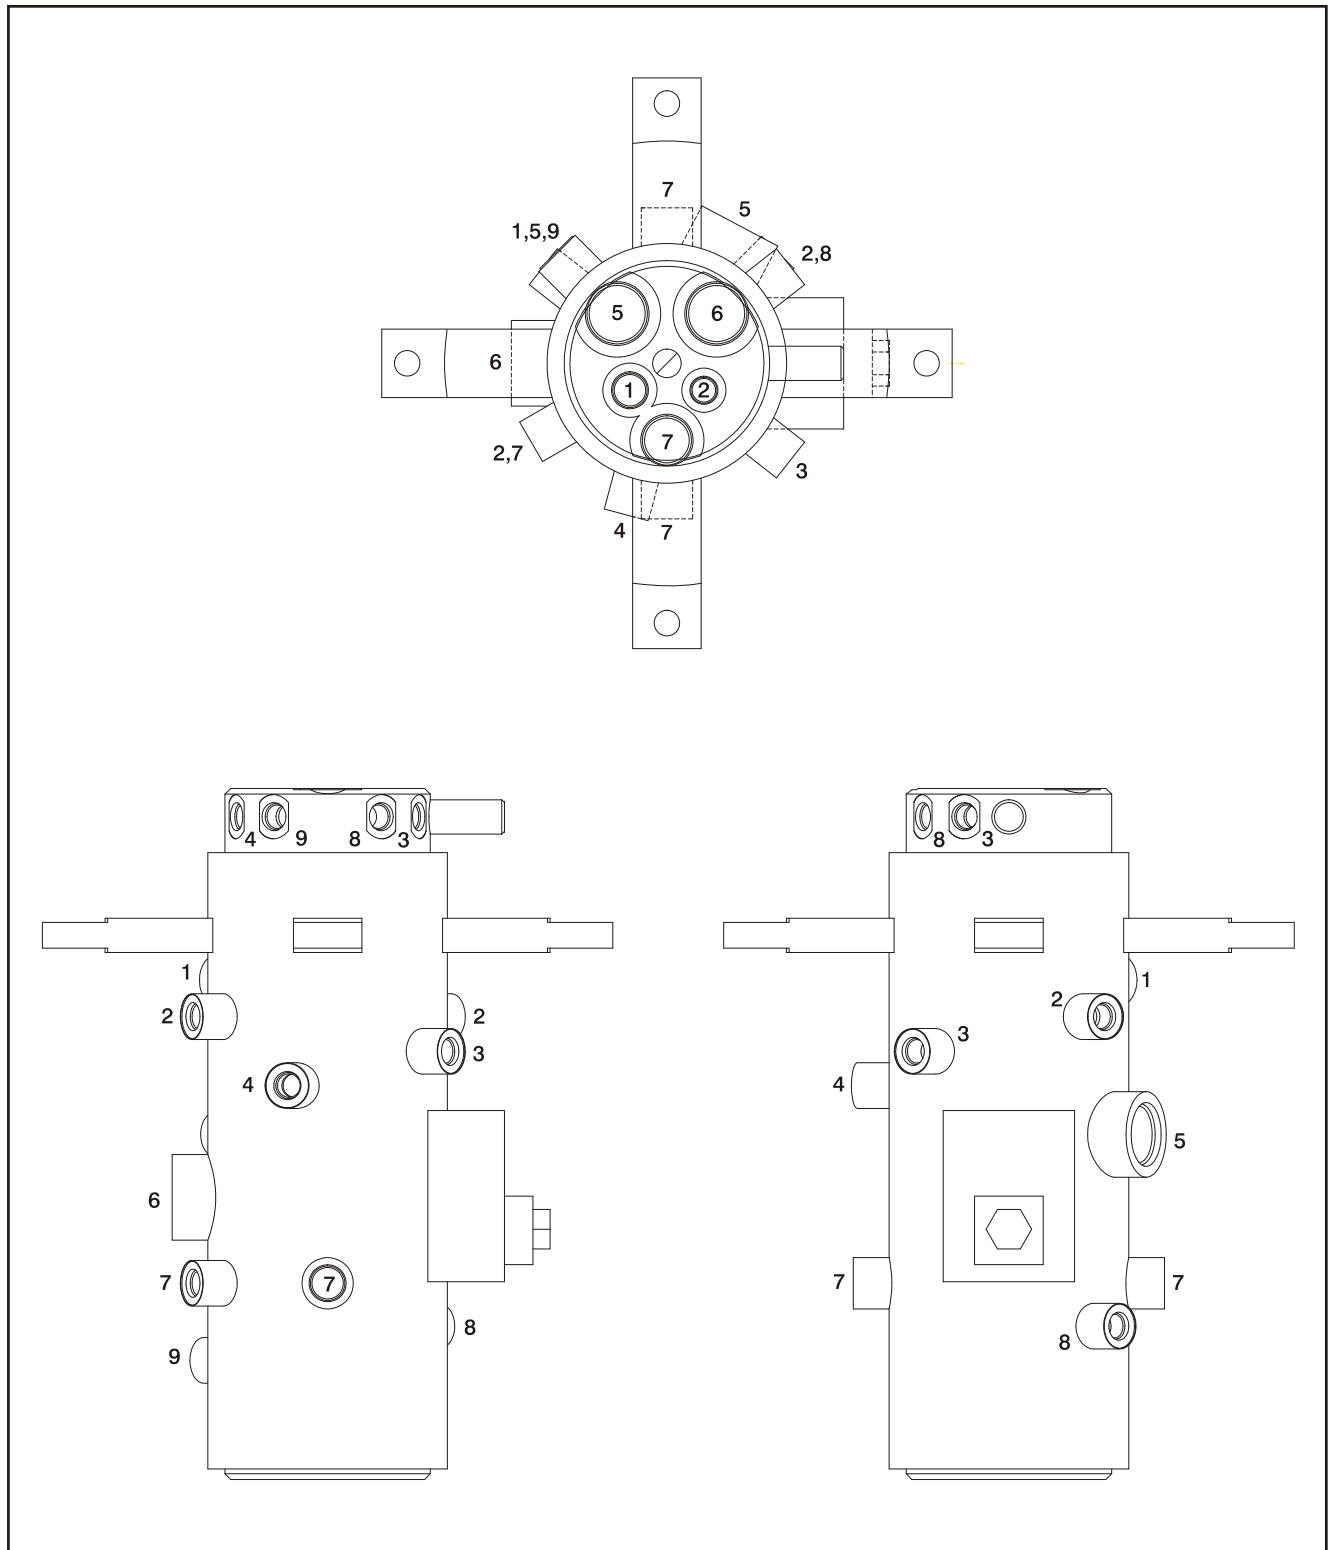


Figure 3-51. Rotary Coupling Port Location - 4WS

3.13 GENERATOR


Every 250 hours

Every 250 hours of operation, check the drive belt for proper tension.

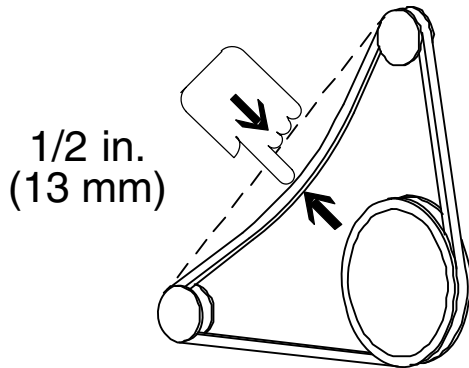


Every 500 hours

Every 500 hours of operation, service the generator brushes and slip rings. Hostile environments may require more frequent service.

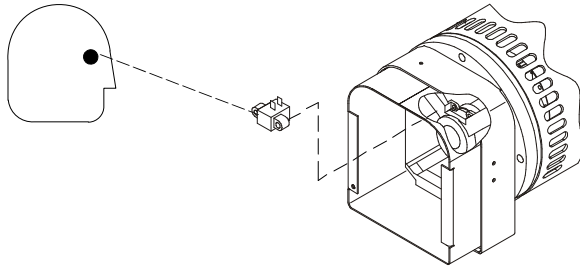

Every 500 hours of service, blow out the inside of the generator. If operating in a hostile environment, clean monthly.

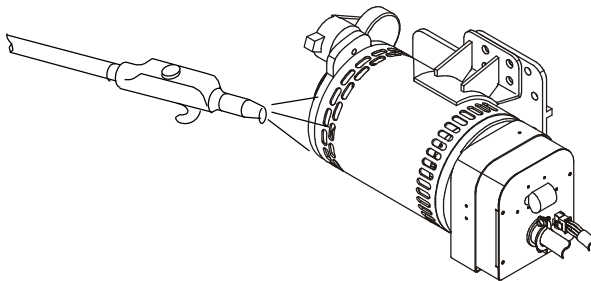


Overload Protection

CAUTION

STOP THE ENGINE WHENEVER CHECKING OR INSPECTING THE CIRCUIT BREAKER.

The circuit breaker protects the generator windings from overload. If the circuit breaker opens, generator output stops. If the circuit breaker continues to open, check for faulty equipment connected to the platform receptacles.

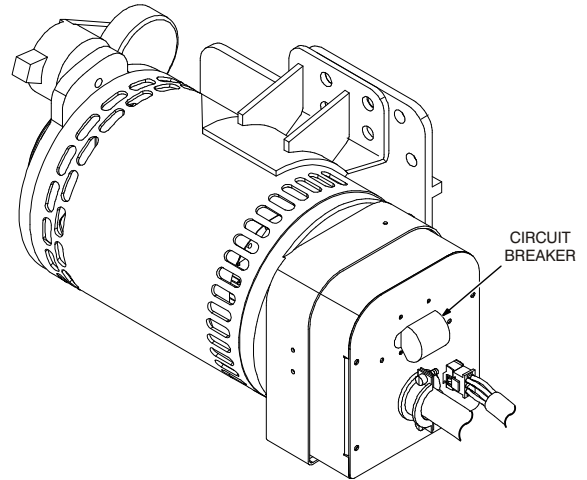

Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings

Refer to Figure 3-52., *Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings.*

INSPECTING BRUSH POSITION

Inspect brush alignment with slip rings. View alignment through the air vents in the stator barrel. The brushes must ride completely on the slip rings.

INSPECTING BRUSHES

Remove the end panel. Inspect the wires. Remove the brush holder assembly. Pull the brushes from the holders.

Replace the brushes if damaged, or if the brush is at or near minimum length.

CLEANING SLIP RINGS

Visually inspect the slip rings. Under normal use, the rings turn dark brown.

If the slip rings are corroded or their surface is uneven, remove the belt to turn the shaft by hand for cleaning.

Clean the rings with 220 grit emery paper. Remove as little material as possible. If the rings are deeply pitted and do not clean up, consult generator factory service.

Reinstall the belt, brush holder assembly, and end panel.

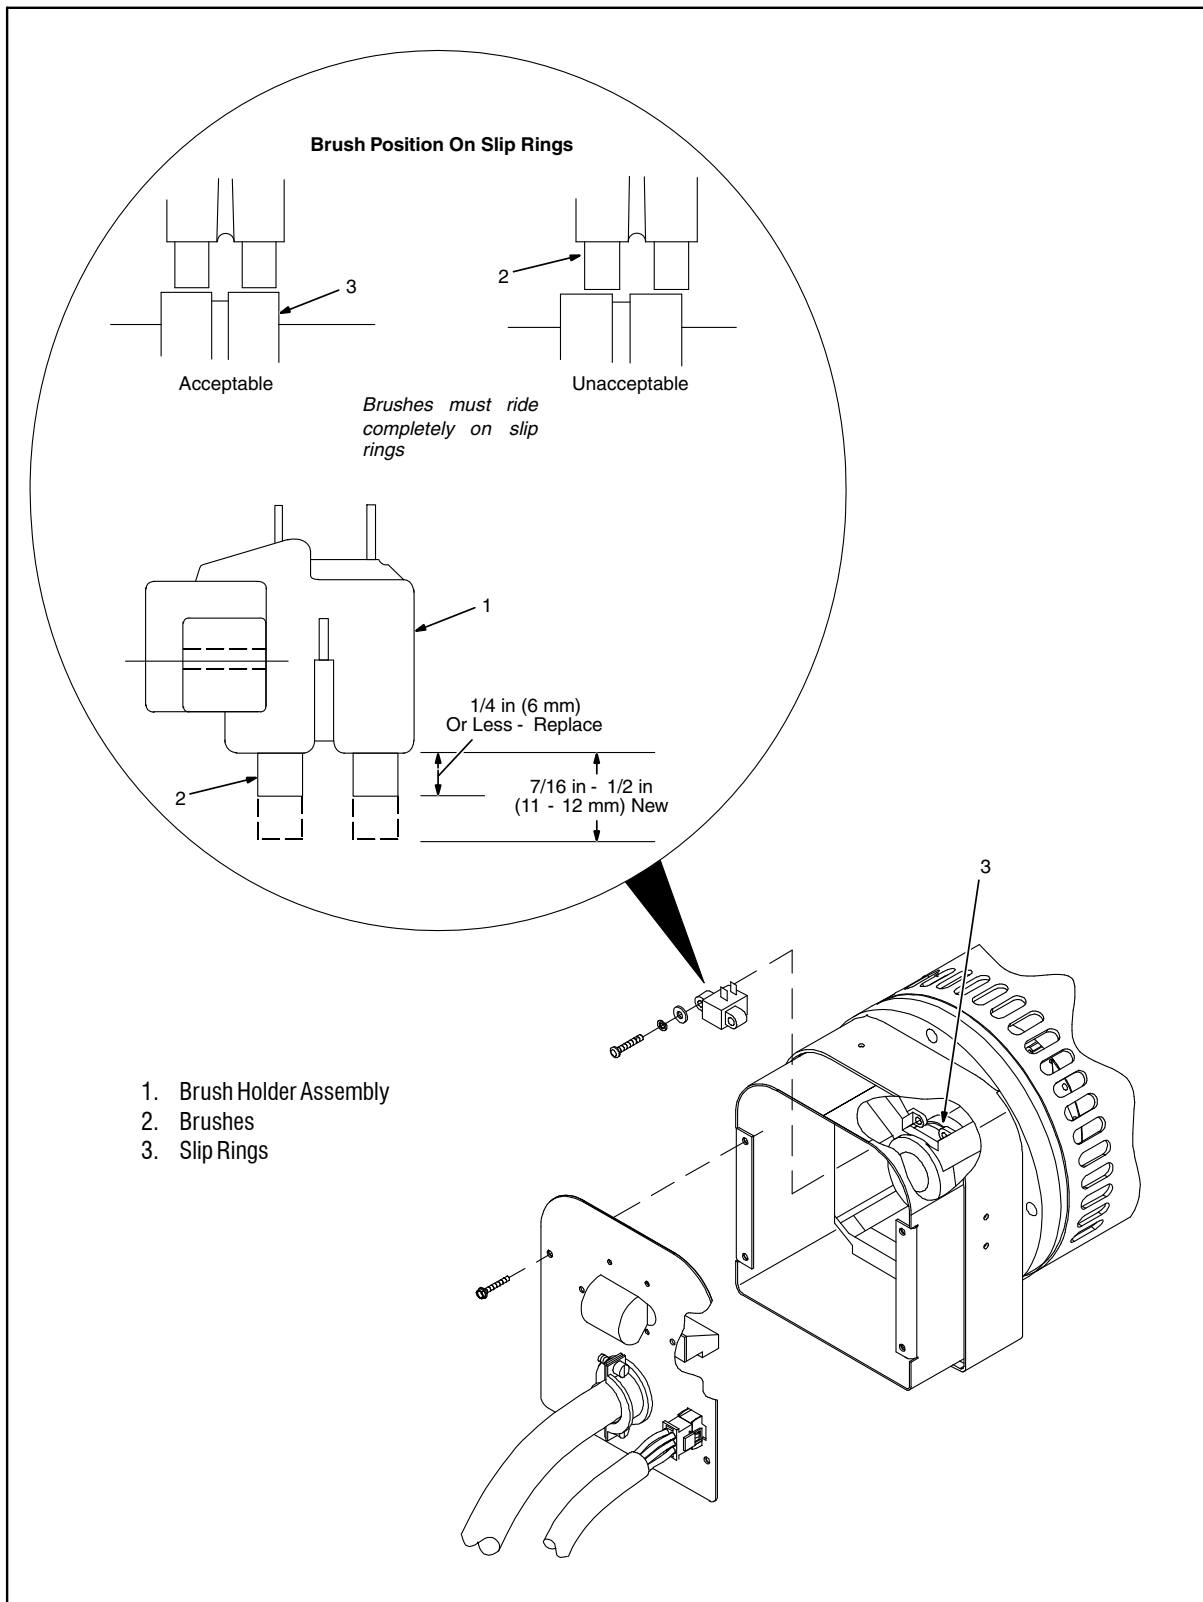


Figure 3-52. Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings

3.14 SPARK ARRESTER CLEANING INSTRUCTIONS

1. Remove the cleanout plug in the bottom of spark arrester (muffler).
2. Without causing deformation (or any type of damage to the spark arrester) repeatedly tap on the arrester near the cleanout plug. This may be enough to begin drainage of the spark trap.
3. An industrial vacuum cleaner can do a complete job at this point.
 - a. Or, IN A SAFE AREA, start the engine. Then alternate between low idle and high idle for two to three minutes.
 - b. Or, operate the engine as required by the application for two to three minutes.
4. Install the cleanout plug.

3.15 DUAL FUEL SYSTEM

CAUTION

IT IS POSSIBLE TO SWITCH FROM ONE FUEL SOURCE TO THE OTHER WITHOUT ALLOWING THE ENGINE TO STOP. EXTREME CARE MUST BE TAKEN AND THE FOLLOWING INSTRUCTIONS MUST BE FOLLOWED.

Changing from Gasoline to LP Gas

1. Start the engine from the ground control station.
2. Open the hand valve on the LP gas supply tank by turning counterclockwise.

CAUTION

BE SURE ALL GASOLINE IS EXHAUSTED BEFORE SWITCHING TO LP GAS.

3. While the engine is operating, place the three position LPG/Gasoline switch at the ground control station to the center "off" position. Allow the engine to operate without load, until the engine begins to "stumble" from lack of gasoline.
4. As the engine begins to "stumble", place the switch to the LPG position, allowing the LP fuel to be sent to the fuel regulator.

Changing from LP Gas to Gasoline

1. With engine operating on LP under a no load condition, throw the LPG/Gasoline switch at the ground control station to the "Gasoline" position.
2. If engine "stumbles" because of lack of gasoline, place the switch to the LPG position until engine regains smoothness, then return the switch to the Gasoline position. Repeat as necessary until engine runs smoothly on gasoline.
3. Close the hand valve on the LP gas supply tank by turning clockwise.

3.16 FORD EFI ENGINE

Performing Diagnostics

1. Verify the complaint and determine if it is a deviation from normal operation.
2. Once the complaint has been verified, preliminary checks can be done. Conduct a thorough visual inspection, be alert for unusual sounds or odors, and gather diagnostic trouble code information.
3. Perform a system check that will verify the proper operation of the system in question and check for recent information updates.
4. If a diagnostic trouble code (DTC) is stored, contact a JLG distributor to make an effective repair.
5. If no DTC is stored, select the symptom from the symptom tables and follow the diagnostic path or suggestions to complete the repair.
6. After the repair has been made and validated for proper operation, the old part should be momentarily re-installed to verify that it was indeed the source of the problem.

If no matching symptom is available, analyze the complaint and develop a plan for diagnostics utilizing the wiring diagrams, technical assistance, and repair history.

Intermittent conditions may be resolved by using a check sheet to pinpoint the circuit or electrical system component. Some diagnostic charts contain Diagnostic Aids which give additional information about a system. Be sure to use all of the information that is available to you.

VISUAL/PHYSICAL ENGINE INSPECTION CHECK

Perform a careful visual and physical engine inspection before performing any diagnostic procedure. Perform all necessary repairs before proceeding with additional diagnosis, this can often lead to repairing a problem without performing unnecessary steps. Use the following guidelines when performing a visual/physical inspection check:

- Inspect engine for modifications or aftermarket equipment that can contribute to the symptom; verify that all electrical and mechanical loads or accessory equipment is "OFF" or disconnected before performing diagnosis.
- Inspect engine fluids for correct levels and evidence of leaks.
- Inspect vacuum hoses for damage, leaks, cracks, kinks and improper routing, inspect intake manifold sealing surface for a possible vacuum leak.
- Inspect PCV valve for proper installation and operation.
- Inspect all wires and harnesses for proper connections and routing; bent or broken connector pins; burned, chafed, or pinched wires; and corrosion. Verify that harness grounds are clean and tight.
- Inspect engine control module (ECM), sensors, and actuators for physical damage.
- Inspect ECM grounds for cleanliness, tightness, and proper location.
- Inspect fuel system for adequate fuel level, and fuel quality (concerns such as proper octane, contamination, winter/summer blend).
- Inspect intake air system and air filter for restrictions.
- Inspect battery condition and starter current draw.

If no evidence of a problem is found after visual/physical engine check has been performed, proceed to MIL DTC retrieval procedure.

ECM AND SENSORS

CRANKSHAFT POSITION (CKP) SENSOR

The crankshaft position (CKP) sensor provides a signal used by the engine control module (ECM) to calculate the ignition sequence. The CKP sensor initiates the reference pulses which the ECM uses to calculate RPM and crankshaft position.

CAMSHAFT POSITION (CMP) SENSOR AND SIGNAL

The camshaft position (CMP) sensor sends a CMP signal to the ECM. The ECM uses this signal as a "sync pulse" to trigger the injectors in the proper sequence. The ECM uses the CMP signal to indicate the position of the #1 piston during its power stroke. The CMP uses a Hall Effect sensor to measure piston position. This allows the ECM to calculate true sequential fuel injection (SFI) mode of operation. If the ECM detects an incorrect CMP signal while the engine is running, DTC 53 will set. If the CMP signal is lost while the engine is running, the fuel injection system will shift to a calculated sequential fuel injection mode based on the last fuel injection pulse, and the engine will continue to run. As long as the fault is present, the engine can be restarted. It will run in the previously established injection sequence.

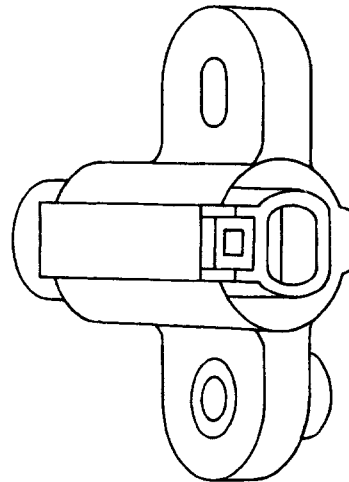



Table 3-11. ECM Diagnostic Trouble Codes

Diagnostic Trouble Code	Description
11	All Systems OK
12	Throttle Position (TP) Sensor Low Voltage
14	Manifold Absolute Pressure (MAP) Low Voltage
21	Overspeed
22	Throttle Position (TP) Sensor High Voltage
24	Manifold Absolute Pressure (MAP) High Voltage
31	Fuel Pump Low Voltage
32	Heated Oxygen Sensor (HO2S) Low Voltage
33	Engine Coolant Temperature (ECT) Sensor High Voltage
35	Intake Air Temperature (IAT) Sensor High Voltage
41	Fuel Pump High Voltage
42	Heated Oxygen Sensor (HO2S) High Voltage
43	Engine Coolant Temperature (ECT) Sensor Low Voltage
45	Intake Air Temperature (IAT) Sensor Low Voltage
51	Low Oil Pressure
52	Crankshaft Position (CKP) Sensor Extra/Missing Pulses
53	Camshaft Position Sensor (CMP) Sensor Illegal Pattern
54	Engine Control Module (ECM) Fault Illegal Operation
55	Engine Control Module (ECM) Fault Illegal Interruption
56	Engine Control Module (ECM) Fault COP (Computer Operating Properly) Failure
61	System Voltage Low
62	System Voltage High

ENGINE COOLANT TEMPERATURE (ECT) SENSOR

The engine coolant temperature (ECT) sensor is a g thermistor (a resistor which changes value based on temperature) mounted in the engine coolant stream. Low coolant temperature produces a high resistance of 100,000 ohms at -40°C (-40°F). High temperature causes a low resistance of 70 ohms at 130°C (266°F). The ECM supplies a 5-volt signal to the ECT sensor through resistors in the ECM and measures the voltage. The signal voltage will be high when the engine is cold and low when the engine is hot. By measuring the voltage, the ECM calculates the engine coolant temperature. Engine coolant temperature affects most of the systems that the ECM controls.

After engine start-up, the temperature should rise steadily to about 85°C (185°F). It then stabilizes when the thermostat opens. If the engine has not been run for several hours (overnight), the engine coolant temperature and intake air temperature displays should be close to each other. A fault in the engine coolant sensor circuit will set DTC 33 or DTC 43.

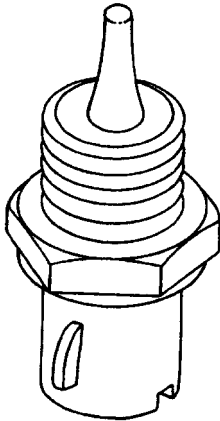

ELECTRICALLY ERASABLE PROGRAMMABLE READ ONLY MEMORY (EEPROM)

The electrically erasable programmable read only memory (EEPROM) is a permanent memory chip that is located within the ECM. The EEPROM contains the program and the calibration information that the ECM needs to control engine operations.

If the ECM is replaced, the new ECM will need to be programmed. An IBM-compatible computer and software containing the correct program and calibration for the application are required to program the ECM.


HEATED OXYGEN SENSOR

The heated oxygen sensor is mounted in the exhaust stream where it can monitor the oxygen content of the exhaust gas. The oxygen present in the exhaust gas reacts with the sensor to produce a voltage output. This voltage should constantly fluctuate from approximately 100 mV to 900 mV. The heated oxygen sensor voltage can be monitored on an IBM PC-compatible computer with diagnostic software. By monitoring the voltage output of the oxygen sensor, the ECM calculates the pulse width command for the injectors to produce the proper combustion chamber mixture.

Low HO₂S voltage indicates a lean mixture which will result in a rich command to compensate.

High HO₂S voltage indicates a rich mixture which will result in a lean command to compensate.

A constant voltage below 200 mV for 10 consecutive seconds will set OTC 32. A constant voltage above 650 mV for 10 consecutive seconds will set OTC 42.

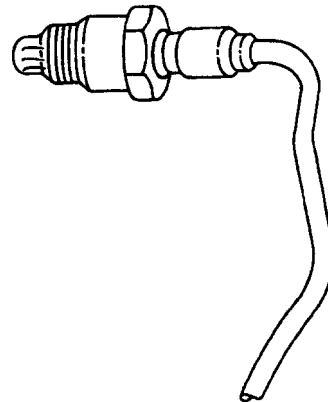


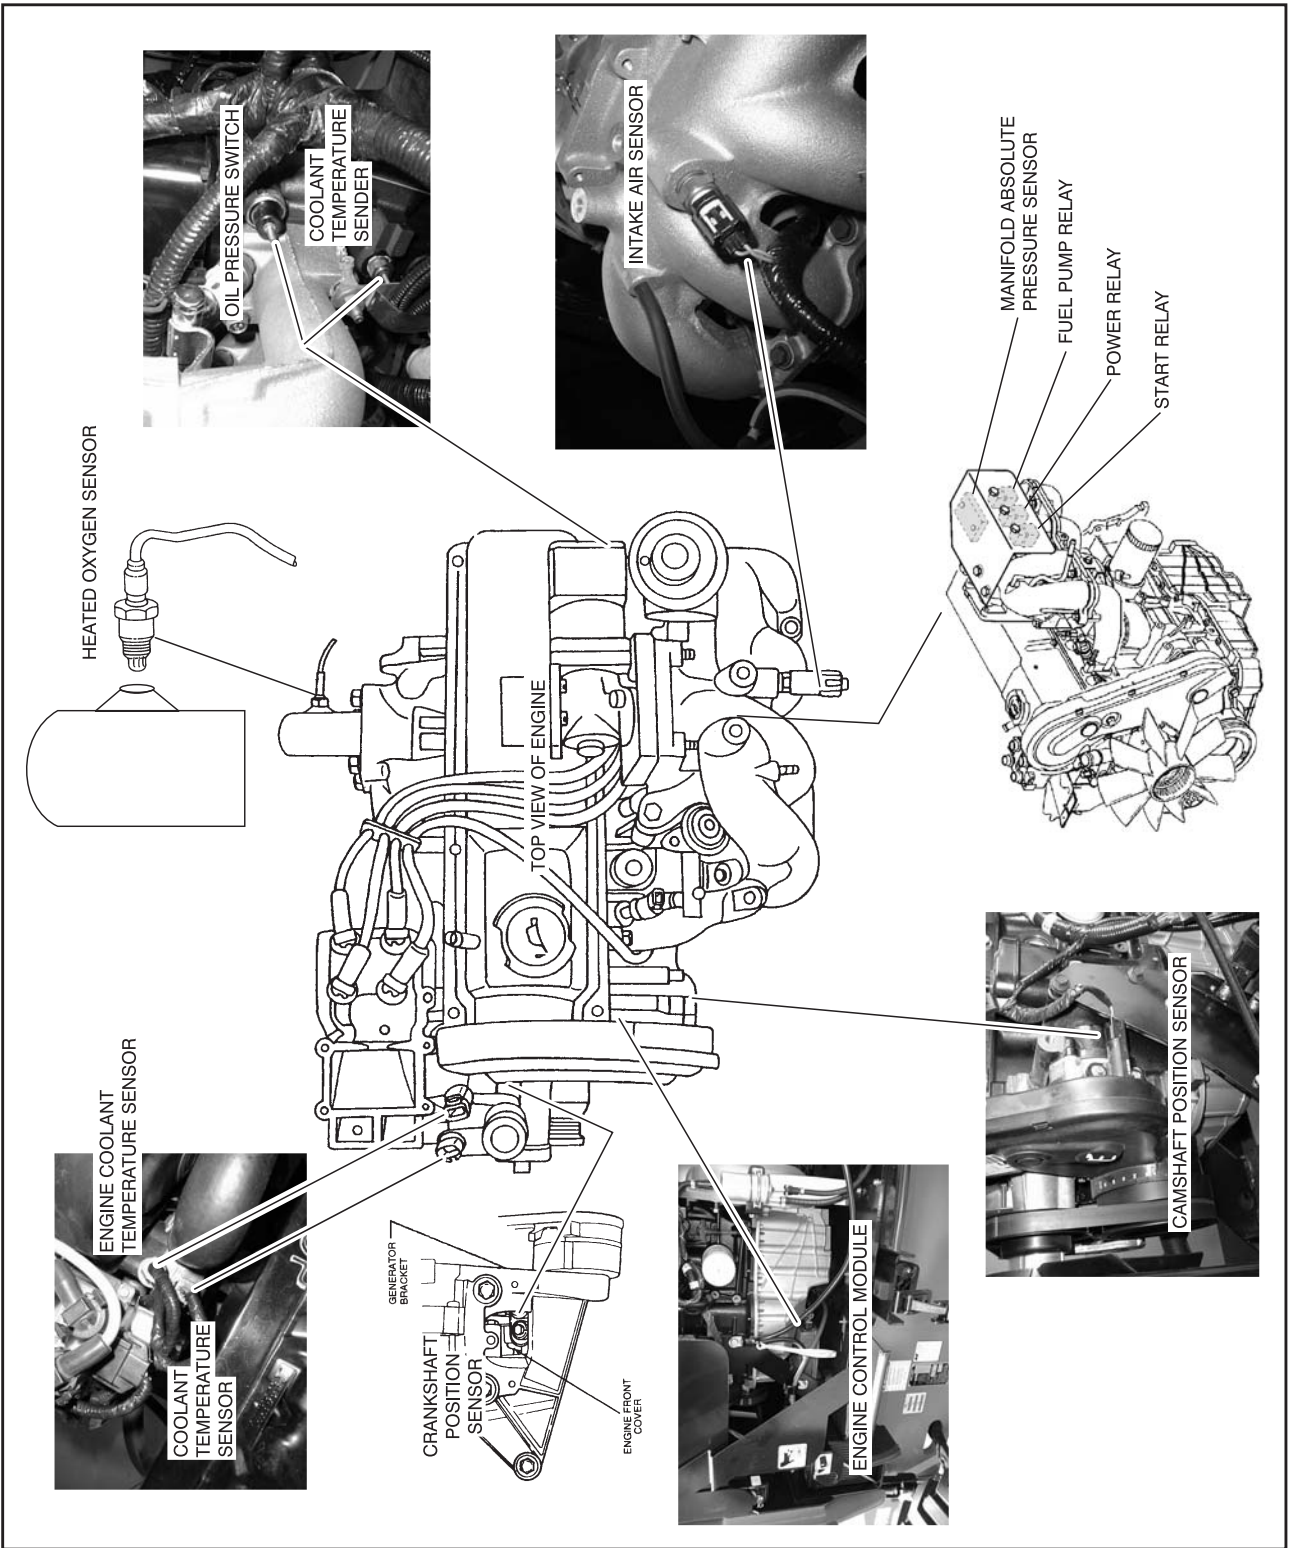


Figure 3-53. EFI Component Location

INTAKE AIR TEMPERATURE (IAT) SENSOR

The intake air temperature (IAT) sensor is a thermistor which changes its resistance based on the temperature of air entering the engine. Low temperature produces a high resistance of 100,000 ohms at -40°C (-40°F). High temperature causes a low resistance of 70 ohms at 130°C (266°F). The ECM supplies a 5-volt signal to the sensor through a resistor in the ECM and monitors the signal voltage. The signal voltage will be high when the incoming air is cold and low when the incoming air is hot. By measuring the voltage, the ECM calculates the incoming air temperature. The IAT sensor signal is used to adjust spark timing according to the incoming air density. An IBM PC-compatible computer with diagnostic software can be used to display the temperature of the air entering the engine. The temperature should read close to the ambient air temperature when the engine is cold, and rise as engine compartment temperature increases. If the engine has not been run for several hours (overnight), the IAT sensor temperature and engine coolant temperature should read close to each other. A failure in the IAT sensor circuit will set DTC 35 or DTC 45.

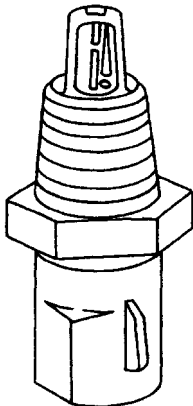


MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the ECM varies from below 2 volts at idle (high vacuum) to above 4 volts with the ignition ON, engine not running or at wide-open throttle (low vacuum).

The MAP sensor is used to determine the following:

- Engine vacuum level for engine control purposes.
- Barometric pressure (BARO)

If the ECM detects a voltage that is significantly lower than the estimated MAP value for 2 or more consecutive seconds, DTC 14 will be set. A signal voltage significantly higher than the estimated MAP value for 2 or more consecutive seconds will set DTC 24.

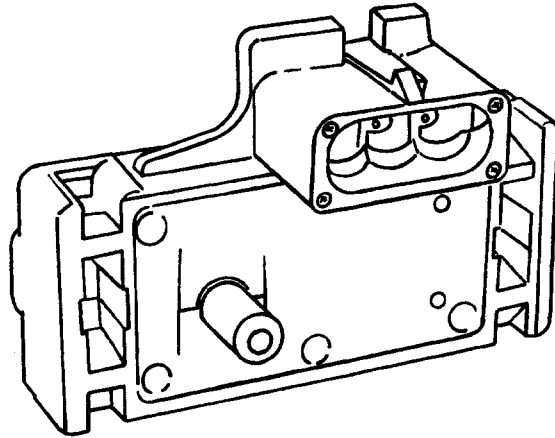

ENGINE CONTROL MODULE (ECM)


The ECM controls the following:

- Fuel metering system
- Ignition timing
- On-board diagnostics for engine functions

The ECM constantly observes the information from various sensors. The ECM controls the systems that affect engine performance. The ECM performs the diagnostic function of the system. It can recognize operational problems, alert the operator through the Malfunction Indicator Lamp (MIL), and store diagnostic trouble codes (DTCs). DTCs identify the problem areas to aid the technician in making repairs.

The ECM supplies either 5 or 12 volts to power various sensors or switches. The power is supplied through resistances in the ECM which are so high in value that a test light will not light when connected to the circuit. In some cases, even an ordinary shop voltmeter will not give an accurate reading because its resistance is too low. Therefore, a digital voltmeter with at least 10 meg ohms input impedance is required to ensure accurate voltage readings. The ECM controls output circuits such as the fuel injectors, electronic governor, etc., by controlling the ground or the power feed circuit through transistors or other solid state devices.

The ECM is designed to maintain exhaust emission levels to government mandated standards while providing excellent operation and fuel efficiency. The ECM monitors numerous engine functions via electronic sensors such as the throttle position (TP) sensor and the heated oxygen sensor (HO2S).

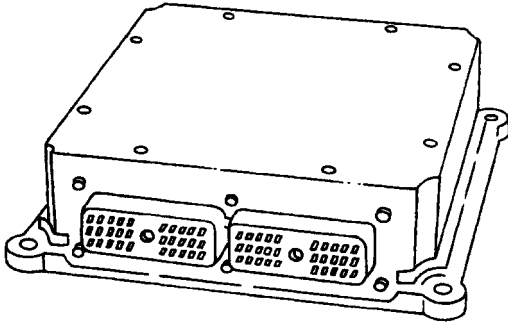

ECM INPUTS/OUTPUTS

Inputs—Operating Conditions

- Engine Coolant Temperature
- Crankshaft Position
- Exhaust Oxygen Content
- Manifold Absolute Pressure
- Battery Voltage
- Throttle Position
- Fuel Pump Voltage
- Intake Air Temperature
- Camshaft Position

Outputs - System Controlled

- Fuel Control
- Idle Air Control
- Electric Fuel Pump
- Diagnostics:
 - Malfunction Indicator Lamp
 - Data Link Connector (DLC)

ECM SERVICE PRECAUTIONS

The ECM is designed to withstand normal current draws associated with engine operation. When servicing the ECM, observe the following guidelines:


- Do not overload any circuit.
- Do not probe wires for testing. This can cause a voltage drop that would be critical to the operation of the ECM.
- When testing for opens and shorts, do not ground or apply voltage to any of the ECM's circuits unless instructed to do so.

- When measuring voltages, use only a digital voltmeter with an input impedance of at least 10 megohms.
- Do not jump start with more than 12 volts. This could cause damage to the electronic components.
- Do not employ any non-standard practices such as charging the battery with an arc welder.
- Take proper precautions to avoid static damage to the ECM. Refer to "Electrostatic Discharge Damage" for more information.

THROTTLE POSITION (TP) SENSOR

The throttle position (TP) sensor is a potentiometer connected to the throttle shaft on the throttle body which is built into the electronic governor. The ECM monitors the voltage on the signal line and calculates throttle position. As the throttle valve angle is changed, the TP sensor signal also changes. At a closed throttle position, the output of the TP sensor is low. As the throttle valve opens, the output increases so that at wide open throttle (WOT), the output voltage should be above 4 volts.

The ECM calculates fuel delivery based on throttle valve angle (operator demand). A broken or loose TP sensor may cause intermittent bursts of fuel from an injector and unstable idle because the ECM thinks the throttle is moving. A hard failure in the TP sensor 5-Volt reference or signal circuits for greater than 2 consecutive seconds will set either a DTC 12 or DTC 22. A hard failure with the TP sensor ground circuit for more than two consecutive seconds may set DTC 22. If either DTC 12 or DTC 22 are set, the throttle will be forced to a 6% (idle) position.

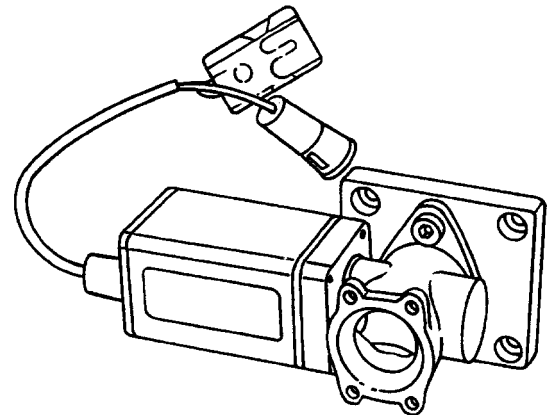

USE OF CIRCUIT TESTING TOOLS

Do not use a test light to diagnose the engine electrical systems unless specifically instructed by the diagnostic procedures. A test light can put an excessive load on an ECM circuit and result in component damage. For voltage measurements, use only a digital voltmeter with an input impedance of at least 10 megohms.

ELECTROSTATIC DISCHARGE DAMAGE

Electronic components used in the ECM are often designed to carry very low voltage. Electronic components are susceptible to damage caused by electrostatic discharge. Less than 100 volts of static electricity can cause damage to some electronic components. By comparison, it takes as much as 4000 volts for a person to feel the spark of a static discharge.

There are several ways for a person to become statically charged. The most common methods of charging are by friction and induction.

An example of charging by friction is a person sliding across a seat.

Charge by induction occurs when a person with well-insulated shoes stands near a highly charged object and momentarily touches ground. Charges of the same polarity are drained off, leaving the person highly charged with the opposite polarity. Static charges can cause damage, therefore it is important to use care when handling and testing electronic components.

To prevent possible electrostatic discharge damage, follow these guidelines:

- Do not touch the ECM connector pins or soldered components on the ECM board.
- Do not open the replacement part package until the part is ready to be installed.
- Before removing the part from the package, ground the package to a known good ground on the equipment.
- If the part has been handled while sliding across a seat, while sitting down from a standing position, or while walking a distance, touch a known good ground before installing the part.


Fuel System

FUEL INJECTOR

The Electronic Fuel Injection (EFI) fuel injector is a solenoid-operated device controlled by the ECM. The ECM energizes the solenoid, which opens a valve to allow fuel delivery.

The fuel is injected under pressure in a conical spray pattern at the opening of the intake valve. Excess fuel not used by the injectors passes through the fuel pressure regulator before being returned to the fuel tank.

A fuel injector which is stuck partly open will cause a loss of fuel pressure after the engine is shut down, causing long crank times.

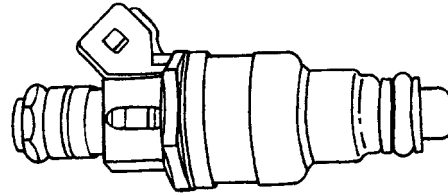

FUEL METERING SYSTEM COMPONENTS

The fuel metering system is made up of the following parts:

- The fuel injectors
- The fuel rail
- The fuel pressure regulator/filter assembly
- The electronic governor
- The ECM
- The crankshaft position (CKP) sensor
- The camshaft position (CMP) sensor
- The fuel pump
- The fuel pump relay

BASIC SYSTEM OPERATION

The fuel metering system starts with the fuel in the fuel tank. The fuel is drawn up to the fuel pump through a pre-filter. The electric fuel pump then delivers the fuel to the fuel rail through an in-line fuel filter. The pump is designed to provide fuel at a pressure above the pressure needed by the injectors. A fuel pressure regulator in the fuel filter assembly keeps fuel available to the fuel injectors at a constant pressure. A return line delivers unused fuel back to the tank.

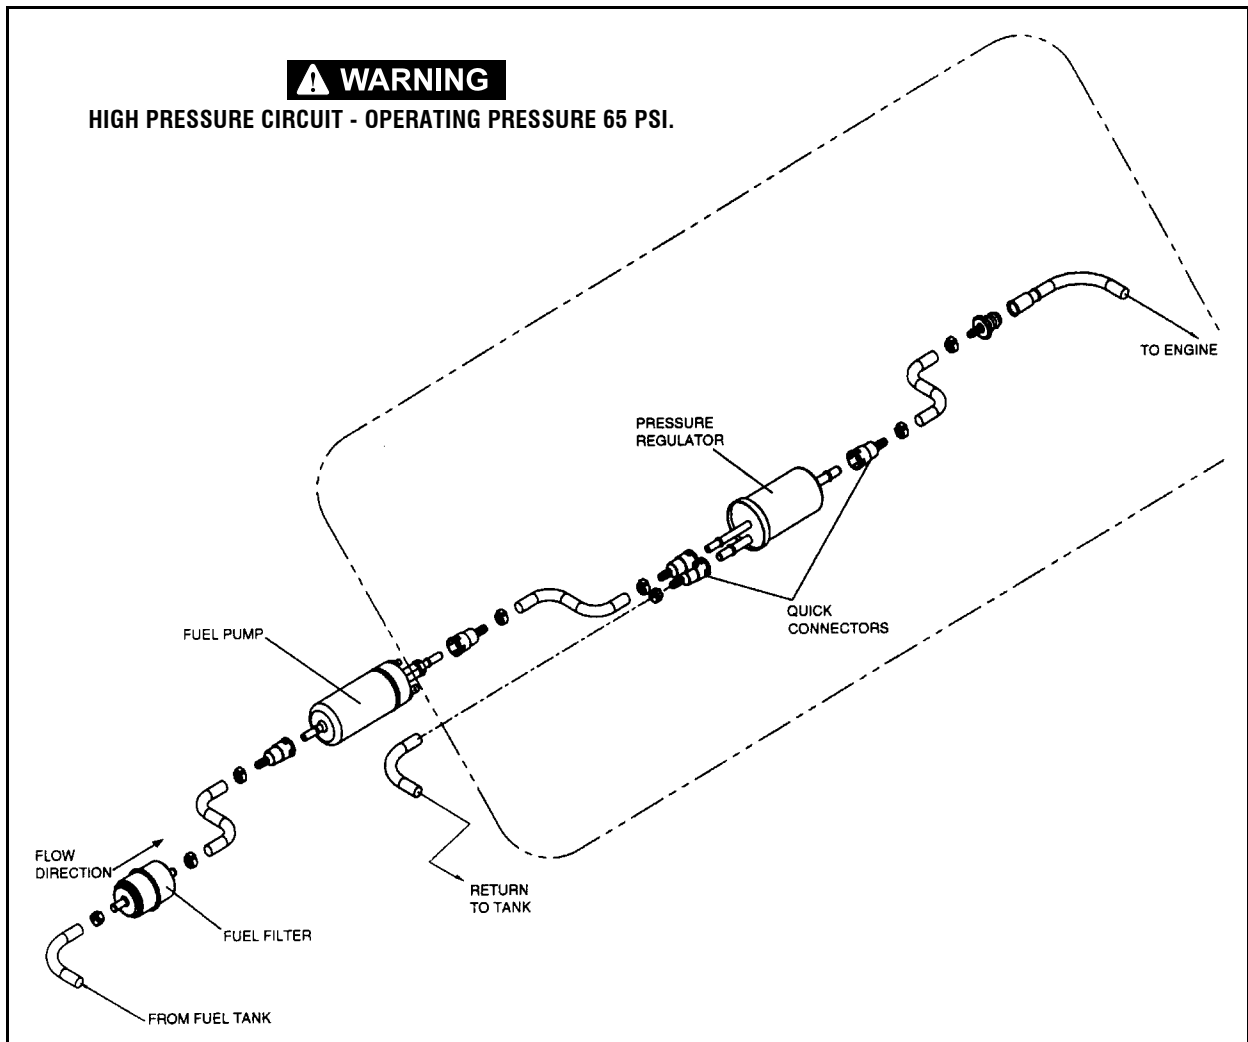


Figure 3-54. Typical Fuel System

FUEL METERING SYSTEM PURPOSE

The basic function of the air/fuel metering system is to control the air/fuel delivery to the engine. Fuel is delivered to the engine by individual fuel injectors mounted in the intake manifold near each intake valve.

The main control sensor is the heated oxygen sensor (H02S) located in the exhaust system. The H02S tells the ECM how much oxygen is in the exhaust gas. The ECM changes the air/fuel ratio to the engine by controlling the amount of time that the fuel injector is "ON." The best mixture to minimize exhaust emissions is 14.7 parts of air to 1 part of gasoline by weight, which provides the most efficient combustion. Because of the constant measuring and adjusting of the air/fuel ratio, the fuel injection system is called a "closed loop" system.


The ECM monitors signals from several sensors in order to determine the fuel needs of the engine. Fuel is delivered under one of several conditions called "modes." All modes are controlled by the ECM. Refer to "Open Loop and Closed Loop Operation" for more information.

FUEL PRESSURE REGULATOR

The fuel pressure regulator is a relief valve mounted in the fuel filter. It provides a constant fuel pressure of 441 kPa (64 psi).

If the pressure is too low, poor performance and a DTC 32 will set. If the pressure is too high, excessive odor and/or a DTC 42 will result.

When replacing the fuel filter, be sure to use an identical filter/regulator assembly. A standard fuel filter does not regulate pressure and could cause engine problems or component damage.

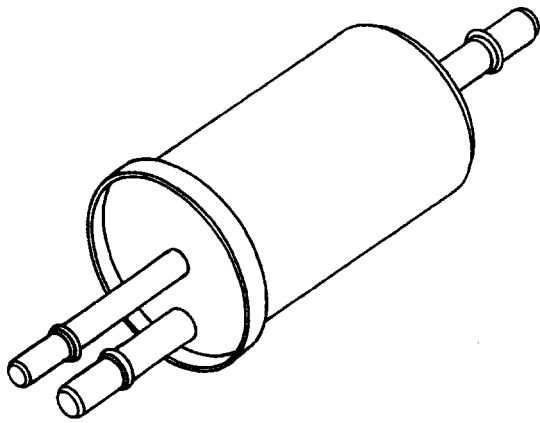


FUEL PUMP ELECTRICAL CIRCUIT

When the key is first turned "ON," the ECM energizes the fuel pump relay for two seconds to build up the fuel pressure quickly. If the engine is not started within two seconds, the ECM shuts the fuel pump off and waits until the engine is cranked. When the engine is cranked and crankshaft position signal has been detected by the SECM, the ECM supplies 12 volts to the fuel pump relay to energize the electric fuel pump.

An inoperative fuel pump will cause a "no-start" condition. A fuel pump which does not provide enough pressure will result in poor performance.


FUEL RAIL

The fuel rail is mounted to the top of the engine and distributes fuel to the individual injectors. Fuel is delivered to the fuel inlet tube of the fuel rail by the fuel lines.

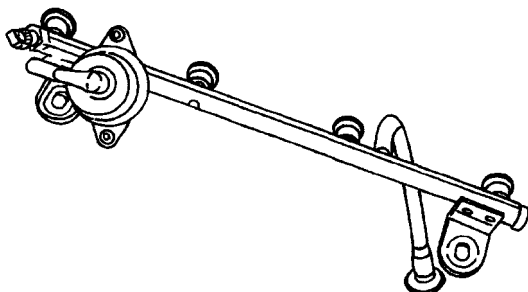

ELECTRONIC GOVERNOR AND THROTTLE BODY

In the 2.5L EFI industrial engine, throttle control is achieved by using an electronic governor which is controlled by the engine control module (ECM).

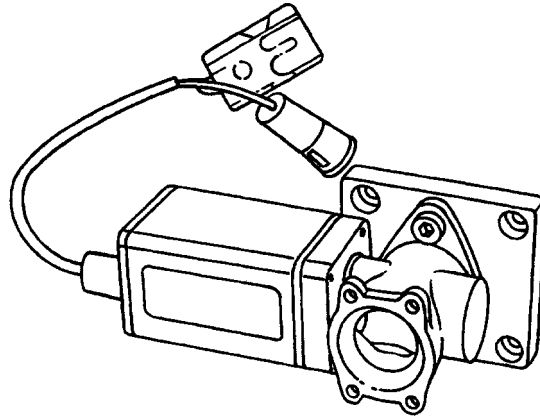

The electronic governor consists of a throttle body, an electronically-actuated throttle plate, and a built-in throttle position (TP) sensor. There are two pigtails that exit the governor body. The 3-wire pigtail connects the TP sensor to the ECM. Refer to "Throttle Position (TP) Sensor" for more information.

The 2-wire pigtail carries the throttle signal from the ECM to the governor. Desired engine speeds are stored in the configuration program for each specific application, and can be changed with the ECM calibration software. When an engine speed is selected with the toggle switch, the ECM sends the appropriate signal to the governor. This is a pulse-width modulated (PWM) signal which cannot be read with conventional diagnostic tools such as a voltmeter. A 12-volt signal is pulsed on and off at a high rate of speed. The width of the "on" pulse determines the amount of throttle opening. The ECM sends a signal with the appropriate pulse width to the governor based on the operator's choice of switch settings.

The electronic governor also acts as an idle air control (IAC) valve. Changes in engine load are detected by the ECM by comparing manifold absolute pressure (MAP) with throttle position. When the ECM detects a change in engine load, it can adjust idle speed by changing the PWM signal to the governor.

OPEN LOOP AND CLOSED LOOP OPERATION

The ECM will operate in the following two modes:

- Open loop
- Closed loop

When the engine is first started, the system is in "open loop" operation. In open loop, the ECM ignores the signal from the heated oxygen sensor (HO2S). It uses a pre-programmed routine to calculate the air/fuel ratio based on inputs from the TP, ECT, and MAP sensors.


The system remains in open loop until the following conditions are met:

- The HO2S has a varying voltage output showing that it is hot enough to operate properly (this depends on temperature).
- The ECT has reached 160°F (71°C).
- Seven minutes has elapsed since starting the engine.

After these conditions are met, the engine is said to be operating in "closed loop." In closed loop, The ECM continuously adjusts the air/fuel ratio by responding to signals from the HO2S (except at wide-open throttle). When the HO2S reports a lean condition (low sensor signal voltage), the ECM responds by increasing the "on" time of the fuel injectors, thus enriching the mixture. When the HO2S reports a rich condition (high sensor signal voltages) the ECM responds by reducing the "on" time of the fuel injectors, thus leaning out the mixture.


CAMSHAFT POSITION (CMP) SENSOR

The CMP sensor uses a variable reactor sensor to detect camshaft position. The CMP signal is created as piston #1 is a predetermined number of degrees after top dead center on the power stroke.

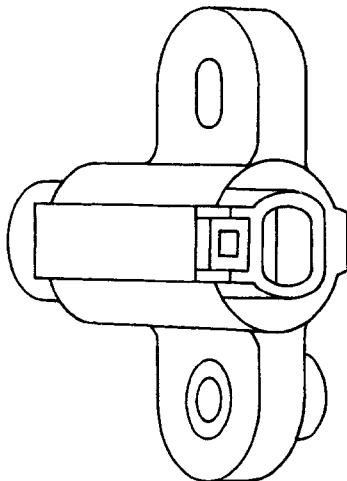

CRANKSHAFT POSITION (CKP) SENSOR

The crankshaft position (CKP) sensor provides a signal used by the engine control module (ECM) to calculate the ignition sequence. The sensor initiates the reference pulses which the ECM uses to calculate RPM and crankshaft position.

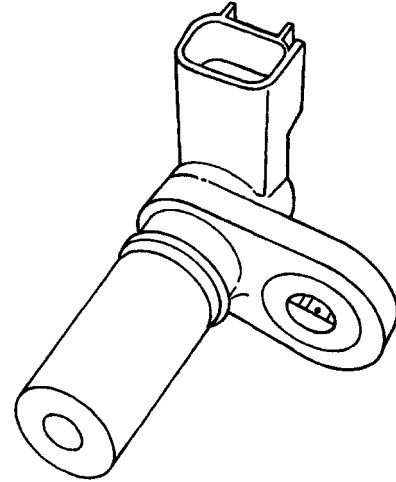

ELECTRONIC IGNITION


The electronic ignition system controls fuel combustion by providing a spark to ignite the compressed air/fuel mixture at the correct time. To provide optimum engine performance, fuel economy, and control of exhaust emissions, the ECM controls the spark advance of the ignition system. Electronic ignition has the following advantages over a mechanical distributor system:

- No moving parts
- Less maintenance
- Remote mounting capability
- No mechanical load on the engine
- More coil cooldown time between firing events
- Elimination of mechanical timing adjustments
- Increased available ignition coil saturation time

IGNITION COIL

The electronic ignition system uses a coil pack with one ignition coil for each two cylinders in the engine. Each cylinder is paired with its opposing cylinder in the firing order, so that one cylinder on compression fires simultaneously with the opposing cylinder on exhaust. The spark that occurs in the cylinder on the exhaust stroke is referred to as a "waste spark."


The primary coils in the coil pack are triggered by the "Ignition Coil Feed #1" and "Ignition Coil Feed #2" Signals from the ECM.

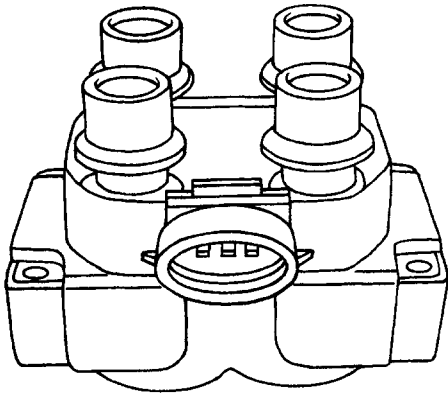

ENGINE CONTROL MODULE (ECM)

The ECM is responsible for maintaining proper spark and fuel injection timing for all operating conditions. To provide optimum operation and emissions, the ECM monitors the input signals from the following components in order to calculate spark timing:

- Engine coolant temperature (ECT) sensor
- Intake air temperature (IAT) sensor
- Throttle position sensor
- Crankshaft position sensor

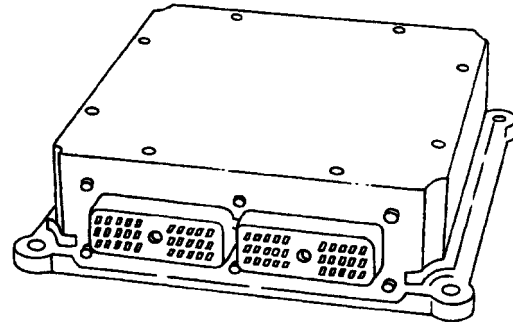

3.17 FORD LPG SYSTEM

NOTE: *+20° F (-6.6° C) is the low temperature limit for LP gas, for both starting and operation. This applies to all LP gas powered engines.*

Description

The LPG system starts at the tank. The liquid propane exits the tank, flows through the fuel lockoff solenoid, flows through the regulator (regulator converts the liquid to a vapor), flows through the megajector, flows through the mixer and into the engine.

Regulator

The regulator accepts LPG liquid at tank pressure (min = 30 psi; max = 312 psi [min = 207 kPa; max = 2151 kPa]) and reduces it to a regulator outlet pressure of 1.5 to 2.5 inches (3.8 to 6.3 cm) of H₂O at idle flow (approx. 750 RPM / no load). This regulator must have engine coolant flowing through it whenever the engine is running.


Megajector

The megajector is an electronic pressure regulator. This electronic regulator outputs a specific pressure needed at the mixer to maintain the desired air to fuel ratio. The megajector accepts LPG vapor at the regulator outlet pressure (1.5 to 2.5 inches [3.8 to 6.3 cm] of H₂O) and reduces it to a pressure value commanded by the EPM. The pressure command is sent by the EPM over the CAN link via the megajector harness. The megajector outlet pressure has units of inches of H₂O. The megajector outlet pressure is defined as the difference between the megajector outlet gas pressure and the balance line pressure (usually at or near barometric pressure depending on air intake restriction). The megajector outlet pressure can vary between -1.00 to -5.00 inches (-2.5 to -12.7 cm) of H₂O depending on the speed and load of the engine. The megajector must be mounted per the 2.5L 2004 Emission Installation Instructions. Torque mounting bolts to a maximum of 60 in.lbs. (7 Nm).

Mixer

The mixer accepts LPG vapor at the megajector outlet pressure (-1.00 to -5.00 inches [-2.5 to -12.7 cm] of H₂O) and mixes it with clean air. This mixture is then sucked into the engine via the actuator.

SECTION 3 - CHASSIS & TURNTABLE

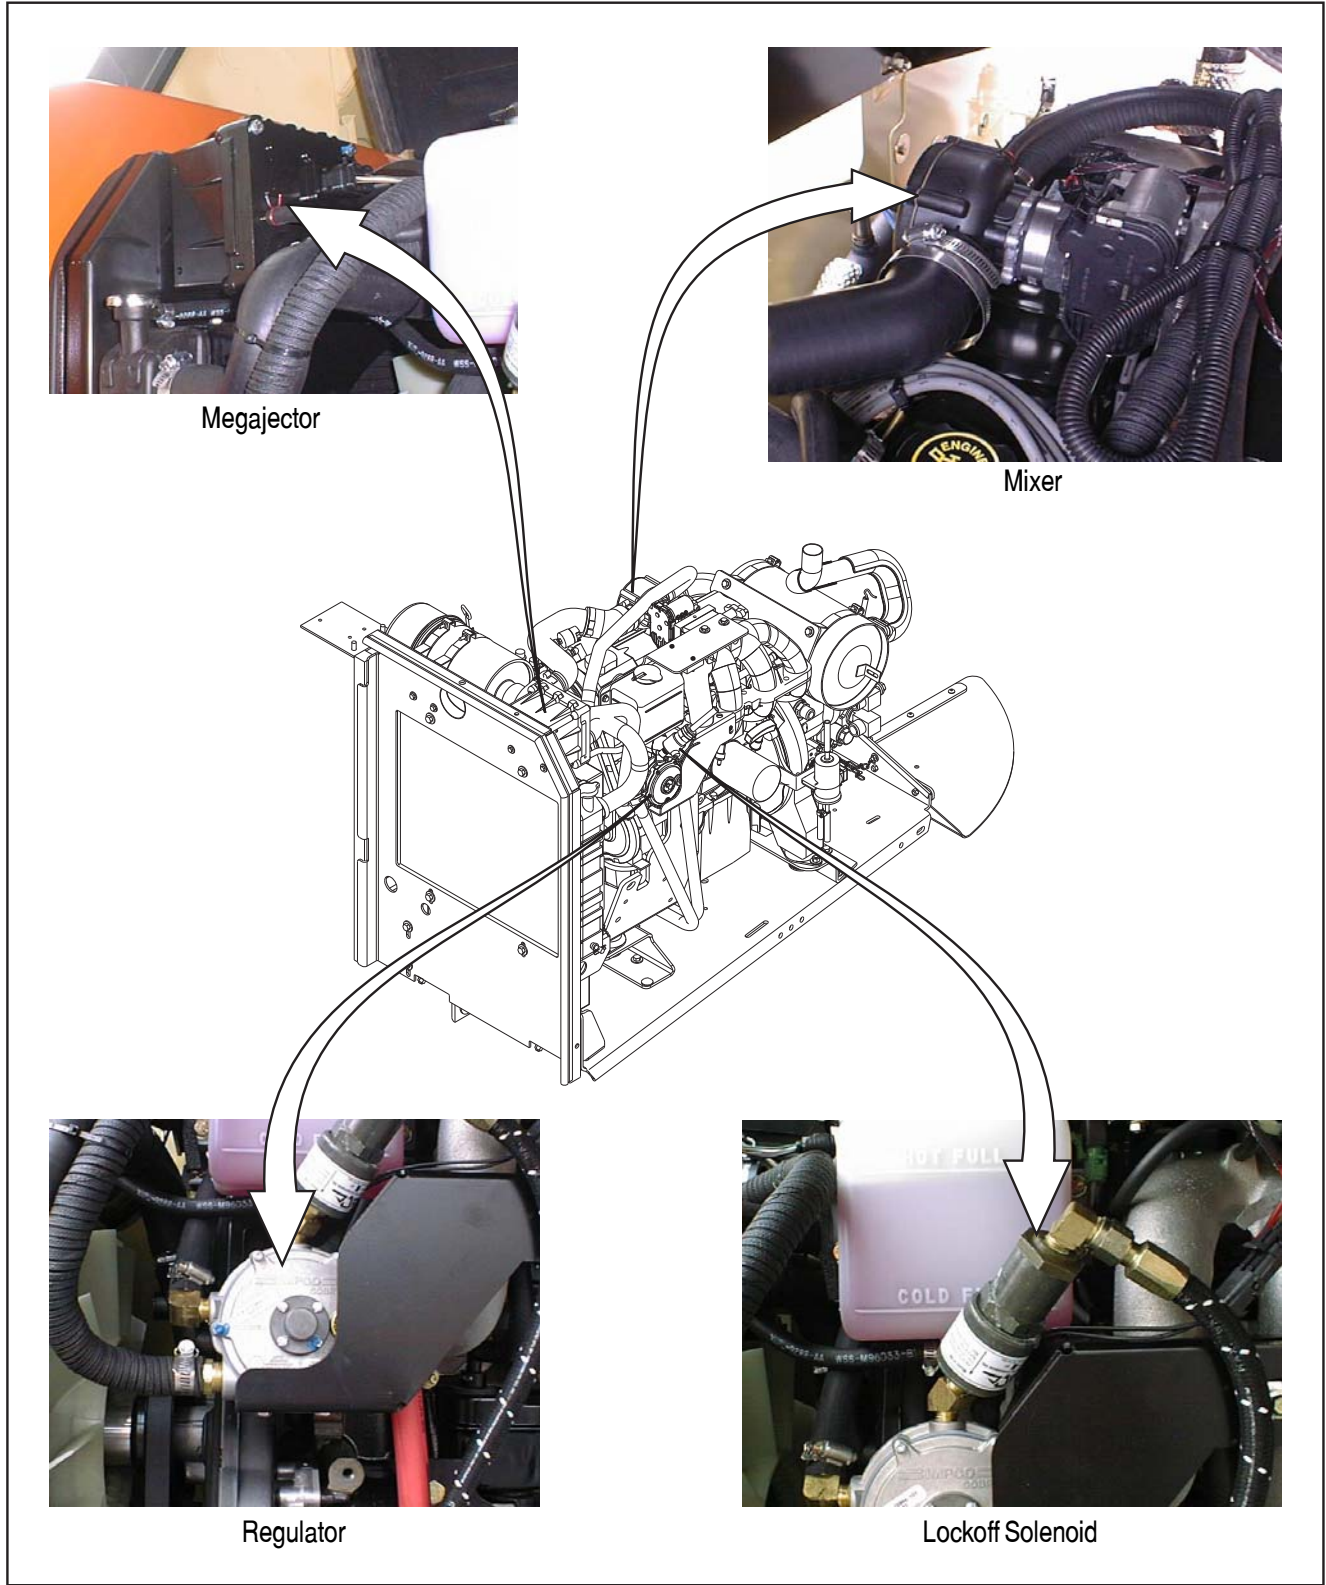

Lockoff Solenoid

The lockoff solenoid is used to reduce the possibility of backfires. The EPM controls the opening and closing of the lockoff so that as a shutdown is commanded, the lockoff is closed, but the ignition system continues to operate to burn off unburned fuel in the manifold. This will cause longer than usual start times, because the manifold must fill up with fuel again before the engine will fire. This will also cause the engine to run for one to two seconds after ignition is turned off.

Megajector Diagnostic Code Descriptions

The following diagnostic codes are specific to the megajector. They will be displayed on the analyzer if the JLG Control System senses a fault dealing with the megajector. Refer to Section 6 - JLG Control System for more information concerning the Control System.

DTC 353 - Megajector delivery pressure higher than expected. This code will set if the difference between the Megajector actual pressure and the Megajector commanded pressure is greater than 4.00 inches (10.1 cm) of H₂O.

- a. **Fuel Supply** - Check fuel supply pressure at the megajector inlet fitting. Fuel supply pressure on LPG applications should be between 3-5" (7.6-12.7 cm) H₂O.
- b. **Lockoff Solenoid** - Check the lockoff to make sure it is sealing when closed. If it is not completely sealing, it could allow pressure creep in the fuel system.
- c. **Reference Line** - Make sure the reference line is in place between the Megajector and the carburetor balance port. Make sure the hose is not kinked or restricted in any way and has no holes in it.
- d. **Regulator** - Observe the regulator with the engine running to see if it is icing up. If it's icing up, refer to Engine Cooling System below.
- e. **Engine Cooling System** - Make sure the engine cooling system is operating properly and there are no air locks in the system. Make sure the engine is operating at the proper temperature. Check the coolant hoses at the regulator and make sure they are both warm to verify proper coolant circulation.

If the fuel system is operating properly, the Megajector has an internal failure and must be replaced.

DTC 354 - Megajector delivery pressure lower than expected. This code will set if the difference between the Megajector actual pressure and the Megajector commanded pressure is less than -4.00 inches (10.1 cm) of H₂O.

- a. **Fuel Supply** - Check fuel supply pressure at the megajector inlet fitting. Fuel supply pressure on LPG applications should be between 3-5" (7.6-12.7 cm) H₂O.
- b. **Fuel System Hoses** - Make sure all fuel system hoses are in good condition. They should be clamped tight, free from kinks with no cuts, pinches, etc.
- c. **Lockoff Solenoid** - Check the lock off to make sure it is opening properly. If it is not opening completely, it could cause low fuel pressure.
- d. **Reference Line** - Make sure the reference line is in place between the Megajector and the carburetor balance port. Make sure the hose is not kinked or restricted in any way and has no holes in it.
- e. **Regulator** - Observe the regulator with the engine running to see if it is icing up. If it's icing up, refer to Engine Cooling System below.
- f. **Engine Cooling System** - Make sure the engine cooling system is operating properly and there are no air locks in the system. Make sure the engine is operating at the proper temperature. Check the coolant hoses at the regulator and make sure they are both warm to verify proper coolant circulation.

If the fuel system is operating properly, the Megajector has an internal failure and must be replaced.

SECTION 3 - CHASSIS & TURNTABLE

DTC 355 - Megajector comm. lost. This codes will set if the communication (CAN link) between the Megajector and the EPM is not present.

- a. **CAN Circuits** - Check CAN circuits for continuity and shorts to power or ground and for proper connections.

If the CAN circuits are ok and all wiring connections are good, the Megajector has an internal failure and must be replaced.

DTC 361 - Megajector voltage supply high.

- a. **Voltage** - Check battery voltage. If the voltage at the battery is greater than 18 volts, either the charging system or the megajector is faulty.

DTC 362 - Megajector voltage supply low.

- a. **Voltage** - Check battery voltage. If the voltage at the battery is less than 9.5 volts:

The battery is faulty

or

The charging system is faulty

or

The Megajector is faulty.

DTC 363 - Megajector Internal Actuator Fault Detection.

- a. **Connections** - Check power, ground, and CAN circuits at the Megajector in addition to all electrical connections. Repair as necessary and retest.
- b. **Megajector** - Megajector has an internal failure. Contact JLG Industries for further assistance.

DTC 364 - Megajector Internal Circuitry Fault Detection.

- a. **Connections** - Check power, ground, and CAN circuits at the Megajector in addition to all electrical connections. Repair as necessary and retest.
- b. **Megajector** - Megajector has an internal failure. Contact JLG Industries for further assistance.

DTC 365 - Megajector Internal Comm Fault Detection.

- a. **Connections** - Check power, ground, and CAN circuits at the Megajector in addition to all electrical connections. Repair as necessary and retest.

Megajector - Megajector has an internal failure. Contact JLG Industries for further assistance.

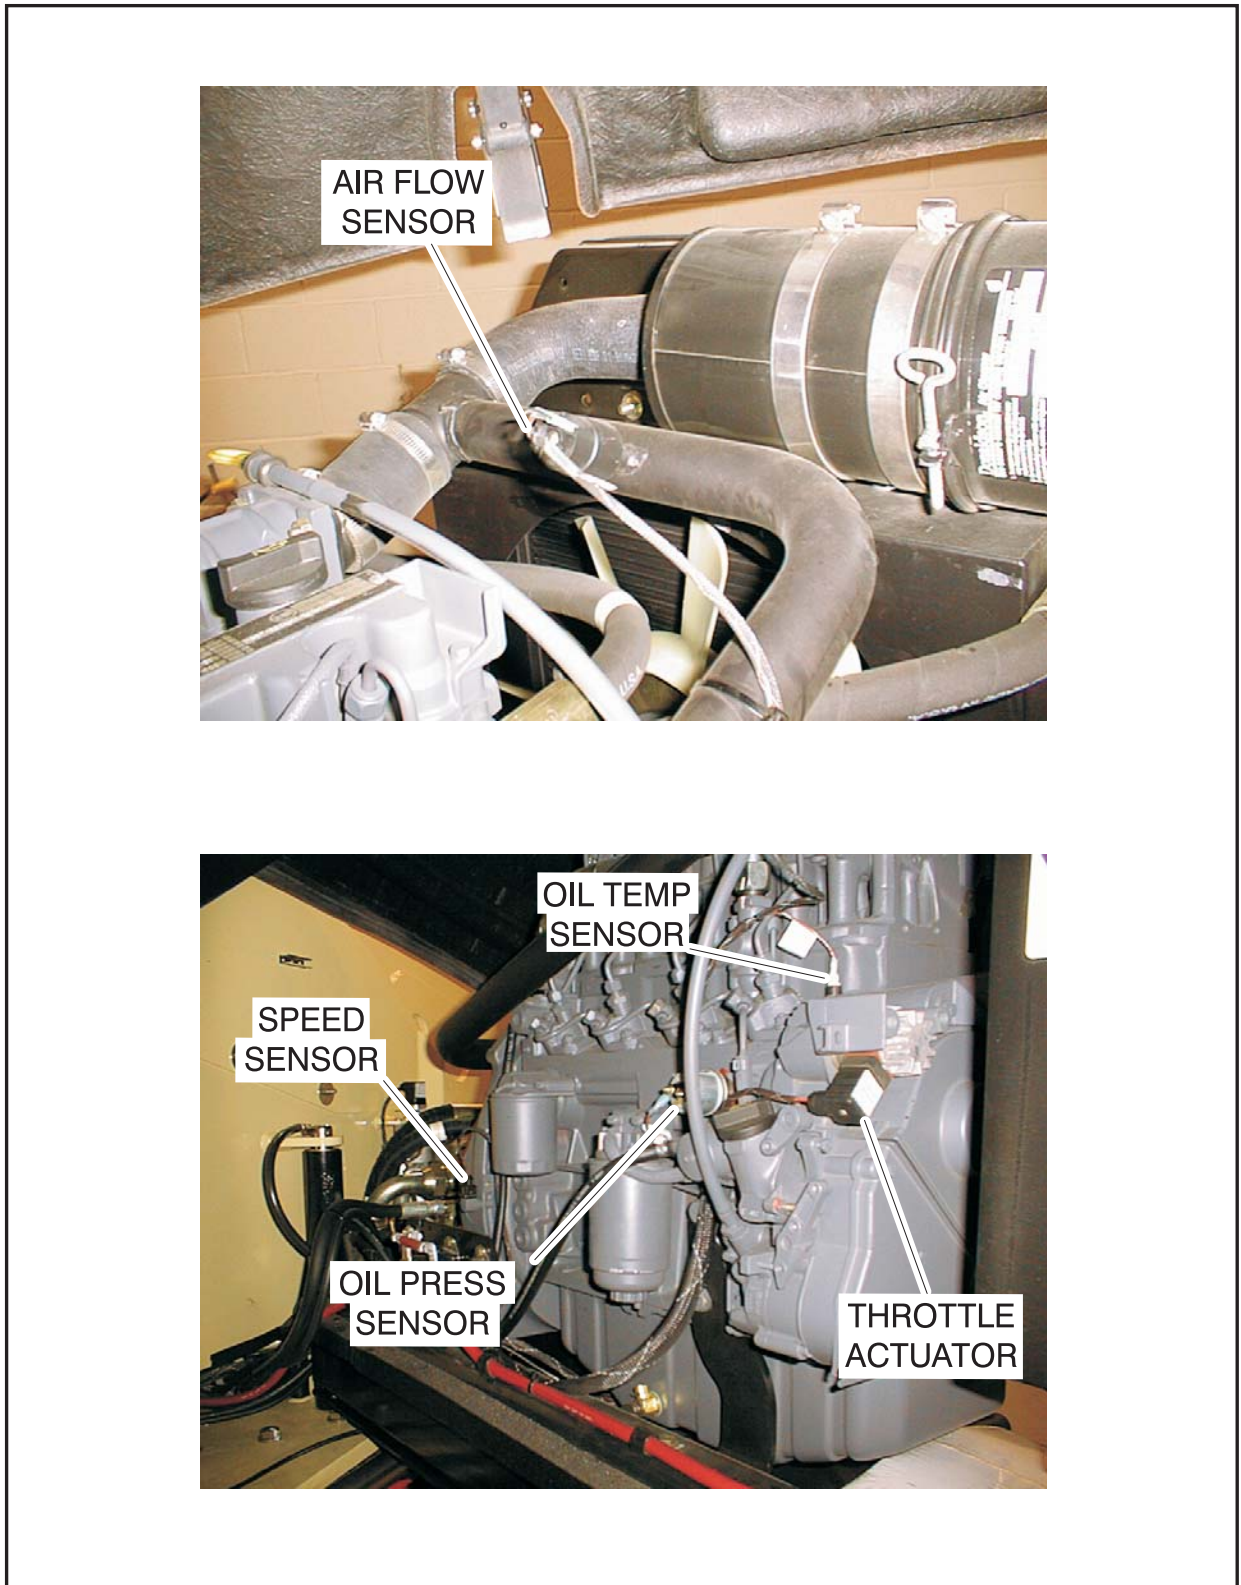


Figure 3-55. Deutz Sensors for JLG Control System

3.18 DEUTZ EMR 2 (S/N 84711 TO PRESENT)

The EMR2 consists of the sensors, the control unit and the actuator. Engine-side controls as well as the JLG Control System are connected by means of separate cable harnesses to the EMR control unit.

The sensors attached to the engine provide the electronics in the control unit with all the relevant physical parameters. In accordance with the information of the current condition of the engine and the preconditions (throttle position etc.), the EMR2 controls an actuator that operates the control rod of the injection pump and thus doses the fuel quantity in accordance with the performance requirements.

The exact position of the regulating rod is reported back and, if necessary, is corrected, by means of the control rod travel sensor, situated together with the rotation magnets in a housing of the actuator.

The EMR2 is equipped with safety devices and measures in the hardware and software in order to ensure emergency running (Limp home) functions.

In order to switch the engine off, the EMR2 is switched in a de-energized fashion over the ignition switch. A strong spring in the actuator presses the control rod in the de-energized condition into the zero position. As a redundancy measure, an additional solenoid serves for switching off and this, independently of the actuator, also moves the control rod in the de-energized condition into the zero position.

After the programming, that is carried out over the ISO9141 interface, the EMR2 possesses a motor-specific data set and this is then fixedly assigned to the engine. Included in this are the various application cases as well as the customer's wishes regarding a particular scope of function.

Each EMR2 module is matched by serial number to the engine. Modules cannot be swapped between engines.

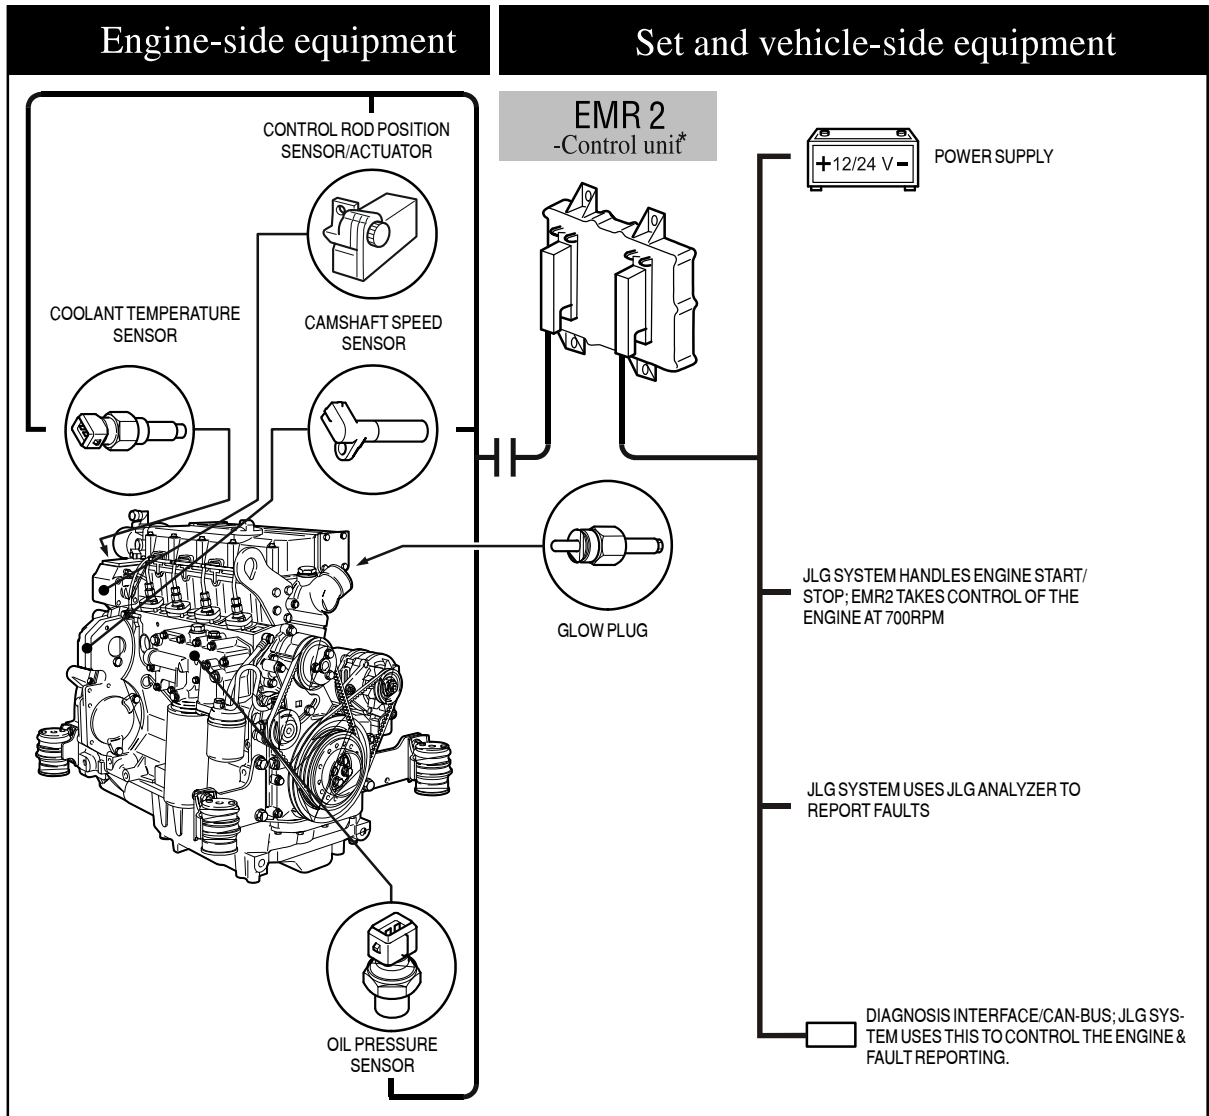


Figure 3-56. EMR 2 Engine Side Equipment

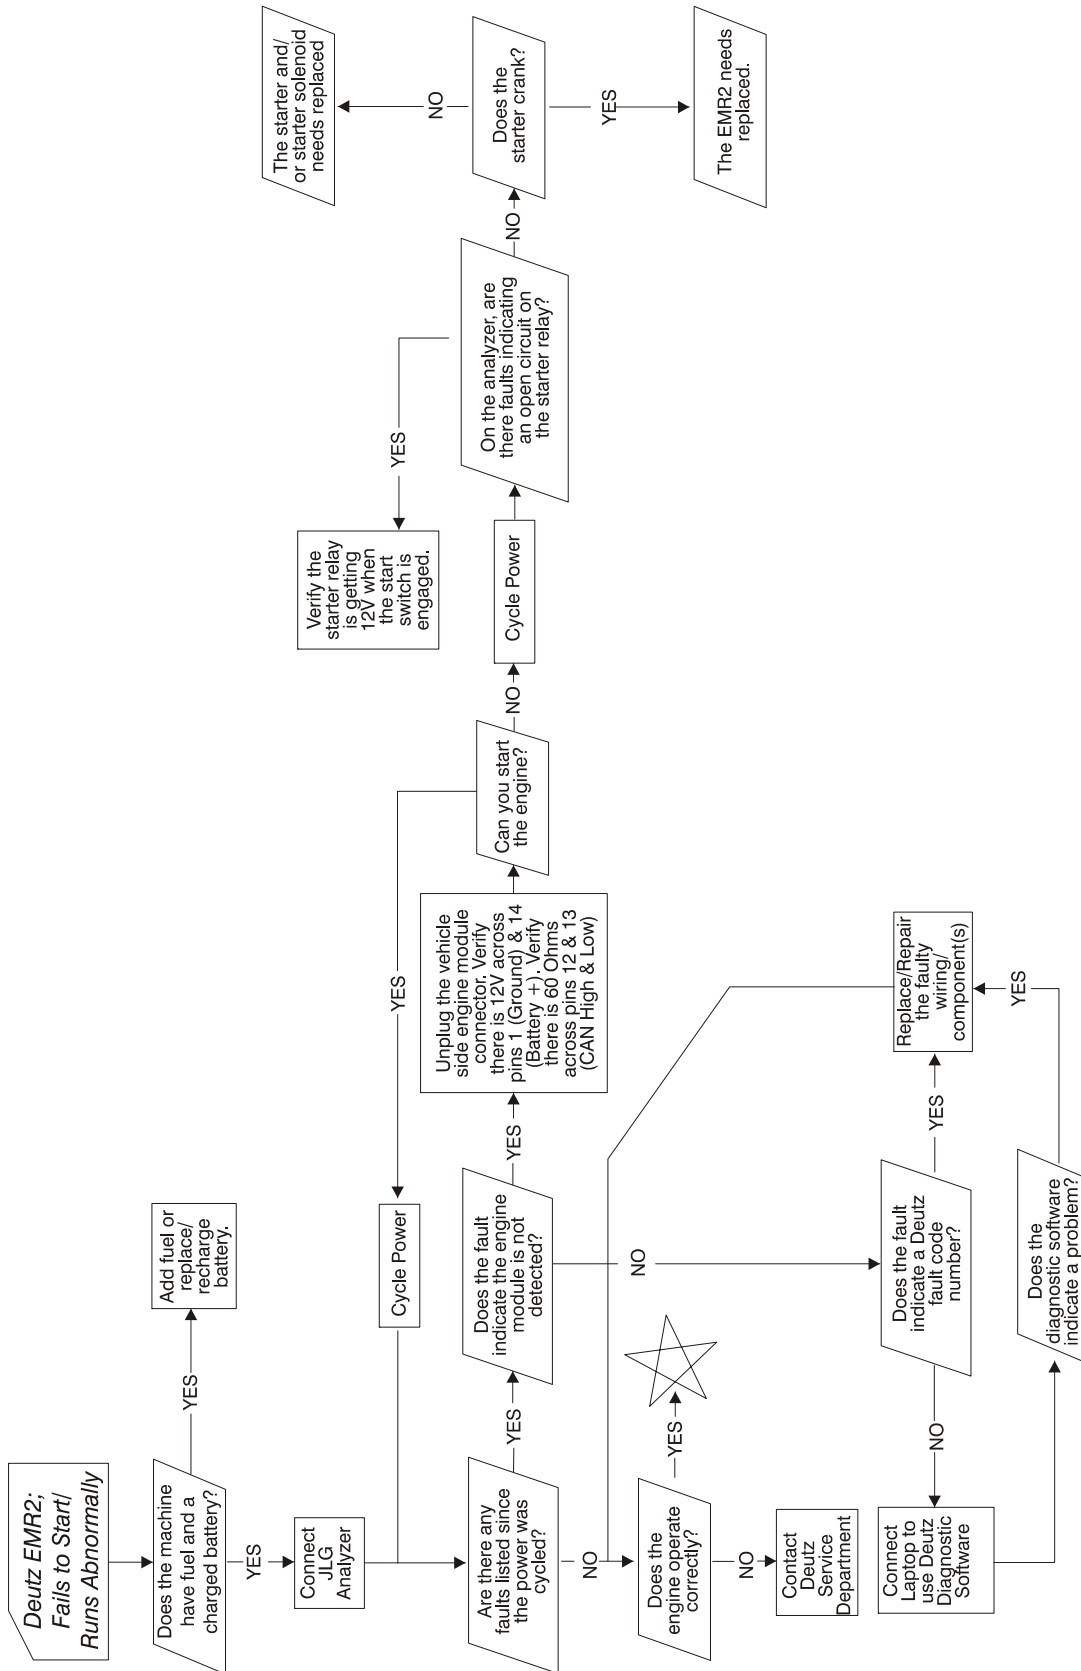


Figure 3-57. Deutz EMR 2 Troubleshooting Flow Chart

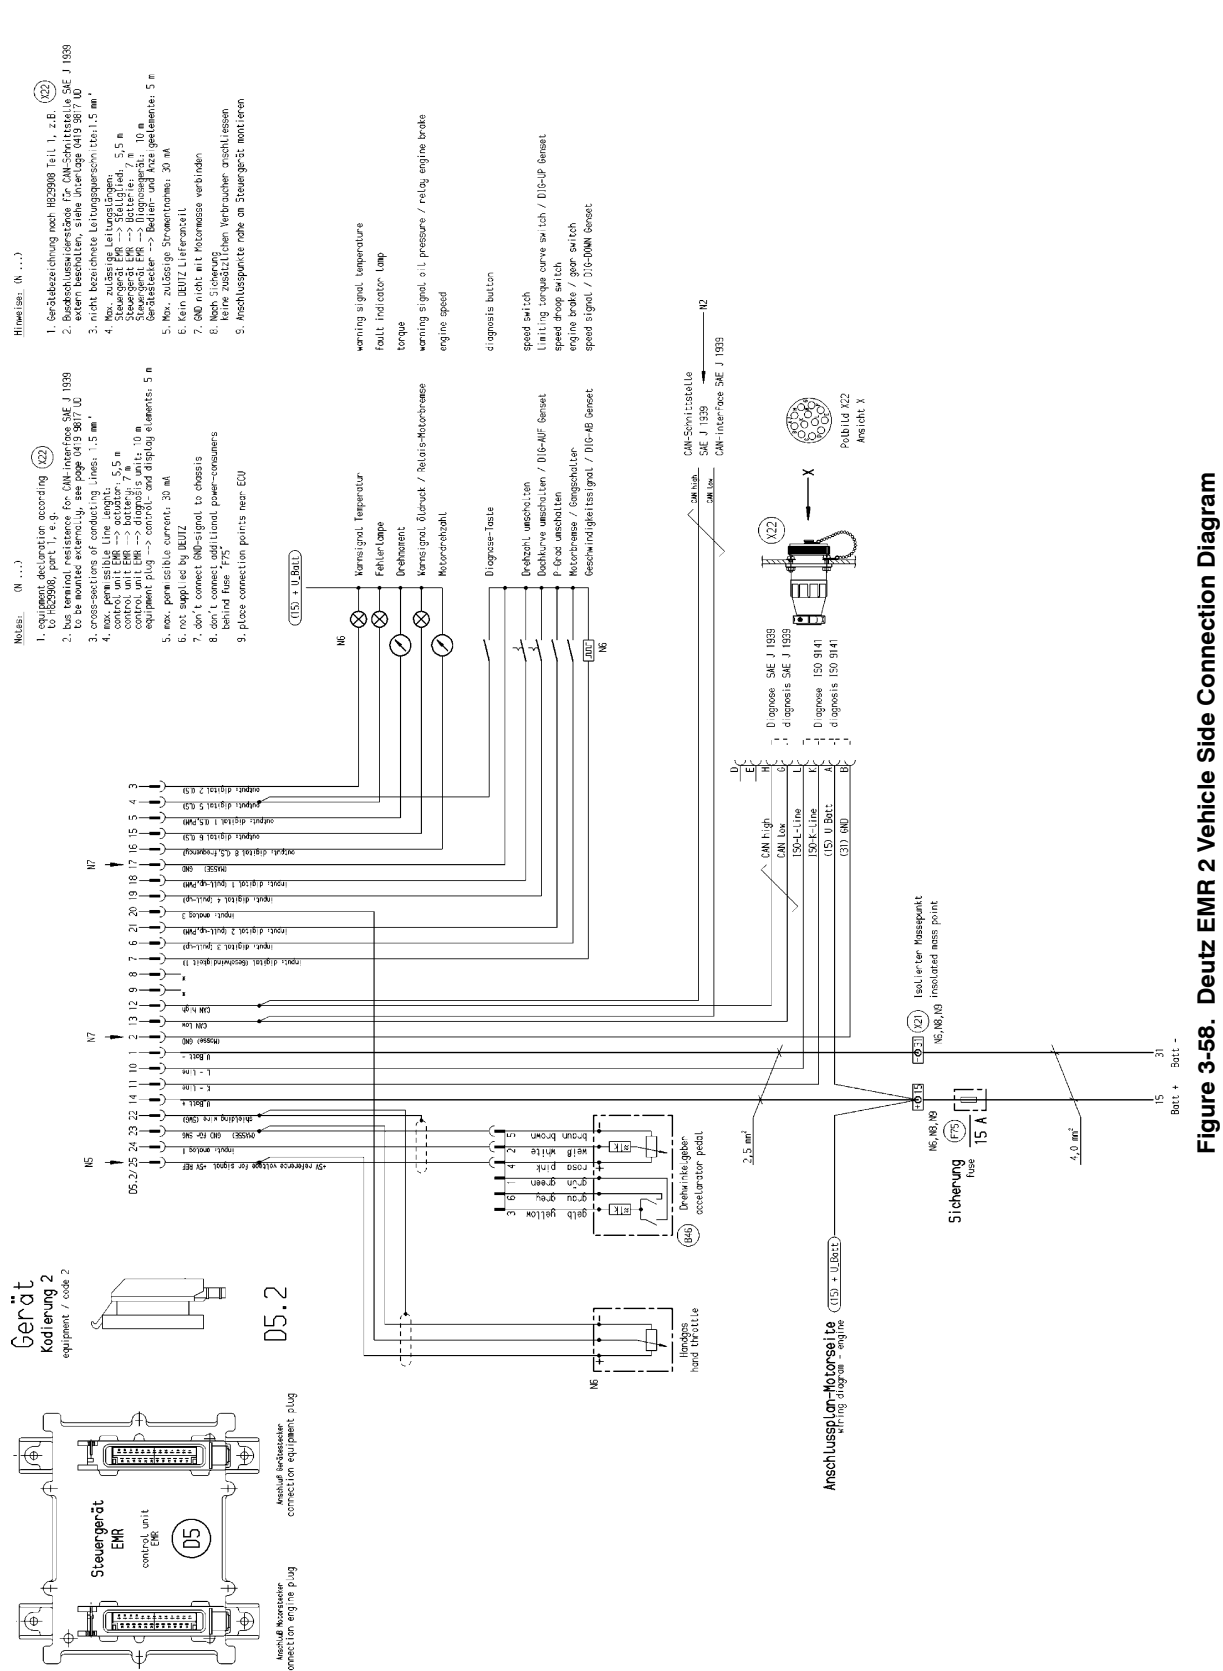


Figure 3-58. Deutz EMR 2 Vehicle Side Connection Diagram

SECTION 3 - CHASSIS & TURNTABLE

HINWEISE: (N ...)

1. Gerätezeichnung nach R62908 Teil 1, z.B. (B4)
2. Leitungsschritte: 1,5 mm²
3. Leitungsschritte nach IP1 0199-63-0206

MERKLE: (N ...)

1. equipment designation according (B4)
2. cross-sections of connecting lines: 1.5 mm², e.g.
3. cross-sections according IP1 0199-63-0206

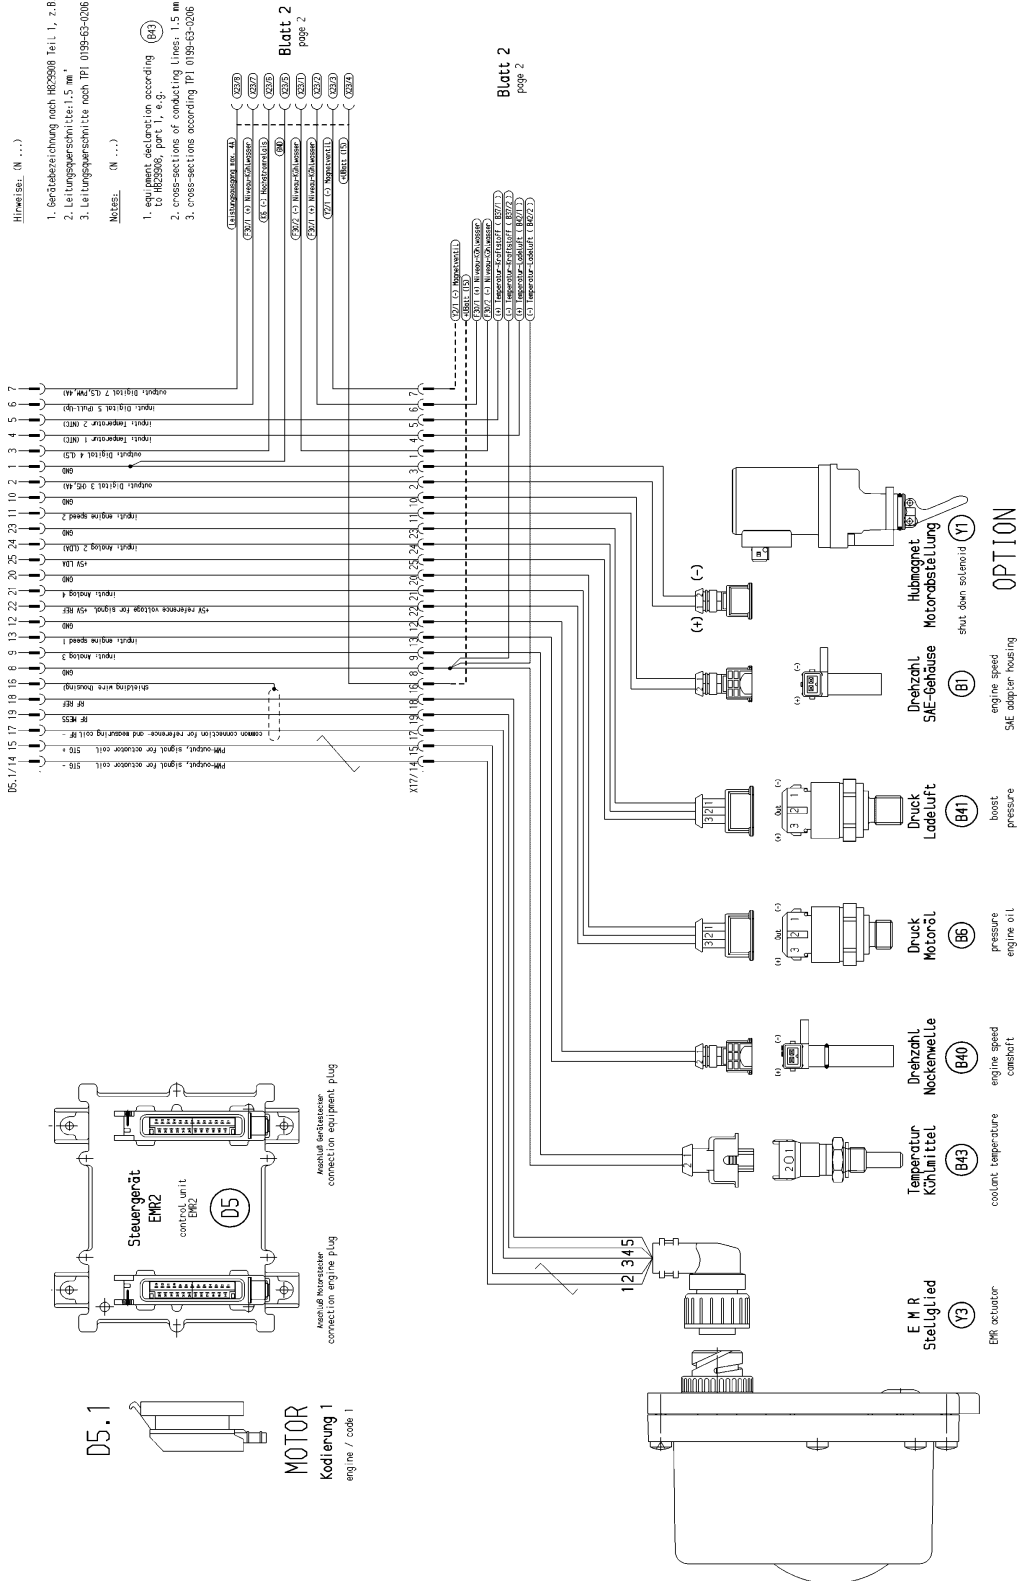


Figure 3-59. Deutz EMR 2 Engine Side Connection Diagram - Sheet 1 of 2


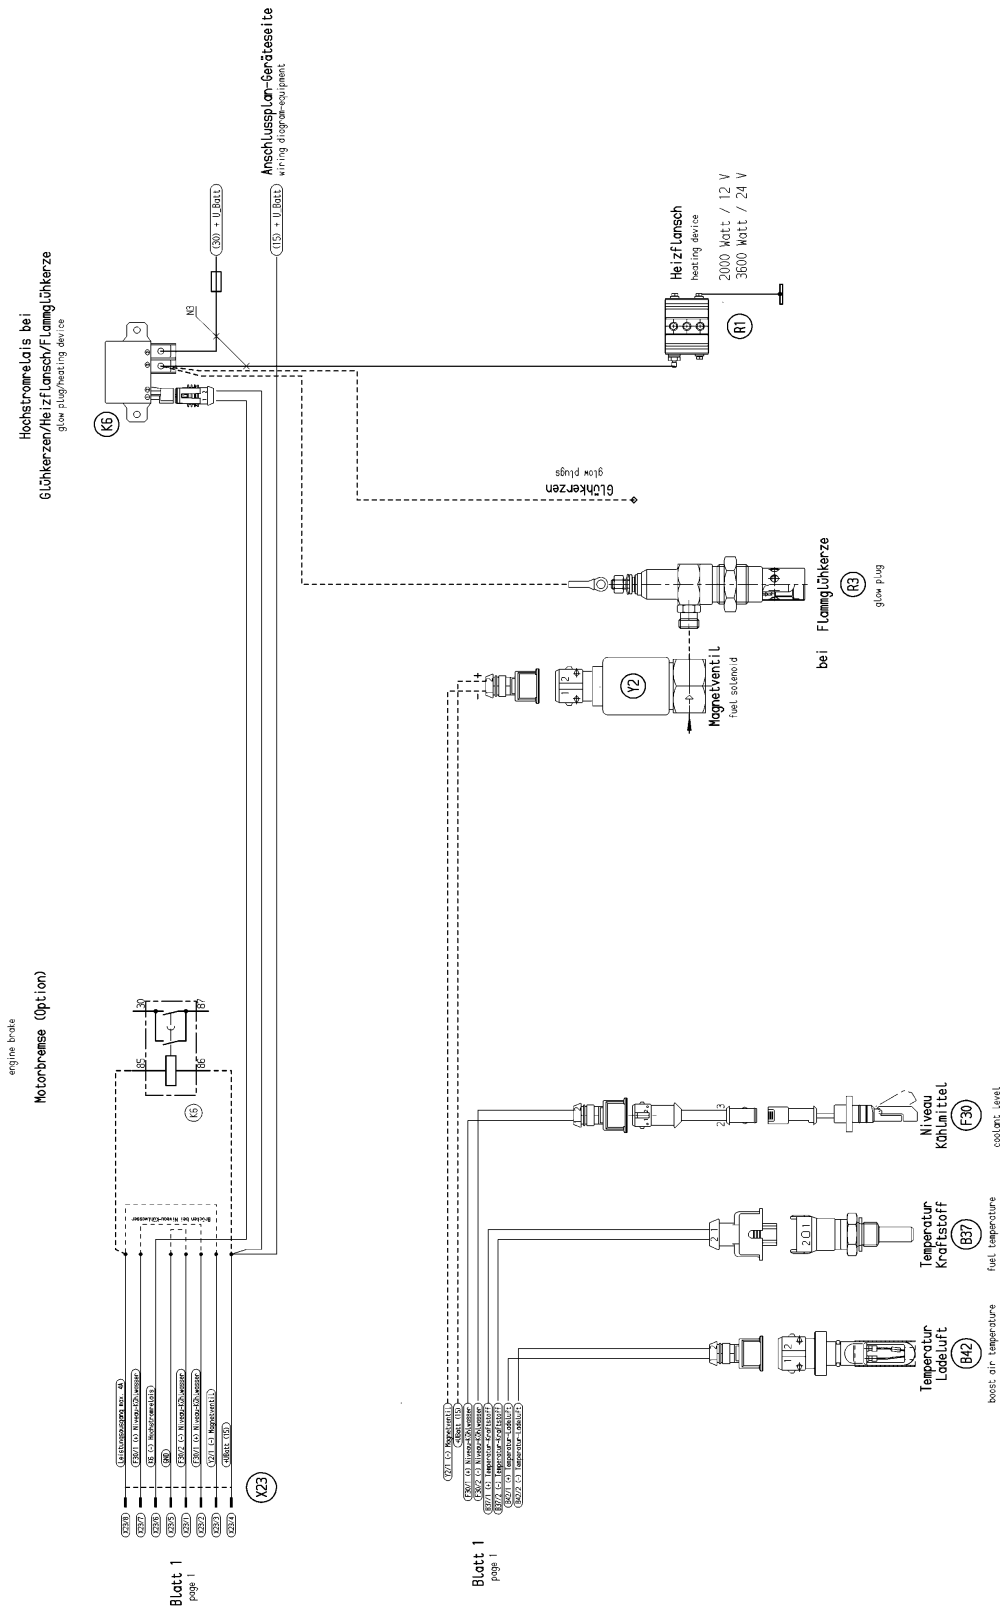


Figure 3-60. Deutz EMR 2 Engine Side Connection Diagram - Sheet 2 of 2

SECTION 3 - CHASSIS & TURNTABLE

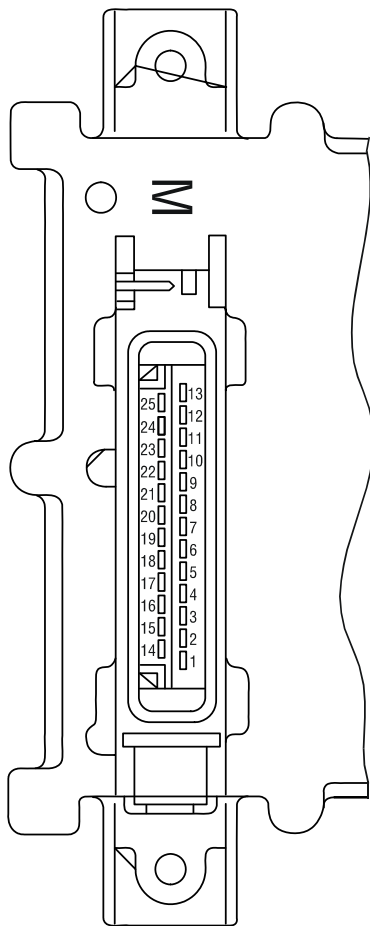


Pin No.	Designation	Description
1	Reserve	Reserve
2	Output: digital 3	Digital output for solenoid ¹⁾
3	Output: digital 4	For heating flange (optional)/ glow plug (optional)
4	Input (optional) Temp 1	Fuel temperature ²⁾
5	Input (optional) Temp 2	Charge air temperature
6	Input (optional) DigIn 5	Coolant level / oil level
7	Output: PWM2/digital 6	
8	GND	Reference potential for analog signal at pin 9
9	Input: analog 7	Analog input for Coolant temperature sensor (NTC)
10	GND	Reference potential for analog signal at pin 11
11	Multi-function input: speed 2/DigIn 2	Digital input second engine speed (crankshaft) (optional) and speed signal (optional)
12	GND	Reference potential for analog signal at pin 13
13	Input: speed 1	Digital input first engine speed (camshaft)
14	STG -	PWM output, signal for actuator coil
15	STG +	PWM output, signal for actuator coil
16	Screen	Screening regulating rod travel sensor (for lines 17, 18, 19)
17	RF -	General connection for reference and measuring coil
18	RF REF	Analog input, reference signal of the reference coil
19	RF MESS	Analog input, measuring signal of the measuring coil
20	GND	Reference potential for signal at pin 21
21	Input: analog 4/digital 9	Analog input 4 (sensor signal oil pressure sensor) or digital input 9
22	+5 V REF	+5 V Reference voltage for signal at pin 21 (max. 15 mA)
23	GND	Reference potential for signal at pin 24
24	Input: analog 2/digital 7	Analog input 2 (sensor signal charge air) or digital input 7
25	+5 V LDA	+5 V Reference potential for signal at pin 24 (max. 15 mA)

1) For continuous power: < 4 A

2) Corresponds to special function "fuel temperature compensation at the EMR (0211 2571)

Figure 3-61. EMR 2 Engine Plug Pin Identification

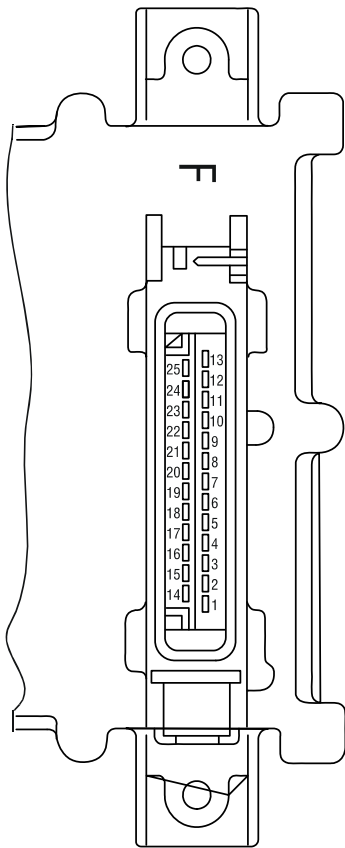

Pin-No.	Designation	Description
1	U Batt -	Negative pole at battery (clamp 31)
2	GND	Reference potential for signal
3	Output: digital 2	PWM or digital output, various functions
4	Input / output: DigInOut	Fault lamp and diagnostic button
5	Output: PWM 1/Dig 1	PWM or digital output, various functions
6	Multi-function input: DigIn 3	Genset applications/gear shift/motor brake
7	Input: digital 10/velocity	Speed signal (tacho input)
8	NC	Not occupied
9	NC	Not occupied
10	L-line	Serial ISO 9141 interface
11	K-line	Serial ISO 9141 interface
12	CAN high	Interface for CAN-Bus
13	CAN low	Interface for CAN-Bus
14	U Batt +	Positive pole for battery (clamp 15)
15	Output: digital 5	Digital output, various functions
16	Output: digital 7/Frequency	Frequency, PWM or digital output, various functions
17	Ground	Reference potential for signal at pins 18, 19 and 21
18	Input: digital 1 / PWM 1	PWM 1 or digital input 1, various functions
19	Multi-function input: DigIn 4	Performance curve switching/genset applications
20	Multi-function input: digital 8 / analog 3	Hand hand throttle/genset applications, Digital (8) or analog input (3)
21	Input: digital 2 / PWM 2	PWM 2 or digital input 2, various functions
22	Screen	Screening (e.g. for lines hand throttle or PWG)
23	GND	Reference potential for signal at pin 24
24	Input: analog 1 / digital 6	Analog input 1 (pedal value sensor, PWG) or digital input 6
25	+5 V REF	+5 V Reference voltage for signal at pin 24

Figure 3-62. EMR 2 Vehicle Plug Pin Identification

SECTION 3 - CHASSIS & TURNTABLE

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Zero error display	-	No faults	524287	31	No active faults present		
Revolutions / speed acquisition	01	Speed sensor 1	190	8	Sensor failure. Distance from gear too far. Additional fault impulses. Cable joint interrupted.	Governor in emergency operation (if sensor 2 available). Emergency switch-off (if sensor 2 not available or failed). Governor in emergency operation (with sensor 1) Emergency switch-off (if sensor 1 not available or failed).	Check distance. Check cable connection. Check sensor and replace if required.
	03	Speed sensor	84	8	Tacho failed. Additional fault impulses. Cable connection interrupted.	Governor in emergency operation.	Check cable connection and Tacho. Replace if required.
	04	Excess speed switch-off	190	0	Speed was/is in excess of limit.e. Check PID setting. Check rods. Check actuator and replace if required. Check cable to actuator (impulse on incorrect speed). Check No. of teeth. For vehicles check for possible thrust mode.	Engine stop.	Check parameter (21). Check speed settings.
Sensors	07	Charge air pressure	102	2			
	08	Oil pressure	100	2			
	09	Coolant temperature	110	2	Fault at corresponding sensor entry (e.g. short circuit or cable break).	With failure of the sensor, the associated monitoring function is de-activated.	Check sensor cable. Check sensor and replace if required. Check fault limits for sensor.
	10	Charge air temperature	105	2			
	11	Fuel temperature	174	2			

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-63. EMR2 Fault Codes - Sheet 1 of 5

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Functional fault warning	30	Oil pressure warning	100	1	Oil pressure below speed-dependent warning line characteristic	Fault message (disappears when oil pressure is again above recovery limit). After a delay time - fill limitation.	Check engine (oil level, oil pump). Check oil pressure sensor and cable. Check oil pressure warning line characteristic.
	31	Coolant temperature warning	110	0	Coolant temperature has exceeded warning level.	Fault message (disappears when coolant temperature again drops below recovery level). After a delay time - fill limitation.	Check coolant. Check coolant temperature sensor and cable.
	32	Charge air temperature warning	105	0	Charge air temperature has exceeded warning level.	Fault message (disappears when charge air temperature gain drops below recovery level). After a delay time - fill limitation.	Check charge air. Check charge air-temperature sensor and cable.
	34	Coolant level warning	111	1	Switch input "Low coolant level" is active.	Fault message.	Check coolant level. Check coolant level sensor and cable.
	35	Speed warning (with thrust mode operation).	SID 190	14	revolutions was/is above (top) revolution speed limit. "Thrust mode" function is active.		Check parameters. Check speed settings.
	36	Fuel temperature warning	174	0	Fuel-temperature has exceeded warning level.	Fault message (disappears when fuel temperature again drops below recovery level).	Check fuel. Check fuel temperature sensor and cable.

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-64. EMR2 Fault Codes - Sheet 2 of 5

SECTION 3 - CHASSIS & TURNTABLE

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Functional fault, switch-off	42	Charge air temperature switch-off	105	0	Charge air temperature has exceeded switch-off limit.	Emergency stop	Check charge air. Check charge air-temperature sensor and cable. Check switch-off limit.
	44	Coolant level switch-off	111	1	Switch input "Low coolant level" is active.	Emergency stop. Start lock.	Check coolant level. Check coolant level sensor and cable.
Actuator	50	Feedback	SID 24	12	Actuator not connected. Fault in actuator confirmation.	Emergency switch-off. Actuator cannot be operated.	Check actuator, replace if required. Check cable, check fault limits for "Confirmation".
	52	Reference feedback	SID 24	13			Check actuator, replace if required. Check cable, check fault limits for "Rifeness confirmation".
	53	Control travel difference	SID 23	7	Injection pump/actuator jammed or not connected. Difference between nominal/actual control travel is > 10 % of the overall control path.	Fault message (disappears when difference is < 10 %).	Check actuator/actuator rods / injection pump, replace if required. Check actuator cable.
	59	Auto calibration BOSCH-EDC pumps faulty operation	SID 23	13	No automatic actuator equalization possible. Incorrect input of the actuator reference values.	Engine stop / start lock. Governor cannot be taken into use. EDC actuator calibration required.	Check actuator and replaced if required. Check feedback cable. Check fault limits and reference values of the feedback. Program the fault limits for feedback, save the fault limits for feedback, save values. Switch ignition off and on again. Check again. If faulty, inform DEUTZ-Service and carry out automatic equalization again. Set fault limits again.

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-65. EMR2 Fault Codes - Sheet 3 of 5

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Hardware inputs/outputs	60	Digital output 3 (Switch-off solenoid, pin M 2)	SID 51	2	Fault (short circuit / cable break) at digital output.	Driver level is switched off.	Check cable of digital output (cable break or short circuit).
	62	Digital output 6, pin M 7	SID 60	2		Fault message.	
	63	Excess voltage switch-off solenoid	SID 51	6			
	67	Error Hand Setp1	91	11			
	68	Error CAN Setp1	898	2			
	Communication	70	CAN-Bus controller	SID 231	12	CAN-controller for CAN-bus is faulty. Fault removal despite re-initialising continuously not possible	Application-dependent.
71		CAN interface SAE J 1939	SID 231	9	Overflow in input buffer or a transmission cannot be placed on the bus.		Check CAN connection, cable connection. Check sensor and replace if required.
74		Cable break, short circuit or bus-error	SID 231	14			Switch ignition off and on again. Check again. If faulty inform DEUTZ Service
Memory	76	Parameter programming (write EEPROM)	SID 253	12	Fault in parameter programming in the governor fixed value memory.		
	77	Cyclic program test	SID 240	12	Constant monitoring of program memory shows error (so-called "Flash-test").	Emergency switch-off, engine cannot be started.	
	78	Cyclic RAM test	SID 254	2	Constant monitoring of working memory shows error.		Note values of parameters (3895 and 3896). Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-66. EMR2 Fault Codes - Sheet 4 of 5

SECTION 3 - CHASSIS & TURNTABLE

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Control unit hardware	80	Power supply (Actuator)	SID 254	2	Power supply for actuator not in the permissible range.	Fault message (disappears when power again in the normal range).	Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
	83	Reference voltage 1	SID 254	2	Reference voltage for actuator not in the permissible range.	Fault message (disappears when power again in the normal range). Auxiliary value 5 V	Check voltage supply. Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
	84	Reference voltage 2	SID 254	2			
	85	Reference voltage 4	SID 254	2			
		86	Internal temperature	171	12	Internal temperature for control unit not in permissible range.	Fault message (disappears when power again in the normal range).
	87	Atmospheric pressure	108	12	Atmospheric pressure not in permissible range.	Fault message (disappears when power again in normal range). Atmospheric pressure monitoring function de-activated.	Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
Program logic	90	Parameter fault (EEPROM retrieval or checksum faulty).	SID 253	2	No data found or checksum of data is faulty (note: fault only occurs during setting of parameter / saving or reset).	Engine cannot be started.	Check data for correct settings. Save parameters. Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
	93	Stack overflow	SID 240	2	Internal calculation fault (so-called "Stack overflow" fault).	Emergency switch-off. Engine cannot be started.	Note parameters (3897 and 3898). Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
	94	Internal fault	SID 254	2			

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-67. EMR2 Fault Codes - Sheet 5 of 5

3.19 GM ENGINE GENERAL MAINTENANCE

Maintenance of the Drive Belt

The serpentine drive belt utilizes a spring loaded tensioner which keeps the belt properly adjusted. The drive belt is an integral part of the cooling and charging systems and should be inspected frequently.

When inspecting the belts check for:

- Cracks or breaks
- Chunking of the belt
- Splits
- Material hanging from the belt
- Glazing and hardening
- Damaged or improperly aligned pulleys
- Improperly performing tensioner

Check the belt tensioner by pressing down on the midway point of the longest stretch between pulleys. The belt should not depress beyond 1/2 inch (13mm). If the depression is more than allowable adjust the tension.

NOTICE

THE ENGINE MANUFACTURER DOES NOT RECOMMEND THE USE OF "BELT DRESSING" OR "ANTI SLIPPING AGENTS" ON THE DRIVE BELT.

Engine Electrical System Maintenance

The engine electrical system incorporates computers and microprocessors to control the engine ignition, fuel control, and emissions. Due to the sensitivity of the computers to good electrical connections periodic inspection of the electrical wiring is necessary. When inspecting the electrical system use the following:

- Check and clean the battery terminal connections and insure the connections are tight
- Check the battery for any cracks or damage to the case
- Check the Positive and Negative battery cables for any corrosion build up, rubbing or chafing, check connection on the chassis to insure they are tight
- Check the entire engine wire harness for rubbing chafing, cuts or damaged connections, repair if necessary
- Check all wire harness connectors to insure they are fully seated and locked

- Check ignition coil and spark plug cables for hardening, cracking, chafing, separation, split boot covers and proper fit
- Replace spark plugs at the proper intervals as prescribed in the engine manufacturer's manual
- Check to make sure all electrical components are fitted securely
- Check the ground and platform control stations to insure all warning indicator lights are functioning

Checking/Filling Engine Oil Level

CAUTION

AN OVERFILLED CRANKCASE (OIL LEVEL OVER THE SPECIFIED FULL MARK) CAN CAUSE AN OIL LEAK, A FLUCTUATION OR DROP IN THE OIL PRESSURE, AND ROCKER ARM "CLATTER" IN THE ENGINE.

NOTICE

CARE MUST BE TAKEN WHEN CHECKING THE ENGINE OIL LEVEL. OIL LEVEL MUST BE MAINTAINED BETWEEN THE "ADD" MARK AND "FULL" MARK ON THE DIPSTICK.

To ensure that you are not getting a false reading, make sure the following steps are taken to before check the oil level.

1. Stop the engine if in use.
2. Allow sufficient time (approximately 5 minutes) for the oil to drain back into the oil pan.
3. Remove the dipstick. Wipe with a clean cloth or paper towel and reinstall. Push the dipstick all the way into the dipstick tube.
4. Remove the dipstick and note the oil level.
5. Oil level must be between the "FULL" and "ADD" marks.

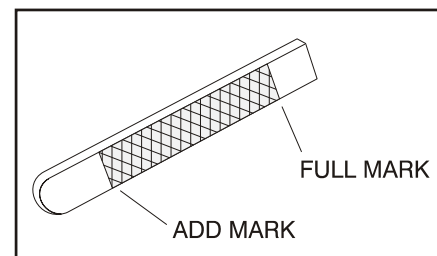


Figure 3-68. Engine Oil Dip Stick

6. If the oil level is below the "ADD" mark, proceed to Step 7 and 8 and reinstall the dipstick into the dipstick tube.
7. Remove the oil filter cap from the valve rocker arm cover.
8. Add the required amount of oil to bring the level up to but not over "FULL" mark on the dipstick.
9. Reinstall the oil fill cap to the valve rocker cover and wipe away any excess oil.

Changing The Engine Oil

NOTICE

WHEN CHANGING THE OIL, ALWAYS CHANGE THE OIL FILTER. CHANGE OIL WHEN THE ENGINE IS WARM FROM OPERATION AS THE OILS WILL FLOW FREELY AND CARRY AWAY MORE IMPURITIES.

To change the oil use the following steps:

1. Start the engine and run until it reaches normal operating temperature.
2. Stop the engine.
3. Remove the drain plug and allow the oil to drain.
4. Remove and discard the oil filter and its sealing ring.
5. Coat the sealing ring on the filter with clean engine oil and wipe the sealing surface on the filter mounting surface to remove any dust, dirt and debris. Tighten the filter securely (follow the filter manufacturers instructions). Do not over tighten.
6. Check the sealing ring on drain plug for any damage, replace if necessary, wipe the plug with a clean rag, and wipe the sealing surface on the pan and reinstall the pan plug. Do not over tighten.
7. Fill the crankcase with oil.
8. Start the engine and check for oil leaks.
9. Stop the engine and check the oil level to insure the oil level is at "FULL".
10. Dispose of the oil and filter in a safe manner.

Coolant Fill Procedure - Dual Fuel Engine


NOTICE

DAMAGE TO THE ENGINE COULD OCCUR IF NOT PROPERLY FILLED WITH COOLANT. LPG FUELED ENGINES ARE MOST PRONE TO CREATING AN AIR LOCK DURING A COOLANT FILL OPERATION DUE TO THE ELECTRONIC PRESSURE REGULATOR (EPR) BEING THE HIGHEST POINT IN THE COOLING SYSTEM. AN EPR THAT APPEARS TO HAVE FROST FORMING ON IT IS A SIGN THAT THE ENGINE COOLING SYSTEM CONTAINS AIR. THE APPEARANCE AND TEMPERATURE OF THE EPR SHOULD BE MONITORED DURING THE COOLANT FILL OPERATION. A WARM EPR IS AN INDICATION THAT THE COOLING SYSTEM IS PROPERLY FILLED AND FUNCTIONING.

CAUTION

MAKE SURE ENGINE IS COOL BEFORE PERFORMING ANY MAINTENANCE WORK.

1. Loosen the worm gear clamp on the coolant line running into the EPR as shown below and remove the hose from the EPR. Place a rag under the hose to prevent coolant from running onto the engine/machine.

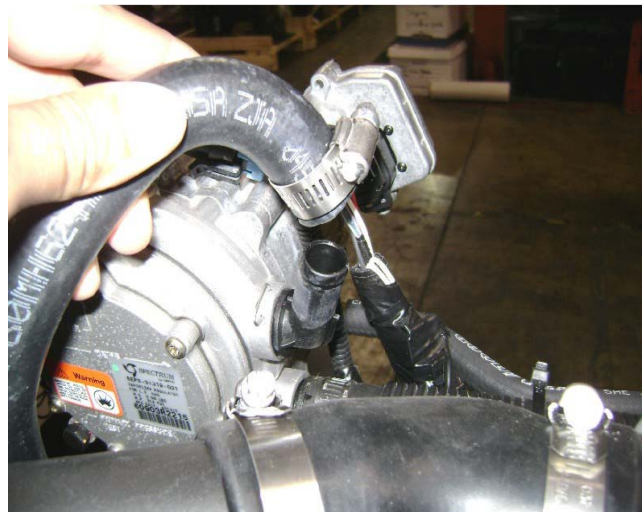

2. Remove the radiator cap. Fill the radiator with coolant until coolant starts to appear from the previously removed hose at the EPR. Reinstall the hose back onto the EPR and continue to fill radiator with coolant.



3. With the radiator cap still removed, start the engine and run until the thermostat opens. The thermostat opens at 170° F (77° C), which can be checked using the JLG handheld analyzer.

NOTICE

WHILE ENGINE IS RUNNING, AIR AND/OR STEAM MAY BE PRESENT COMING FROM THE RADIATOR. THIS IS NORMAL.

4. After running the engine for 5 minutes after it has reached operating temperature, shut the engine off and continue to step 5.

CAUTION

WITH THE ENGINE RUNNING OR WHEN SHUTTING OFF THE ENGINE, SOME HEATED COOLANT MAY SPILL OUT DUE TO AIR "BURPING" OUT OF THE SYSTEM WITH THE RADIATOR CAP OFF.

5. Next, verify that the 2 coolant hoses on the EPR are warm. If they are not warm repeat step 3 and 4, otherwise continue to step 6.

NOTICE

A PROPERLY PURGED COOLING SYSTEM WILL YIELD A WARM UPPER RADIATOR HOSE AND A WARM EPR HOSE. IF THE UPPER RADIATOR HOSE AND/OR EPR HOSE ARE NOT WARM TO THE TOUCH AFTER THE ENGINE HAS RUN FOR 5-8 MINUTES AFTER REACHING OPERATING TEMPERATURE, THE SYSTEM MAY STILL CONTAIN AIR. IT MAY BE NECESSARY TO REPEAT THE ABOVE STEPS.

6. Fill radiator with coolant as needed and install the radiator cap. Next, remove the cap off the coolant recovery bottle and fill just below the HOT FULL line and reinstall the caps.



3.20 GM ENGINE DUAL FUEL SYSTEM

The Dual Fuel system allows the operator to operate the vehicle on either gasoline or LPG by positioning a selector switch in the operator's platform. When the operator places the selector switch in the gasoline mode the gasoline fuel pump is energized. While in the gasoline mode the LPG fuel lock-off is isolated and will not energize. In addition the gasoline injector circuit is enabled and injector pulses are provided to each injector and the ECM calibration for gasoline is also enabled. When the operator selects the LPG mode the Low Pressure LPG lock-off is energized and fuel from the LPG tank flows to the Electronic Pressure Regulator (EPR). The EPR receives an electronic signal to position the secondary lever for the start or run positions and when the engine begins to crank the mixer air valve will rise and fuel will begin flowing to engine. During this mode the gasoline fuel pump is isolated and will not be activated. The primary components of the gasoline dual fuel system are the gasoline tank, electric fuel pump and filter, fuel supply line, injector rail and injectors and the fuel pressure regulator. The primary components of the LPG dual fuel system are the LPG fuel tank, in-fuel filter, LPG Low Pressure lock-off, Electronic Pressure Regulator (EPR) and the fuel mixer module. The LPG fuel system operates at pressures which range from 14.0 inches (355.60 mm) of water column up to 312 psi (21.5 BAR).

Components which are shared by both systems include the Electronic Throttle Control and the ECM. The ECM contains a dual calibration; one controls the gasoline fuel system during gasoline operation and one controls the LPG fuel system during LPG operation.

Fuel Filter

Propane fuel like all other motor fuels is subject to contamination from outside sources. Refueling of the equipment's tank and removal of the tank from the equipment can inadvertently introduce dirt and other foreign matter into the fuel system. It is therefore necessary to filter the fuel prior to entering the fuel system components downstream of the tank. An inline fuel filter has been installed in the fuel system to remove the dirt and foreign matter from the fuel. The inline filter is replaceable as a unit only. Maintenance of the filter is critical to proper operation of the fuel system and should be replaced as Section 1. In severe operating condition more frequent replacement of the filter may be necessary.

Electric Lock Off

The Electric Lock Off device is an integrated assembly. When energized the solenoid opens the valve and allows the Propane fuel to flow through the device. The valve opens during cranking and run cycles of the engine. The lock off supply voltage is controlled by the engine control module (ECM).


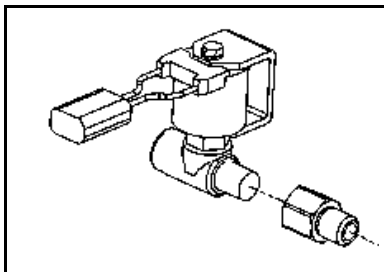


Figure 3-69. Electric Fuel Lock Off

EPR Assembly

The EPR assembly is a combination Low Pressure Regulator and a Voice Coil Assembly. The Voice coil is an electronic actuator which is controlled by an internal microprocessor. The microprocessor provides output data to the ECM and receives input data over a CAN BUS connection. The internal microprocessor receives electrical signals from the Fuel Pressure Sensor FPS and the Fuel Temperature Pressure FTP and communicates the data to the ECM. The ECM uses the FPS and FTP data to calculate the location of the secondary lever in the LPR and sends that data back to the EPR via the CAN BUS. The internal microprocessor in the EPR will then output a signal, which causes the voice coil to move and position the secondary lever to the correct location.

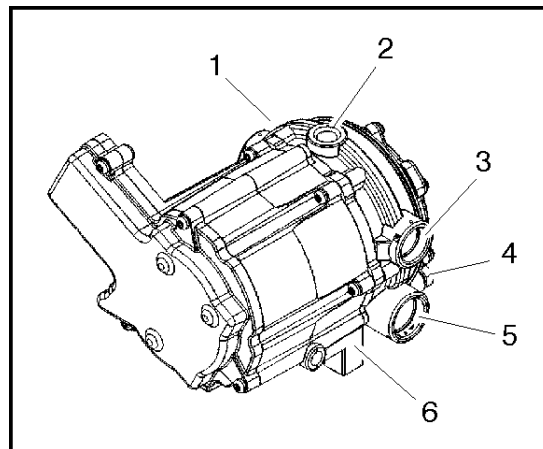

- | | |
|-------------------------------|------------------------|
| 1. Pressure Regulator Section | 4. Primary Test Port |
| 2. Fuel Inlet | 5. Secondary Test Port |
| 3. Coolant Passage | 6. Voice Coil Section |

Figure 3-70. EPR Assembly

Low Pressure Regulator (LPR)

The LPR is a combination vaporizer, pressure regulating device. The LPR is a negative pressure, two stage regulator that is normally closed when the engine is not running. When the engine is cranking or running, a partial vacuum is created in the fuel line which connects the regulator to the mixer. This partial vacuum opens the regulator permitting fuel to flow to the mixer.

Propane fuel enters the primary port of the LPR and passes through the primary jet and into the primary/exchanger chamber. As the propane passes through the heat exchanger the fuel expands and creates pressure inside the chamber. The pressure rises as the fuel expands when the pressure rises above 1.5 psi (10.34 kpa), sufficient pressure is exerted on the primary diaphragm to cause the diaphragm plate to pivot and press against the primary valve pin thus closing off the flow of fuel. This action causes the flow of fuel into the regulator to be regulated.

When the engine is cranking, sufficient vacuum will be introduced into the secondary chamber from the mixer drawing the secondary diaphragm down onto the spring loaded lever and opening the secondary valve allowing vaporized fuel to pass to the mixer. This mechanical action in conjunction with the EPR reactions causes the downward action on the secondary lever causing it to open wider allowing more fuel to flow to the mixer.

⚠ WARNING

THE VOICE COIL SECTION OF THE EPR ASSEMBLY IS AN EMISSIONS CONTROL DEVICE AND CANNOT BE REBUILT. IF THE COIL ASSEMBLY FAILS TO OPERATE PROPERLY, REPLACE IT WITH AN OEM REPLACEMENT PART ONLY.

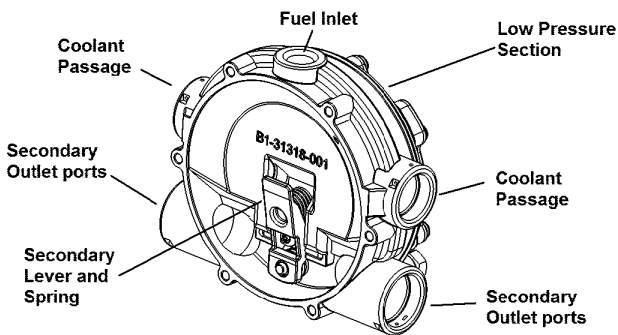


Figure 3-71. Low Pressure Regulators

Air Fuel Mixer

The air valve mixer is an air-fuel metering device and is completely self-contained. The mixer is an air valve design, utilizing a relatively constant pressure drop to draw fuel into the mixer from cranking to full load. The mixer is mounted in the air stream ahead of the throttle control device.

When the engine begins to crank, it draws in air with the air valve covering the inlet, negative pressure begins to build. This negative pressure signal is communicated to the top of the air valve chamber through 4 vacuum ports in the air valve assembly. A pressure/force imbalance begins to build across the air valve diaphragm between the air valve vacuum chamber and the atmospheric pressure below the diaphragm. The air valve vacuum spring is calibrated to generate from 4.0 inches (101.6 mm) of water column at start to as high as 14.0 inches (355.60 mm) of water column at full throttle. The vacuum being created is referred to as Air Valve Vacuum (AVV). As the air valve vacuum reaches 4.0 inches (101.6mm) of water column, the air valve begins to lift against the air valve spring. The amount of AVV generated is a direct result of the throttle position. At low engine speed the air valve vacuum is low and the air valve position is low thus creating a small venturi for the fuel to flow. As the engine speed increase the AVV increases and the air valve is lifted higher thus creating a much larger venturi. This air valve vacuum is communicated from the mixer venturi to the LPR secondary chamber via the low pressure fuel supply hose. As the AVV increases in the secondary chamber the secondary diaphragm is drawn further down forcing the secondary valve lever to open wider.

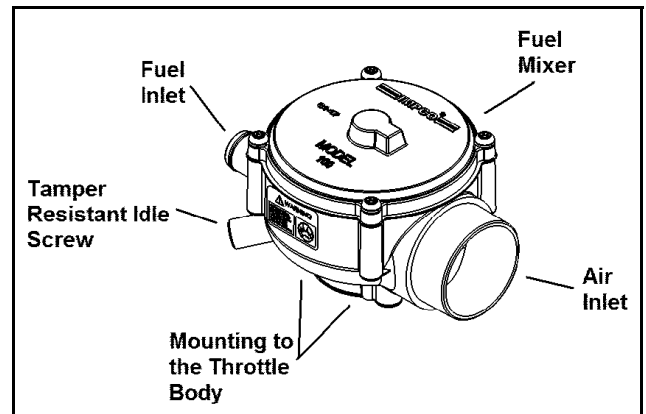


Figure 3-72. Air Fuel Mixer

Electronic Throttle Control (ETC)

Engine speed and load control is maintained by an ETC device. Speed and load control are determined by the ECM. Defaults programmed into the ECM software and throttle position sensors allow the ECM to maintain safe operating control over the engine. The Electronic Throttle Control device or "throttle body assembly" is connected to the intake manifold of the engine. The electronic throttle control device utilizes an electric motor connected to the throttle shaft. When the engine is running electrical signals are sent from the equipment controls to the engine ECM when the operator depresses an equipment function switch. The ECM then sends an electrical signal to the motor on the electronic throttle control to increase or decrease the angle of the throttle blade thus increasing or decreasing the air/fuel flow to the engine.

The electronic throttle control device also incorporates two internal Throttle Position Sensors (TPS) which provide output signals to the ECM as to the location of the throttle shaft and blade. The TPS information is used by the ECM to correct speed and load control as well as emission control.

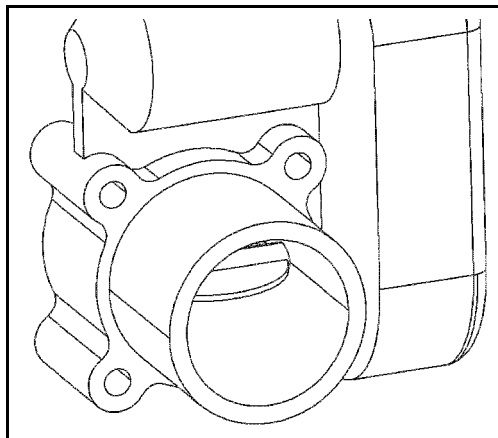


Figure 3-73. ETC throttle control device

Engine Control Module

To obtain maximum effect from the catalyst and accurate control of the air fuel ratio the emission certified engine is equipped with an onboard computer or Engine Control Unit (ECM). The ECM is a 32 bit controller which receives input data from sensors fitted to the engine and fuel system and then outputs various signals to control engine operation.

One specific function of the controller is to maintain "closed loop fuel control". Closed loop fuel control is accomplished when the exhaust gas oxygen sensor (HEGO) mounted in the exhaust system sends a voltage signal to the controller. The controller then calculates any correction that may need to be made to the air fuel ratio. The controller then outputs signals to the EPR to correct the amount of fuel being supplied to the mixer. At the same time the ECM may correct the throttle blade position to correct speed and load of the engine.

The controller also performs diagnostic functions on the fuel system and notifies the operator of malfunctions by turning on a Malfunction Indicator Light (MIL) mounted in the Ground Control Station and the Platform Control Station. Malfunctions in the system are identified by a Diagnostic Code number. In addition to notifying the operator of the malfunction in the system the controller also stores the information about the malfunction in its memory.

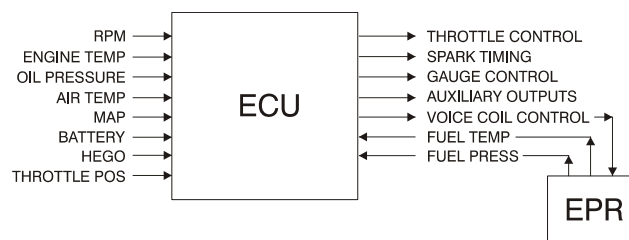


Figure 3-74. LPG Engine Control Unit (ECM)

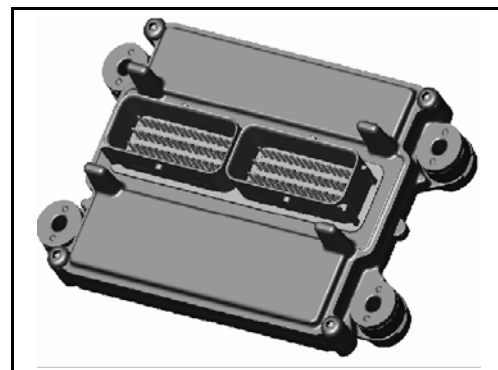


Figure 3-75. ECM Assembly

Heated Exhaust Gas Oxygen Sensor

There are two Heated Exhaust Gas Oxygen Sensors (HEGO). The first HEGO is mounted in the exhaust system downstream of the engine. It is used to measure the amount of oxygen present in the exhaust stream and communicate that to the ECM via an electrical signal. The amount of oxygen present in the exhaust stream indicates whether the fuel/air ratio is too rich or too lean. If the HEGO sensor signal indicates that the exhaust stream is too rich the ECM will decrease or lean the fuel mixture during engine operation, if the mixture is too lean the ECM will richen the mixture. The ECM continuously monitors the HEGO sensor output. If a rich or lean condition is present for an extended period of time, and the ECM cannot correct the condition, the ECM will set a diagnostic code and turn on the MIL light in control box.

The second HEGO is mounted in the exhaust system after the muffler. It measures the amount of oxygen in the exhaust system after the catalyst treatment has been completed in the muffler. If the ECM detects that the catalytic action in the muffler is not sufficient and fuel correction cannot correct the malfunction the MIL light is illuminated in the control box and a DTC code will be stored in the computer.

⚠ CAUTION

THE HEATED EXHAUST GAS OXYGEN SENSOR IS AN EMISSION CONTROL DEVICE. IF THE HEGO FAILS TO OPERATE, REPLACE IT WITH AN OEM REPLACEMENT PART. THE HEGO SENSOR IS SENSITIVE TO SILICONE OR SILICONE BASED PRODUCTS AND CAN BECOME CONTAMINATED. AVOID USING SILICONE SEALERS OR HOSES TREATED WITH SILICONE LUBRICANTS IN THE AIR STREAM OR FUEL LINES.

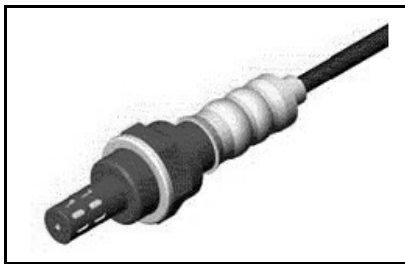


Figure 3-76. Heated Exhaust Gas Oxygen Sensor (HEGO)

Gasoline Multi Point Fuel Injection System (MPFI)

The primary components of the Gasoline Multi Point Fuel Injection (MPFI) fuel system are the fuel tank, electric fuel pump, fuel pressure and temperature sensor manifold, fuel filter and fuel rail.

Gasoline Fuel Pump

The Gasoline is stored as a liquid in the fuel tank and is drawn into the fuel system by an electric fuel pump. The fuel pump will receive a signal from the ECM to prime the fuel system for approximately 2 seconds prior to start. Priming of the fuel system provides for a quicker start, when the engine begins to crank.

Gasoline Pressure And Temperature Sensor Manifold

This engine is equipped with a fuel injector rail that does not have a pressure regulator or a return circuit to the fuel tank. Fuel pressure for this engine is regulated by the engine's ECM. The ECM receives fuel pressure and temperature feedback from the gasoline fuel sensor manifold and uses this information to control the ground side of the fuel pump. Fuel pressure is regulated by the ECM pulse width modulating (PWM) the fuel pump. The fuel pressure and temperature sensor manifold has a return or "bleed" circuit that connects back to the fuel tank. This circuit is used to bleed off any vapor that develops in the line and return a small amount of fuel to the tank. The fuel comes from the fuel tank and passes through the fuel pump. Fuel exits the fuel pump, passes through the filter and then enters the fuel pressure and temperature manifold assembly. Fuel flows through the feed circuit and is delivered to the fuel injector rail. Fuel that enters the bleed circuits through the bypass valve in the manifold is returned to the fuel tank.

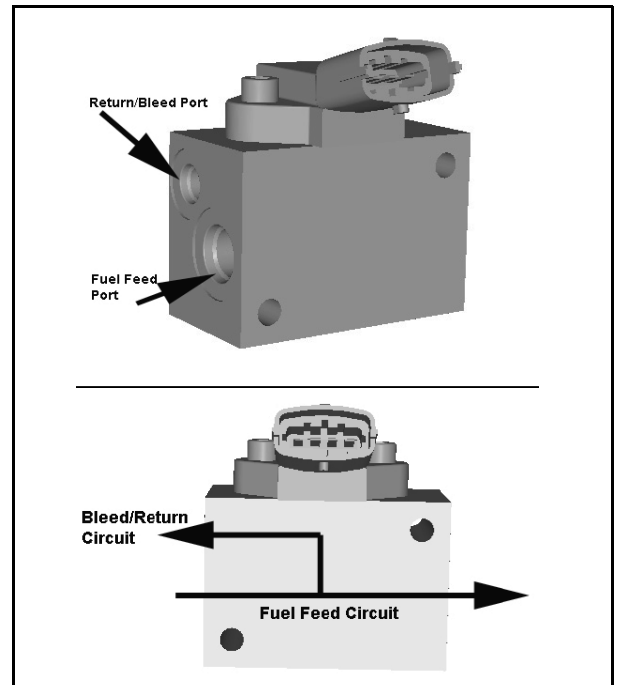


Figure 3-77. Gasoline Fuel Pressure and Temperature Manifold Assembly

Fuel Filter

After the fuel is drawn into the fuel pump, the fuel flows through the gasoline fuel filter. The fuel filter will trap small particles as the fuel passes through the filter to remove debris and prevents the fuel pressure and temperature manifold and fuel injectors from becoming damaged. Maintenance of the fuel filter is required as indicated in Section 1.

Fuel Injector Rail

Fuel flows from the fuel pressure and temperature manifold assembly to the fuel rails where the fuel is delivered to the fuel injectors. The fuel rail also contains a Schrader valve which is utilized to test the regulated pressure of the fuel system.

Fuel Injector

The fuel supply is maintained on the top of the injector from the injector rail. The injector is fed a "pulse" signal through the wire harness which causes the injector to open. During regular operating conditions the ECM controls the opening and duration of opening of the injector. During lower RPM operation the injector signals or "pulses" are less frequent than when the engine is operating at higher RPMs. The engine has been calibrated to deliver the precise amount of fuel for optimum performance and emission control.

3.21 GM ENGINE FUEL SYSTEM REPAIR

Propane Fuel System Pressure Relief

⚠ CAUTION

THE PROPANE FUEL SYSTEM OPERATES AT PRESSURES UP TO 312 PSI (21.5 BAR). TO MINIMIZE THE RISK OF FIRE AND PERSONAL INJURY, RELIEVE THE PROPANE FUEL SYSTEM PRESSURE (WHERE APPLICABLE) BEFORE SERVICING THE PROPANE FUEL SYSTEM COMPONENTS.

To relieve propane fuel system pressure:

1. Close the manual shut-off valve on the propane fuel tank.
2. Start and run the vehicle until the engine stalls.
3. Turn the ignition switch OFF.

NOTICE

RESIDUAL VAPOR PRESSURE WILL BE PRESENT IN THE FUEL SYSTEM. ENSURE THE WORK AREA IS WELL VENTILATED BEFORE DISCONNECTING ANY FUEL LINE.


Propane Fuel System Leak Test

⚠ CAUTION

NEVER USE AN OPEN FLAME OF ANY TYPE TO CHECK FOR PROPANE FUEL SYSTEM LEAKS.

Always inspect the propane fuel system for leaks after performing service. Check for leaks at the fittings of the serviced or replaced component. Use a commercially available liquid leak detector or an electronic leak detector. When using both methods, use the electronic leak detector first to avoid contamination by the liquid leak detector.

Propane Fuel Filter Replacement

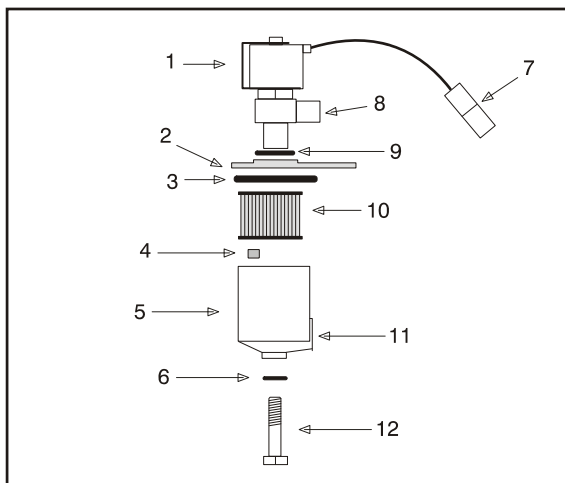

- | | |
|-------------------------------|-------------------------|
| 1. Electric Lock Off Solenoid | 7. Electrical Connector |
| 2. Mounting Plate | 8. Fuel Outlet |
| 3. Housing Seal | 9. O-ring |
| 4. Filter Magnet | 10. Filter |
| 5. Filter Housing | 11. Fuel Inlet |
| 6. Seal | 12. Retaining Bolt |

Figure 3-78. Filter Lock Assembly

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly loosen the Filter housing retaining bolt and remove it.
4. Pull the filter housing from the Electric lock off assembly.
5. Locate Filter magnet and remove it.
6. Remove the filter from the housing.
7. Remove and discard the housing seal.
8. Remove and discard the retaining bolt seal.
9. Remove and discard mounting plate to lock off O-ring seal.

INSTALLATION


NOTICE

BE SURE TO REINSTALL THE FILTER MAGNET INTO THE HOUSING BEFORE INSTALLING NEW SEAL.

1. Install the mounting plate to lock off O-ring seal.
2. Install the retaining bolt seal.
3. Install the housing seal.

4. Drop the magnet into the bottom of the filter housing.
5. Install the filter into the housing.
6. Install the retaining bolt into the filter housing.
7. Install the filter up to the bottom of the electric lock off.
8. Tighten the filter retaining bolt to 106 in lbs (12 Nm).
9. Open manual shut-off valve. Start the vehicle and leak check the propane fuel system at each serviced fitting Refer to Propane Fuel System Leak Test.

Electronic Pressure Regulator (EPR) Assembly Replacement

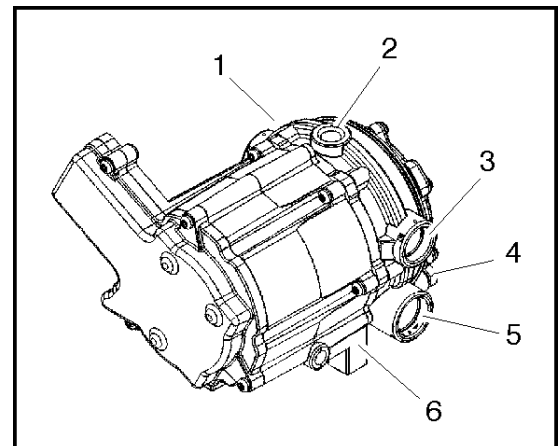

- | | |
|-------------------------------|------------------------|
| 1. Pressure Regulator Section | 4. Primary Test Port |
| 2. Fuel Inlet | 5. Secondary Test Port |
| 3. Coolant Passage | 6. Voice Coil Section |

Figure 3-79. EPR Assembly

The EPR assembly is a made up of two separate components. The Voice Coil Section is not serviceable and can only be replaced as an assembly. The pressure regulator section is serviceable and will be detailed in this section.

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly remove the fuel inlet fitting at the Electric Lock Off.

NOTE: Residual vapor pressure will be present in the fuel system.

4. Disconnect the electrical connector to the Electric Lock off .

SECTION 3 - CHASSIS & TURNTABLE

5. Remove the Electric Lock Off from the regulator.
6. Remove the lock pin from the vapor fitting on the regulator housing and remove the fitting and hose and retain the pin.
7. Remove the lock pin from the pressure sensor on the regulator housing and remove the Sensor and retain the pin.
8. Using a clamp pliers pinch off the hoses on the coolant lines to the regulator
9. Remove the lock pin from both the water fittings on the regulator housing and remove the fittings and hoses and retain the pin
10. Disconnect the EPR electrical connector
11. Remove the (3) three nuts from the EPR isolators and the EPR mounting bracket
12. Remove the EPR from the bracket
13. Remove the (3) three mounting isolators

INSTALLATION

NOTICE

DO NOT USE TEFLON TAPE ON ANY FUEL FITTING. USE A LIQUID PIPE THREAD SEALANT WHEN INSTALLING FITTINGS.

CHECK ALL THE O-RINGS ON THE VAPOR AND WATER FITTINGS FOR ANY DAMAGE REPLACE IF NECESSARY.

LUBE ALL THE O-RINGS WITH AN O-RING LUBE BEFORE INSTALLING.

1. Install the three (3) rubber isolators to the bottom of the EPR
2. Install the EPR assembly to the bracket and tighten the retaining nuts.

NOTE: *Do not over tighten the isolators and cause a separation of the isolators.*

3. Install the fuel temperature sensor into the regulator opening and lock in place with the locking pin, connect the electrical connector.
4. Insert the fuel vapor line and fitting into the regulator port and lock in place with the locking pin.
5. Install both the water hoses and fittings into the regulator and lock in place with the locking pin remove the clamp pliers from the hoses.
6. Install the electric lock off into the regulator inlet and tighten into proper location, connect the electrical connector.
7. Connect the fuel supply line and tighten until fully seated.

8. Connect the EPR electrical connector.
9. Open the manual valve.
10. Start the vehicle and leak check the propane fuel system at each serviced fitting Refer to Propane Fuel System Leak Test.

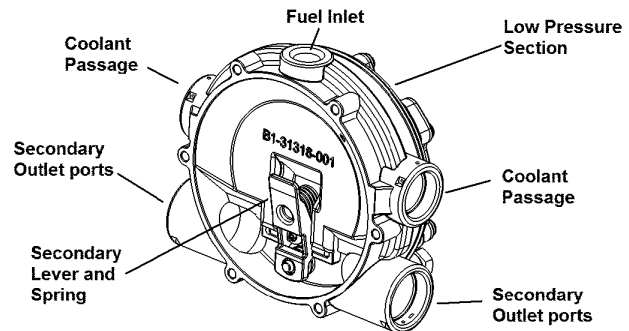


Figure 3-80. Pressure Regulator Section

PRESSURE REGULATOR SECTION REMOVAL

1. Remove the EPR refer to EPR Removal Procedure.
2. Remove the six (6) regulator to voice coil screws using the special tool and separate the regulator from the actuator.

NOTICE

DO NOT REMOVE THE SECONDARY DIAPHRAGM RETAINING PLATE AND DIAPHRAGM THIS WILL VOID THE WARRANTY OF THE ACTUATOR SECTION.

PRESSURE REGULATOR SECTION INSTALLATION

1. Install the regulator to the actuator section using the six (6) retaining screws and tighten 70 in lbs (8 Nm).
2. Install the EPR refer to EPR Installation.

Temperature Manifold Absolute Pressure (TMAP) Sensor

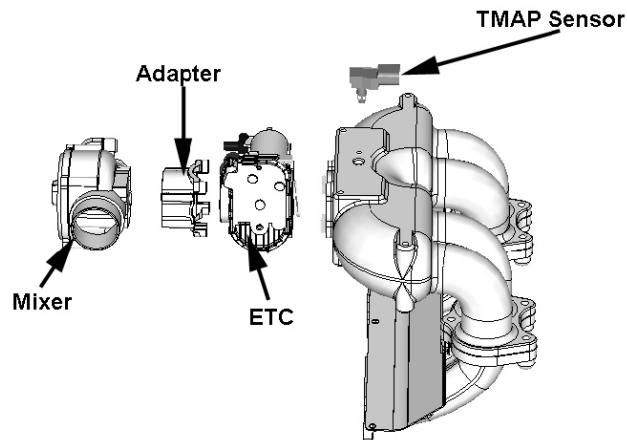


Figure 3-81. (TMAP) Sensor & Electronic Throttle Control (ETC)

REMOVAL

1. Disconnect the TMAP electrical connector.
2. Remove the two retaining bolts.
3. Remove the TMAP.

INSTALLATION

NOTE: Apply a small amount of O-ring lubricant before installation.

1. Install in the TMAP.
2. Tighten retaining bolts to 62 lb-in (7 Nm).
3. Start the vehicle and check for proper operation.

Electronic Throttle Control Replacement

See Figure 3-81.

REMOVAL

1. Disconnect the negative battery cable.
2. Remove the air intake duct.
3. Release the hose clamp on the vapor fuel line and remove the vapor hose.
4. Disconnect the TMAP electrical connector.
5. Disconnect the electronic throttle control connector.
6. Remove the manifold to throttle body adapter bolts and remove the throttle body mixer assembly.
7. Pull the throttle body assembly from the adapter.
8. Remove electronic throttle control device.
9. Remove the O-rings gasket and discard.

INSTALLATION

NOTICE

LIGHTLY LUBRICATE BOTH THROTTLE CONTROL DEVICE TO ADAPTER O-RINGS.

1. Install the O-ring on throttle body. Press it down to the bottom of the surface.




SECTION 3 - CHASSIS & TURNTABLE

2. Install the two quad seals. Install one seal at a time to insure the seal does not roll. The seal must sit flat on the throttle body.



3. Attach mixer and throttle body together. The two parts do not bolt together; they will be secured when you mount it on the intake. Notice the orientation of the air inlet and throttle body cover.

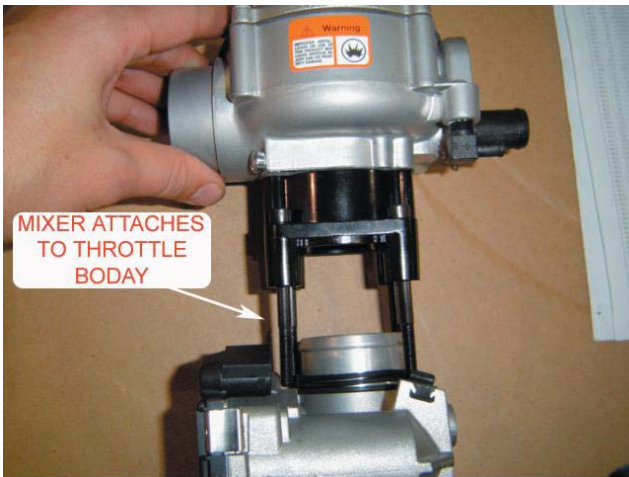

4. Place gasket on intake manifold and attach mixer/throttle assembly to manifold.

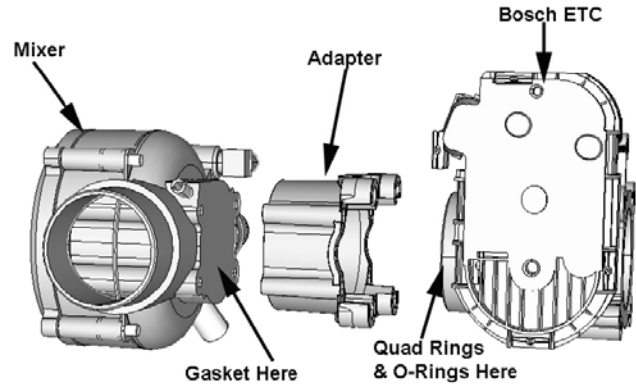


Figure 3-82. Mixer Assembly

Mixer Replacement

See Figure 3-82.

REMOVAL

1. Remove the Throttle control device Refer to Electronic Throttle Body Replacement.
2. Remove the four (4) bolts to the throttle control device to mixer adapter bolts.
3. Remove and discard the mixer to adapter gasket.

INSTALLATION

NOTICE

COVER THROTTLE BODY ADAPTER OPENING TO PREVENT DEBRIS FROM ENTERING ENGINE UNTIL REASSEMBLY.

1. Install Mixer to adapter gasket onto the mixer.
2. Install the mixer to the throttle control device to mixer adapter and secure with the 4 retaining screws. Tighten 80 lb-in (9 Nm)
3. Install Throttle body. Refer to Electronic Throttle Control Device Replacement.
4. Start the engine and leak check all fittings and connections.

Coolant Hose Replacement

REMOVAL

1. Drain the coolant.
2. Using hose clamp pliers, disconnect both hose clamps on each hose.
3. Remove the hose from each of the fittings.

INSTALLATION

NOTE: Use hose material and lengths specified by JLG.

1. Install the hose clamps to each hose and set the clamp back on each hose to make installation easier.
2. Fit the hose to the fittings.
3. Secure by positioning each of the clamps.

Vapor Hose Replacement

REMOVAL

1. Using hose clamp pliers disconnect both hose clamps.
2. Remove the vapor hose from each fitting.

INSTALLATION

NOTICE

THE VAPOR SUPPLY HOSE IS SPECIFICALLY DESIGNED, DO NOT USE HOSE MATERIAL OR LENGTH OTHER THAN JLG SPECIFIED PARTS.

1. Install hose clamps and set back on each hose.
2. Reinstall the vapor hose to each fitting.
3. Reset clamps.
4. Start engine and check for leaks.

Engine Control Module Replacement

REMOVAL

1. Disconnect Negative battery cable.
2. Remove controller from mounting bracket.
3. Push connector lock back to unlock connector.
4. Unplug controller and remove.

INSTALLATION

NOTICE

THE CONTROLLER IS CALIBRATED FOR EACH ENGINE VERIFY YOU HAVE THE CORRECT CONTROLLER

1. Plug connector into controller.
2. Push lock into place.
3. Mount controller into mounting bracket.
4. Reconnect the battery cable.
5. Start engine.
6. Check for any DTC codes and clear.
7. Verify engine is in closed loop and no warning lights are illuminated.

Heated Exhaust Gas Oxygen Sensor Replacement

REMOVAL

1. Disconnect Negative battery cable.
2. Disconnect the O2 sensor electrical connector.
3. Using an O2 Sensor socket, remove the O2 Sensor and discard.

INSTALLATION

NOTICE

BEFORE INSTALL THE O2 SENSOR LUBRICATE THREADS WITH ANTI-SEIZE COMPOUND GM P/N 5613695 OR EQUIVALENT. AVOID GETTING COMPOUND ON THE SENSOR TIP.

1. Install O2 sensor. Tighten to 30 lb-ft (41 Nm).
2. Start engine.
3. Check for any DTC codes and clear.
4. Verify engine is in closed loop and no warning lights are illuminated.

3.22 LP GAS FITTING INSPECTION

NOTICE

USE ALL APPLICABLE SAFETY PRECAUTIONS WHILE WORKING ON, UNDER, OR AROUND ANY MACHINERY.

CAUTION


DO NOT SMOKE DURING THIS PROCEDURE.

1. Position the machine on a firm, level surface in a well-ventilated area free from any heat sources.
2. Lower the platform to the stowed position.
3. Depress the Emergency Stop button at the ground control panel and remove the key from the key switch.

CAUTION

ENSURE THE ENGINE IS COOL PRIOR TO PERFORMING THIS INSPECTION.

4. Locate the 2-1/2" straight fitting between the LP gas lockoff valve and the LP gas mixer. Refer to Figure 3-83., LP Gas Fitting Components.

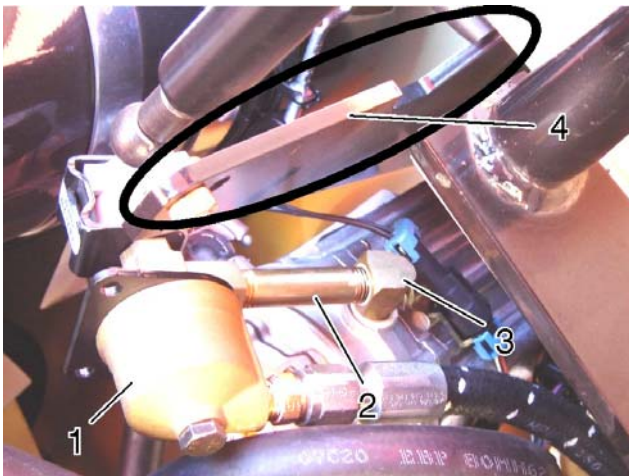

1. LP Gas Lockoff Valve
2. 1/4" NPT x 2-1/2" Straight Fitting
3. 1/4" NPT x 1/4" SPT x 90 Degree Elbow
4. Hood Mounting Bracket

Figure 3-83. LP Gas Fitting Components


5. Refer to Figure 3-83., LP Gas Fitting Components and ensure that the hood-mounting bracket does not interfere with the 1/4" NPT X 2-1/2" straight tube fitting (JLG P/N 70001531).
6. Refer to Figure 3-84., Hood Mounting Bracket Clearance. If adequate clearance **DOES EXIST** between

the straight tube fitting and the hood-mounting bracket, proceed to Step 10. If adequate clearance **DOES NOT EXIST** between the straight tube fitting and the hood-mounting bracket, proceed to Step 7.

NOTICE

ENSURE THE LP GAS SUPPLY AT THE LP TANK IS CLOSED OFF PRIOR TO PROCEEDING.

7. As necessary, disassemble the LP gas system between the lock-off valve and the LP mixer to allow for reorientation of the 1/4" NPT X 1/4" SPT X 90 degree elbow (JLG P/N 70001307).
8. Properly clean all old thread sealant from the LP gas fittings.
9. Apply Permatex Thread Sealant (Permatex P/N 56525) to the LP gas fittings. Reassemble, allowing for proper clearance of the hood-mounting bracket and the LP gas system that was disassembled in Step 7. Refer to Figure 3-84., Hood Mounting Bracket Clearance for proper clearance. Properly tighten all LP gas connections.

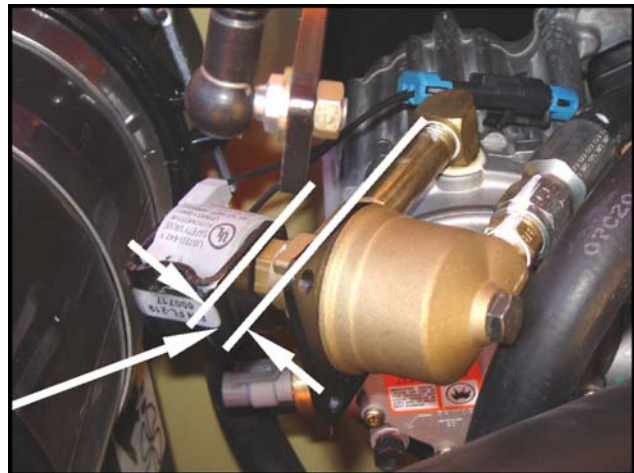

Make sure there is a minimum of 0.5 inches (13 mm) clearance between the hood mounting bracket and the straight tube fitting.

Figure 3-84. Hood Mounting Bracket Clearance

10. Check the LP system for evidence of leaks. If any leaks are detected, properly repair them prior to returning the unit to service.

3.23 GM ENGINE LPG FUEL SYSTEM DIAGNOSIS

Fuel System Description

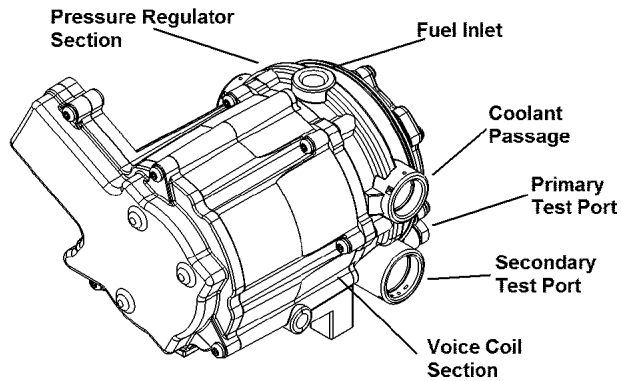


Figure 3-85. EPR Assembly

To maintain fuel and emission control on the LPG fuel system the Engine Control Units (ECM) relies on numerous engine sensor and output data from the Electronic Pressure Regulator (EPR). The ECM will then determine the target fuel calibration and command the EPR to reposition the voice coil to the proper position which, subsequently reposition the secondary lever in the pressure regulator to maintain proper control. The EPR and ECM will continue to communicate back and forth during normal operation.

In the event that the EPR fails to communicate or the Communications Area Network (CAN) cable fails to transmit data the regulator will operate in an open loop configuration. As the air valve vacuum in the mixer venturi is communicated to the secondary chamber of the regulator the secondary diaphragm will be drawn in a downwards motion. This downward motion will cause the secondary lever to open thus allowing more fuel to enter the mixer.

In the (LPR) the fuel is vaporized and the pressure reduced in two stages. The first stage reduces the pressure to approximately 1.0 to 3.0 psi (6.8 to 20.6 kPa). The second stage reduces the pressure to approximately negative 1.5" of water column.

The fuel is then drawn from the secondary chamber of the LPR by the vacuum generated by air flowing through the mixer. This vacuum signal is also used to generate lift for the mixer air valve. This vacuum signal is most commonly referred to as air valve vacuum. In the mixer, the fuel mixes with the air entering the engine. This air/ fuel mixture is then drawn into the engine for combustion.

Diagnostic Aids

This procedure is intended to diagnose a vehicle operating on LPG. If the vehicle will not continue to run on LPG, refer to Hard Start for preliminary checks. Before proceeding with this procedure, verify that the vehicle has a sufficient quantity of fuel and that liquid fuel is being delivered to the LPR. Also, ensure that the manual shut off valve on the LPG tank is fully opened and that the excess flow valve has not been activated.

Tools Required:

- 7/16 Open end wrench (for test port plugs)
- DVOM (GM J 39200, Fluke 88 or equivalent).
- 12 volt test light

Diagnostic Scan Tool

- Diagnostic Display tool.

Pressure Gauges

- IMPCO ITK-2 Test kit
- Water Column Gauge / Manometer (GM 7333-6 or equivalent).
- 0-10 PSI Gauge

Test Description

The numbers below refer to step numbers on the diagnostic table.

5. This step determines if the LPR requires replacement
6. This step determines if the problems are in the mechanical side of the Pressure Regulator or the Electronic Voice Coil
10. This step determines if the Mixer requires replacement
14. This step determines if the Lock Off requires replacement
17. This step determines if the Fuel Filter requires replacement.

SECTION 3 - CHASSIS & TURNTABLE

Table 3-12. LPF Fuel System Diagnosis

STEP	ACTION	VALUE(S)	YES	NO
1	Were you referred to this procedure by a DTC diagnostic chart?	--	Go to Step 3	Go to Step 2
2	Perform the On Board Diagnostic (OBD) System Check. Are any DTCs present in the ECM?	--	Go to the applicable DTC Table	Go to Step 3
3	Verify that the LPG fuel tank has a minimum of 1/4 tank of fuel, that the manual valve is open and the tank quick connect is fully engaged Does the vehicle have fuel?	--	Go to Step 4	--
4	1. Connect a water column gauge or a manometer to the secondary test port of the low pressure regulator (LPR). 2. Start the engine and allow it to reach operating temperature. Does the engine start and run?	--	Go to Step 5	Go to Step 8
5	With the engine idling, observe the pressure reading for the LPR secondary pressure. Does the fuel pressure fluctuate rhythmically OUTSIDE the specified range?	-1.0" to -2.0" w.c	Go to Step 25	Go to Step 6
6	1. Disconnect the EPR electrical connectors. NOTE: This action will cause a DTC to be set by the ECM 2. With the engine idling observe the pressure reading on the secondary test port. Is the fuel pressure WITHIN the specified range?	-1.0" to -2.0" w.c	Go to Fuel Control System Diagnosis	Go to Step 7
7	1. Inspect the air intake stream between the mixer assembly and the throttle body for leaks. 2. Inspect the fuel hose connection between the LPR and mixer assembly for damage or leakage. 3. Inspect any vacuum hoses for leaks Was a problem found and corrected?	--	Go to Step 26	Go to Step 22
8	1. Connect a water column gauge or a manometer to the secondary test port of the low pressure regulator (LPR). 2. Crank the engine and observe the pressure reading for the LPR secondary pressure. Does the fuel pressure indicate a vacuum is present?	--	Go to Step 12	Go to Step 9
9	1. Remove Air induction hose to the mixer 2. Observe the air valve for movement while the engine is cranking. Note: Movement of the air valve will be minimal at cranking speeds. Does the air valve move when the engine is cranked?	--	Go to Step 11	Go to Step 10
10	1. Inspect the air intake stream to the mixer assembly and the throttle body for vacuum leaks. 2. Inspect the vacuum hoses from the mixer for proper connection and condition. Was a problem found and repaired?	--	Go to Step 26	Go to Step 24
11	Inspect the fuel hose connection between the LPR and the mixer assembly for damage or leakage. Was a problem found and repaired?	--	Go to Step 26	Go to Step 12
12	1. Connect a 0-10 psi gauge to the primary test port of the low pressure regulator (LPR). 2. Crank the engine and observe the pressure reading for the LPR primary pressure. Is the fuel pressure ABOVE the specified value?	1-3 PSI	Go to Step 22	Go to Step 13

Table 3-12. LPF Fuel System Diagnosis

STEP	ACTION	VALUE(S)	YES	NO
13	1. Turn OFF the ignition. 2. Disconnect the LPL connector. 3. Install a test light between the pins of the LPL connector. 4. Crank the engine. The test light should illuminate. Does the test light illuminate?	--	Go to Step 14	Go to Step 16
14	Using a DVOM, check the resistance of the low pressure lock-off (LPL). Is the resistance within the specified range?	12W - 16W	Go to Step 15	Go to Step 23
15	1. Turn the ignition OFF. 2. Close the manual shut-off valve on the LPG tank. CAUTION: When disconnecting LPG fuel lines, liquid LPG may be present. Perform this step in a well ventilated area. 3. Loosen the fuel inlet hose fitting at the inlet of the LPL. Was fuel present when the fitting was loosened?	--	Go to Step 23	Go to Step 17
16	1. Turn OFF the ignition. 2. Connect the test light to chassis ground and probe pin A of the LPL connector. 3. Crank the engine. The test light should illuminate. Does the test light illuminate?	--	Go to Step 20	Go to Step 21
17	1. Remove the LPG fuel filter / LPL. 2. Remove the filter from the LPL. 3. Empty the contents of the inlet side of the LPG fuel filter onto a clean surface. 4. Inspect the contents of the LPG fuel filter for an excessive amount of foreign material or water. If necessary, locate and repair the source of contamination. 5. Verify the LPG fuel filter is not restricted or plugged. Was a problem found?	--	Go to Step 19	Go to Step 18
18	The fuel supply system or hoses are plugged or restricted, locate and repair the problem. Is the action complete?	--	Go to Step 26	--
19	Replace the fuel filter. Refer to Fuel Filter Replacement. Is the action complete?	--	Go to Step 26	--
20	Repair the open in the lock-off ground circuit. Is the action complete?	--	Go to Step 26	--
21	Repair the open in the lock-off power circuit. Is the action complete?	--	Go to Step 26	--
22	Replace the low pressure regulator (LPR). Refer to Low Pressure Regulator Replacement. Is the action complete?	--	Go to Step 26	--
23	Replace the lock-off. Refer to Lock-off Replacement. Is the action complete?	--	Go to Step 26	--
24	Replace the mixer assembly. Refer to Fuel Mixer Replacement. Is the action complete?	--	Go to Step 26	--

SECTION 3 - CHASSIS & TURNTABLE

Table 3-12. LPF Fuel System Diagnosis

STEP	ACTION	VALUE(S)	YES	NO
25	<p>The fuel supply system is operating normally, if a failure of the control solenoids is suspected. Refer to Fuel Control System Diagnosis.</p> <p>1. Install the test plug in the LPR secondary chamber. 2. If you were sent to this routine by another diagnostic chart, return to the previous diagnostic procedure. Is the action complete?</p>	--	System OK	--
26	<p>1. Disconnect all test equipment 2. Install the primary and secondary test port plugs. 3. Start the engine. 4. Using SNOOP or equivalent, leak check the test port plugs. Is the action complete?</p>	--	System OK	--

Table 3-13. Symptom Diagnosis

Checks	Action
Important Preliminary Checks	
Before Using This Section	<p>Before using this section, you should have performed On Board Diagnostic Check and determined that:</p> <ol style="list-style-type: none"> 1. The Control Module and MIL (Malfunction Indicator Lamp) are operating correctly. 2. There are no Diagnostic Trouble Codes (DTCs) stored, or a DTC exists but without a MIL. <p>Several of the following symptom procedures call for a careful visual and physical check. The visual and physical checks are very important. The checks can lead to correcting a problem without further checks that may save valuable time.</p>
LPG Fuel System Check	<ol style="list-style-type: none"> 1. Verify the customer complaint. 2. Locate the correct symptom table. 3. Check the items indicated under that symptom. 4. Operate the vehicle under the conditions the symptom occurs. Verify HEGO switching between lean and rich. <p>IMPORTANT! Normal HEGO switching indicates the LPG fuel system is in closed loop and operating correctly at that time.</p>
Visual and Physical Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check all ECM system fuses and circuit breakers. <input type="checkbox"/> Check the ECM ground for being clean, tight and in its proper location. <input type="checkbox"/> Check the vacuum hoses for splits, kinks and proper connections. <input type="checkbox"/> Check thoroughly for any type of leak or restriction. <input type="checkbox"/> Check for air leaks at all the mounting areas of the intake manifold sealing surfaces. <input type="checkbox"/> Check for proper installation of the mixer module assembly. <input type="checkbox"/> Check for air leaks at the mixer assembly. <input type="checkbox"/> Check the ignition wires for the following conditions: <ul style="list-style-type: none"> - Cracking - Hardness - Proper routing - Carbon tracking <input type="checkbox"/> Check the wiring for the following items: <ul style="list-style-type: none"> - Proper connections, pinches or cuts. <input type="checkbox"/> The following symptom tables contain groups of possible causes for each symptom. The order of these procedures is not important. If the scan tool readings do not indicate the problems, then proceed in a logical order, easiest to check or most likely to cause first.
Intermittent	
DEFINITION: The problem may or may not turn ON the Malfunction Indicator Lamp (MIL) or store a Diagnostic Trouble Code (DTC).	
Preliminary Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Refer to Important Preliminary Checks. <input type="checkbox"/> Do not use the DTC tables. If a fault is an intermittent, the use of the DTC tables may result in the replacement of good parts.
Faulty Electrical Connections or Wiring	<ul style="list-style-type: none"> <input type="checkbox"/> Faulty electrical connections or wiring can cause most intermittent problems. <input type="checkbox"/> Check the suspected circuit for the following conditions: <ul style="list-style-type: none"> - Faulty fuse or circuit breaker - Connectors poorly mated - Terminals not fully seated in the connector (backed out) - Terminals not properly formed or damaged - Terminal to wires poorly connected - Terminal tension insufficient. <input type="checkbox"/> Carefully remove all the connector terminals in the problem circuit in order to ensure the proper contact tension. If necessary, replace all the connector terminals in the problem circuit in order to ensure the proper contact tension. <input type="checkbox"/> Checking for poor terminal to wire connections requires removing the terminal from the connector body.
Operational Test	<p>If a visual and physical check does not locate the cause of the problem, drive the vehicle with a scan tool. When the problem occurs, an abnormal voltage or scan reading indicates the problem may be in that circuit.</p>

SECTION 3 - CHASSIS & TURNTABLE

Table 3-13. Symptom Diagnosis

Checks	Action
Intermittent Malfunction Indicator Lamp (MIL)	<p>The following components can cause intermittent MIL and no DTC(s):</p> <ul style="list-style-type: none"> <input type="checkbox"/> A defective relay, Control Module driven solenoid, or a switch that can cause electrical system interference. Normally, the problem will occur when the faulty component is operating. <input type="checkbox"/> The improper installation of electrical devices, such as lights, 2-way radios, electric motors, etc. <input type="checkbox"/> The ignition secondary voltage shorted to a ground. <input type="checkbox"/> The Malfunction Indicator Lamp (MIL) circuit or the Diagnostic Test Terminal intermittently shorted to ground. <input type="checkbox"/> The Control Module grounds.
Loss of DTC Memory	<p>To check for the loss of the DTC Memory:</p> <ol style="list-style-type: none"> 1. Disconnect the TMAP sensor. 2. Idle the engine until the Malfunction Indicator Lamp illuminates. <p>The ECM should store a TMAP DTC. The TMAP DTC should remain in the memory when the ignition is turned OFF. If the TMAP DTC does not store and remain, the ECM is faulty</p>
Additional Checks	
No Start	
DEFINITION: The engine cranks OK <input type="checkbox"/> but does not start.	
Preliminary Checks	Refer to Important Preliminary Checks.
Control Module Checks	<p>If a scan tool is available:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for proper communication with both the ECM <input type="checkbox"/> Check the fuse in the ECM battery power circuit. Refer to Engine Controls Schematics. <input type="checkbox"/> Check battery power, ignition power and ground circuits to the ECM. Refer to Engine Control Schematics. Verify voltage and/or continuity for each circuit.
Sensor Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the TMAP sensor. <input type="checkbox"/> Check the Magnetic pickup sensor (RPM).
Fuel System Checks	<p>Important: A closed LPG manual fuel shut off valve will create a no start condition.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for air intake system leakage between the mixer and the throttle body. <input type="checkbox"/> Verify proper operation of the low pressure lock-off solenoids. <input type="checkbox"/> Check the fuel system pressures. Refer to the LPG Fuel System Diagnosis. <input type="checkbox"/> Check for proper mixer air valve operation.
Ignition System Checks	<p>Note: LPG being a gaseous fuel requires higher secondary ignition system voltages for the equivalent gasoline operating conditions.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for the proper ignition voltage output with J 26792 or the equivalent. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check the spark plugs for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Heavy deposits <input type="checkbox"/> Check for bare or shorted ignition wires. <input type="checkbox"/> Check for loose ignition coil connections at the coil.
Engine Mechanical Checks	<p>Important: The LPG Fuel system works on a fumigation principle of fuel introduction and is more sensitive to intake manifold leakage than the gasoline fuel supply system.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for the following: <ul style="list-style-type: none"> - Vacuum leaks - Improper valve timing - Low compression - Bent pushrods - Worn rocker arms - Broken or weak valve springs - Worn camshaft lobes.

Table 3-13. Symptom Diagnosis

Checks	Action
Exhaust System Checks	<input type="checkbox"/> Check the exhaust system for a possible restriction: <ul style="list-style-type: none"> - Inspect the exhaust system for damaged or collapsed pipes - Inspect the muffler for signs of heat distress or for possible internal failure. <input type="checkbox"/> Check for possible plugged catalytic converter. Refer to Restricted Exhaust System Diagnosis
Hard Start	
DEFINITION: The engine cranks OK, but does not start for a long time. The engine does eventually run, or may start but immediately dies.	
Preliminary Checks	<input type="checkbox"/> Refer to Important Preliminary Checks. <input type="checkbox"/> Make sure the vehicle's operator is using the correct starting procedure.
Sensor Checks	<input type="checkbox"/> Check the Engine Coolant Temperature sensor with the scan tool. Compare the engine coolant temperature with the ambient air temperature on a cold engine. IF the coolant temperature reading is more than 5 degrees greater or less than the ambient air temperature on a cold engine, check for high resistance in the coolant sensor circuit. Refer to DTC 111 <input type="checkbox"/> Check the Crankshaft Position (CKP) sensor. <input type="checkbox"/> Check the Throttle position (TPS) sensor.
Fuel System Checks	Important: A closed LPG manual fuel shut off valve will create an extended crank OR no start condition. <input type="checkbox"/> Verify the excess flow valve in the LPG manual shut-off valve is not tripped. <input type="checkbox"/> Check mixer module assembly for proper installation and leakage. <input type="checkbox"/> Verify proper operation of the low pressure lock-off solenoids. <input type="checkbox"/> Verify proper operation of the EPR <input type="checkbox"/> Check for air intake system leakage between the mixer and the throttle body. <input type="checkbox"/> Check the fuel system pressures. Refer to the Fuel System Diagnosis.
Ignition System Checks	Note: LPG being a gaseous fuel requires higher secondary ignition system voltages for the equivalent gasoline operating conditions. <input type="checkbox"/> Check for the proper ignition voltage output with J 26792 or the equivalent. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check the spark plugs for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Heavy deposits <input type="checkbox"/> Check for bare or shorted ignition wires. <input type="checkbox"/> Check for moisture in the distributor cap if applicable. <input type="checkbox"/> Check for loose ignition coil connections. Important: 1. If the engine starts but then immediately stalls, Check the Crankshaft Position (CKP). 2. Check for improper gap, debris or faulty connections.
Engine Mechanical Checks	Important: The LPG Fuel system works on a fumigation principle of fuel introduction and is more sensitive to intake manifold leakage than the gasoline fuel supply system. <input type="checkbox"/> Check for the following: <ul style="list-style-type: none"> - Vacuum leaks <ul style="list-style-type: none"> - Improper valve timing - Low compression - Bent pushrods - Worn rocker arms - Broken or weak valve springs - Worn camshaft lobes. <input type="checkbox"/> Check the intake and exhaust manifolds for casting flash.

SECTION 3 - CHASSIS & TURNTABLE

Table 3-13. Symptom Diagnosis

Checks	Action
Exhaust System Checks	<input type="checkbox"/> Check the exhaust system for a possible restriction: <ul style="list-style-type: none"> - Inspect the exhaust system for damaged or collapsed pipes - Inspect the muffler for signs of heat distress or for possible internal failure. <input type="checkbox"/> Check for possible plugged catalytic converter. Refer to Restricted Exhaust System Diagnosis or Exhaust System in the GM Base Engine Service Manual
Additional Checks	<input type="checkbox"/>
Cuts Out, Misses	
DEFINITION: A surging or jerking that follows engine speed, usually more pronounced as the engine load increases which is not normally felt above 1500 RPM. The exhaust has a steady spitting sound at idle, low speed, or hard acceleration for the fuel starvation that can cause the engine to cut-out.	
Preliminary Checks	<input type="checkbox"/> Refer to Important Preliminary Checks.
Ignition System Checks	<input type="checkbox"/> Start the engine. <input type="checkbox"/> Wet down the secondary ignition system with water from a spray bottle, and look/listen for arcing or misfiring as you apply water. <input type="checkbox"/> Check for proper ignition output voltage with spark tester J 26792. <input type="checkbox"/> Check for a cylinder misfire. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Remove the spark plugs in these cylinders and check for the following conditions: <input type="checkbox"/> Insulation cracks <input type="checkbox"/> Wear <input type="checkbox"/> Improper gap <input type="checkbox"/> Burned electrodes <input type="checkbox"/> Heavy deposits <input type="checkbox"/> Visually/Physically inspect the secondary ignition for the following: <input type="checkbox"/> Ignition wires for arcing, cross-firing and proper routing <input type="checkbox"/> Ignition coils for cracks or carbon tracking
Engine Mechanical Checks	<input type="checkbox"/> Perform a cylinder compression check. <input type="checkbox"/> Check the engine for the following: <ul style="list-style-type: none"> - Improper valve timing - Bent pushrods - Worn rocker arms - Worn camshaft lobes. - Broken or weak valve springs. <input type="checkbox"/> Check the intake and exhaust manifold passages for casting flash.
Fuel System Checks	<input type="checkbox"/> Check the fuel system - plugged fuel filter, low fuel pressure, etc. Refer to LPG Fuel System Diagnosis. <input type="checkbox"/> Check the condition of the wiring to the low pressure lock-off solenoid.
Additional Check	Check for Electromagnetic Interference (EMI). <input type="checkbox"/> EMI on the reference circuit can cause a missing condition. <input type="checkbox"/> Monitoring the engine RPM with a scan tool can detect an EMI. <input type="checkbox"/> A sudden increase in the RPM with little change in the actual engine RPM, indicates EMI is present. <input type="checkbox"/> If the problem exists, check the routing of the secondary wires and the ground circuit.

Table 3-13. Symptom Diagnosis

Checks	Action
Hesitation, Sag, Stumble	
DEFINITION: The vehicle has a momentary lack of response when depressing the accelerator. The condition can occur at any vehicle speed. The condition may cause the engine to stall if it's severe enough.	
Preliminary Checks	Refer to Important Preliminary Checks.
Fuel System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the fuel pressure. Refer to LPG Fuel System Diagnosis. <input type="checkbox"/> Check for low fuel pressure during a moderate or full throttle acceleration. If the fuel pressure drops below specification, there is possibly a faulty low pressure regulator or a restriction in the fuel system. <input type="checkbox"/> Check the Manifold Absolute Pressure (MAP) sensor response and accuracy. <input type="checkbox"/> Check LPL electrical connection <input type="checkbox"/> Check the mixer air valve for sticking or binding. <input type="checkbox"/> Check the mixer module assembly for proper installation and leakage. <input type="checkbox"/> Check the EPR electrical connections.
Ignition System Checks	<p>Note: LPG being a gaseous fuel requires higher secondary ignition system voltages for the equivalent gasoline operating conditions. If a problem is reported on LPG and not gasoline, do not discount the possibility of a LPG only ignition system failure and test the system accordingly.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for the proper ignition voltage output with J 26792 or the equivalent. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check for faulty spark plug wires <input type="checkbox"/> Check for fouled spark plugs.
Additional Check	<ul style="list-style-type: none"> <input type="checkbox"/> Check for manifold vacuum or air induction system leaks <input type="checkbox"/> Check the generator output voltage.
Backfire	
DEFINITION: The fuel ignites in the intake manifold, or in the exhaust system, making a loud popping noise.	
Preliminary Check	<ul style="list-style-type: none"> <input type="checkbox"/> Refer to Important Preliminary Checks.
Ignition System Checks	<p>Important! LPG, being a gaseous fuel, requires higher secondary ignition system voltages for the equivalent gasoline operating conditions. The ignition system must be maintained in peak condition to prevent backfire.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for the proper ignition coil output voltage using the spark tester J26792 or the equivalent. <input type="checkbox"/> Check the spark plug wires by connecting an ohmmeter to the ends of each wire in question. If the meter reads over 30,000 ohms, replace the wires. <input type="checkbox"/> Check the connection at each ignition coil. <input type="checkbox"/> Check for deteriorated spark plug wire insulation. <input type="checkbox"/> Check the spark plugs. The correct spark plugs for LPG are (R42LTS) <input type="checkbox"/> Remove the plugs and inspect them for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Heavy deposits
Engine Mechanical Check	<p>Important! The LPG Fuel system works on a fumigation principle of fuel introduction and is more sensitive to intake manifold leakage than a gasoline fuel supply system.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check the engine for the following: <ul style="list-style-type: none"> - Improper valve timing - Engine compression - Manifold vacuum leaks - Intake manifold gaskets - Sticking or leaking valves - Exhaust system leakage <input type="checkbox"/> Check the intake and exhaust system for casting flash or other restrictions.
Fuel System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Perform a fuel system diagnosis. Refer to LPG Fuel System Diagnosis.

SECTION 3 - CHASSIS & TURNTABLE

Table 3-13. Symptom Diagnosis

Checks	Action
Lack of Power, Sluggishness, or Sponginess	
DEFINITION: The engine delivers less than expected power. There is little or no increase in speed when partially applying the accelerator pedal.	
Preliminary Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Refer to Important Preliminary Checks. <input type="checkbox"/> Refer to the LPG Fuel system OBD System Check <input type="checkbox"/> Compare the customer's vehicle with a similar unit. Make sure the customer has an actual problem. Do not compare the power output of the vehicle operating on LPG to a vehicle operating on gasoline as the fuels do have different drive feel characteristics <input type="checkbox"/> Remove the air filter and check for dirt or restriction. <input type="checkbox"/> Check the vehicle transmission Refer to the OEM transmission diagnostics.
Fuel System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check for a restricted fuel filter, contaminated fuel, or improper fuel pressure. Refer to LPG Fuel System Diagnosis. <input type="checkbox"/> Check for the proper ignition output voltage with the spark tester J 26792 or the equivalent. <input type="checkbox"/> Check for proper installation of the mixer module assembly. <input type="checkbox"/> Check all air inlet ducts for condition and proper installation. <input type="checkbox"/> Check for fuel leaks between the LPR and the mixer. <input type="checkbox"/> Verify that the LPG tank manual shut-off valve is fully open. <input type="checkbox"/> Verify that liquid fuel (not vapor) is being delivered to the LPR.
Sensor Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the Heated Exhaust Gas Oxygen Sensor (HEGO) for contamination and performance. Check for proper operation of the MAP sensor. <input type="checkbox"/> Check for proper operation of the TPS sensor.
Exhaust System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the exhaust system for a possible restriction: <ul style="list-style-type: none"> - Inspect the exhaust system for damaged or collapsed pipes - Inspect the muffler for signs of heat distress or for possible internal failure. - Check for possible plugged catalytic converter.
Engine Mechanical Check	<p>Check the engine for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Engine compression <input type="checkbox"/> Valve timing <input type="checkbox"/> Improper or worn camshaft. Refer to Engine Mechanical in the Service Manual.
Additional Check	<ul style="list-style-type: none"> <input type="checkbox"/> Check the ECM grounds for being clean, tight, and in their proper locations. <input type="checkbox"/> Check the generator output voltage. <input type="checkbox"/> If all procedures have been completed and no malfunction has been found, review and inspect the following items: <ul style="list-style-type: none"> <input type="checkbox"/> Visually and physically, inspect all electrical connections within the suspected circuit and/or systems. <input type="checkbox"/> Check the scan tool data.
Poor Fuel Economy	
DEFINITION: Fuel economy, as measured by refueling records, is noticeably lower than expected. Also, the economy is noticeably lower than it was on this vehicle at one time, as previously shown by an by refueling records.	
Preliminary Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Refer to Important Preliminary Checks. <input type="checkbox"/> Check the air cleaner element (filter) for dirt or being plugged. <input type="checkbox"/> Visually (Physically) check the vacuum hoses for splits, kinks, and proper connections. <input type="checkbox"/> Check the operators driving habits for the following items: <ul style="list-style-type: none"> - Is there excessive idling or stop and go driving? - Are the tires at the correct air pressure? - Are excessively heavy loads being carried? - Is their often rapid acceleration? <input type="checkbox"/> Suggest to the owner to fill the fuel tank and to recheck the fuel economy. <input type="checkbox"/> Suggest that a different operator use the equipment and record the results.
Fuel System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the LPR fuel pressure. Refer to LPG Fuel System Diagnosis. <input type="checkbox"/> Check the fuel system for leakage.
Sensor Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the Temperature Manifold Absolute Pressure (TMAP) sensor.

Table 3-13. Symptom Diagnosis

Checks	Action
Ignition System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check the spark plugs. Remove the plugs and inspect them for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Heavy deposits <input type="checkbox"/> Check the ignition wires for the following items: <ul style="list-style-type: none"> - Cracking - Hardness - Proper connections
Cooling System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check the engine thermostat for always being open or for the wrong heat range
Additional Check	<ul style="list-style-type: none"> <input type="checkbox"/> Check the transmission shift pattern. Refer to the OEM Transmission Controls section the Service Manual. <input type="checkbox"/> Check for dragging brakes.
Rough, Unstable, or Incorrect Idle, Stalling	
<p>DEFINITION: The engine runs unevenly at idle. If severe enough, the engine or vehicle may shake. The engine idle speed may vary in RPM. Either condition may be severe enough to stall the engine.</p>	
Preliminary Check	Refer to Important Preliminary Checks.
Sensor Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check for silicon contamination from fuel or improperly used sealant. The sensor will have a white powdery coating. The sensor will result in a high but false signal voltage (rich exhaust indication). The ECM will reduce the amount of fuel delivered to the engine causing a severe driveability problem. <input type="checkbox"/> Check the Heated Exhaust Gas Oxygen Sensor (HEGO) performance: <input type="checkbox"/> Check the Temperature Manifold Absolute Pressure (TMAP) sensor response and accuracy.
Fuel System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check for rich or lean symptom that causes the condition. Drive the vehicle at the speed of the complaint. Monitoring the oxygen sensors will help identify the problem. <input type="checkbox"/> Check for a sticking mixer air valve. <input type="checkbox"/> Verify proper operation of the EPR. <input type="checkbox"/> Perform a cylinder compression test. Refer to Engine Mechanical in the Service Manual. <input type="checkbox"/> Check the LPR fuel pressure. Refer to the LPG Fuel System Diagnosis. <input type="checkbox"/> Check mixer module assembly for proper installation and connection.
Ignition System Checks	<ul style="list-style-type: none"> <input type="checkbox"/> Check for the proper ignition output voltage using the spark tester J26792 or the equivalent. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check the spark plugs. Remove the plugs and inspect them for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Blistered insulators - Heavy deposits <input type="checkbox"/> Check the spark plug wires by connecting an ohmmeter to the ends of each wire in question. If the meter reads over 30,000 ohms, replace the wires.
Additional Checks	<p>Important: The LPG Fuel system works on a fumigation principle of fuel introduction and is more sensitive to intake manifold leakage than the gasoline fuel supply system.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check for vacuum leaks. Vacuum leaks can cause a higher than normal idle and low throttle angle control command. <input type="checkbox"/> Check the ECM grounds for being clean, tight, and in their proper locations. <input type="checkbox"/> Check the battery cables and ground straps. They should be clean and secure. Erratic voltage may cause all sensor readings to be skewed resulting in poor idle quality.

SECTION 3 - CHASSIS & TURNTABLE

Table 3-13. Symptom Diagnosis

Checks	Action
Engine Mechanical Check	<input type="checkbox"/> Check the engine for the following: <ul style="list-style-type: none"> - Broken motor mounts - Improper valve timing - Low compression - Bent pushrods - Worn rocker arms - Broken or weak valve springs - Worn camshaft lobes
Surges/Chuggles	
DEFINITION: The engine has a power variation under a steady throttle or cruise. The vehicle feels as if it speeds up and slows down with no change in the accelerator pedal.	
Preliminary Checks	Refer to Important Preliminary Checks.
Sensor Checks	<input type="checkbox"/> Check Heated Exhaust Gas Oxygen Sensor (HEGO) performance.
Fuel System Checks	<input type="checkbox"/> Check for Rich or Lean symptom that causes the condition. Drive the vehicle at the speed of the complaint. Monitoring the oxygen sensors will help identify the problem. <input type="checkbox"/> Check the fuel pressure while the condition exists. Refer to LPG Fuel System Diagnosis. <input type="checkbox"/> Verify proper fuel control solenoid operation. <input type="checkbox"/> Verify that the LPG manual shut-off valve is fully open. <input type="checkbox"/> Check the in-line fuel filter for restrictions.
Ignition System Checks	<input type="checkbox"/> Check for the proper ignition output voltage using the spark tester J26792 or the equivalent. <input type="checkbox"/> Verify that the spark plugs are correct for use with LPG (R42LTS) <input type="checkbox"/> Check the spark plugs. Remove the plugs and inspect them for the following conditions: <ul style="list-style-type: none"> - Wet plugs - Cracks - Wear - Improper gap - Burned electrodes - Heavy deposits - Check the Crankshaft Position (CKP) sensor.
Additional Check	<input type="checkbox"/> Check the ECM grounds for being clean, tight, and in their proper locations. <input type="checkbox"/> Check the generator output voltage. <input type="checkbox"/> Check the vacuum hoses for kinks or leaks. <input type="checkbox"/> Check Transmission

Table 3-14. DTC to SPN/FMI Cross Reference Chart

DTC	Description	SPN Code	FMI Code
16	Crank Never Synced at Start	636	8
91	Fuel Pump Low Voltage	94	4
92	Fuel Pump High Voltage	94	3
107	MAP Low Voltage	106	4
108	MAP High Pressure	106	16
111	IAT Higher Than Expected 1	105	15
112	IAT Low Voltage	105	4
113	IAT High Voltage	105	3
116	ECT Higher Than Expected 1	110	15
117	ECT Low Voltage	110	4
118	ECT High Voltage	110	3
121	TPS 1 Lower Than TPS 2	51	1
122	TPS 1 Signal Voltage Low	51	4
123	TPS 1 Signal Voltage High	51	3
127	IAT Higher Than Expected 2	105	0
129	BP Low Pressure	108	1
134	EGO 1 Open/Inactive	724	10
154	EGO 2 Open/Inactive	520208	10
171	Adaptive Learn High Gasoline	520200	0
172	Adaptive Learn Low Gasoline	520200	1
182	Fuel Temp Gasoline Low Voltage	174	4
183	Fuel Temp Gasoline High Voltage	174	3
187	Fuel Temp LPG Low Voltage	520240	4
188	Fuel Temp LPG High Voltage	520240	3
217	ECT Higher Than Expected 2	110	0
219	Max Govern Speed Override	515	15
221	TPS 2 Signal Voltage Low	51	0
222	TPS 2 Signal Low Voltage	520251	4
223	TPS 2 Signal High Voltage	520251	3
261	Injector Driver 1 Open	651	5
262	Injector Driver 1 Shorted	651	6
264	Injector Driver 2 Open	652	5
265	Injector Driver 2 Shorted	652	6
267	Injector Driver 3 Open	653	5
268	Injector Driver 3 Shorted	653	6
270	Injector Driver 4 Open	654	5
271	Injector Driver 4 Shorted	654	6
336	Crank Sync Noise	636	2
337	Crank Loss	636	4
341	Cam Sync Noise	723	2
342	Cam Sensor Loss	723	4
420	Gasoline Cat Monitor	520211	10
524	Oil Pressure Low	100	1

SECTION 3 - CHASSIS & TURNTABLE

Table 3-14. DTC to SPN/FMI Cross Reference Chart

DTC	Description	SPN Code	FMI Code
562	System Voltage Low	168	17
563	System Voltage High	168	15
601	Flash Checksum Invalid	628	13
604	RAM Failure	630	12
606	COP Failure	629	31
642	External 5V Reference Low	1079	4
643	External 5V Reference High	1079	3
685	Power Relay Open	1485	5
686	Power Relay Shorted	1485	4
687	Power Relay Short to Power	1485	3
1111	Fuel Rev Limit	515	16
1112	Spark Rev Limit	515	0
1151	Closed Loop Multiplier High LPG	520206	0
1152	Closed Loop Multiplier Low LPG	520206	1
1155	Closed Loop Multiplier High Gasoline	520204	0
1156	Closed Loop Multiplier Low Gasoline	520204	1
1161	Adaptive Learn High LPG	520202	0
1162	Adaptive Learn Low LPG	520202	1
1165	LPG Cat Monitor	520213	10
1171	LPG Pressure Higher Than Expected	520260	0
1172	LPG Pressure Lower Than Expected	520260	1
1173	EPR Comm Lost	520260	31
1174	EPR Voltage Supply High	520260	3
1175	EPR Voltage Supply Low	520260	4
1176	EPR Internal Actuator Fault	520260	12
1177	EPR Internal Circuitry Fault	520260	12
1178	EPR Internal Comm Fault	520260	12
1612	RTI 1 loss	629	31
1613	RTI 2 Loss	629	31
1614	RTI 3 Loss	629	31
1615	A/D Loss	629	31
1616	Invalid Interrupt	629	31
1625	Shutdown Request	1384	31
1626	CAN Tx Failure	639	12
1627	CAN Rx Failure	639	12
1628	CAN Address Conflict Failure	639	13
1629	Loss of TSC 1	639	31
2111	Unable to Reach Lower TPS	51	7
2112	Unable to Reach Higher TPS	51	
2135	TPS 1/2 Simultaneous Voltages	51	31
2229	BP Pressure High	108	0

SECTION 4. BOOM & PLATFORM

4.1 WEAR PADS

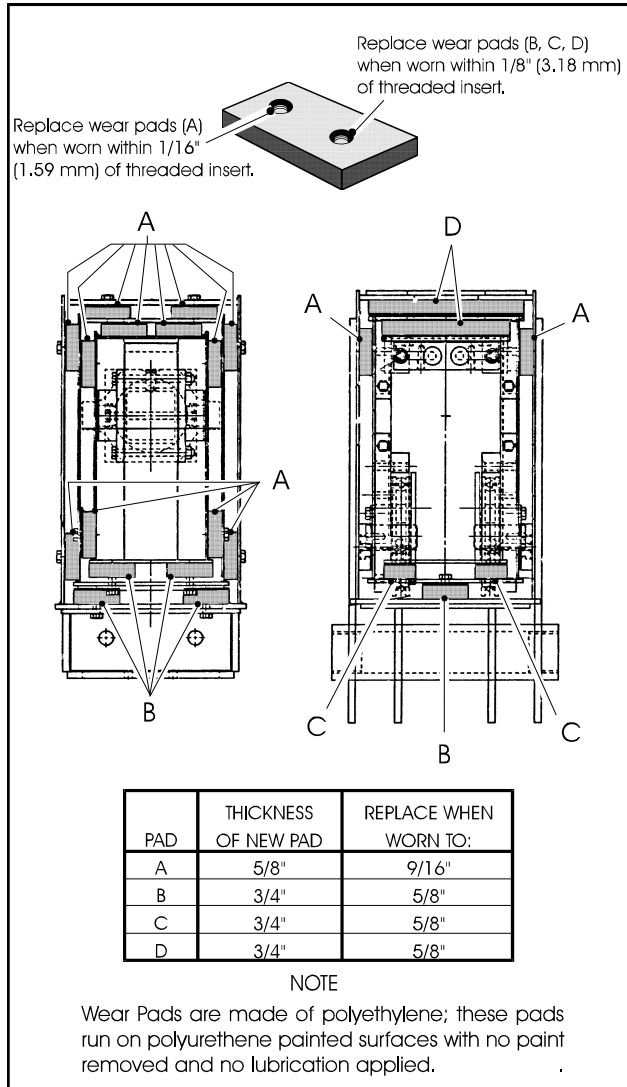


Figure 4-1. Location and Thickness of Wear Pads

Tower Boom

1. Shim up wear pads until snug to adjacent surface.
2. Replace wear pads when worn within 1/16 inch (1.59 mm) of threaded insert.
3. When adjusting wear pads, removing or adding shims, bolt length must also be changed.
 - a. When adding shims, longer bolts must be used to ensure proper thread engagement in insert.
 - b. When shims are removed, shorter bolts must be used so bolt does not protrude from insert and come into contact with boom surface.

Main Boom

1. Shim up wear pads to within 1/32 inch (.79 mm) tolerance between wear pad and adjacent surface.
2. Replace wear pads when worn within 1/16 inch (1.59 mm) and 1/8 inch (3.18 mm) - B, C, D of threaded insert. See Location and Thickness Of Wear Pads.
3. Adjusting wear pads, removing or adding shims, bolt length must also be changed.
 - a. When adding shims, longer bolts must be used to ensure proper thread engagement in insert.
 - b. When shims are removed, shorter bolts must be used so bolt does not protrude from insert and come into contact with boom surface.

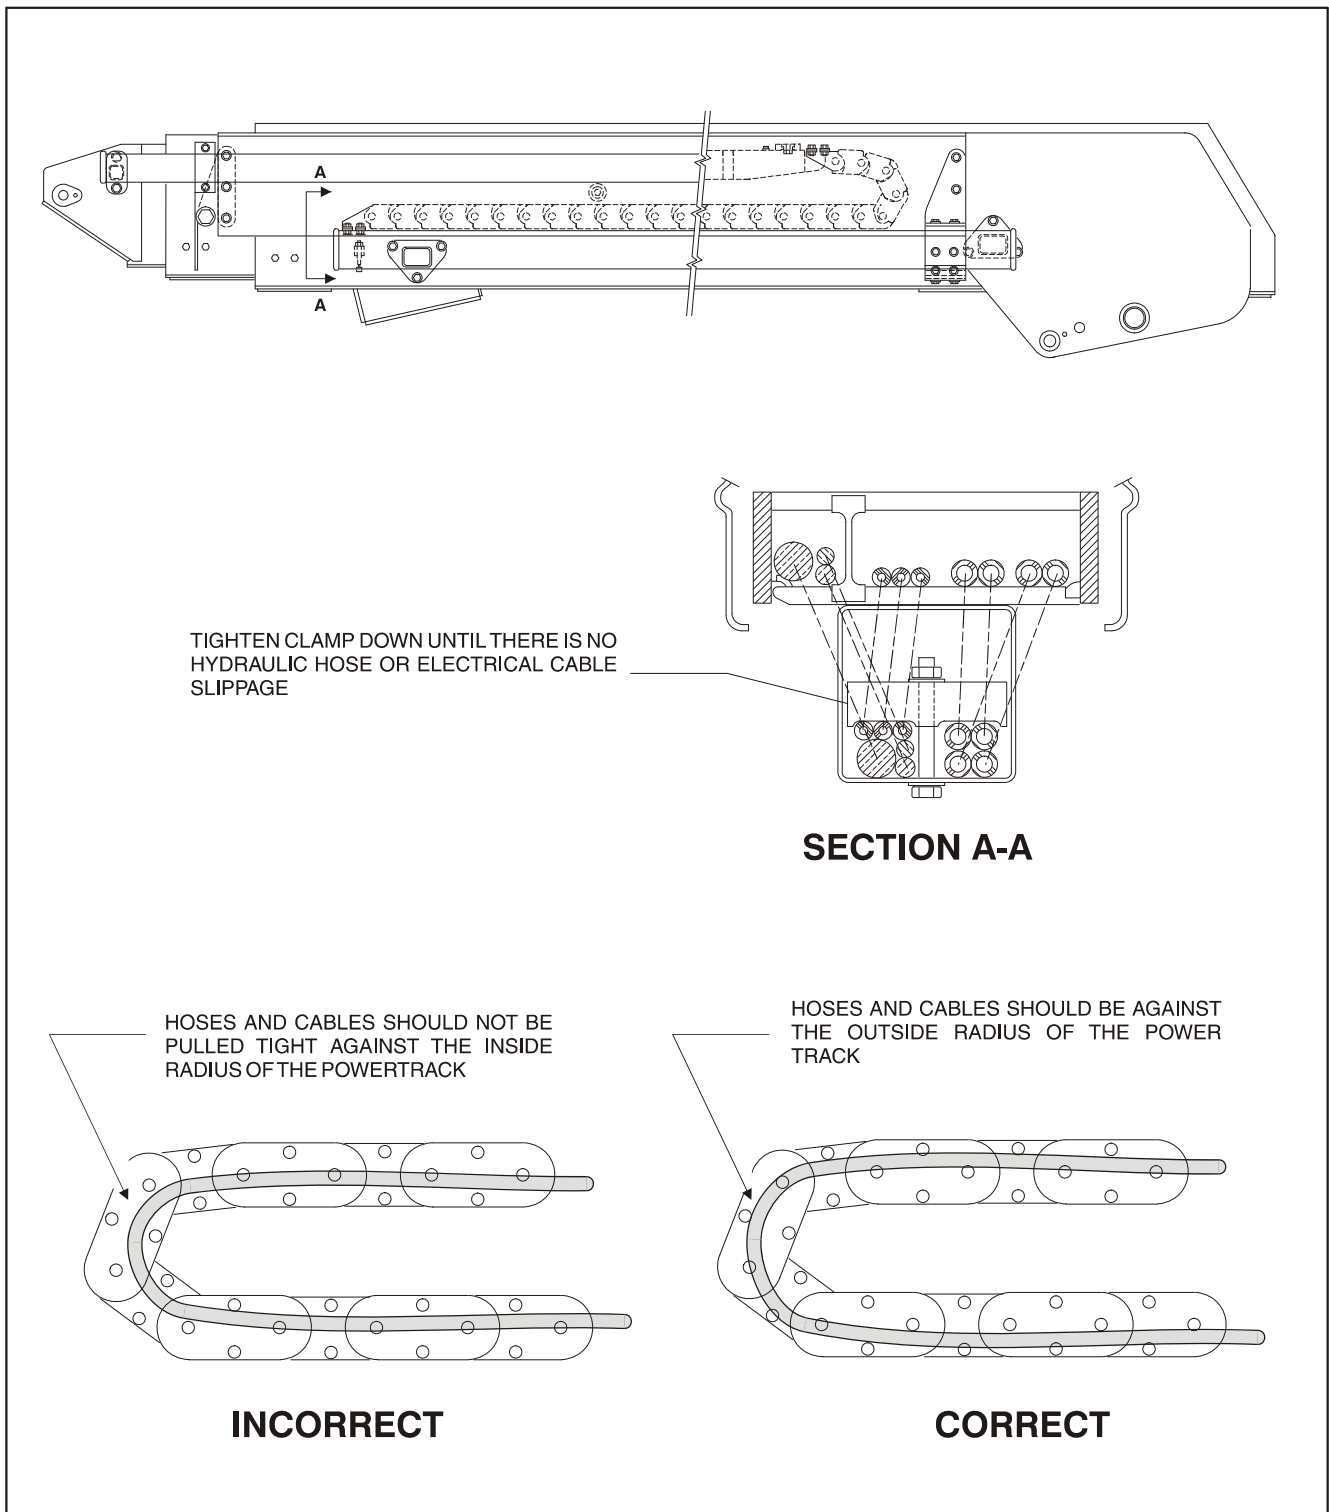


Figure 4-2. Boom Powertrack Installation

4.2 BOOM MAINTENANCE

Removal

1. For platform/support removal see platform/support removal diagram. (Boom Maintenance. S Models).
2. Remove rotator and slave level cylinder from fly boom as follows:
 - a. Tag and disconnect hydraulic lines to rotator. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
 - b. Remove hardware from pin #1. Using a suitable brass drift and hammer remove pin #1 from the fly boom.
 - c. Supporting the rotator, remove hardware from pin #2. Using a suitable brass drift and hammer remove pin #2 from the fly boom and remove rotator.
 - d. Telescope boom fly section out approximately 20 inches (50.8 cm) to gain access to slave leveling cylinder. (600AJ Model)
 - e. Supporting the slave cylinder, remove the hardware from pin #3. Using a suitable brass drift and hammer, remove pin #3 from the fly boom.

- f. Tag and disconnect hydraulic lines to slave leveling cylinder. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports. Remove slave cylinder.

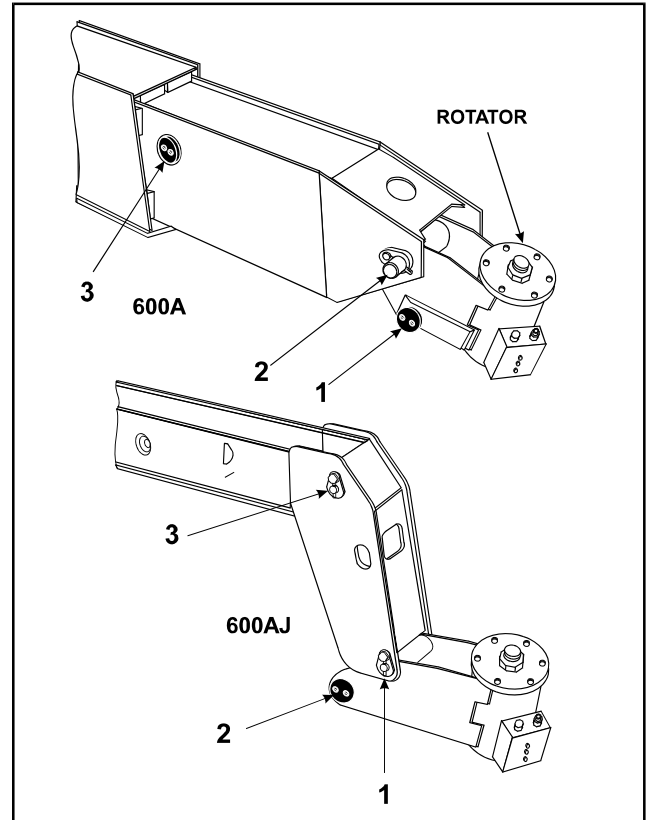


Figure 4-3. Reassembly of Components - Rotator and Slave Leveling Cylinder

3. Remove powertrack from boom as follows:
 - a. Disconnect wiring harness connectors located in tower upright.

CAUTION

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID ENTRY OF CONTAMINANTS INTO SYSTEM.

- b. Tag and disconnect hydraulic lines from connectors at boom assembly. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
- c. Disconnect dual capacity indicator limit switch from side of boom section.
- d. Remove hydraulic lines and electrical cables from powertrack.
- e. Using suitable lifting equipment, adequately support powertrack weight along entire length.

- f. Remove bolt #1 securing the push tube on the fly boom section.
- g. Remove bolt #2 securing the push tube on the mid boom section.
- h. With powertrack support and using all applicable safety precautions, remove bolts #3, #4 and #5 securing rail to the base boom section. Remove powertrack from boom section.

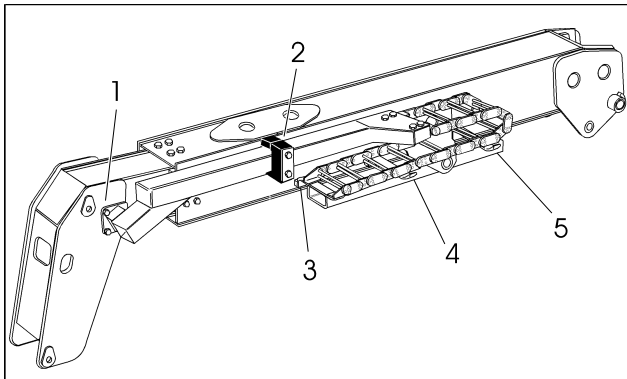


Figure 4-4. Location of Components - Boom Powertrack

- 4. Remove boom assembly from machine as follows:
 - a. Using a suitable lifting equipment, adequately support boom assembly weight along entire length.

CAUTION

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID ENTRY OF CONTAMINANTS INTO SYSTEM.

- b. Tag and disconnect hydraulic lines from telescope cylinder. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
- c. Remove hardware securing the lift cylinder rod end to the base boom section.
- d. Using a suitable brass drift and hammer, remove the lift cylinder pin from base boom.
- e. Remove hardware securing the master cylinder rod end to the base boom section.
- f. Using a suitable brass drift and hammer, remove the master cylinder pin from base boom.
- g. Remove hardware securing the boom pivot pin to the turntable upright.
- h. Using a suitable brass drift and hammer, remove the pivot pin from turntable upright.
- i. Using all applicable safety precautions, carefully lift boom assembly clear of turntable and lower to ground or suitably supported work surface.

Disassembly of Boom Sections

1. Remove hardware securing telescope cylinder to aft end of the base boom section.
2. Remove hardware which secures the wear pads to the base boom section; remove the wear pads from the top, sides and bottom of the base boom section.
3. Using overhead crane or suitable lifting device, remove fly boom assembly from base section.
4. Remove hardware from the telescope cylinder pin. Using a suitable brass drift and hammer remove the cylinder pin from fly boom section.
5. Pull the telescope cylinder partially from aft end of the fly boom section; secure the cylinder with a suitable sling and lifting device at approximately the center of gravity.
6. Carefully remove the telescope cylinder and place telescope cylinder on a suitable trestle.
7. Remove hardware which secures the wear pads to the aft end of fly boom section; remove the wear pads from the top, sides and bottom of the fly boom section.

Inspection

NOTE: When inspecting pins and bearings refer to Section 2 - General.

1. Inspect boom pivot pin for wear, scoring, tapering and ovality, or other damage. Replace pins as necessary.
2. Inspect telescope cylinder attach point for scoring, tapering and ovality. Replace pins as necessary.
3. Inspect upper lift cylinder attach pin for wear, scoring, tapering and ovality, or other damage. Ensure pin surfaces are protected prior to installation. Replace pins as necessary.
4. Inspect inner diameter of boom pivot bearing for scoring, distortion, wear, or other damage. Replace bearing as necessary.
5. Inspect all wear pads for excessive wear, or other damage. Replace pads when worn to within 1/8 inch (3.2 mm) of threaded insert.
6. Inspect all threaded components for damage such as stretching, thread deformation, or twisting. Replace as necessary.
7. Inspect structural units of boom assembly for bending, cracking, separation of welds, or other damage. Replace boom sections as necessary.

Assembly

NOTE: When installing fly section wear pads, install same number and thickness of shims as were removed during disassembly.

1. Measure inside dimensions of the base section to determine the number of shims required for proper lift.
2. Install side, top and bottom wear pads to the aft end of fly section; shim evenly to the measurements of the inside of base boom section.

CAUTION

WHEN ASSEMBLING BOOM SECTIONS, ENSURE THAT THE BOOM SLIDING TRAJECTORIES HAVE BEEN CLEARED OF CHAINS, TOOLS, AND OTHER OBSTRUCTIONS.

3. Secure the sling and lifting device at the telescope cylinder's approximate center of gravity, and lift the cylinder to the aft end of the fly boom section.
4. Slide telescope cylinder into the aft end of fly boom section. Align attachment holes in fly boom section with hole in rod end of telescope cylinder.
5. Install telescope cylinder pin and secure with mounting hardware.
6. Secure the sling and lifting device at the fly boom assembly approximate center of gravity.
7. Slide fly boom assembly into the base boom section. Shim boom, if necessary, for a total of 1/16 inch (0.062) clearance.
8. Install wear pads into the forward position of the base boom section. Shim boom, if necessary, for a total of 2/10 inch (0.20) clearance.
9. Align the cylinder with the slots at aft end of base boom section, then secure cylinder with mounting hardware.

Installation

1. Using a suitable lifting device, position boom assembly on turntable so that the pivot holes in both boom and turntable are aligned.
2. Install boom pivot pin, ensuring that location of hole in pin is aligned with attach point on turntable.
3. If necessary, gently tap pin into position with soft headed mallet. Secure pin mounting hardware.
4. Connect all wiring connectors to the correct connectors.
5. Connect all hydraulic lines running along side of boom assembly.
6. Using all applicable safety precautions, operate lifting device in order to position boom lift cylinder so that holes in the cylinder rod end and boom structure are aligned. Insert the lift cylinder pin, ensuring that location of hole in pin is aligned with attach point on boom.
7. Align holes in boom structure with hole in master cylinder. Insert the master cylinder pin, ensuring that location of hole in pin is aligned with attach point on boom.
8. Using all applicable safety precautions, operate machine systems and raise and extend boom fully, noting the performance of the extension cycle.
9. Retract and lower boom, noting the performance of the retraction cycle.

4.3 TOWER BOOM

Removal

1. Remove the tower upright as follows:

CAUTION

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID ENTRY OF CONTAMINANTS INTO SYSTEM.

- a. Tag and disconnect hydraulic lines to upper lift cylinder. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
- b. Using suitable lifting device, support the upper lift cylinder.
- c. Remove mounting hardware from upper lift cylinder barrel end. Using a suitable brass drift and hammer remove pin #1 from tower upright.
- d. Tag and disconnect hydraulic lines to master cylinder. Use a suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
- e. Remove mounting hardware from master cylinder barrel end. Using a suitable brass drift and hammer remove pin #2 from tower upright.
- f. Disconnect wiring harness to horizontal limit switch and dual capacity limit switch.
- g. Using a suitable lifting device, support the tower upright.
- h. Remove mounting hardware securing hose bracket in tower upright, remove hose bracket.
- i. Remove mounting hardware from tower leveling cylinder. Using a suitable brass drift and hammer remove pin #3 from tower upright.
- j. Remove mounting hardware from upright pivot pin. Using a suitable brass drift and hammer,

remove pin #4 from tower upright. Remove upright from tower boom assembly.

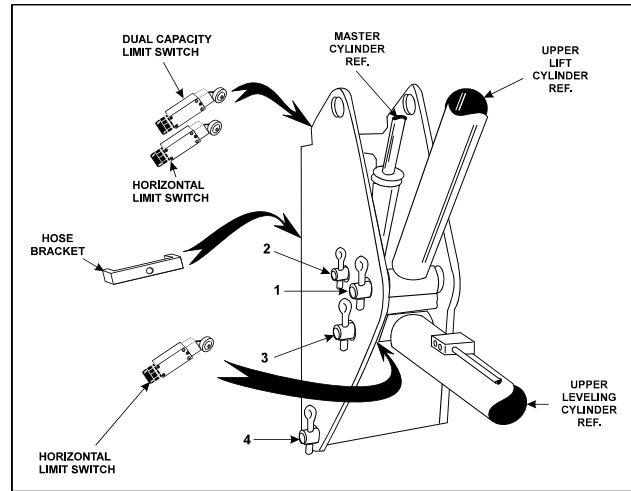


Figure 4-5. Location of Components - Upright

2. Remove the tower boom as follows:

CAUTION

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID ENTRY OF CONTAMINANTS INTO SYSTEM.

- a. Tag and disconnect all hydraulic lines from the tower boom assembly to turntable components. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
- b. Disconnect wiring harness from the ground control box.
- c. Using suitable lifting device, support the tower boom assembly at its approximate center of gravity.
- d. Remove mounting hardware from lower lift cylinder rod end. Using a suitable brass drift and hammer, remove pin #1 from the tower boom assembly.
- e. Remove mounting hardware from tower boom pivot pin. Using a suitable brass drift and hammer, remove pin #2 from the turntable assembly.

- f. Remove tower boom assembly from turntable upright. Place tower boom assembly on a well supported trestles.

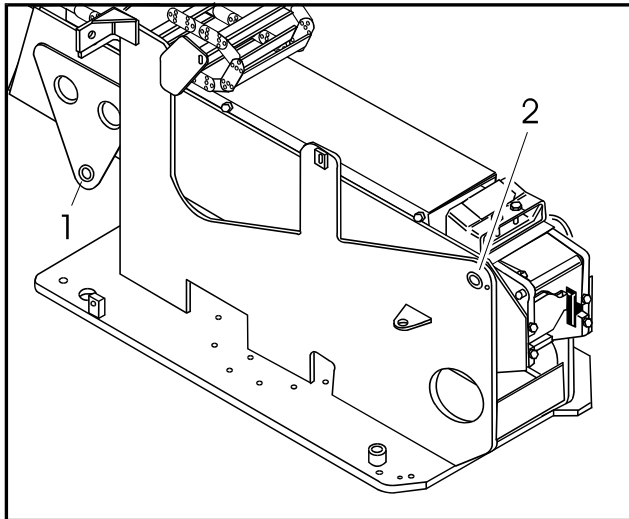


Figure 4-6. Location of Components - Tower Boom

Disassembly

1. Remove brackets securing hoses and wiring harnesses to push tubes and top of tower boom assembly.
2. Mark all hoses and wiring harnesses at bracket on aft end of tower base boom section for future assembly. Remove hoses and wiring harness from tower boom powertrack.
3. Remove mounting hardware which secures the push tubes to the tower fly boom section.
4. Remove mounting hardware which secures the push tubes to the powertrack, then remove push tubes.
5. Remove mounting hardware which secures the powertrack to the top of the tower base section, then remove powertrack.
6. Remove mounting hardware from tower boom telescope cylinder barrel end.

7. Remove mounting hardware which secures the wear pads to front of tower base boom section; remove the wear pads from the top, sides and bottom of the tower base boom.
8. Using an overhead crane or suitable lifting device, remove fly assembly from base section.
9. Remove mounting hardware which secures the tower telescope cylinder to the fly section. Using a suitable brass drift and hammer, remove the pin from the fly boom section.
10. Remove mounting hardware which secures the wear pads to aft end of tower fly boom section; remove the wear pads from the top, sides and bottom of the fly boom.
11. Remove mounting hardware which secures the upright leveling cylinder to the fly section. Using a suitable brass drift and hammer, remove the pin from the fly boom section.
12. Remove hardware which secures the wear pads to the aft end of fly tower boom section; remove the wear pads from the top, sides and bottom of the fly boom section.

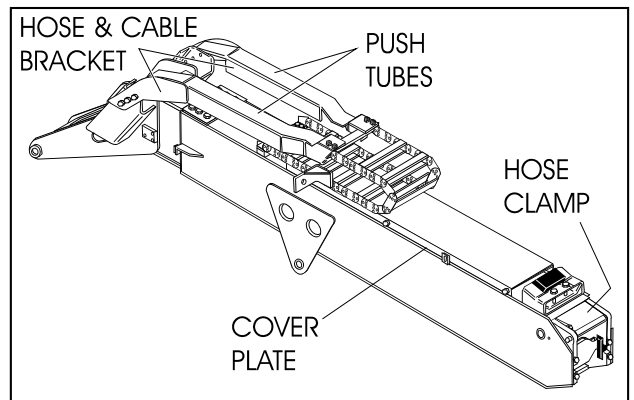


Figure 4-7. Location of Components - Tower Boom Powertrack

Inspection

NOTE: Refer to Section 2 - General.

1. Inspect tower boom pivot pin for wear, scoring, tapering and ovality, or other damage. Replace pins as necessary.
2. Inspect tower boom pivot attach points for scoring, tapering and ovality, or other damage. Replace pins as necessary.
3. Inspect inner diameter of tower boom pivot bearings for scoring, distortion, wear, or other damage. Replace bearings as necessary.
4. Inspect lift cylinder attach pin for wear, scoring, tapering and ovality, or other damage. Ensure pin surfaces are protected prior to installation. Replace pins as necessary.
5. Inspect inner diameter of upright attach point bearings for scoring, distortion, wear, or other damage. Replace bearing as necessary.
6. Inspect all threaded components for damage such as stretching, thread deformation, or twisting. Replace as necessary.
7. Inspect structural units of tower boom assembly for bending, cracking, separation of welds, or other damage. Replace boom sections as necessary.
8. Inspect powertrack for damage such as cracking, wear, or other damage. Replace as necessary.

Assembly

NOTE: When installing fly section wear pads, install same number and thickness of shims as were removed during disassembly.

1. Measure inside dimensions of the tower base section to determine the number of shims required for proper lift.
2. Install side, top and bottom wear pads to the aft end of tower fly section; shim evenly to the measurements of the inside of base boom section.

CAUTION

WHEN ASSEMBLING TOWER BOOM SECTIONS, ENSURE THAT THE BOOM SLIDING TRAJECTORIES HAVE BEEN CLEARED OF CHAINS, TOOLS, AND OTHER OBSTRUCTIONS.

3. Align upright leveling cylinder with attach holes in tower fly boom. Using a soft head mallet, install the cylinder pin into tower fly boom and secure with mounting hardware.
4. Align tower telescope cylinder with attach holes in tower fly boom. Using a soft head mallet, install the cylinder pin into tower fly boom and secure with mounting hardware.
5. Secure the sling and lifting device at the tower fly boom assembly's approximate center of gravity.
6. Slide tower fly boom assembly into the tower base boom section. Shim boom, if necessary, for a total of 1/16 inch (0.062) clearance.
7. Install wear pads into the forward position of the tower base boom section. Shim boom, if necessary, for a total of 2/10 inch (0.20) clearance.
8. Align the cylinder with the slots at aft end of tower base boom section, then secure cylinder with mounting hardware.
9. Install powertrack to attach point on the tower base boom section, then secure with mounting hardware.
10. Attach push tubes to the powertrack and attach point on the tower fly boom section; with mounting hardware.
11. Properly route the hoses and wiring harnesses through bracket at aft end of tower base boom section.
12. Pull hoses and wiring harnesses through hose bracket to the mark on hoses and harnesses from previous disassembly and clamp for proper length.
13. Route hoses and harnesses through powertrack, push tubes, then through holes in side of tower fly boom nose. Secure hoses and harnesses with hoses brackets.

Installation

1. Using a suitable lifting device, position tower boom assembly on turntable so that the pivot holes in both boom and turntable are aligned.
2. Install tower boom pivot pin, ensuring that location of hole in pin is aligned with attach point on turntable.
3. If necessary, gently tap pin into position with soft headed mallet. Secure pin mounting hardware.
4. Using all applicable safety precautions, operate lifting device in order to position lower boom lift cylinder so that holes in the cylinder rod end and tower boom structure are aligned. Insert the lift cylinder pin, ensuring that location of hole in pin is aligned with attach point on tower boom.
5. Connect all wiring connections at ground controls.
6. Connect all hydraulic lines running from aft end of tower boom assembly to ground controls.
7. Using suitable lifting device, position upright on tower boom assembly so that the pivot holes in both upright and tower boom are aligned.
8. Using all applicable safety precautions, operate lifting device in order to position upright leveling cylinder so that holes in the cylinder barrel end and upright structure are aligned. Insert the level cylinder pin, ensuring that location of hole in pin is aligned with attach point on upright.
9. Align upper lift cylinder with attach holes in upright. Using a soft head mallet, install the cylinder pin upright and secure with mounting hardware.
10. Align master cylinder with attach holes in upright. Using a soft head mallet, install the cylinder pin upright and secure with mounting hardware.

4.4 BOOM CLEANLINESS GUIDELINES

The following are guidelines for internal boom cleanliness for machines that are used in excessively dirty environments.

1. JLG recommends the use of the JLG Hostile Environment Package to keep the internal portions of a boom cleaner and to help prevent dirt and debris from entering the boom. This package reduces the amount of contamination which can enter the boom but does not eliminate the need for more frequent inspections and maintenance when used in these types of environments.
2. JLG recommends that you follow all guidelines for servicing your equipment in accordance with the instructions outlined in the JLG Service & Maintenance Manual for your machine. Periodic maintenance and inspection is vital to the proper operation of the machine. The frequency of service and maintenance must be increased as environment, severity and frequency of usage requires.
3. Debris and foreign matter inside of the boom can cause premature failure of components and should be removed. Methods to remove debris should always be done using all applicable safety precautions outlined in the JLG Operation & Safety Manual and the JLG Service & Maintenance Manuals.
4. The first attempt to remove debris from inside the boom must be to utilize pressurized air to blow the debris toward the nearest exiting point from the boom. Make sure that all debris is removed before operating the machine.
5. If pressurized air cannot dislodge the debris, then water with mild solvents applied via a pressure washer can be used. Again the method is to wash the debris toward the nearest exiting point from the boom. Make sure that all debris is removed, that no "puddling" of water has occurred, and that the boom internal components are dry prior to operating the machine. Make sure you comply with all federal and local laws for disposing of the wash water and debris.
6. If neither pressurized air nor washing of the boom dislodges and removes the debris, then disassemble the boom in accordance to the instructions outlined in the JLG Service & Maintenance Manual to remove the debris.

4.5 ARTICULATING JIB BOOM

Removal

1. For platform/support removal see platform/support removal diagram. Position the articulating jib boom level with ground.
2. Remove mounting hardware from slave leveling cylinder pin #1. Using a suitable brass drift and hammer, remove the cylinder pin from articulating jib boom.

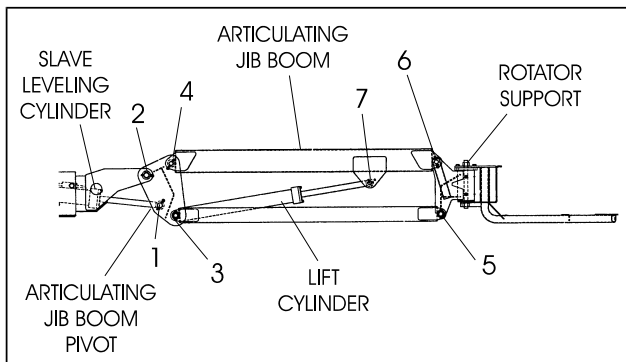


Figure 4-8. Location of Components - Articulating Jib Boom

3. Remove mounting hardware from articulating jib boom pivot pin #2. Using a suitable brass drift and hammer, remove the pivot pin from boom assembly.

Disassembly

1. Remove mounting hardware from articulating jib boom pivot pins #3 and #4. Using a suitable brass drift and hammer, remove the pins from articulating jib boom pivot weldment.
2. Remove mounting hardware from rotator support pins #5 and #6. Using a suitable brass drift and hammer, remove the pins from rotator support.
3. Remove mounting hardware from lift cylinder pin #7. Using a suitable brass drift and hammer, remove the cylinder pin from articulating jib boom.

Inspection

NOTE: When inspecting pins and bearings refer to Section 2 - General.

1. Inspect articulating fly boom pivot pin for wear, scoring, tapering and ovality, or other damage. Replace pins as necessary.
2. Inspect articulating fly boom pivot attach points for scoring, tapering and ovality, or other damage. Replace pins as necessary.
3. Inspect inner diameter of articulating fly boom pivot bearings for scoring, distortion, wear, or other damage. Replace bearings as necessary.
4. Inspect lift cylinder attach pin for wear, scoring, tapering and ovality, or other damage. Ensure pin surfaces are protected prior to installation. Replace pins as necessary.
5. Inspect inner diameter of rotator attach point bearings for scoring, distortion, wear, or other damage. Replace bearing as necessary.
6. Inspect all threaded components for damage such as stretching, thread deformation, or twisting. Replace as necessary.
7. Inspect structural units of articulating jib boom assembly for bending, cracking, separation of welds, or other damage. Replace boom sections as necessary.

Assembly

NOTE: For location of components See Section 4-8., Location of Components - Articulating Jib Boom.

1. Align lift cylinder with attach holes in articulating jib boom. Using a soft head mallet, install cylinder pin #7 into articulating jib boom and secure with mounting hardware.
2. Align rotator support with attach hole in articulating jib boom. Using a soft head mallet, install rotator support pin #6 into articulating jib boom and secure with mounting hardware.

3. Align bottom tubes with attach holes in rotator support. Using a soft head mallet, install rotator support pin #5 into articulating jib boom and secure with mounting hardware.
4. Align articulating jib boom with attach hole in articulating jib boom pivot weldment. Using a soft head mallet, install rotator support pin #4 into articulating jib boom and secure with mounting hardware.
5. Align bottom tubes with attach holes in articulating jib boom pivot weldment. Using a soft head mallet, install rotator support pin #3 into articulating jib boom pivot weldment and secure with mounting hardware.
6. Align articulating jib boom pivot weldment with attach holes in fly boom assembly. Using a soft head mallet, install pivot pin #2 into fly boom assembly and secure with mounting hardware.
7. Align the slave leveling cylinder with attach holes in articulating jib boom pivot weldment. Using a soft head mallet, install slave leveling cylinder pin #1 into articulating jib boom pivot weldment and secure with mounting hardware.

4.6 LIMIT SWITCHES AND CAM VALVE ADJUSTMENT

Adjust switches and cam valve as shown in Figure 4-9., Boom Limit Switch Adjustments.

SECTION 4 - BOOM & PLATFORM

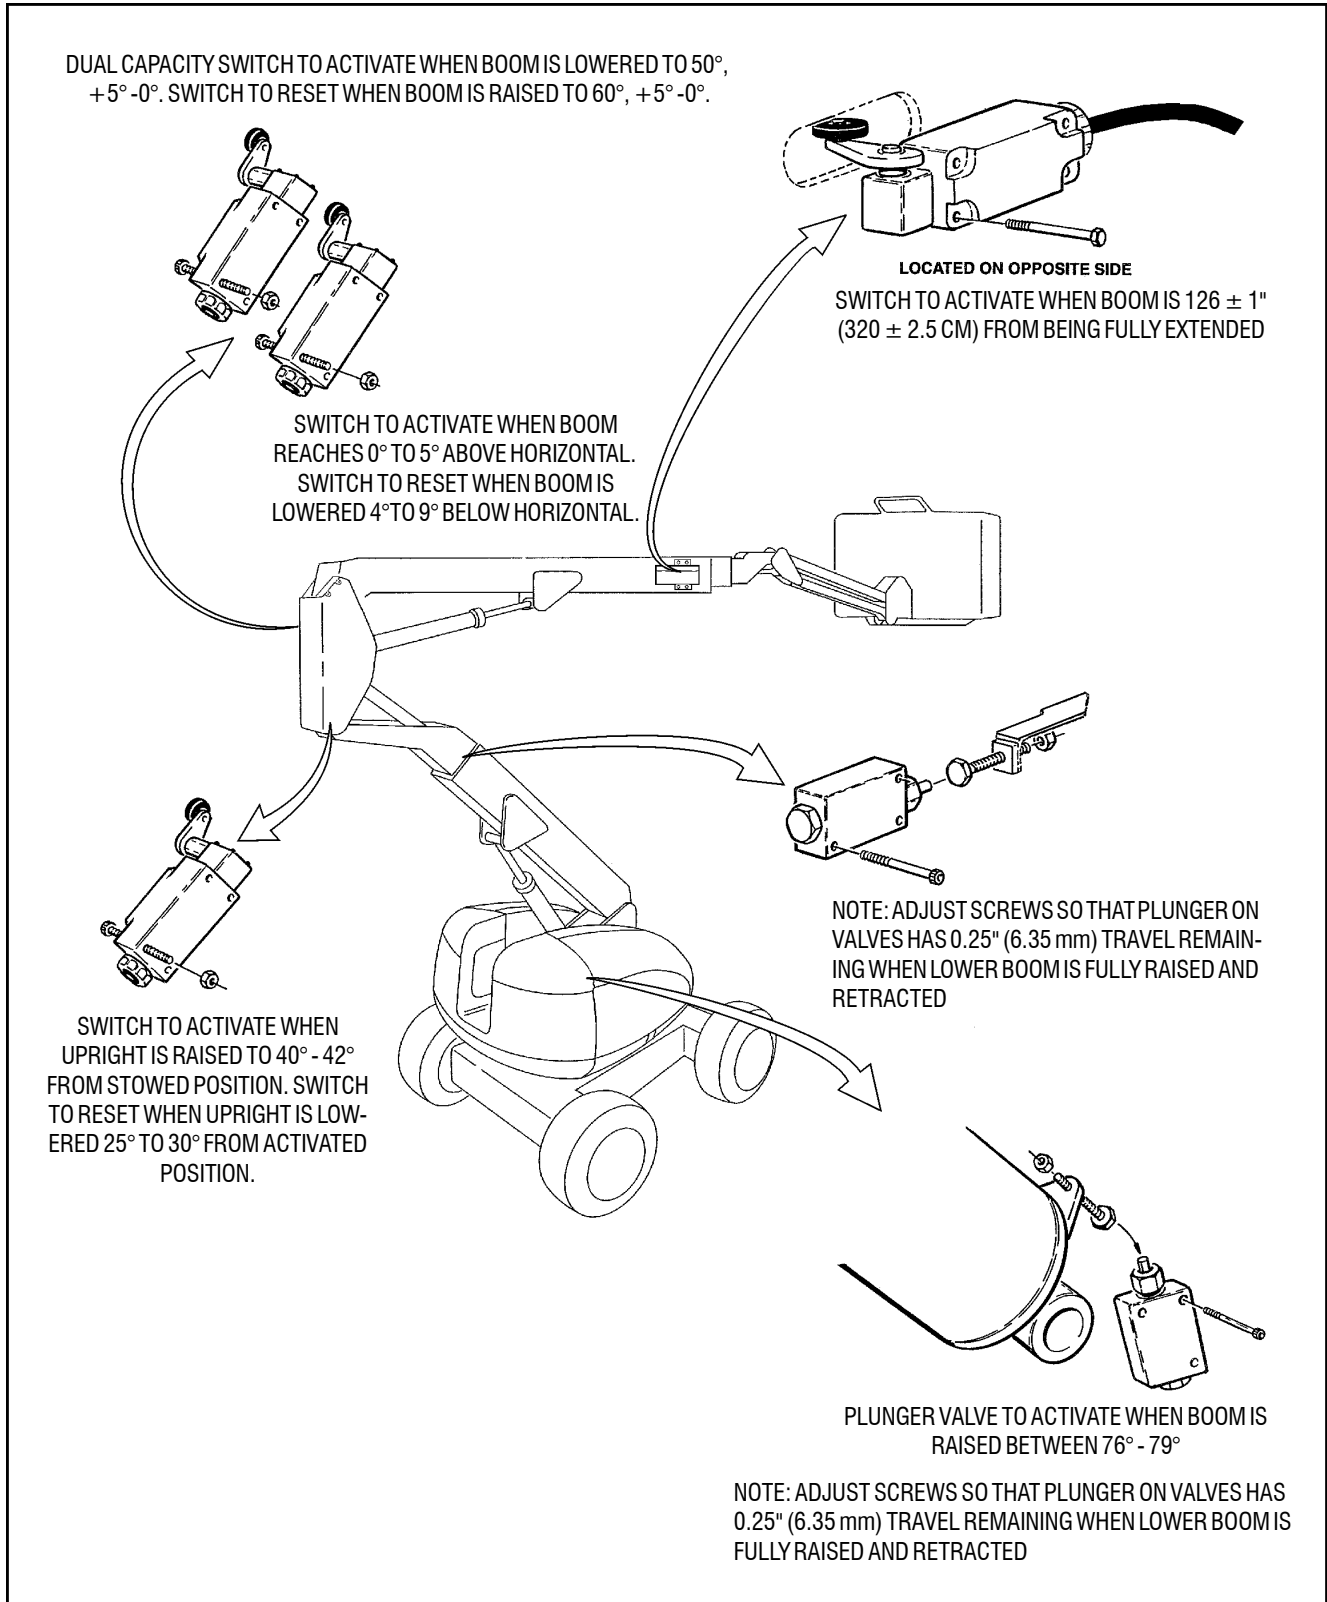


Figure 4-9. Boom Limit Switch Adjustments

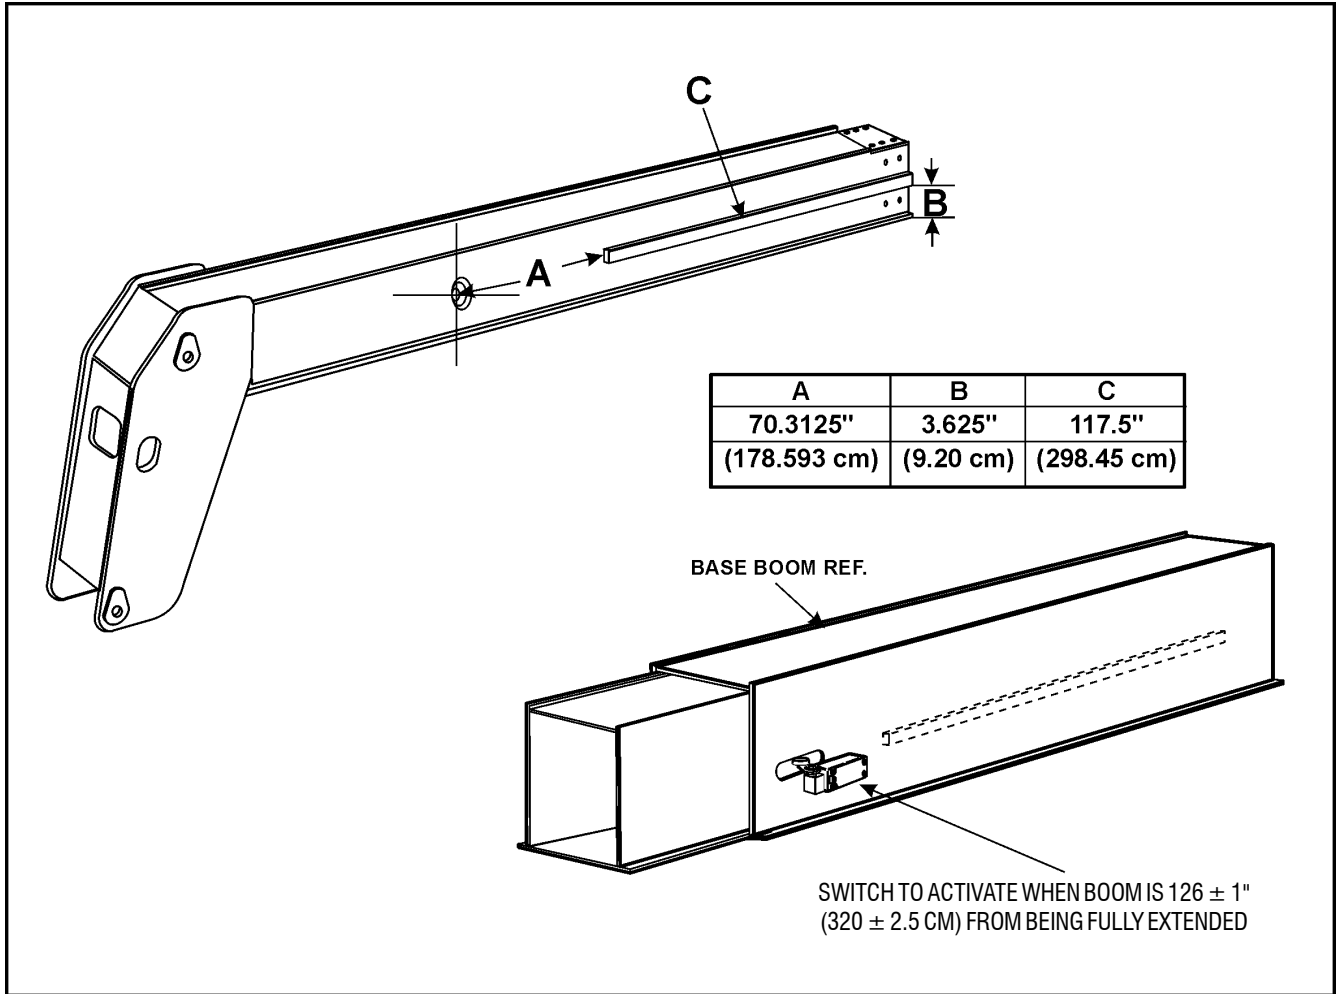


Figure 4-10. Fiberglass Bar Installation

4.7 PLATFORM

Platform Sections Replacement

The platform is made up of five sections: floor, right side, left side, back (console box mounting.) and gate. The sections are secured with huck magna grip fastener and collars. Replace damaged platform sections as follows:

1. Support the huck collar with a sledge hammer or other suitable support.
2. Using a hammer and chisel, remove the collar from the fastener as shown in the diagram below.

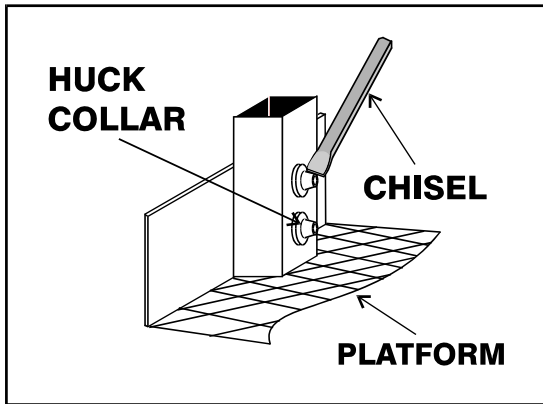


Figure 4-11. Platform Section Replacement

3. When installing new section of platform replace huck fasteners with 1/4 x 20 NC x 2 1/4" grade 5 bolts, flatwashers and locknuts.
4. When installing a new gate to platform, replace rivets with 1/4 x 20 NC x 2 "grade 5 bolts, flatwashers and locknuts.

4.8 ROTATOR - HELAC (PRIOR TO S/N 0300132474)

Disassembly

1. Place actuator on a clean workbench.
2. Remove all hydraulic fittings.

3. Using a suitable hammer and chisel remove the portion of end cap securing setscrew.

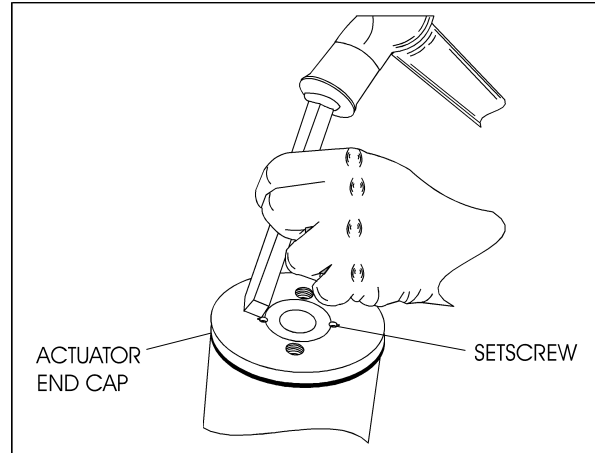


Figure 4-13. Removing Portion of End Cap

4. Using a torch, apply heat to the setscrews on the bottom of actuator.

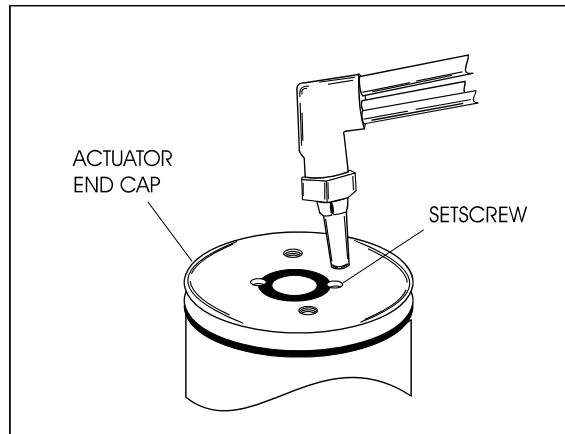


Figure 4-14. Heating Setscrew

5. Remove the two (2) setscrew (4) from bottom of actuator (1). Discard setscrew.

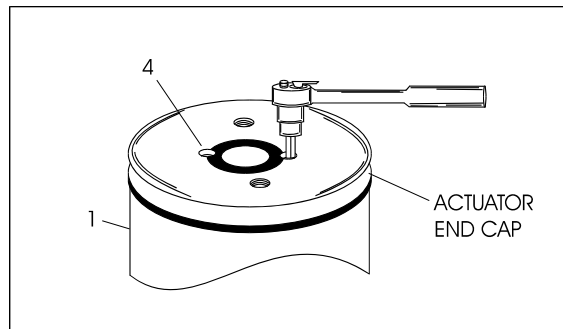


Figure 4-15. Removing Setscrew

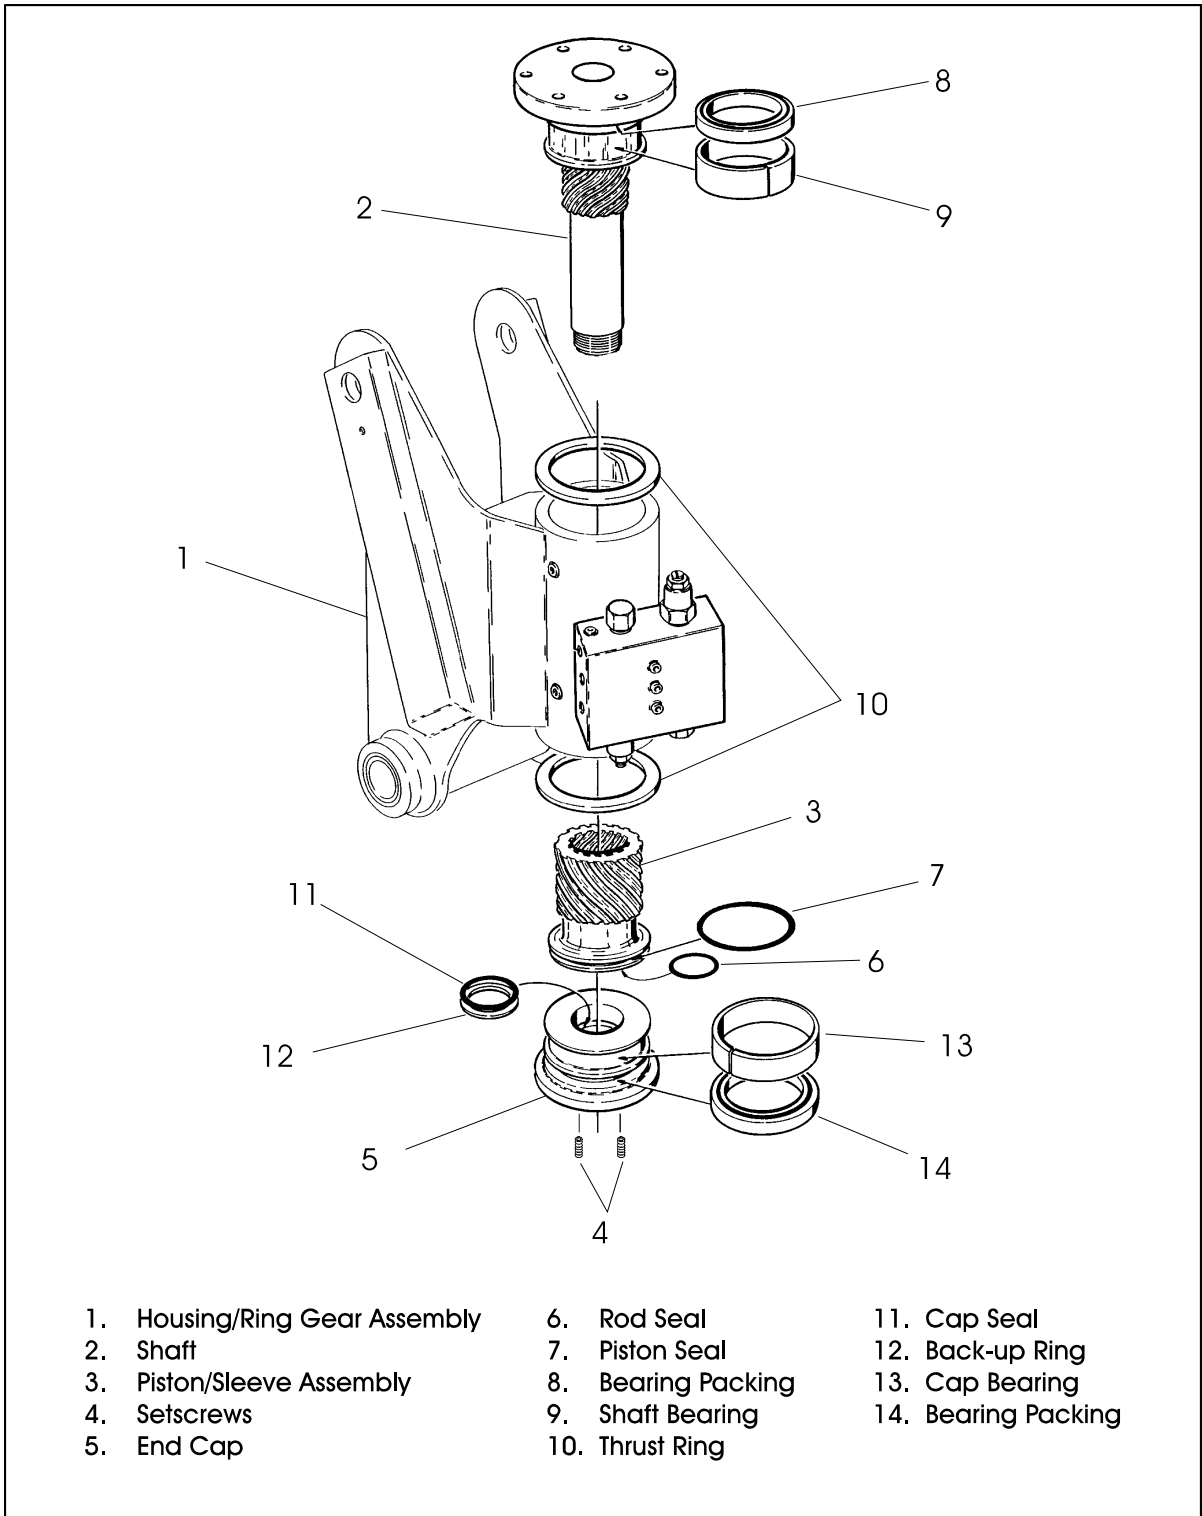


Figure 4-12. Rotator Assembly (Helac)

SECTION 4 - BOOM & PLATFORM

- Place two (2) 3/8"x16NC bolts in threaded holes in bottom of the actuator. Using a suitable bar, unscrew the end cap (5). Remove the end cap from actuator (1).

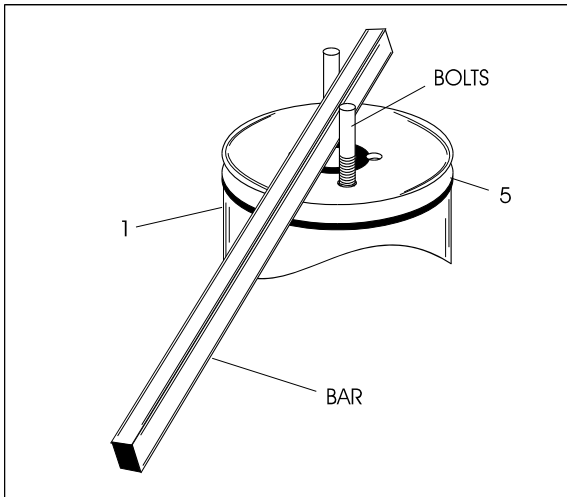


Figure 4-16. Removing End Cap

- Remove the shaft (2) from piston sleeve (3) and the actuator housing (1).

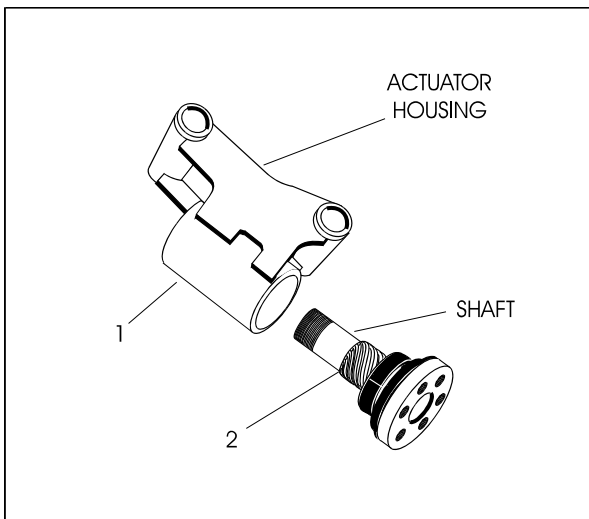


Figure 4-17. Removing Shaft from Housing

- Remove piston sleeve (3) from housing (1).

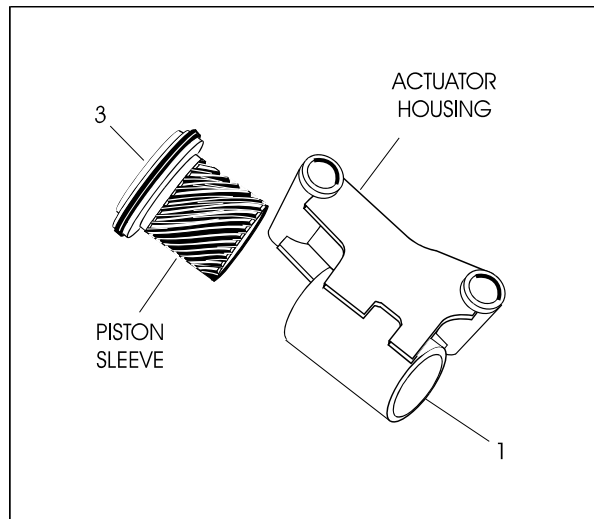


Figure 4-18. Removing Sleeve from Housing

- Remove all seals and bearings from grooves. Discard seals.

Inspection

- Clean all parts thoroughly.
- Closely inspect all parts for excessive wear, cracks and chips. Replace parts as necessary.

NOTE: A small amount of wear in the spline teeth will have little effect on the actuator strength. New spline sets are manufactured with a backlash of about 0.005 in. per mating set. After long service, a backlash of about 0.015 per set may still be acceptable in most cases, depending on the required accuracy of the application.

- Check the ring gear for wear and weld damage to the pins.
- Inspect the cylinder bore for wear and scratches.

Assembly

NOTE: Lubricate all seals and o-rings with clean hydraulic oil prior to assembly.

- Install new seal (7) and bearing (6) on the piston sleeve (3).

NOTE: Apply a coat of grease to the thrust ring before sliding onto the shaft.

- Install new seal (8), thrust ring (10) and bearing (9) on shaft (2).

NOTE: Apply a coat of grease to the thrust ring before sliding onto the end cap.

3. Install new seals (11), back-up ring (12), cap bearing (13), bearing packing (14) and thrust ring (10) on end cap (5).
4. Place the actuator in the vertical position, install the piston sleeve (3) in timed relation to the housing (1).

⚠ CAUTION

DO NOT MISALIGN THE SLEEVE TOO MUCH ANY ONE WAY, AS IT WILL MARK THE CYLINDER BORE.

NOTE: *The timing marks (the small punch marks on the face of each gear), must be aligned for proper shaft orientation. (See Actuator Timing.)*

5. Install the shaft (2) into housing (1) by aligning the proper punched timing marks. (See Actuator Timing.)
6. Temporarily tape the threaded portion of the shaft will help installation past the shaft seals (masking tape).
7. The end cap (5) is torqued to 40 - 50 ft. lbs. (54 - 68 Nm), such that the actuator begins rotation at approximately 100 psi (6.895 Bar) pressure.
8. The end cap must be secured against the shaft by installing axial set screws (4).


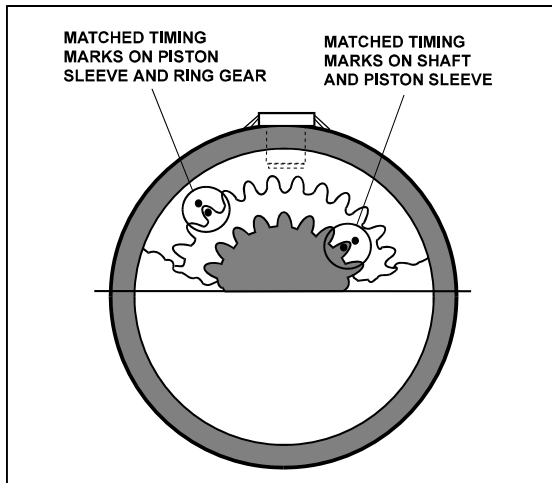


Figure 4-19. Actuator Timing

4.9 ROTARY ACTUATOR (S/N 0300132474 TO PRESENT)

Theory of Operation

The L20 Series rotary actuator is a simple mechanism that uses the sliding spline operating concept to convert linear piston motion into powerful shaft rotation. Each actuator is composed of a housing with integrated gear teeth (01) and only two moving parts: the central shaft with integrated bearing tube and mounting flange (02), and the annular piston sleeve (03). Helical spline teeth machined on the shaft engage matching splines on the in- side diameter of the piston. The outside diameter of the piston carries a second set of splines, of opposite hand, which engage with matching splines in the housing. As hydraulic pressure is applied, the piston is displaced axially within the housing - similar to the operation of a hydraulic cylinder - while the splines cause the shaft to rotate. When the control valve is closed, oil is trapped inside the actuator, preventing piston movement and locking the shaft in position.

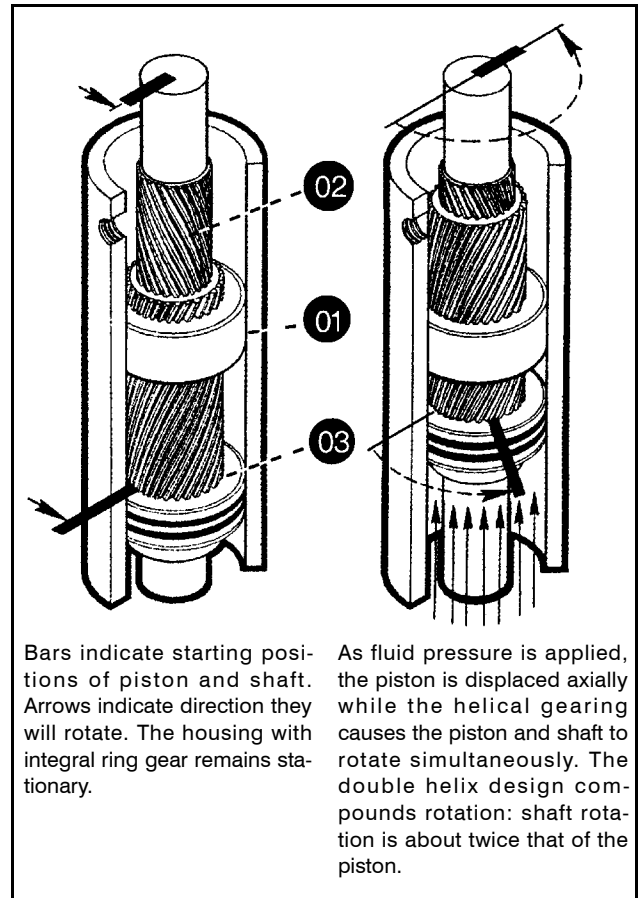

The shaft is supported radially by the large upper radial bearing and the lower radial bearing. Axially, the shaft is separated from the housing by the upper and lower thrust

SECTION 4 - BOOM & PLATFORM

washers. The end cap is adjusted for axial clearance and locked in position by set screws or pins.

Required Tools


Upon assembly and disassembly of the actuator there are basic tools required. The tools and their intended functions are as follows:




1. Flashlight - helps examine timing marks, component failure and overall condition.
2. Felt Marker - match mark the timing marks and outline troubled areas.
3. Allen wrench - removal of port plugs and set screws.
4. Box knife - removal of seals.
5. Seal tool - assembly and disassembly of seals and wear guides.
6. Pry bar - removal of end cap and manual rotation of shaft.
7. Rubber mallet- removal and installation of shaft and piston sleeve assembly.
8. Nylon drift - installation of piston sleeve
9. End cap dowel pins - removal and installation of end cap (sold with Helac seal kit).

The seal tool is merely a customized standard flat head screwdriver. To make this tool you will need to heat the flat end with a torch. Secure the heated end of the screwdriver in a vice and physically bend the heated end to a slight radius. Once the radius is achieved round off all sharp edges of the heated end by using a grinder. There may be

some slight modifications for your own personal preference.

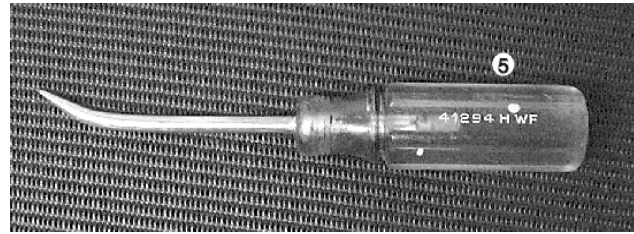


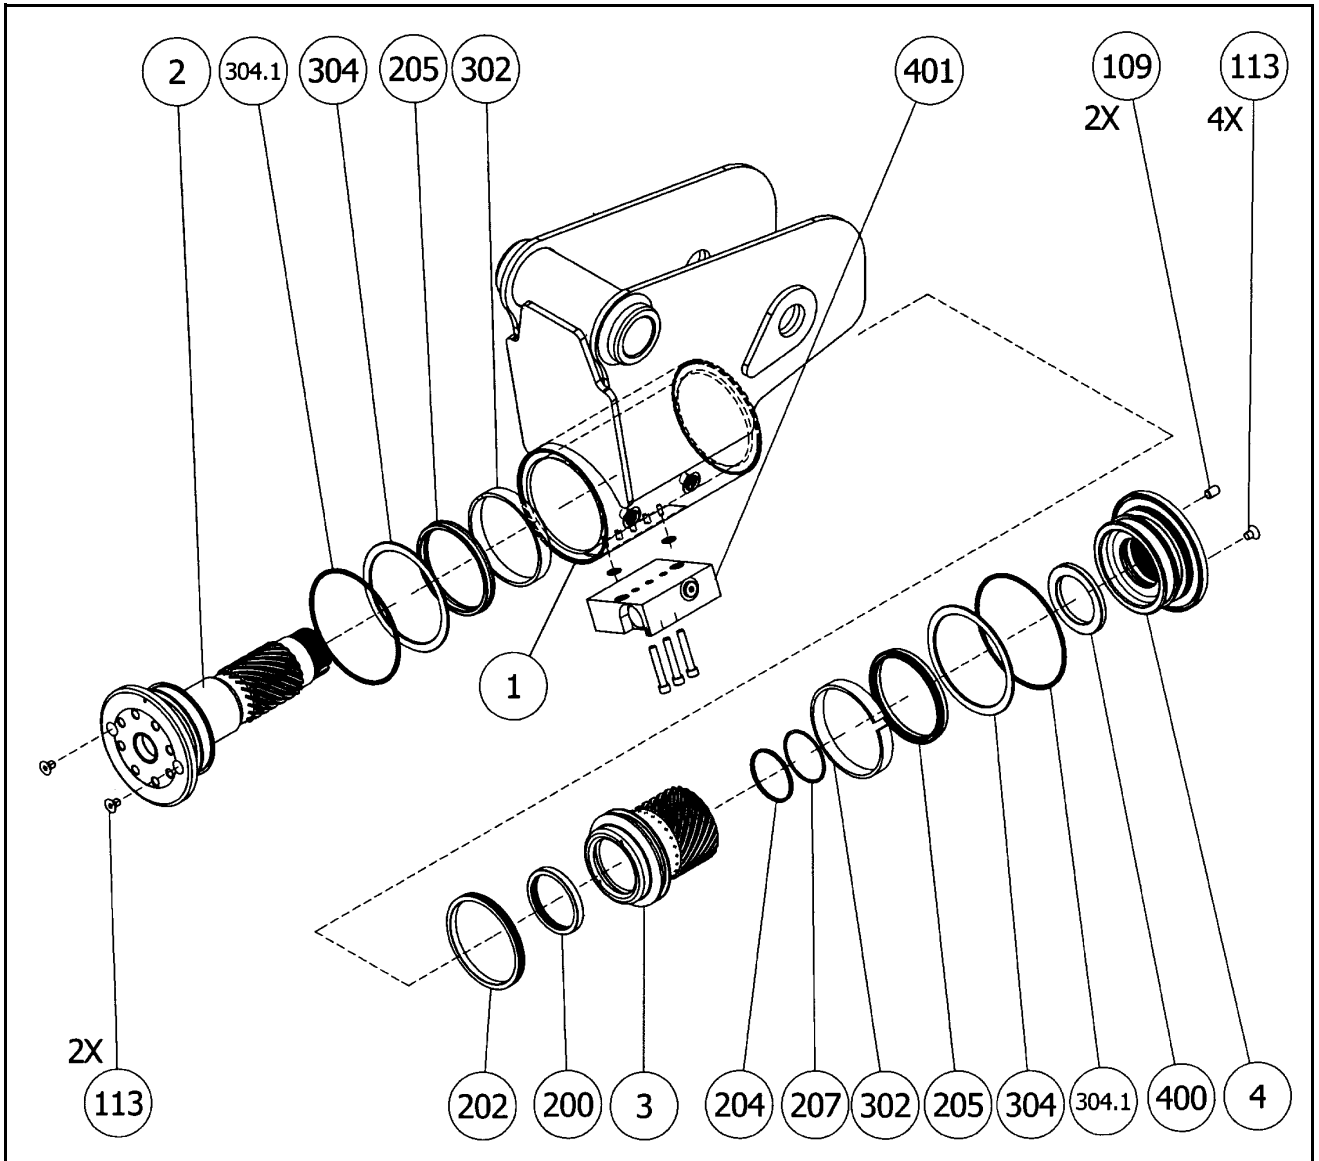

PARTS	HARDWARE	SEALS	BEARINGS	ACCESSORIES
1. Housing	103.1. Screw	200. T-Seal	302. Wear Guide	400. Stop Tube
2. Shaft	103.2. Washer	202. T-Seal	304. Thrust Washer	420.1 Bushing
3. Piston Sleeve	106.1. Port Plug	204. O-ring		420.2 Bushing
4. End Cap	106.2. Port Plug	205. Cup Seal		421.1 Bushing
	109. Lock Pin	207. Backup Ring		
	113. Capscrew	304.1. Wiper Seal		

Figure 4-20. Rotary Actuator - Exploded View

SECTION 4 - BOOM & PLATFORM

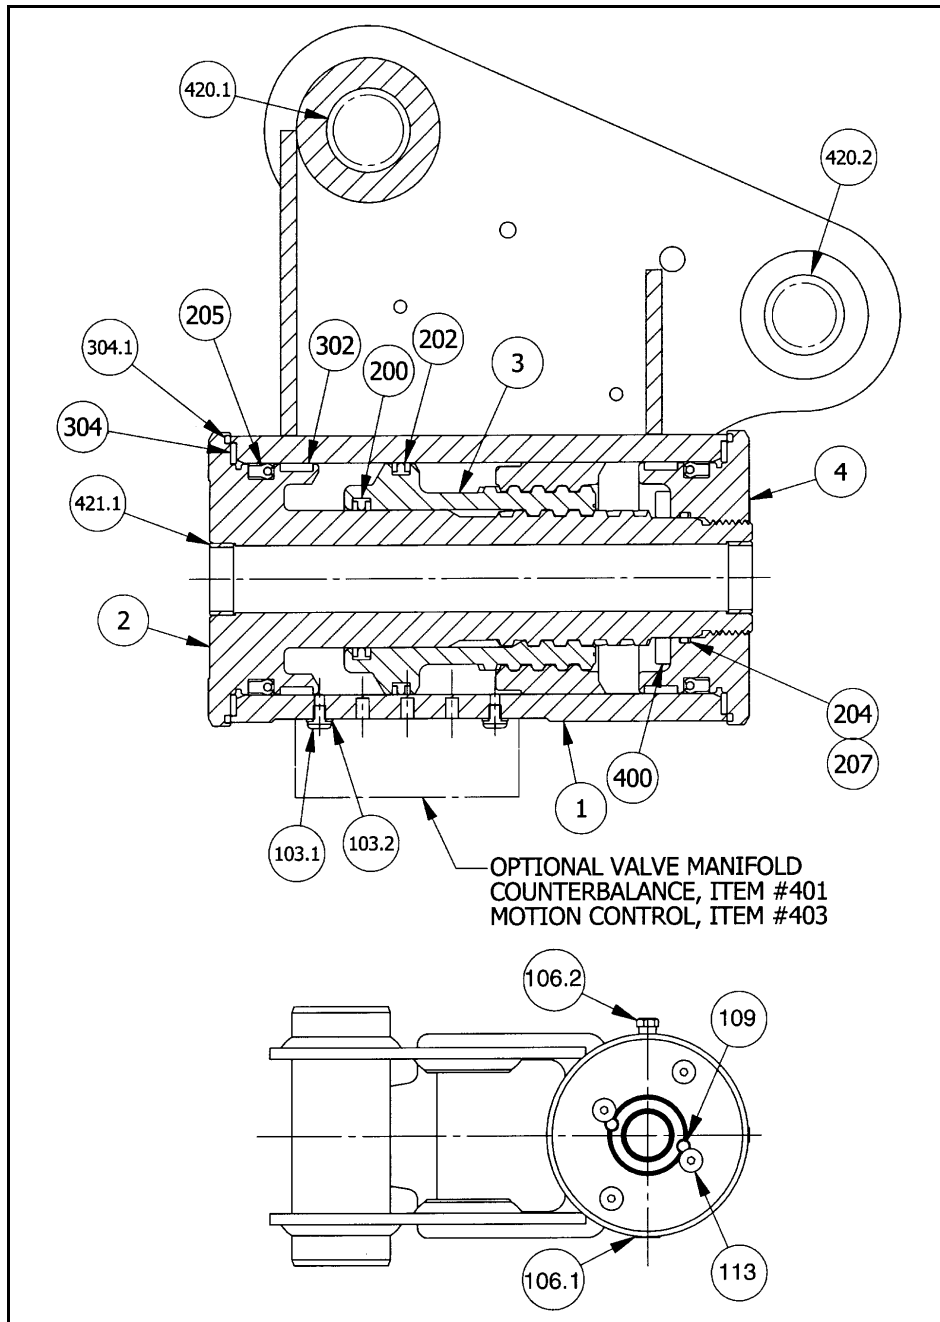


PARTS	HARDWARE	SEALS	BEARINGS	ACCESSORIES
1. Housing	103.1. Screw	200. T-Seal	302. Wear Guide	400. Stop Tube
2. Shaft	103.2. Washer	202. T-Seal	304. Thrust Washer	420.1 Bushing
3. Piston Sleeve	106.1. Port Plug	204. O-ring		420.2 Bushing
4. End Cap	106.2. Port Plug	205. Cup Seal		421.1 Bushing
	109. Lock Pin	207. Backup Ring		
	113. Capscrew	304.1. Wiper Seal		

Figure 4-21. Rotary Actuator - Assembly Drawing

Disassembly


1. Remove the capscrews (113) over end cap lock pins (109).

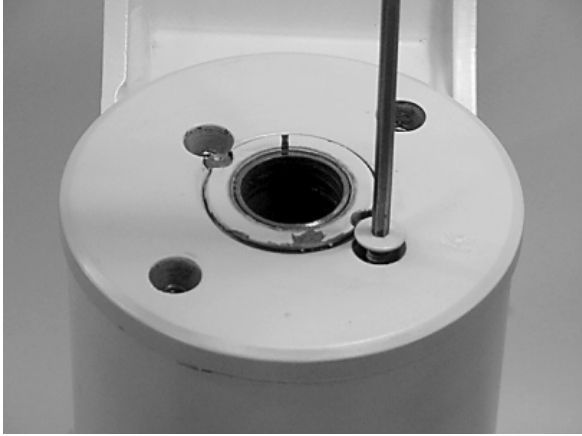

2. Using a 1/8" (3.18mm) drill bit, drill a hole in the center of each lock pin to a depth of approximately 3/16" (4.76mm).



3. Remove the lock pins using an "Easy Out" (a size #2 is shown).

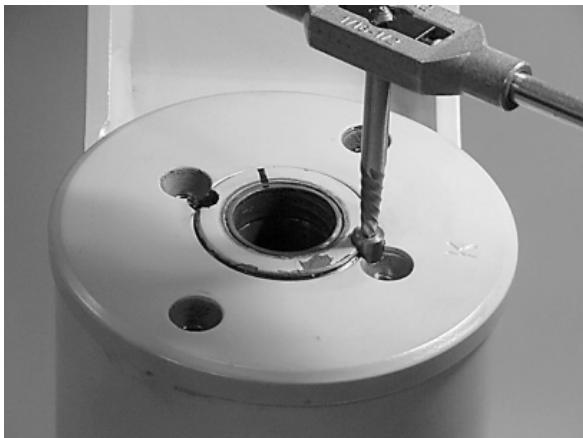

If the pin will not come out with the "Easy Out", use

5/16" drill bit to a depth of 1/2" (12.7mm) to drill out the entire pin.

4. Install the end cap (4) removal tools provided with the Helac seal kit.



5. Using a metal bar, or something similar, unscrew the end cap (4) by turning it counter clockwise.



SECTION 4 - BOOM & PLATFORM


6. Remove the end cap (4) and set aside for later inspection.



7. Remove the stop tube if included. The stop tube is an available option to limit the rotation of the actuator.




8. Every actuator has timing marks for proper engagement.

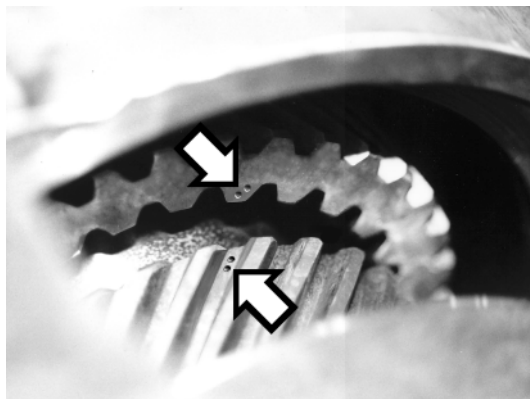

9. Prior to removing the shaft, (2), use a felt marker to clearly indicate the timing marks between shaft and piston. This will greatly simplify timing during assembly.




- 10.** Remove the shaft (2). It may be necessary to strike the threaded end of the shaft with a rubber mallet.

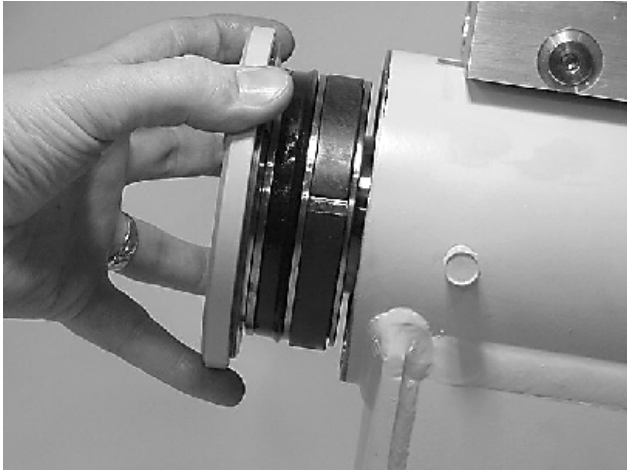


- 11.** Before removing the piston (3), mark the housing (1) ring gear in relation to the piston O.D. gear. There should now be timing marks on the housing (1) ring gear, the piston (3) and the shaft (2).



- 12.** To remove the piston (3) use a rubber mallet and a plastic mandrel so the piston is not damaged.

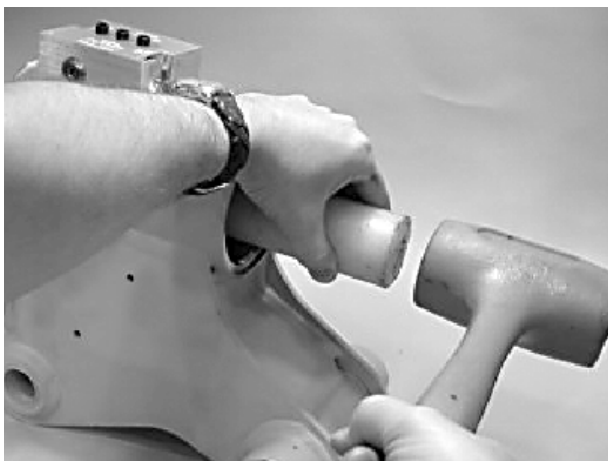

- 13.** At the point when the piston gear teeth come out of engagement with the housing gear teeth, mark the piston and housing with a marker as shown.

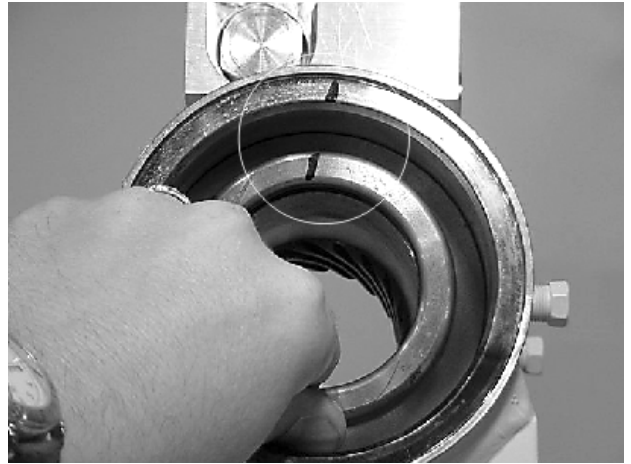

- 14.** Remove the o-ring (204) and backup ring (207) from end cap (4) and set aside for inspection.




- 15.** Remove the wear guides (302) from the end cap (4) and shaft (2).



SECTION 4 - BOOM & PLATFORM

16. To remove the main pressure seals (205), it is easiest to cut them using a sharp razor blade being careful not to damage the seal groove.

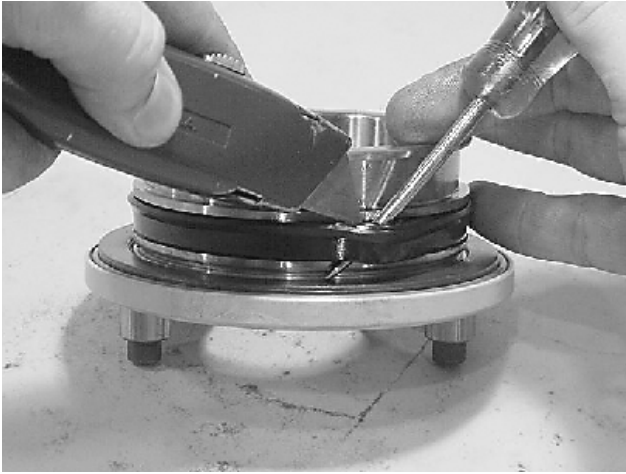

19. Remove the piston O.D. seal (202).



20. Remove the piston I.D. seal (200). You may now proceed to the inspection process.

17. Remove the thrust washers (304), from the end cap (4) and shaft (2).



18. Remove the wiper seal (304.1) from its groove in the end cap (4) and shaft (2).




Inspection


1. Clean all parts in a solvent tank and dry with compressed air prior to inspecting. Carefully inspect all critical areas for any surface finish abnormalities: Seal grooves, bearing grooves, thrust surfaces, rod surface, housing bore and gear teeth.



2. Inspect the thrust washers (304) for rough or worn edges and surfaces. Measure its thickness to make sure it is within specifications (Not less than 0.092" or 2.34 mm).

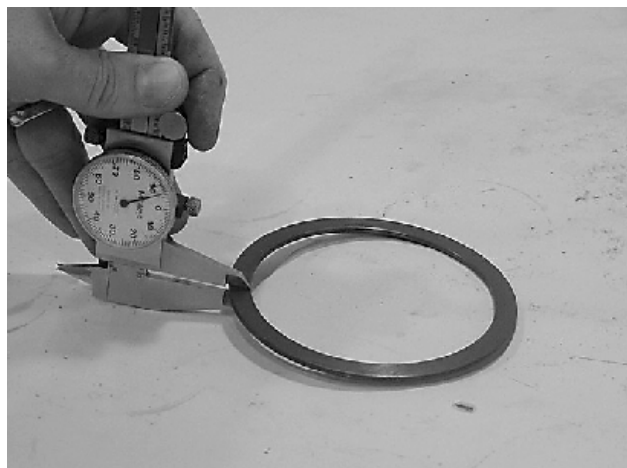


3. Inspect the wear guide condition and measure thickness (not less than 0.123" or 3.12 mm).

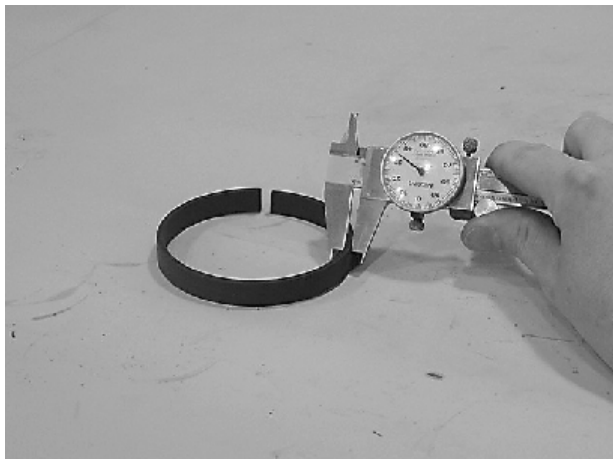

Assembly

1. Gather all the components and tools into one location prior to re-assembly. Use the cut away drawing to reference the seal orientations.

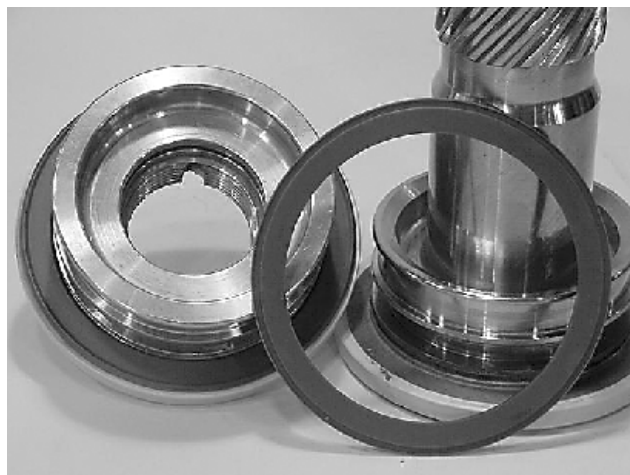


SECTION 4 - BOOM & PLATFORM


2. Install the thrust washer (304) onto shaft (2) and end cap (4).




3. Install the wiper seal (304.1/green O-ring) into its groove on the shaft (2) and end cap (4) around the outside edge of the thrust washer (304).

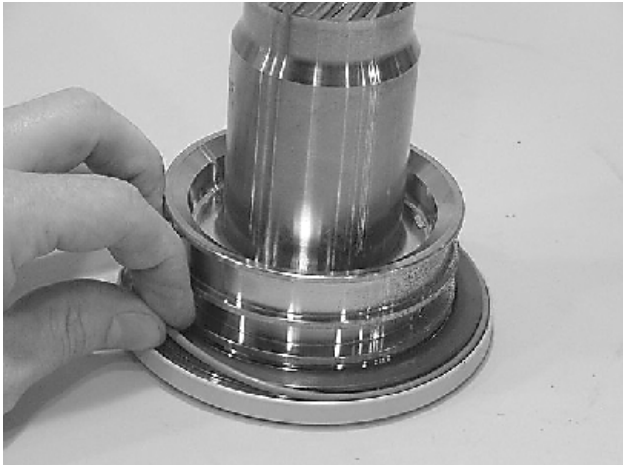

4. Using a seal tool install the main pressure seal (205) onto shaft (2) and end cap (4). Use the seal tool in a circular motion.

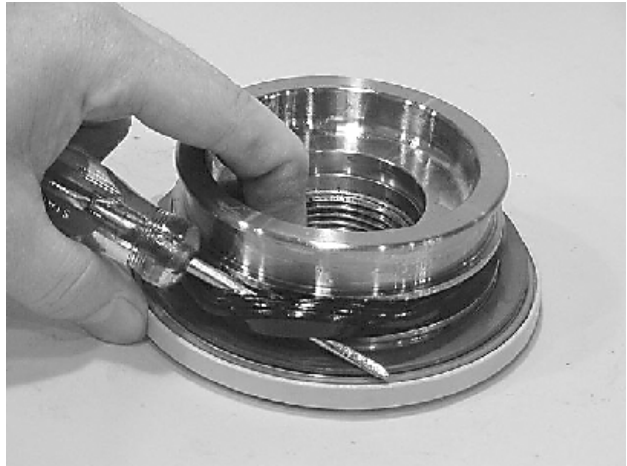

5. Install the wear guide (302) on the end cap (4) and shaft (2).

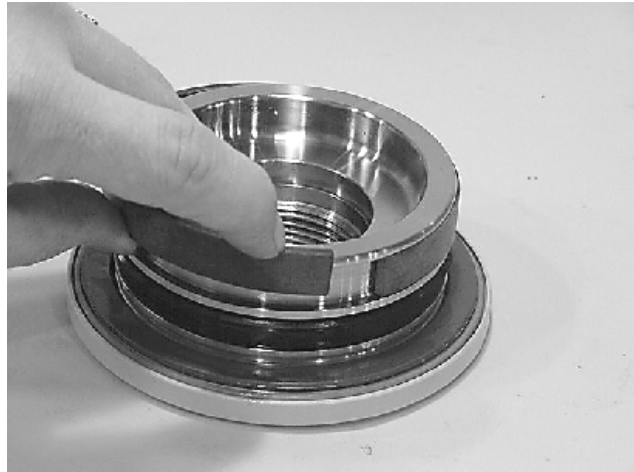

6. Install the inner T-seal (200) into the piston (3) using a circular motion.

Install the outer T-seal (202) by stretching it around the groove in a circular motion.

Each T-seal has 2 back-up rings (see drawing for orientation).




Beginning with the inner seal (200) insert one end of b/u ring in the lower groove and feed the rest in using a circular motion. Make sure the wedged ends overlap correctly.


Repeat this step for the outer seal (202).



7. Insert the piston (3) into the housing (1) as shown, until the outer piston seal (202) is touching inside the housing bore.

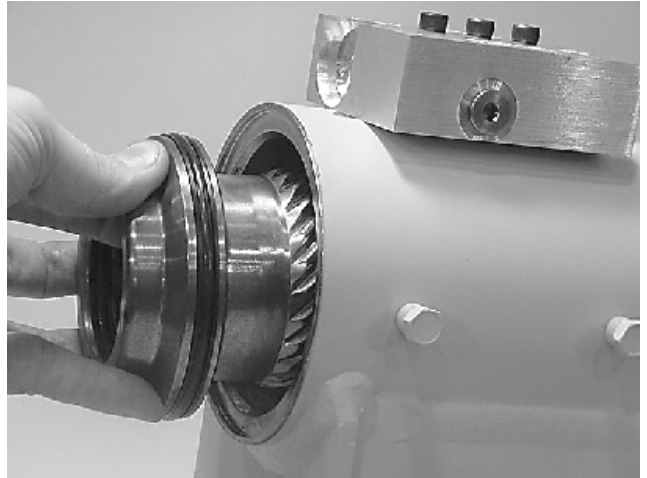

8. Looking from the angle shown, rotate the piston (3) until the marks you put on the piston and the housing (1) during disassembly line up as shown. Using a rubber mallet, tap the piston into the housing up to the point where the gear teeth meet.

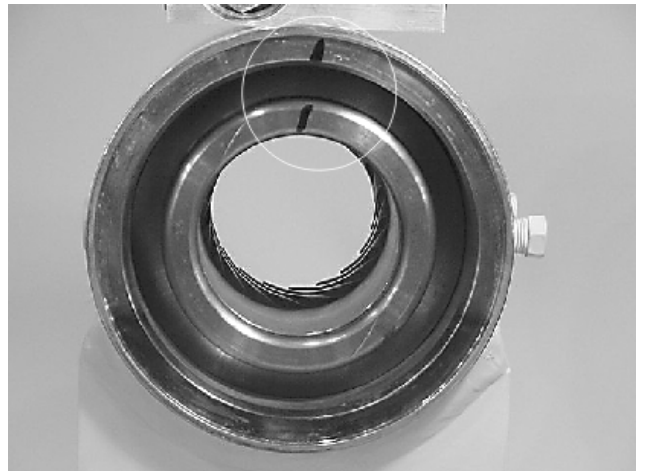

SECTION 4 - BOOM & PLATFORM


9. Looking from the opposite end of the housing (1) you can see if your timing marks are lining up. When they do, tap the piston (3) in until the gear teeth mesh together. Tap the piston into the housing the rest of the way until it bottoms out.




11. Looking from the view shown, use the existing timing marks to line up the gear teeth on the shaft (2) with the gear teeth on the inside of the piston (3). Now tap the flange end of the shaft with a rubber mallet until the gear teeth engage.



10. Install the shaft (2) into the piston (3). Be careful not to damage the seals. Do not engage the piston gear teeth yet.

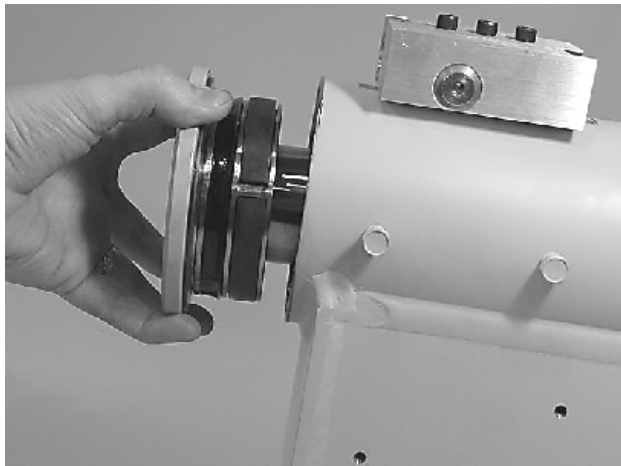


12. Install 2 bolts in the threaded holes in the flange. Using a bar, rotate the shaft in a clockwise direction until the wear guides are seated inside the housing bore.

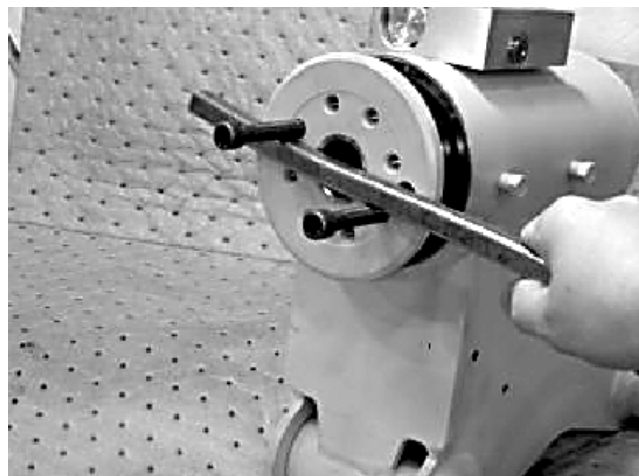

13. Install the stop tube onto the shaft end. Stop tube is an available option to limit the rotation of an actuator.


- 14.** Coat the threads on the end of the shaft with anti-seize grease to prevent galling.

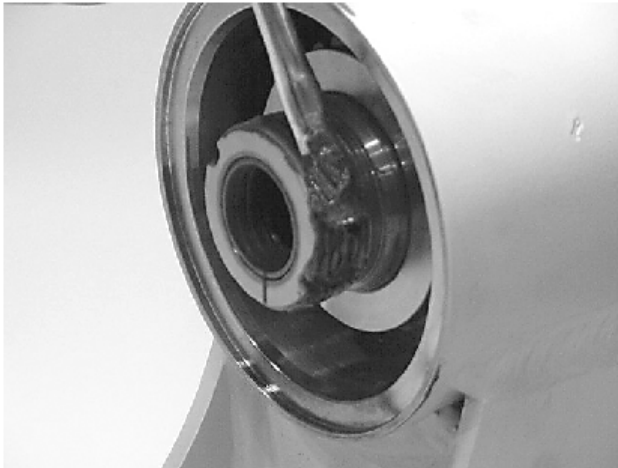


- 15.** Install the O-ring (204) and back-up ring (207) into the inner seal groove on the end cap (4).



- 16.** Thread the end cap (4) onto the shaft (2) end. Make sure the wear guide stays in place on the end cap as it is threaded into the housing (1).

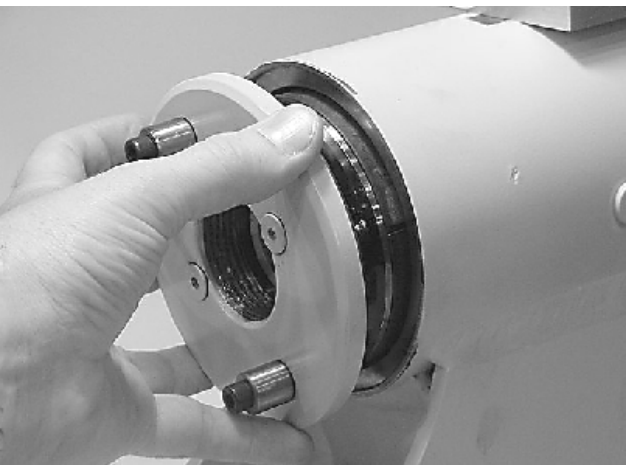


- 17.** Tighten the end cap (4). In most cases the original holes for the lock pins will line up.

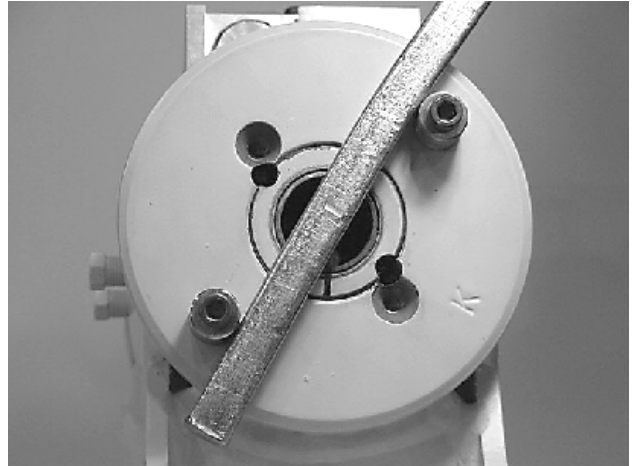

- 18.** Place the lock pins (109) provided in the Helac seal kit in the holes with the dimple side up. Then, using a punch, tap the lock pins to the bottom of the hole.



- 19.** Insert the set screws (113) over the lock pins. Tighten them to 25 in. lbs. (2.825 Nm).

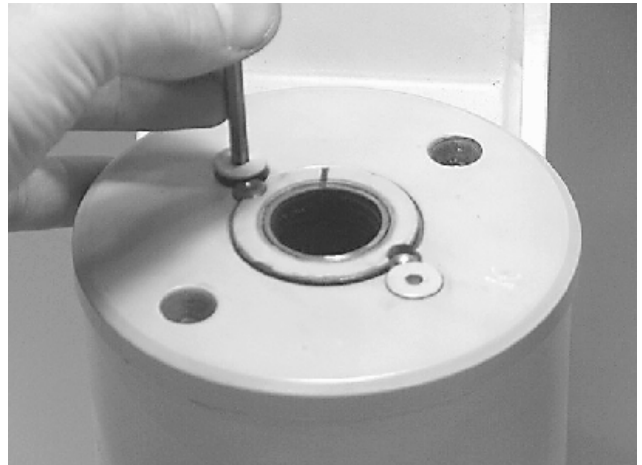

Installing Counterbalance Valve

Refer to Figure 4-22., Rotator Counterbalance Valve.

1. Make sure the surface of the actuator is clean, free of any contamination and foreign debris including old Loctite.
2. Make sure the new valve has the O-rings in the counterbores of the valve to seal it to the actuator housing.
3. The bolts that come with the valve are grade 8 bolts. New bolts should be installed with a new valve. Loctite #242 should be applied to the shank of the three bolts at the time of installation.
4. Torque the 1/4-inch bolts 110 to 120 inch pounds (12.4 to 13.5 Nm). Do not torque over 125 inch pounds (14.1 Nm). Torque the 5/16-inch bolts 140 inch pounds (15.8 Nm). Do not torque over 145 inch pounds (16.3 Nm).

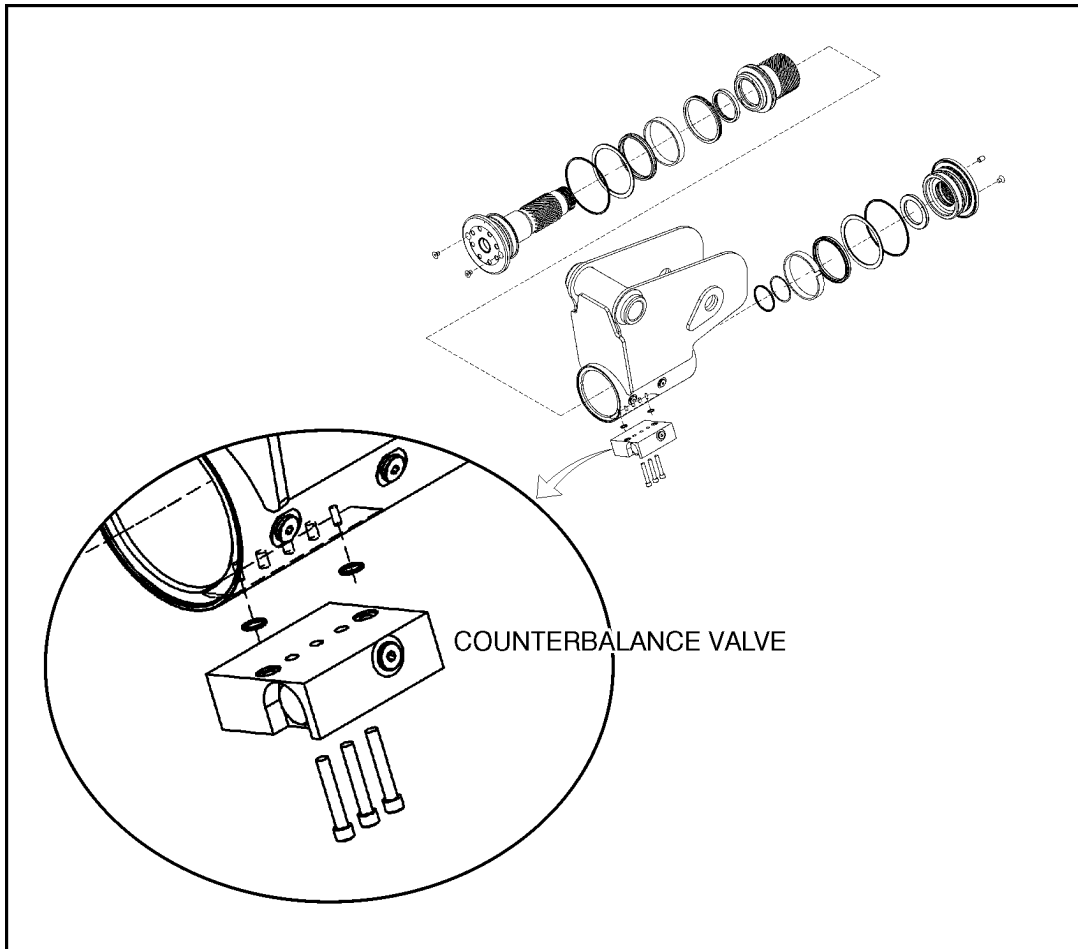


Figure 4-22. Rotator Counterbalance Valve

Testing the Actuator

If the equipment is available, the actuator should be tested on a hydraulic test bench. The breakaway pressure — the pressure at which the shaft begins to rotate — should be approximately 400 psi (28 bar). Cycle the actuator at least 25 times at 3000 psi (210 bar) pressure. After the 25 rotations, increase the pressure to 4500 psi (315 bar) to check for leaks and cracks. Perform the test again at the end of the rotation in the opposite direction.

TESTING THE ACTUATOR FOR INTERNAL LEAKAGE

If the actuator is equipped with a counterbalance valve, plug the valve ports. Connect the hydraulic lines to the housing ports. Bleed all air from the actuator (see Installation and Bleeding) Rotate the shaft to the end of rotation at 3000 psi (210 bar) and maintain pressure. Remove the hydraulic line from the non-pressurized side.

Continuous oil flow from the open housing port indicates internal leakage across the piston. Replace the line and rotate the shaft to the end of rotation in the opposite direction. Repeat the test procedure outlined above for the other port. If there is an internal leak, disassemble, inspect and repair.

Installation and Bleeding


After installation of the actuator on the equipment, it is important that all safety devices such as tie rods or safety cables are properly reattached.

To purge air from the hydraulic lines, connect them together to create a closed loop and pump hydraulic fluid through them. Review the hydraulic schematic to determine which hydraulic lines to connect. The linear feet and inside diameter of the hydraulic supply lines together with pump capacity will determine the amount of pumping time required to fully purge the hydraulic system.

Bleeding may be necessary if excessive backlash is exhibited after the actuator is connected to the hydraulic system. The following steps are recommended when a minimum of two gallons (8 liters) is purged.

1. Connect a 3/16" inside diameter x 5/16" outside diameter x 5 foot clear, vinyl drain tube to each of the two bleed nipples. Secure them with hose clamps. Place the vinyl tubes in a clean 5-gallon container to

collect the purged oil. The oil can be returned to the reservoir after this procedure is completed.

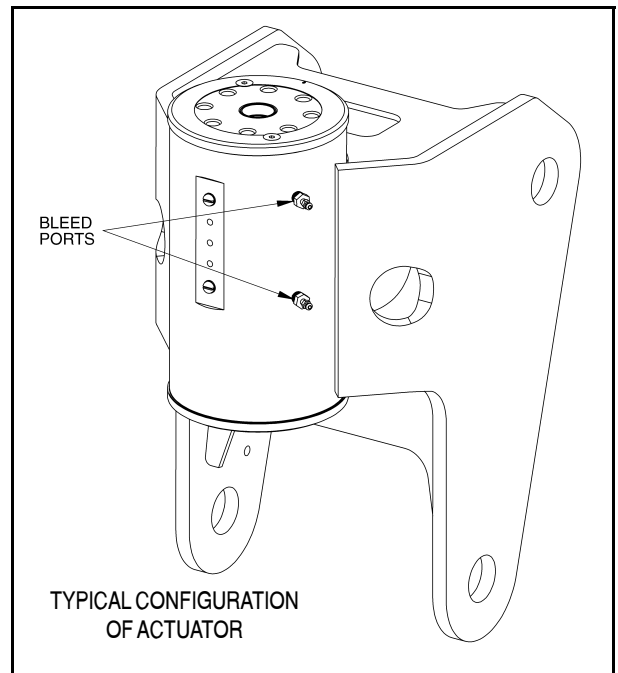

2. With an operator in the platform, open both bleed nipples 1/4 turn. Hydraulically rotate the platform to the end of rotation (either clockwise or counterclockwise), and maintain hydraulic pressure. Oil with small air bubbles will be seen flowing through the tubes. Allow a 1/2 gallon of fluid to be purged from the actuator.
3. Keep the fittings open and rotate the platform in the opposite direction to the end position. Maintain hydraulic pressure until an additional 1/4 gallon of fluid is pumped into the container.
4. Repeat steps 2 & 3. After the last 1/2 gallon is purged, close both bleed nipples before rotating away from the end position.

Troubleshooting

Table 4-1. Troubleshooting

Problem	Cause	Solution
1. Shaft rotates slowly or not at all	a. Insufficient torque output	a. Verify correct operating pressure. Do not exceed OEM's pressure specifications. Load may be above maximum capacity of the actuator.
	b. Low rate of fluid flow	b. Inspect ports for obstructions and hydraulic lines for restrictions and leaks.
	c. Control or counterbalance valve has internal leak	c. Disconnect hydraulic lines and bypass valve. Leave valve ports open and operate the actuator through housing ports (do not exceed OEM's operating pressure). The valve must be replaced if a steady flow of fluid is seen coming from the valve ports.
	d. Piston and/or shaft seal leak	d. Remove the plug and the housing's valve ports. Operate the actuator through the housing ports. Conduct the internal leakage test as described in the Testing section on page 24 of this manual.
	e. Corrosion build-up on the thrust surfaces	e. Re-build the actuator. Remove all rust then polish. Replacement parts may be needed.
	f. Swollen seals and composite bearings caused by incompatible hydraulic fluid	f. Re-build the actuator. Use fluid that is compatible with seals and bearings.
2. Operation is erratic or not responsive	a. Air in actuator	a. Purge air from actuator. See bleeding procedures.
3. Shaft will not fully rotate	a. Twisted or chipped gear teeth	a. Check for gear binding. Actuator may not be able to be re-built and may need to be replaced. Damage could be a result of overload or shock.
	b. Port fittings are obstructing the piston	b. Check thread length of port fittings. Fittings should during stroke not reach inside the housing bore.
4. Selected position cannot be maintained	a. Control or counterbalance valve has internal leak	a. Disconnect hydraulic lines and bypass valve. Leave valve ports open and operate the actuator through housing ports (do not exceed OEM's operating pressure). The valve must be replaced if a steady flow of fluid is seen coming from the valve ports.
	b. Piston and/or shaft seal leak	b. Remove the plug and the housing's valve ports. Operate the actuator through the housing ports. Conduct the internal leakage test as described in the Testing section on page 24 of this manual.
	c. Air in actuator	c. Purge air from actuator. See bleeding procedures

4.10 FOOT SWITCH ADJUSTMENT


Adjust so that functions will operate when pedal is at center of travel. If switch operates within last 1/4 in. (6.35 mm) of travel, top or bottom, it should be adjusted.

4.11 BOOM SYNCHRONIZING PROCEDURE

NOTE: If the Lower Boom assembly does not fully lower:

1. Remove all personnel from the platform.

2. Pull the red knob located under the manual descent control valve.
3. From Ground Control, activate the lift control switch, raise Lower Boom 6 feet (1.83m).
4. After raising Lower Boom, release the red knob.
5. Activate Lower Boom Down, fully lower boom.
6. Repeat step 1 thru 5 if necessary.

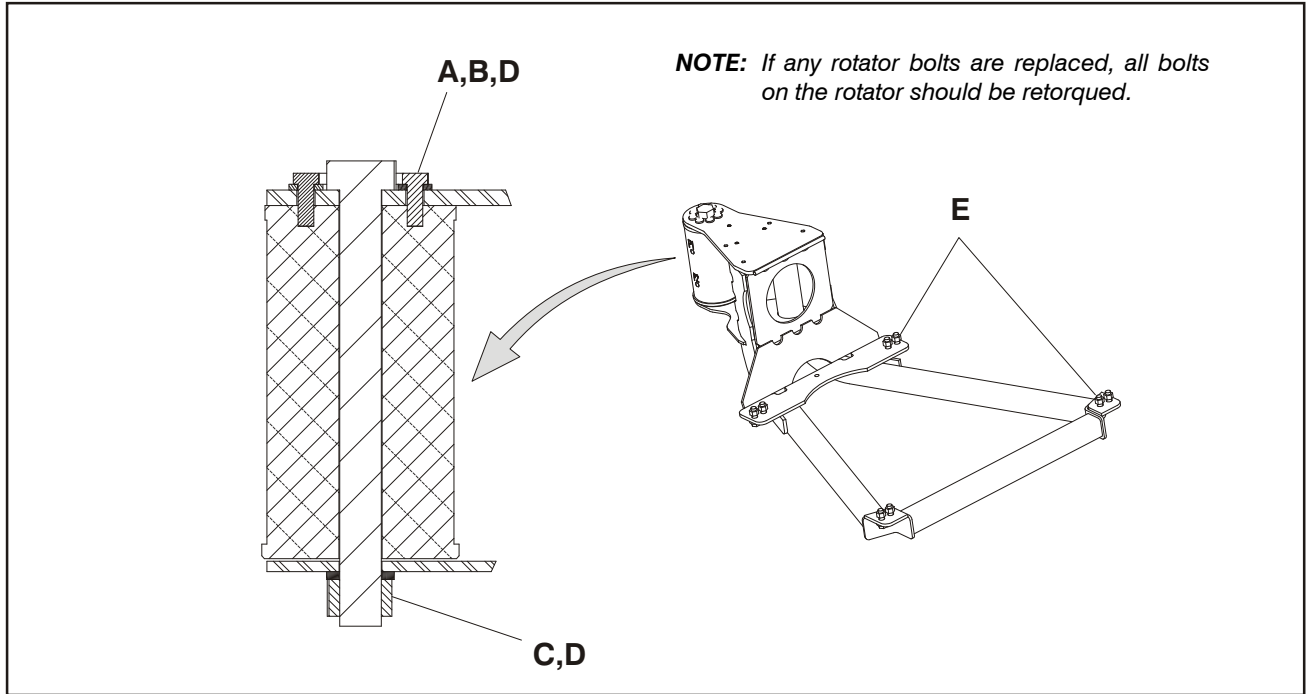

- A Torque to 50 ft.lbs. (68 Nm)
- B Loctite #242
- C Torque to 480 ft. lbs. (650 Nm)
- D Check torque every 150 hours of operation
- E Torque to 85 ft. lbs. (115 Nm)

Figure 4-23. Platform Support Torque Values

SECTION 5. HYDRAULICS

5.1 LUBRICATING O-RINGS IN THE HYDRAULIC SYSTEM

When assembling connectors in the hydraulic that use o-ring fittings, it is necessary to lubricate all fittings with hydraulic oil prior to assembly. To lubricate the fittings, use one of the following procedures.

NOTE: All O-ring fittings must be pre-lubricated with hydraulic oil prior to assembly.

Cup and Brush

The following is needed to correctly oil the o-ring in this manner:

- A small container for hydraulic oil
- Small paint brush



1. Hold the fitting in one hand while using the brush with the other hand to dip into the container. Remove excess hydraulic oil from the brush so an even film of oil is applied on the o-ring.



2. Holding the fitting over the hydraulic oil container, brush an even film of oil around the entire o-ring in the fitting, making sure the entire o-ring is completely saturated.



3. Turn the o-ring on the other side of the fitting and repeat the previous step, ensuring the entire o-ring is coated with hydraulic oil.



Dip Method

NOTE: This method works best with Face Seal o-rings, but will work for all o-ring fitting types.

The following is needed to correctly oil the o-ring in this manner:

- A small leak proof container
 - Sponge cut to fit inside the container
 - A small amount of hydraulic oil to saturate the sponge.
1. Place the sponge inside the container and add hydraulic oil to the sponge until it is fully saturated.
 2. Dip the fitting into the sponge using firm pressure. Upon lifting the fitting, a small droplet will form and drip from the bottom of the fitting. This should signify an even coating of oil on the fitting.



3. O-ring Boss type fittings will require more pressure in able to immerse more of the fitting into the saturated sponge. This will also cause more oil to be dispersed from the sponge.



Spray Method

This method requires a pump or trigger spray bottle.

1. Fill the spray bottle with hydraulic oil.
2. Hold the fitting over a suitable catch can.
3. Spray the entire o-ring surface with a medium coat of oil.



Brush-on Method

This method requires a sealed bottle brush.

1. Fill the bottle with hydraulic oil.
2. Using slight pressure to the body of the spray bottle, invert the bottle so the brush end is in the downward position.
3. Brush hydraulic oil on the entire o-ring, applying an even coat of oil.



5.2 CYLINDERS - THEORY OF OPERATION

Systems Incorporating Double Acting Cylinders

Cylinders are of the double acting type. Systems incorporating double acting cylinders are as follows: - Lower Lift, Tower Telescope, Slave Level/Main Level, Upper Lift, Upper Telescope, Master Level/Upright Level, Articulating Jib Boom Lift, Steer and Axle lockout. A double acting cylinder is one that requires oil flow to operate the cylinder rod in both directions. Directing oil (by actuating the corresponding control valve to the piston side of the cylinder) forces the piston to travel toward the rod end of the barrel, extending the cylinder rod (piston attached to rod). When the oil flow is stopped, movement of rod will stop. By directing oil to the rod side of the cylinder, the piston will be forced in the opposite direction and the cylinder rod will retract.

Systems Incorporating Holding Valves

Holding valves are used in the - Lower Lift, Tower Telescope, Upright Level, Lockout, Articulating Jib Boom Lift, Upper Lift/Slave Level and Upper Telescope circuits to prevent retraction of the cylinder rod should a hydraulic line rupture or a leak develop between the cylinder and its related control valve.

5.3 CYLINDER CHECKING PROCEDURE

NOTE: *Cylinder check must be performed anytime a system component is replaced or when improper system operation is suspected.*

Cylinders Without Counterbalance Valves - Master Cylinder and Steer Cylinder

1. Using all applicable safety precautions, activate engine and fully extend cylinder to be checked. Shut down engine.
2. Carefully disconnect hydraulic hoses from retract port of cylinder. There will be some initial weeping of hydraulic fluid which can be caught in a suitable container. After the initial discharge, there should be no further drainage from the retract port.
3. Activate engine and extend cylinder.

4. If cylinder retract port leakage is less than 6-8 drops per minute, carefully reconnect hose to port and retract cylinder. If leakage continues at a rate of 6-8 drops per minute or more, cylinder repair must be made.
5. With cylinder fully retracted, shut down engine and carefully disconnect hydraulic hose from cylinder extend port.
6. Activate engine and retract cylinder. Check extend port for leakage.
7. If extend port leakage is less than 6-8 drops per minute, carefully reconnect hose to extend port, then activate cylinder through one complete cycle and check for leaks. If leakage continues at a rate of 6-8 drops per minute or more, cylinder repairs must be made.

Cylinders With Single Counterbalance Valve

Upper Lift Cylinder.

NOTICE

OPERATE ALL FUNCTIONS FROM GROUND CONTROL STATION ONLY.

1. Using all applicable safety precautions, activate hydraulic system.

WARNING

WHEN WORKING ON THE MAIN LIFT CYLINDER, RAISE THE BOOM TO HORIZONTAL AND PLACE A BOOM PROP APPROXIMATELY 1 INCH (2.54 CM) BELOW THE MAIN BOOM. DO NOT WORK ON THE CYLINDER WITHOUT A SUITABLE PROP IN PLACE.

2. Shut down hydraulic system and allow machine to sit for 10-15 minutes. If machine is equipped with bang-bang or proportional control valves, turn IGNITION SWITCH to ON, move control switch or lever for applicable cylinder in each direction, then turn IGNITION SWITCH to OFF. If machine is equipped with hydraulic control valves, move control lever for applicable cylinder in each direction. This is done to relieve pressure in the hydraulic lines. Carefully remove hydraulic hoses from appropriate cylinder port block.
3. There will be initial weeping of hydraulic fluid, which can be caught in a suitable container. After the initial discharge, there should be no further leakage from the ports. If leakage continues at a rate of 6-8 drops per minute or more, the counterbalance valve is defective and must be replaced.
4. To check piston seals, carefully remove the counterbalance valve from the retract port. After initial discharge, there should be no further leakage from the

ports. If leakage occurs at a rate of 6-8 drops per minute or more, the piston seals are defective and must be replaced.

5. If no repairs are necessary or when repairs have been made, replace counterbalance valve and carefully connect hydraulic hoses to cylinder port block.
6. If used, remove lifting device from upright or remove prop from below main boom, activate hydraulic system and run cylinder through one complete cycle to check for leaks.

Cylinders With Dual Counterbalance Valves

(Articulating Jib Boom Lift, and Slave), Slave Level, Lower Lift, Upright level, Main Telescope and Tower Telescope.

NOTICE

OPERATE ALL FUNCTIONS FROM GROUND CONTROL STATION ONLY.

1. Using all applicable safety precautions, activate hydraulic system.

⚠ WARNING

IF WORKING ON THE TOWER BOOM LIFT CYLINDER, RAISE TOWER BOOM HALFWAY, FULLY ELEVATE MAIN BOOM WITH TELESCOPE CYLINDER FULLY RETRACTED AND ATTACH AN OVERHEAD CRANE TO THE UPRIGHT FOR SUPPORT, LEAVING APPROXIMATELY 1 INCH (2.54 CM) OF SLACK IN CHAIN OR SLING FOR TEST PURPOSES. IF WORKING ON THE UPRIGHT LEVEL, RAISE THE TOWER BOOM HALFWAY, THEN RAISE MAIN BOOM TO HORIZONTAL AND POSITION A SUITABLE BOOM PROP APPROXIMATELY 1 INCH (2.54 CM) BELOW MAIN BOOM. IF WORKING ON THE PLATFORM LEVEL CYLINDER, STROKE PLATFORM LEVEL CYLINDER FORWARD UNTIL PLATFORM SITS AT A 45 DEGREES ANGLE.

2. Shut down hydraulic system and allow machine to sit for 10-15 minutes. If machine is equipped with bang-bang or proportional control valves, turn IGNITION SWITCH to ON, move control switch or lever for applicable cylinder in each direction, then turn IGNITION SWITCH to OFF. If machine is equipped with hydraulic control valves, move control lever for applicable cylinder in each direction. This is done to relieve pressure in the hydraulic lines. Carefully remove hydraulic hoses from appropriate cylinder port block.

3. There will be initial weeping of hydraulic fluid, which can be caught in a suitable container. After the initial discharge, there should be no further leakage from the ports. If leakage continues at a rate of 6-8 drops per minute or more, the counterbalance valve is defective and must be replaced.
4. To check piston seals, carefully remove the counterbalance valve from the retract port. After initial discharge, there should be no further leakage from the ports. If leakage occurs at a rate of 6-8 drops per minute or more, the piston seals are defective and must be replaced.
5. If no repairs are necessary or when repairs have been made, replace counterbalance valve and carefully connect hydraulic hoses to cylinder port block.
6. If used, remove lifting device from upright or remove prop from below main boom, activate hydraulic system and run cylinder through one complete cycle to check for leaks.

5.4 CYLINDER REPAIR

NOTE: *The following are general procedures that apply to all of the cylinders on this machine. Procedures that apply to a specific cylinder will be so noted.*

Disassembly

NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

⚠ WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. If applicable, remove the cartridge-type holding valve and fittings from the cylinder port block. Discard o-rings.

- Place the cylinder barrel into a suitable holding fixture.

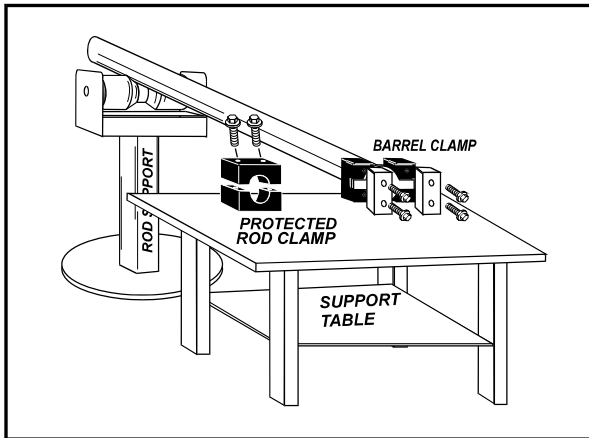


Figure 5-1. Cylinder Barrel Support

- Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the eight (8) cylinder head retainer cap screws, and remove cap screws from cylinder barrel.


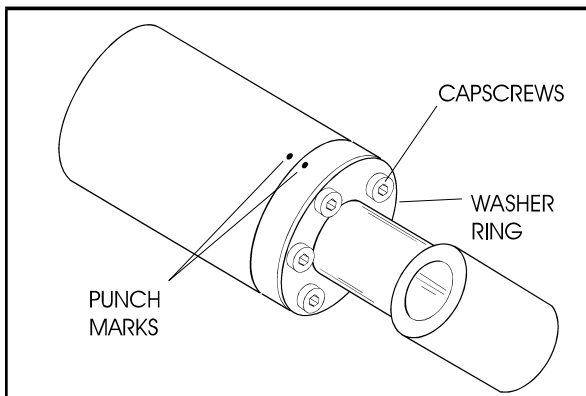


Figure 5-2. Cap Screw Removal

NOTE: Steps 6 and 7 apply only to the steer cylinder.

- Using a spanner wrench, loosen the spanner nut retainer, and remove spanner nut from cylinder barrel.
- Being careful not to mar the surface of the rod, use a punch or wooden dowel and hammer to drive the rod guide about one inch down into the cylinder bore. Using a screw driver, carefully push one end of the round retaining ring back towards the inside of the cylinder and then slip the screwdriver tip under that end. Pull the ring out of the groove toward the wall mouth. Once one end of the retaining ring is free from the groove, the remainder can be easily pried free using ones fingers or pliers.

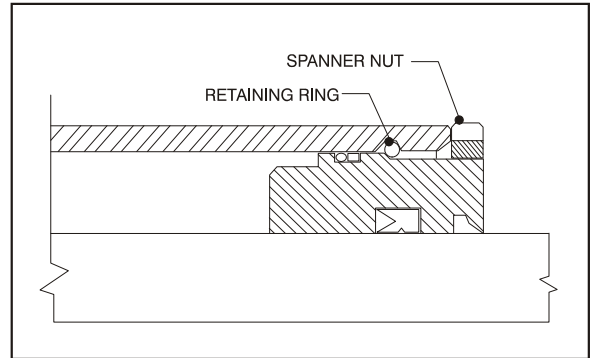

- Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

- With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.

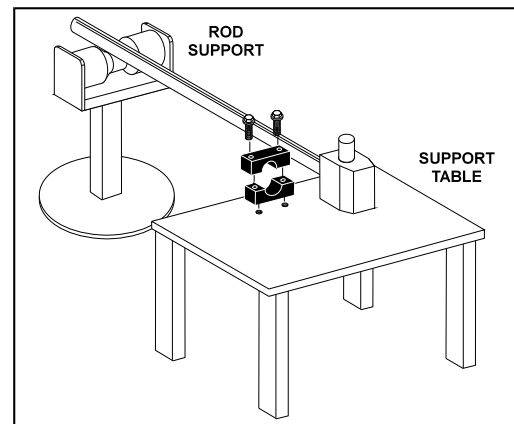


Figure 5-3. Cylinder Rod Support

- Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.

NOTE: Step 11 applies only to the steer cylinder.

- Loosen and remove nut which attaches the piston to the rod, and remove the piston.
- Loosen and remove the cap screw(s), if applicable, which attach the tapered bushing to the piston.

13. Insert the cap screw(s) in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the cap screw(s) until the bushing is loose on the piston.
14. Remove the bushing from the piston.

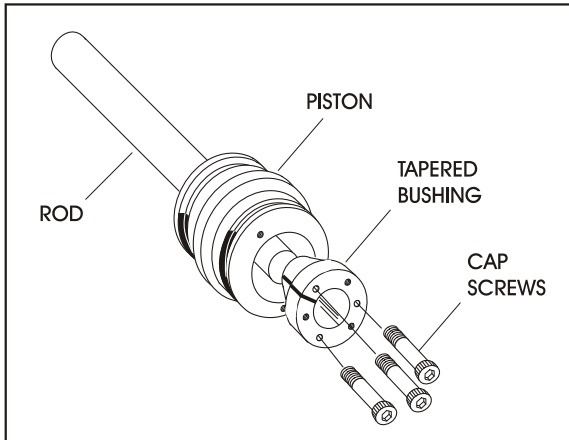


Figure 5-4. Tapered Bushing Removal

15. Screw the piston CCW, by hand, and remove the piston from cylinder rod.
16. Remove and discard the piston o-rings, seal rings, and backup rings.
17. Remove piston spacer, if applicable, from the rod.
18. Remove the rod from the holding fixture. Remove the cylinder head gland and retainer plate, if applicable. Discard the o-rings, back-up rings, rod seals, and wiper seals.

Cleaning and Inspection

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect threaded portion of barrel for damage. Dress threads as necessary.
6. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
7. Inspect threaded portion of piston for damage. Dress threads as necessary.

8. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
9. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
10. Inspect threaded portion of head for damage. Dress threads as necessary.
11. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
12. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
13. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
 - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
 - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
 - c. Lubricate inside of steel bushing with WD40 prior to bearing installation.
 - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

NOTE: Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

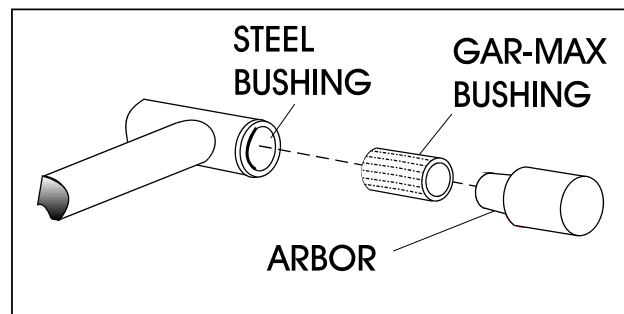


Figure 5-5. Composite Bearing Installation

14. Inspect travel limiting collar or spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
15. If applicable, inspect port block fittings and holding valve. Replace as necessary.
16. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
17. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

Assembly

NOTE: Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

Apply a light film of hydraulic oil to all components prior to assembly.

1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

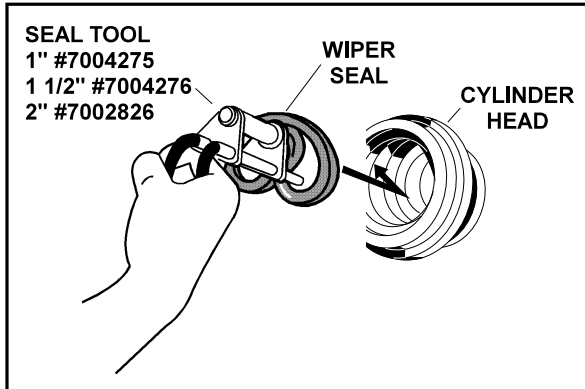


Figure 5-6. Rod Seal Installation

NOTICE

WHEN INSTALLING 'POLY-PAK' PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO WIPER SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

NOTICE

WHEN INSTALLING THE WIPER SEAL ON THE LOWER (TOWER) LIFT CYLINDER, APPLY LOCTITE #609 ON THE WIPER SEAL IN THREE EVENLY SPACED PLACES TO AID IN RETENTION OF THE SEAL.

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

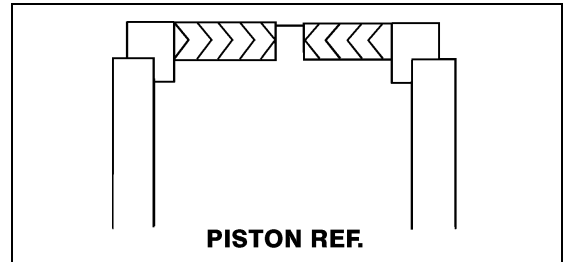


Figure 5-7. Poly-Pak Piston Seal Installation

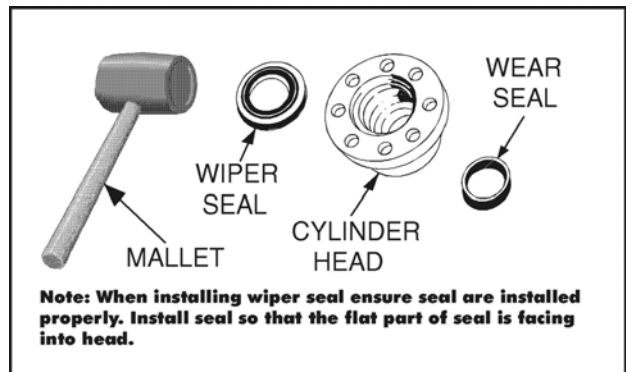


Figure 5-8. Wiper Seal Installation

3. Place a new "O-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

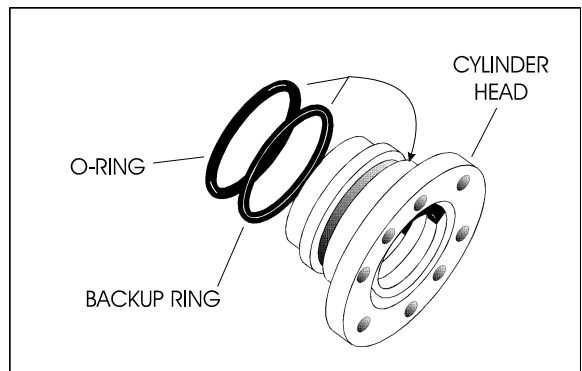


Figure 5-9. Installation of Head Seal Kit

SECTION 5 - HYDRAULICS

4. Install washer ring onto rod, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Carefully slide the piston spacer on the rod.

NOTE: Upper telescope cylinder piston has an o-ring installed inside the spacer.

6. If applicable, correctly place new o-ring in the inner piston diameter groove. (The backup ring side facing the O-ring is grooved.)
7. If applicable, correctly place new seals and guide lock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal.)

NOTE: The backup rings for the solid seal have a radius on one side. This side faces the solid seal. (See magnified insert in Figure 5-10.) The split of seals and backup rings are to be positioned so as not to be in alignment with each other.

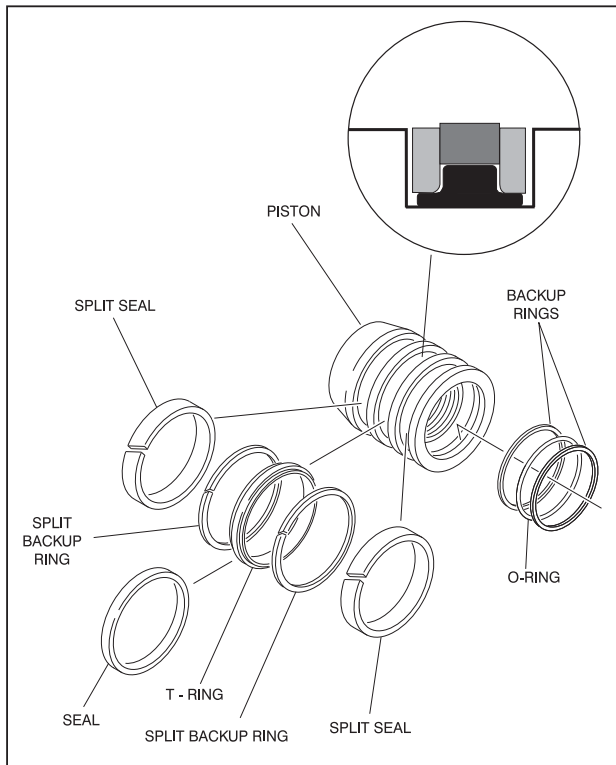


Figure 5-10. Piston Seal Kit Installation

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.

9. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
10. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

NOTE: When installing the tapered bushing, piston and mating end of rod must be free of oil.

⚠ WARNING

WHEN REBUILDING THE MASTER, SLAVE, LOWER LIFT, UPPER LIFT, ARTICULATING FLY BOOM LIFT, UPRIGHT LEVEL, TOWER TELESCOPE, OR UPPER TELESCOPE CYLINDERS, TIGHTEN SECURELY. (SEE TABLE 2-1 AND 2-3. TORQUE SPECIFICATIONS).

11. Assemble the tapered bushing loosely into the piston and insert JLG capscrews (not vendor capscrews) through the drilled holes in the bushing and into the tapped holes in the piston.

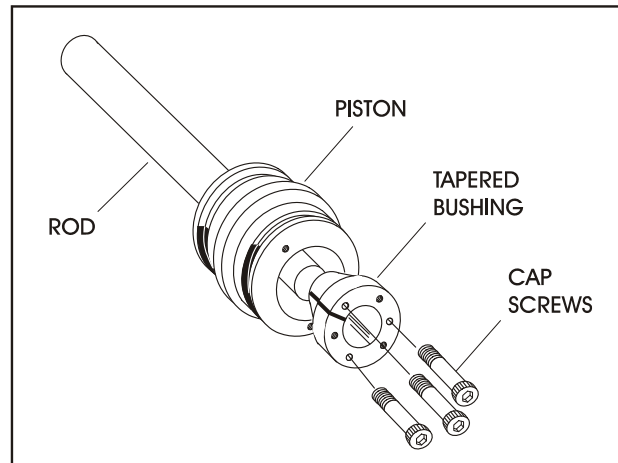


Figure 5-11. Tapered Bushing Installation

12. Tighten the capscrews evenly and progressively in rotation to the specified torque value. (See Table 5-2, Cylinder Head and Tapered Bushing Torque Specifications.
13. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
 - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.

- b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

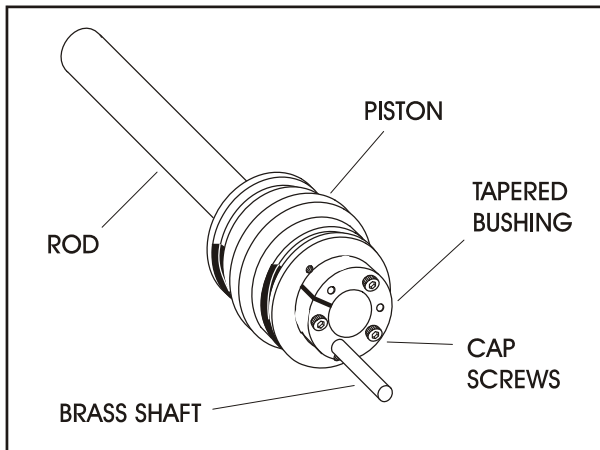


Figure 5-12. Seating the Tapered Bearing

- 14. Retorque the capscrews evenly and progressively in rotation to the specified torque value. (See Table 5-2, Cylinder Head and Tapered Bushing Torque Specifications.)
- 15. Remove the cylinder rod from the holding fixture.
- 16. Place new guide locks and seals in the applicable outside diameter grooves of the cylinder piston. (See Figure 5-10.)
- 17. Position the cylinder barrel in a suitable holding fixture.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

- 18. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
- 19. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

- 20. Secure the cylinder head gland using the washer ring and socket head bolts. (See Table 5-2.)

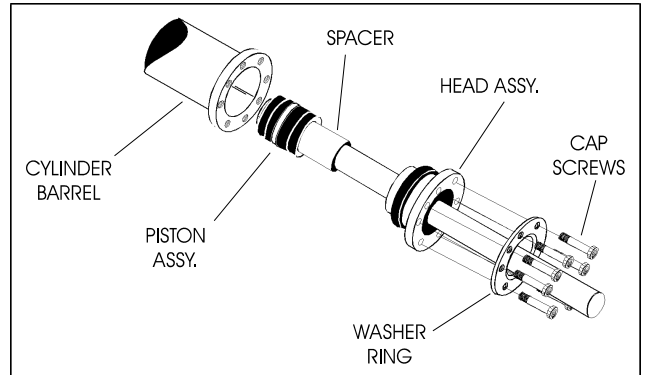


Figure 5-13. Rod Assembly Installation

- 21. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the reinstallation of any holding valve or valves.
- 22. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. (See Table 5-1, Holding Valve Torque Specifications).

Table 5-1. Holding Valve Torque Specifications

Description	Torque Value
SUN - 7/8 HEX M20 X 1.5 THDS.	30-35 ft. lbs. (41-48 Nm)
SUN - 1 1/8 HEX 1 -14 UNS THDS.	45-50 ft. lbs. (61-68 Nm)
SUN - 1 1/4 HEX M36 X 2 THDS.	150-160 ft. lbs. (204-217 Nm)
RACINE - 1 1/8 HEX 1 1/16 - 12 THDS.	50-55 ft. lbs. (68-75 Nm)
RACINE - 1 3/8 HEX 1 3/16 - 12 THDS.	75-80 ft. lbs. (102-109 Nm)
RACINE - 1 7/8 HEX 1 5/8 - 12 THDS.	100-110 ft. lbs. (136-149 Nm)

Table 5-2. Cylinder Head and Tapered Bushing Torque Specifications

Description	Head Torque Value (Wet)	Tapered Bushing Torque Value (Wet)
Upper Lift Cylinder	80 ft. lbs. (109 Nm)	9 ft. lbs. (12 Nm)
Lower Lift Cylinder	420 ft. lbs. (570 Nm)	30 ft. lbs. (41 Nm)
Articulating Lift Cylinder	30 ft. lbs. (41 Nm)	5 ft. lbs. (9 Nm)
Articulating Slave Cylinder	50 ft. lbs. (68 Nm)	9 ft. lbs. (12 Nm)
Articulating Master Cylinder	50 ft. lbs. (68 Nm)	9 ft. lbs. (12 Nm)
Master Cylinder	30 ft. lbs. (41 Nm)	5 ft. lbs. (9 Nm)
Upper Telescope Cylinder	30 ft. lbs. (41 Nm)	9 ft. lbs. (12 Nm)
Tower Telescope Cylinder	30 ft. lbs. (41 Nm)	9 ft. lbs. (12 Nm)
Upright Level Cylinder	190 ft. lbs. (260 Nm)	30 ft. lbs. (41 Nm)
Lockout Cylinder	80 ft. lbs. (109 Nm)	N/A
Slave Cylinder	30 ft. lbs. (41 Nm)	9 ft. lbs. (12 Nm)
Steer Cylinder Piston Nut Torque Specifications		
Steer Cylinder	LBS.	Nm
	150 ft. lbs	204 Nm

⚠ CAUTION

IF THE CYLINDER IS TO BE TESTED PRIOR TO INSTALLATION ON THE MACHINE, EXTREME CARE SHOULD BE USED TO INSURE THAT THE OUTER END OF THE ROD IS SUPPORTED. USE EITHER A TRAVELING OVERHEAD HOIST, FORK-LIFT, OR OTHER MEANS TO SUPPORT THE OVERHANGING WEIGHT OF THE EXTENDING ROD.

5.5 CYLINDER REMOVAL AND INSTALLATION

Main Boom Telescope Cylinder Removal

1. Place machine on a flat and level surface, with main boom in the horizontal position. Extend telescope up to gain to pin #1.
2. Shut down engine. Support main boom basket end with a prop (See Figure 5-17., Boom Positioning and Support, Cylinder Repair).

⚠ CAUTION

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID THE ENTRY OF CONTAMINANTS INTO THE SYSTEM.

3. Tag and disconnect hydraulic lines to telescope cylinder. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.
4. Remove the retaining rings that retain the telescope cylinder rod to the fly boom.
5. Using a suitable brass drift, carefully drive telescope cylinder rod pin #1 from the fly boom.
6. Remove mounting hardware securing the telescope cylinder barrel end to the base boom.
7. Attach a suitable sling to the telescope cylinder. Using a suitable lifting device attached to the sling, carefully pull the cylinder partially from the aft end boom assembly.
8. Secure the cylinder with a suitable sling and lifting device at the approximate center of gravity.
9. Carefully lift the cylinder clear of the boom assembly and lower to the ground or suitably supported work area.

Main Boom Telescope Cylinder Installation

1. Attach a hydraulic power supply to the telescope cylinder ports. Using suitable supports or lifting devices at each end of the cylinder, extend the rod so that the cylinder pin attach holes are the same distance apart as the boom pin attach holes.
2. Using suitable lifting equipment, carefully lower the cylinder to the boom assembly.
3. Install the cylinder into the boom assembly.
4. Remove the lifting devices from the telescope cylinder.
5. Carefully install telescope cylinder rod pin #1 through the fly boom and secure it with the retaining rings.

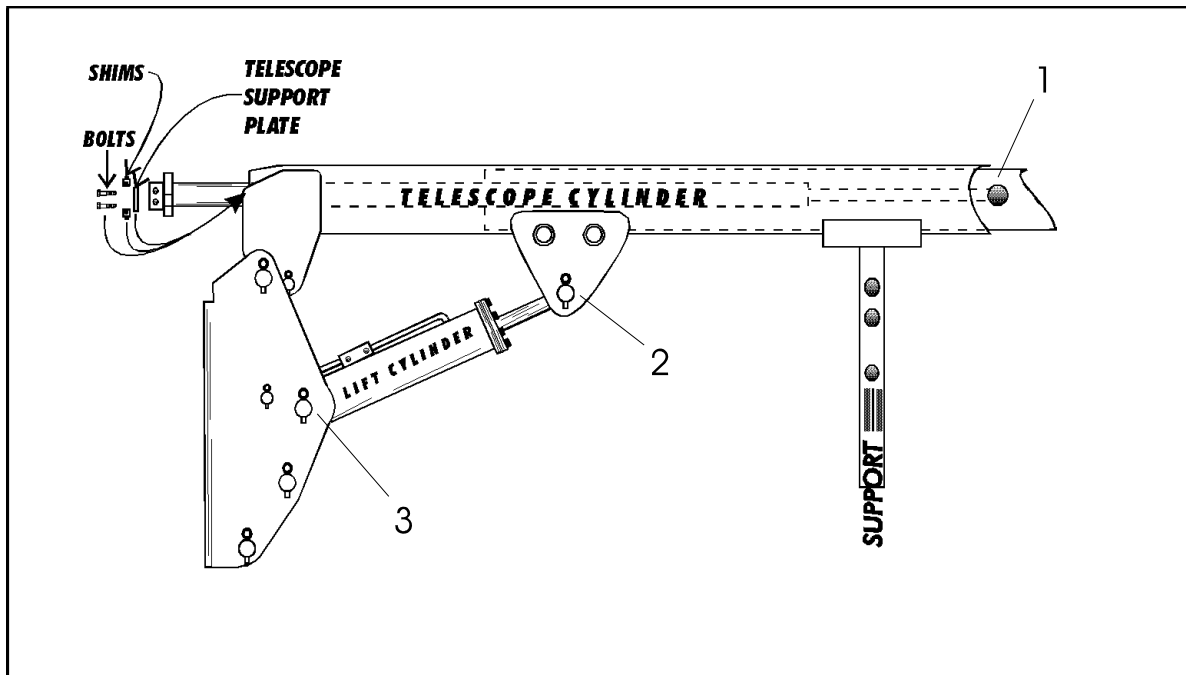


Figure 5-14. Location of Components - Telescope and Lift Cylinder

6. Carefully install the telescope cylinder barrel end support into slots in base boom and secure with blocks and bolts. Use Loctite #242 on bolts. Shim as necessary.
7. Remove applicable hydraulic line and port caps and correctly connect the hydraulic lines to the telescope cylinder. Ensure all hoses are correctly routed.
8. Remove boom prop and overhead crane. Activate hydraulic system.
9. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
10. Check fluid level of hydraulic tank and adjust as necessary.

Main Boom Lift Cylinder Removal

1. Place the machine on a flat and level surface. Start the engine and place the main boom in the horizontal position. Shut down engine and prop the boom. (See Figure 5-17., Boom Positioning and Support, Cylinder Repair.
2. Remove the hardware retaining the cylinder rod attach pin #2 to the boom. Using a suitable brass drift, drive out the cylinder rod attach pin.
3. Using auxiliary power, retract the lift cylinder rod completely.
4. Disconnect, cap and tag the main boom lift cylinder hydraulic lines and ports.
5. Remove barrel end attach pin #3 retaining hardware. Using a suitable brass drift drive out the barrel end attach pin from the upright.
6. Remove the cylinder from the boom and place in a suitable work area.

Main Boom Lift Cylinder Installation

1. Install lift cylinder in place using suitable slings or supports, aligning attach pin mounting holes on the upright.
2. Using a suitable drift, drive barrel end attach pin #3 through the mounting holes in the lift cylinder and the upright. Secure in place with the pin retaining hardware.
3. Remove cylinder port plugs and hydraulic line caps and correctly attach lines to cylinder ports.
4. Using auxiliary power extend the cylinder rod until the attach pin hole aligns with those in the boom. Using a suitable drift drive cylinder rod attach pin #2 through the aligned holes, taking care to align the grooved pin holes. Secure the pin in place with attaching hardware.
5. Remove boom prop and overhead crane. Activate hydraulic system.
6. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
7. Check fluid level of hydraulic tank and adjust as necessary.

Upright Level Cylinder Removal

1. With the aid of an assistant, manually override the Plunger Valve with a pry bar, and from Ground Control, using auxiliary power, extend the tower telescope out to gain access to leveling cylinder rod end pin #3.

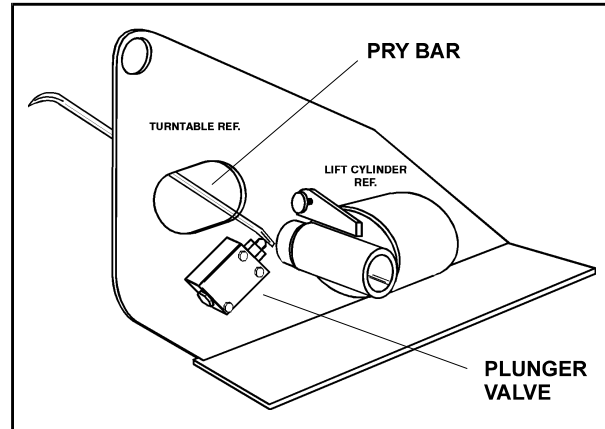


Figure 5-16. Overriding the Plunger Valve

2. With the main boom positioned and supported as shown in Leveling Cylinder Removal, prepare to remove the upright level cylinder.
3. Remove the mounting hardware from pin #1, securing leveling cylinder to upright.

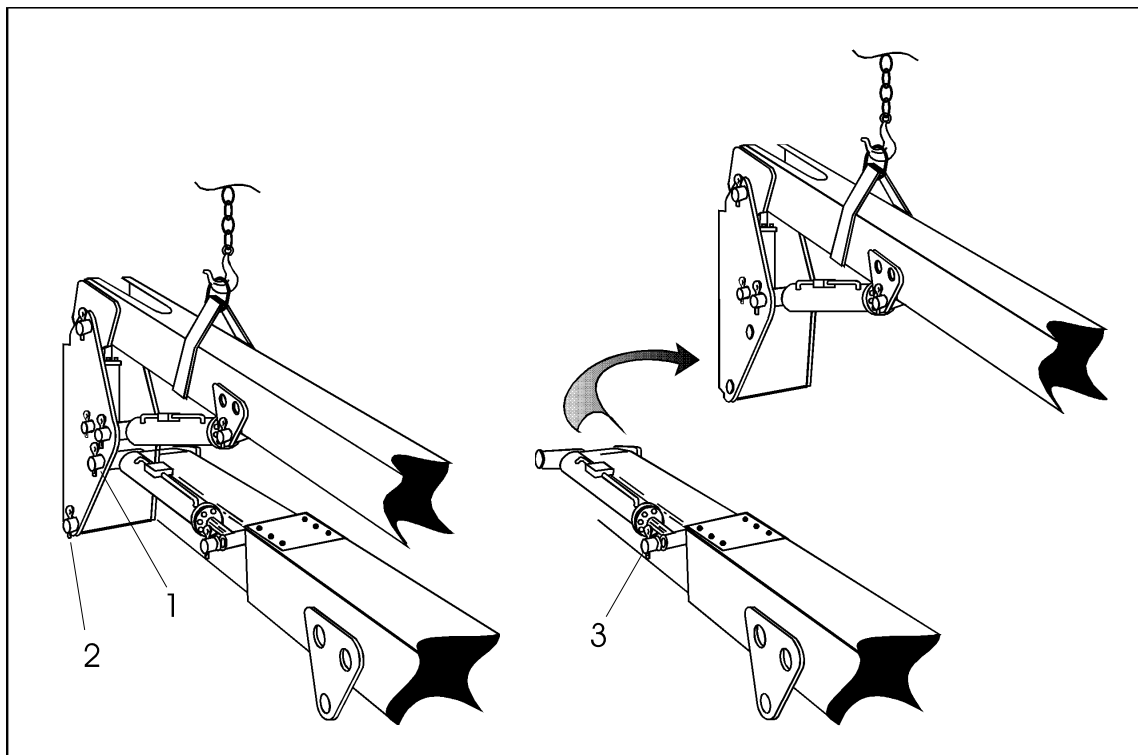


Figure 5-15. Leveling Cylinder Removal

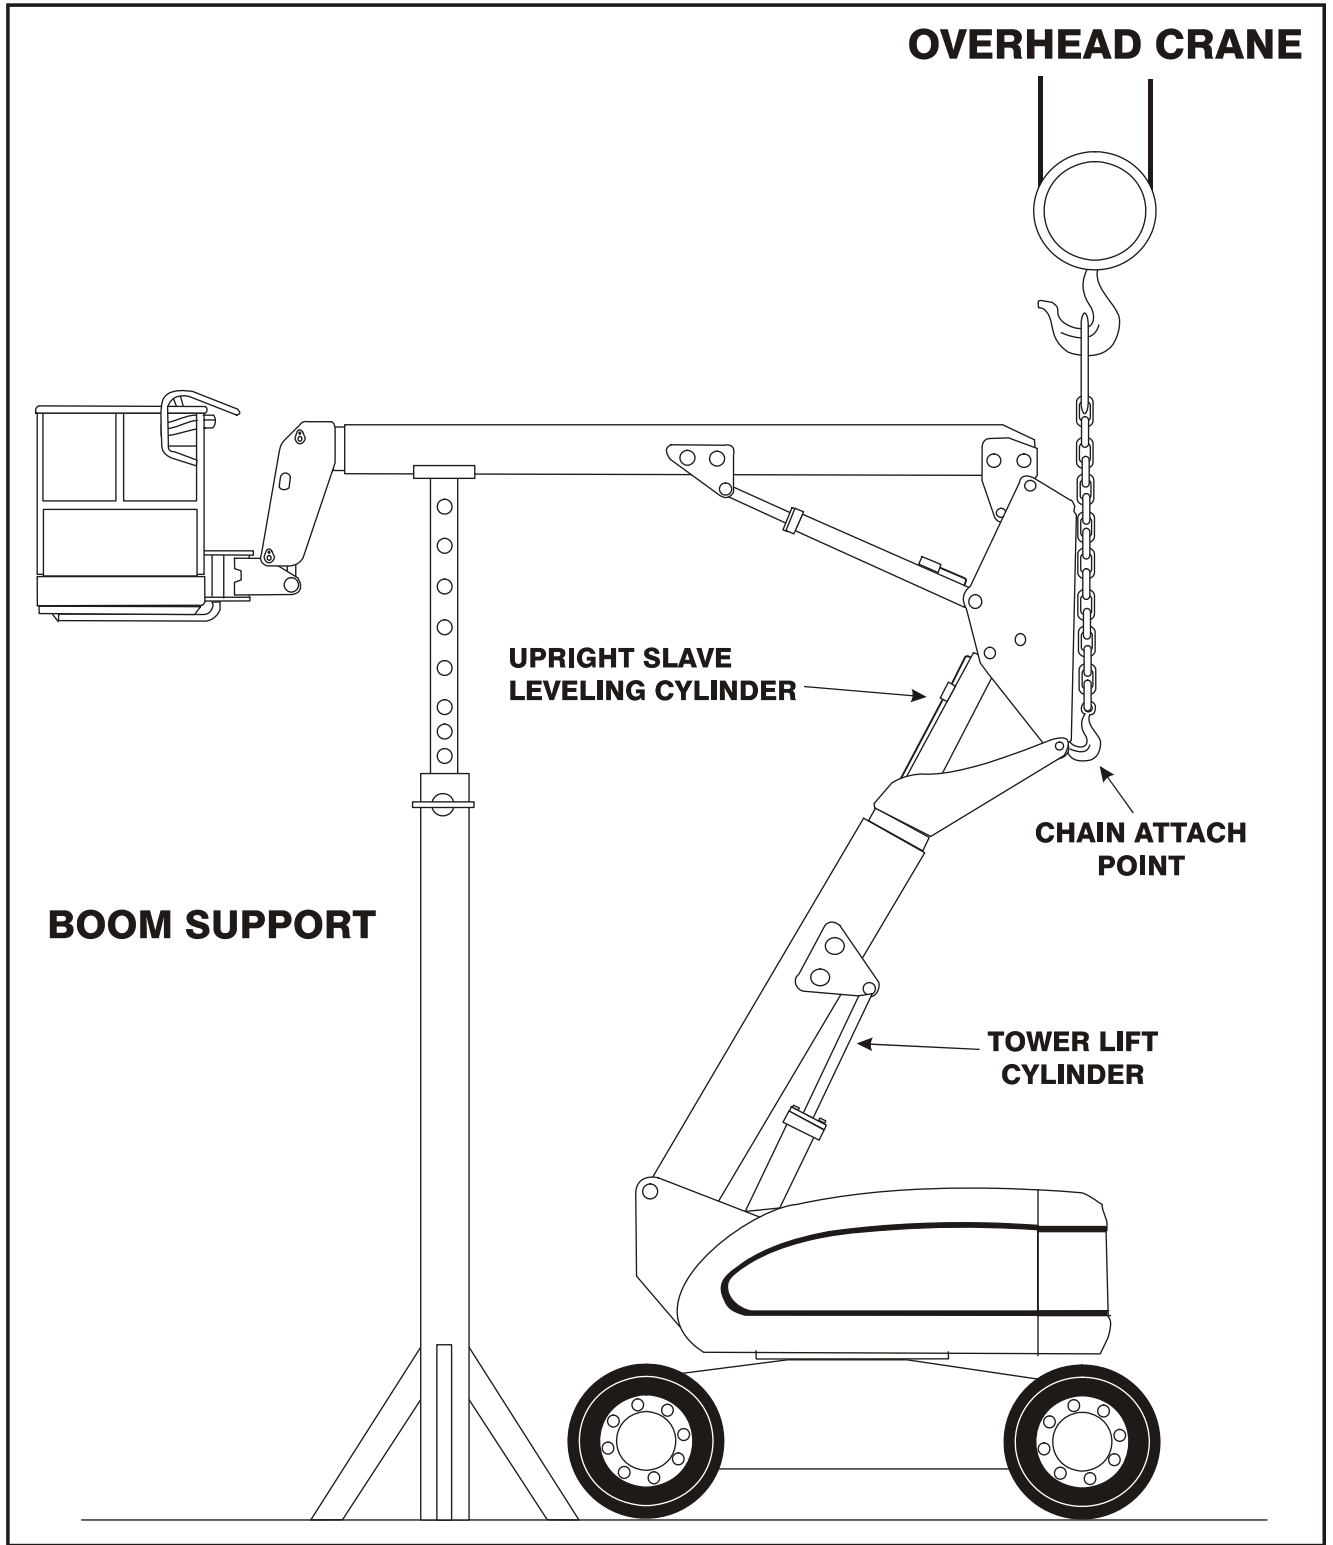


Figure 5-17. Boom Positioning and Support, Cylinder Repair

4. With overhead crane supporting upper boom assembly. Raise boom until tension is released from cylinder pin #1.
5. Using a suitable drift, drive the barrel end attach pin #1 through the mounting holes in the upright and leveling cylinder.
6. Remove the mounting hardware from upright pivot pin #2 which secures upright to tower boom assembly.
7. Using a suitable drift, drive pivot pin #2 through the mounting holes in the upright and tower boom assembly.
8. Using all applicable safety precautions, operate the overhead crane to move upright and upper boom assembly forward to clear tower boom.
9. Using all applicable safety precautions, operate the overhead crane to move upright and upper boom assembly forward to clear tower boom.
10. After moving assemblies forward, operate overhead crane to the left far enough to remove leveling cylinder.
11. Tag, disconnect and cap hydraulic lines to level cylinder.
12. Remove the mounting hardware from leveling cylinder rod end pin #3 which secures cylinder to tower boom fly assembly.
13. Using a suitable drift, drive leveling cylinder pin #3 through the mounting holes in the tower boom fly and leveling cylinder, then remove leveling cylinder.

Upright Level Cylinder Installation

1. Place the leveling cylinder in position in the tower boom, then align holes in tower boom and leveling cylinder. Install leveling cylinder attach pin #3 using a suitable rubber mallet.
2. Secure pin to tower boom with mounting hardware.
3. Remove cylinder port plugs and hydraulic line caps and correctly attach lines to cylinder ports.
4. Using all applicable safety precautions, operate the overhead crane to move upright and upper boom assembly in proper position with tower boom.
5. Align holes in upright and tower boom assembly and install upright pivot pin #2 using a suitable rubber mallet. Secure pin with mounting hardware.
6. Align holes in upright and leveling cylinder barrel end and install leveling cylinder pin #1 using a suitable rubber mallet. Secure pin with mounting hardware.
7. Remove overhead crane from upper boom. Activate hydraulic system.
8. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
9. Check fluid level of hydraulic tank and adjust as necessary.

Tower Boom Lift Cylinder Removal

1. Place machine on a flat and level surface. Place the main boom in a horizontal position with the telescope cylinder fully retracted. Place the tower boom in a fully elevated and fully retracted position (See Figure 5-17., Boom Positioning and Support, Cylinder Repair.
2. Support the main boom with a prop. Support the upright with an overhead crane. (See Figure 5-17., Boom Positioning and Support, Cylinder Repair.
3. Using slings restrain tower lift cylinder.
4. Remove mounting hardware securing the cylinder rod pin to the tower boom. Using a suitable brass drift, drive out the cylinder rod attach pin.
5. Tag, disconnect and cap the tower lift cylinder hydraulic lines and ports.
6. Remove mounting hardware securing the cylinder barrel pin to the turntable. Using a suitable brass drift, drive out the cylinder barrel pin.
7. Carefully remove restraining slings and remove tower lift cylinder from turntable. Place in a suitable work area.
8. If necessary, use an auxiliary power source and fully retract lift cylinder.

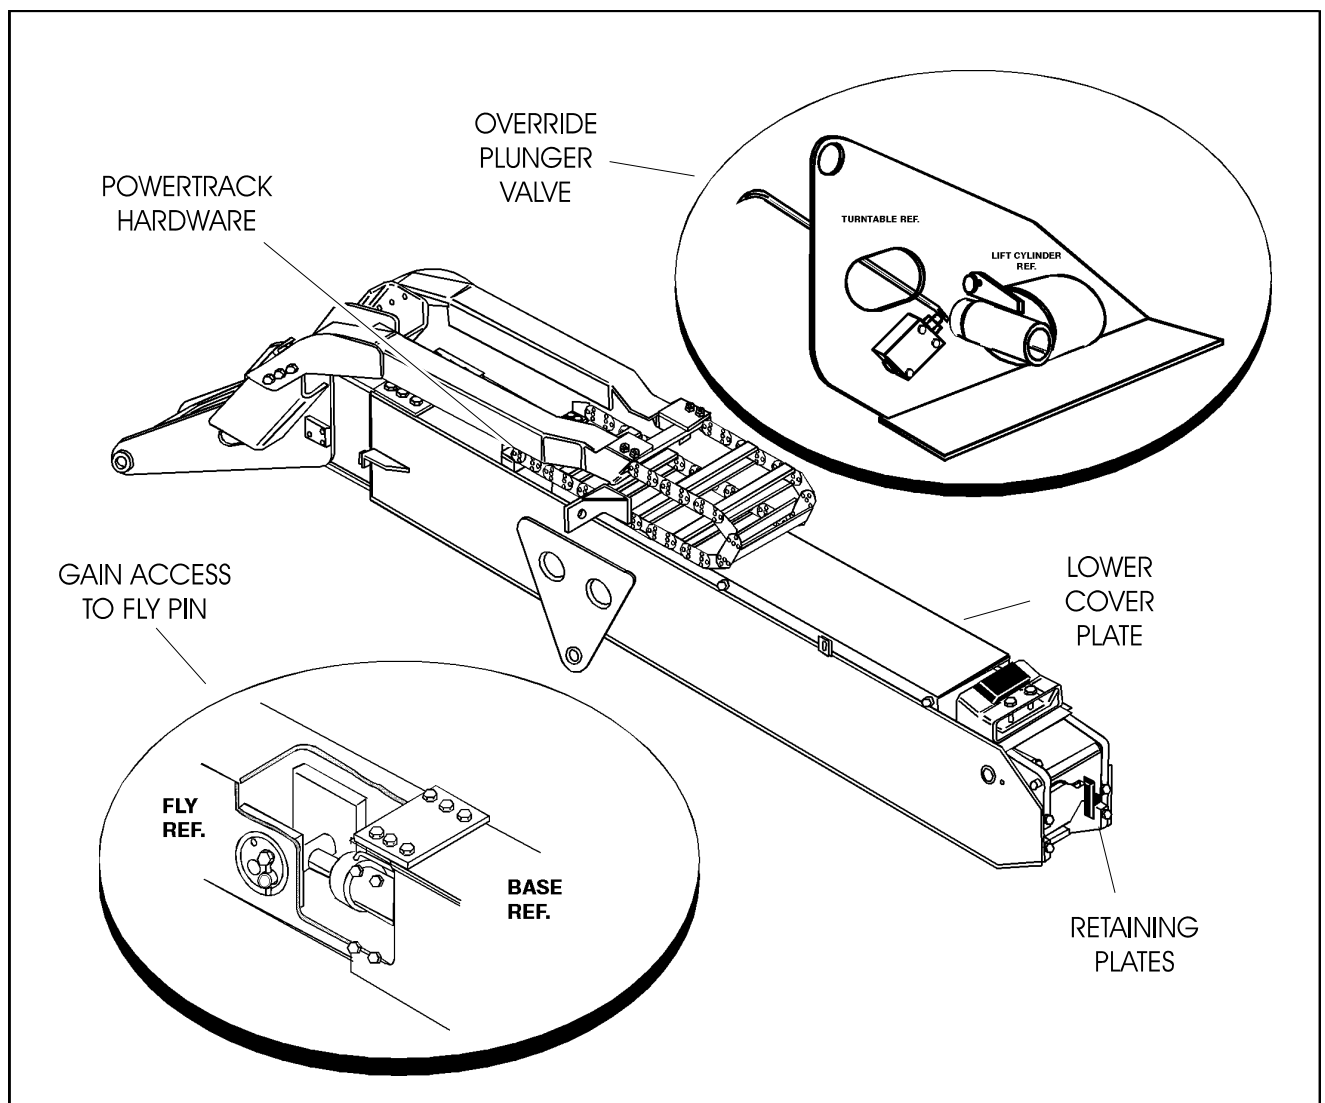


Figure 5-18. Tower Telescope Cylinder Removal

Tower Lift Cylinder Installation

1. With the main boom and tower boom positioned and supported as in Figure 5-17., Boom Positioning and Support, Cylinder Repair, place the tower lift cylinder in position on the turntable and secure in place using slings.
2. Align holes in turntable and lift cylinder. Using a suitable rubber mallet, install the cylinder barrel pin and secure with mounting hardware.
3. Connect an auxiliary power source to the cylinder and extend cylinder rod until the cylinder rod bushing aligns with bushings on boom.
4. Using an appropriate brass drift, drive the rod attach pin through the aligned bushings. Secure pin with attaching hardware.
5. Remove caps from cylinder hydraulic lines and correctly install lines to cylinder as previously tagged.
6. Remove boom prop and overhead crane. Activate hydraulic system.
7. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
8. Check fluid level of hydraulic tank and adjust as necessary.


Tower Telescope Cylinder Removal

1. Place machine on a flat and level surface, with main boom in the horizontal position. Shut down engine and prop the boom See Figure 5-18., Tower Telescope Cylinder Removal.
2. With the aid of an assistant, manually override the Plunger Valve with a pry bar, and from Ground Control, using auxiliary power, extend the tower telescope out to gain access to fly attach pin.
3. Remove lower cover plate.
4. Remove mounting hardware securing powertrack to tower boom assembly. After removing mounting hardware, slide powertrack backward far enough to move holes and wiring harness to the side to gain access to telescope cylinder.
5. Tag, disconnect and cap hydraulic hoses to Tower Telescope Cylinder. Plug cylinder ports.
6. Remove mounting hardware securing upper cylinder pin to fly boom. Using a suitable brass drift, drive out the cylinder rod pin.
7. Remove mounting hardware attaching retaining plates to base boom and remove plate.

8. Carefully slide the telescope cylinder from the boom. Place cylinder on a suitable work area.


Tower Telescope Cylinder Installation

1. With the boom positioned as in Figure 5-18., Tower Telescope Cylinder Removal, slide the telescope cylinder into the boom, aligning the cylinder port block end with slotted holes in Base Boom. Secure telescope cylinder with mounting hardware.
2. Remove caps and plugs from hydraulic lines and ports. Properly connect hydraulic lines to cylinder as tagged during Removal. Reinstall cover plate.
3. Start engine. With the aid of an assistant, manually override the plunger valve. Activate Tower telescope out to align attaching pin holes in Fly Boom. Shut down engine.
4. Using a brass drift, drive in the attach pin. Secure in place with mounting hardware.
5. Align holes in base boom and powertrack. Secure the powertrack with mounting hardware.
6. Remove boom prop and overhead crane. Activate hydraulic system.
7. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
8. Check fluid level of hydraulic tank and adjust as necessary.

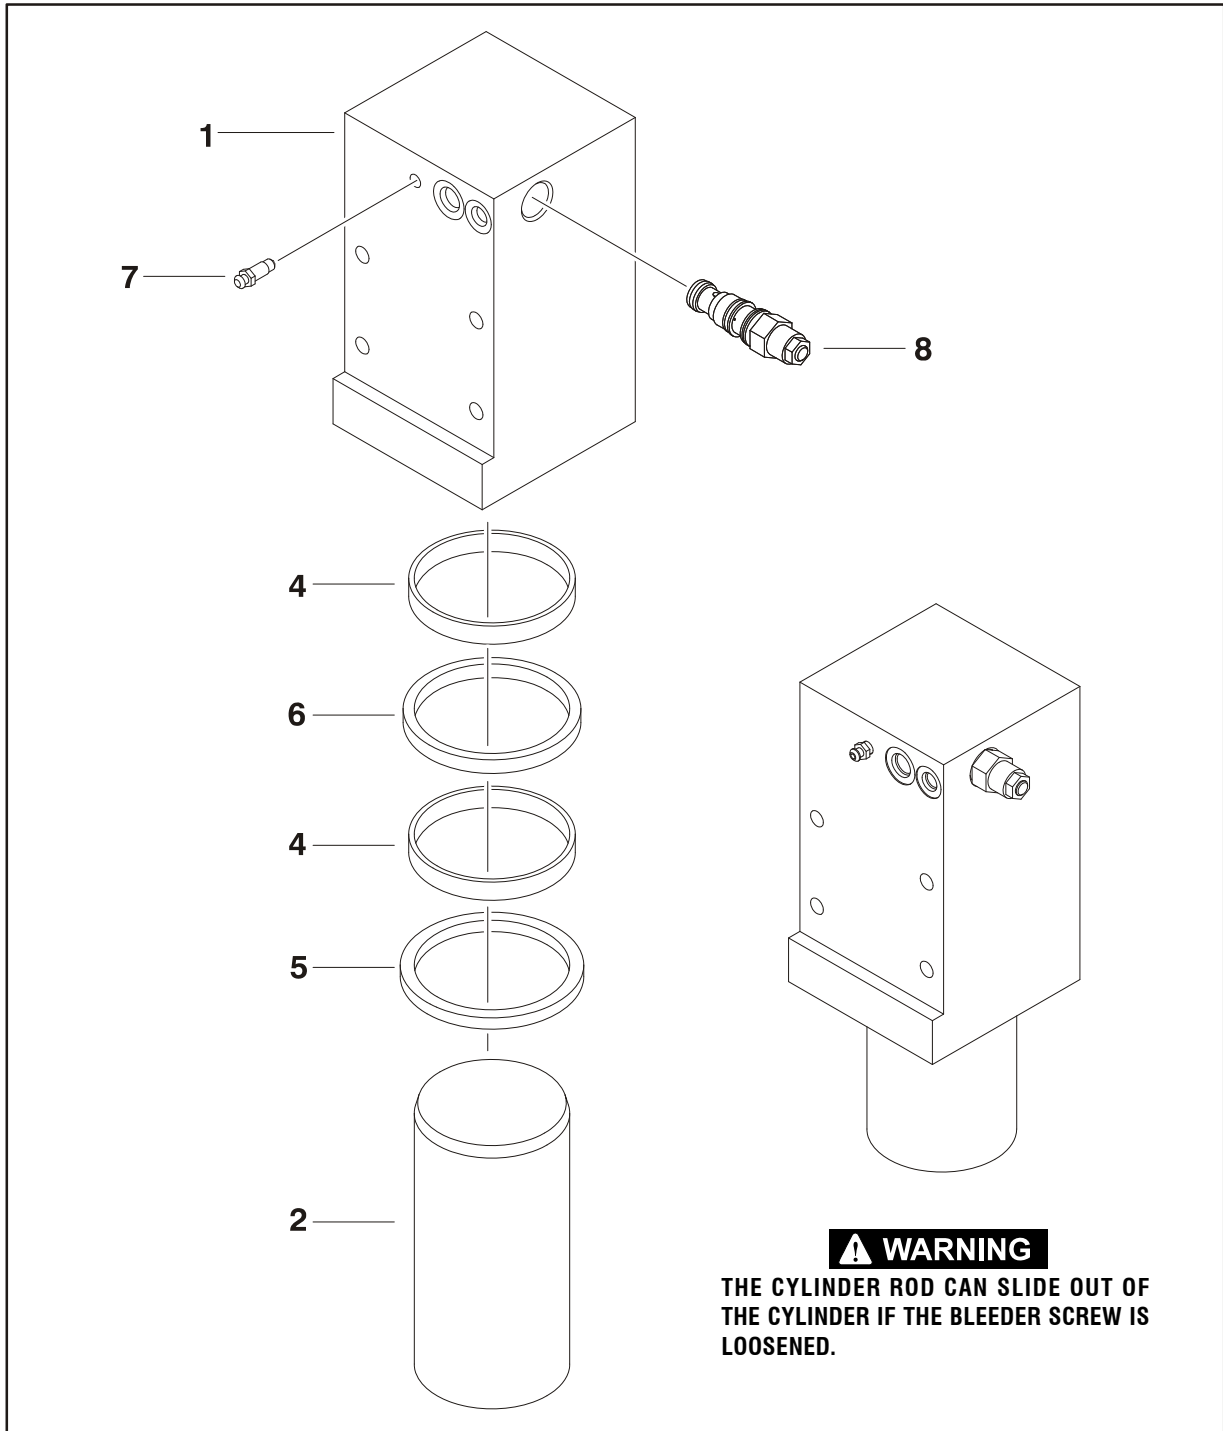


- | | | |
|-------------|---------------|--------------------|
| 1. Barrel | 4. Wear Ring | 7. Bleeder |
| 2. Rod | 5. Wiper Ring | 8. Cartridge Valve |
| 3. Not Used | 6. Rod Seal | |

Figure 5-19. Axle Lockout Cylinder

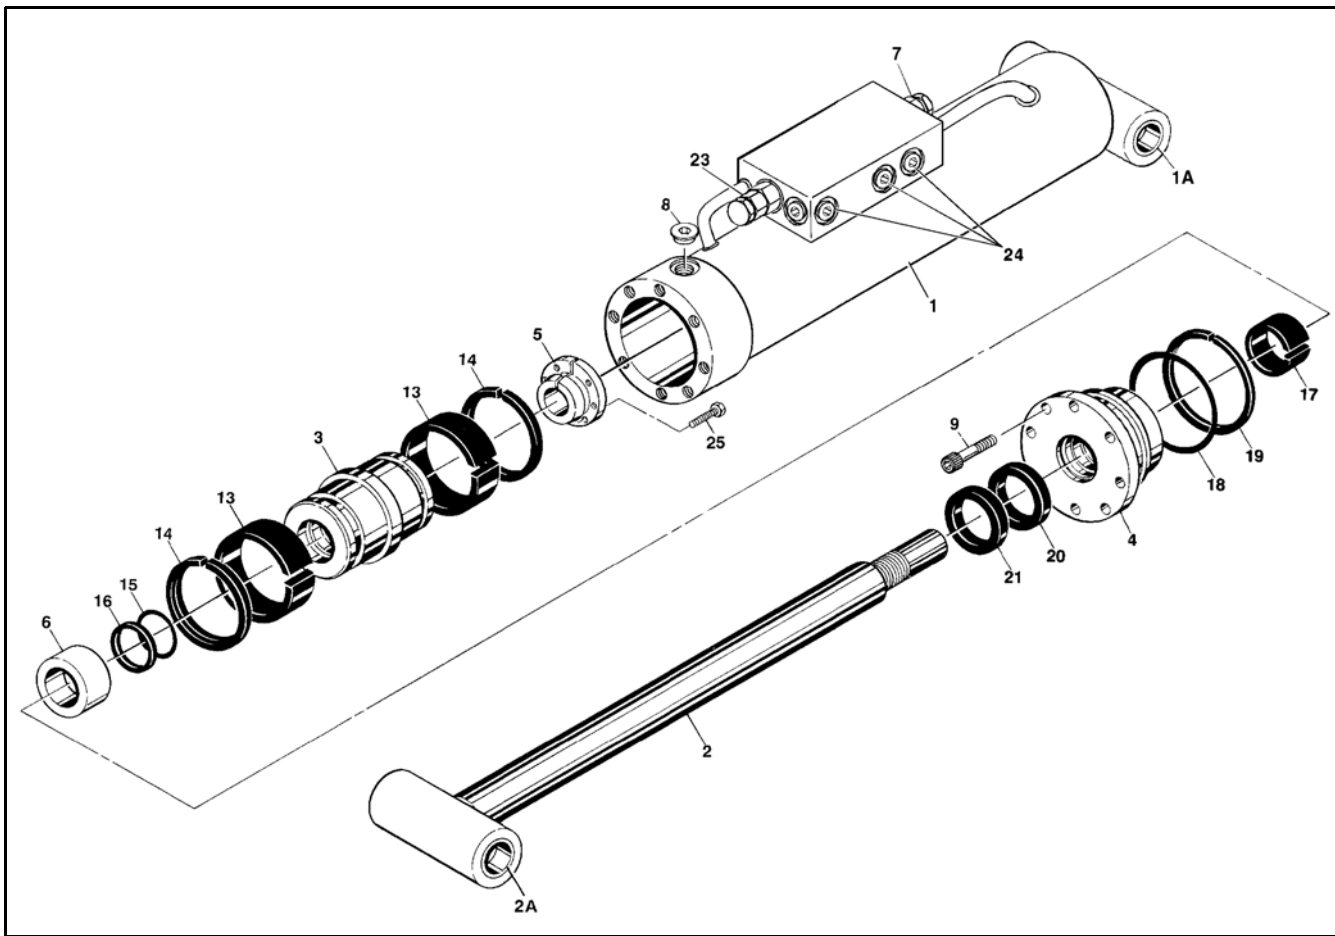


- | | | |
|--------------------|--------------------------------|-----------------------|
| 1. Barrel | 8. O-Ring Plug | 17. Wear Ring |
| 1A. Bushing | 9. Socket Head Capscrew | 18. O-Ring |
| 2. Rod | 10. Washer Ring | 19. Back-Up Ring |
| 2A. Bushing | 11. Loctite #242 (Not Shown) | 20. Rod Seal |
| 3. Piston | 12. Locking Primer (Not Shown) | 21. Wiper Ring |
| 4. Head | 13. Seal | 22. Not Used |
| 5. Tapered Bushing | 14. Lock Ring | 23. Valve Cartridge |
| 6. Spacer | 15. O-Ring | 24. O-Ring Plug |
| 7. Cartridge Valve | 16. Back-Up Ring | 25. Socket Head Screw |

Figure 5-20. Level Cylinder

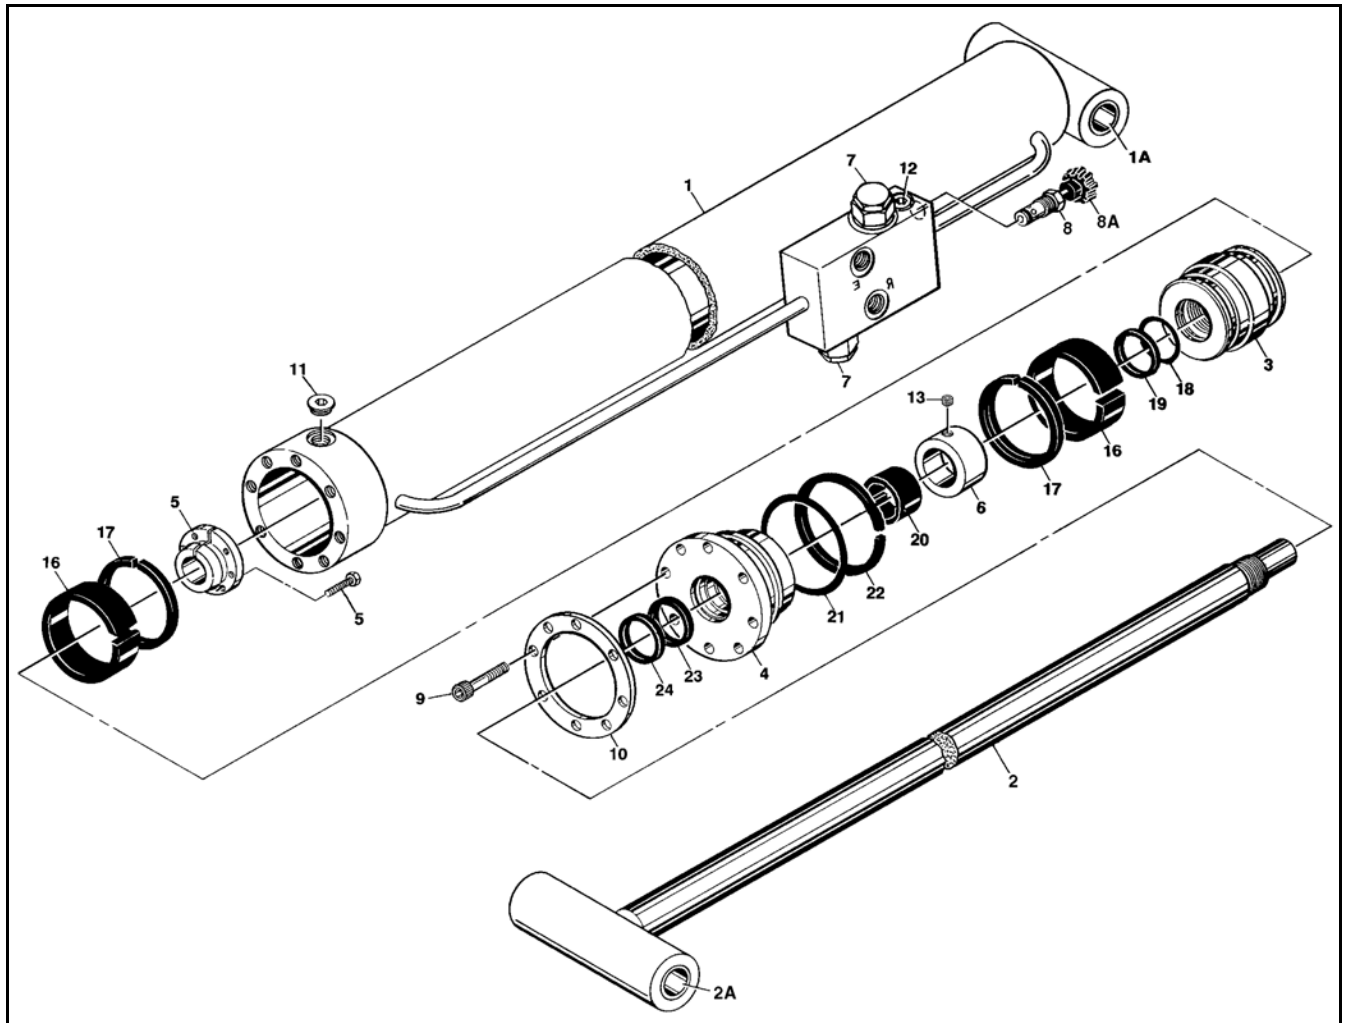


- | | | | |
|--------------------|-------------------------|--------------------------------|------------------------------|
| 1. Barrel | 7. Cartridge Valve | 13. Setscrew | 20. Wear Ring |
| 1A. Bushing | 8. Cartridge Valve | 14. Loctite #242 (Not Shown) | 21. O-Ring |
| 2. Rod | 8A. Knob | 15. Locking Primer (Not Shown) | 22. Back-Up Ring |
| 2A. Bushing | 9. Socket Head Capscrew | 16. Seal | 23. Rod Seal |
| 3. Piston | 10. Washer Ring | 17. Lock Ring | 24. Wiper |
| 4. Head | 11. O-Ring Plug | 18. O-Ring | 25. Loctite #609 (Not Shown) |
| 5. Tapered Bushing | 12. O-Ring Plug | 19. Back-Up Ring | 26. Socket Head Capscrew |
| 6. Spacer | | | |

Figure 5-21. Jib Lift Cylinder

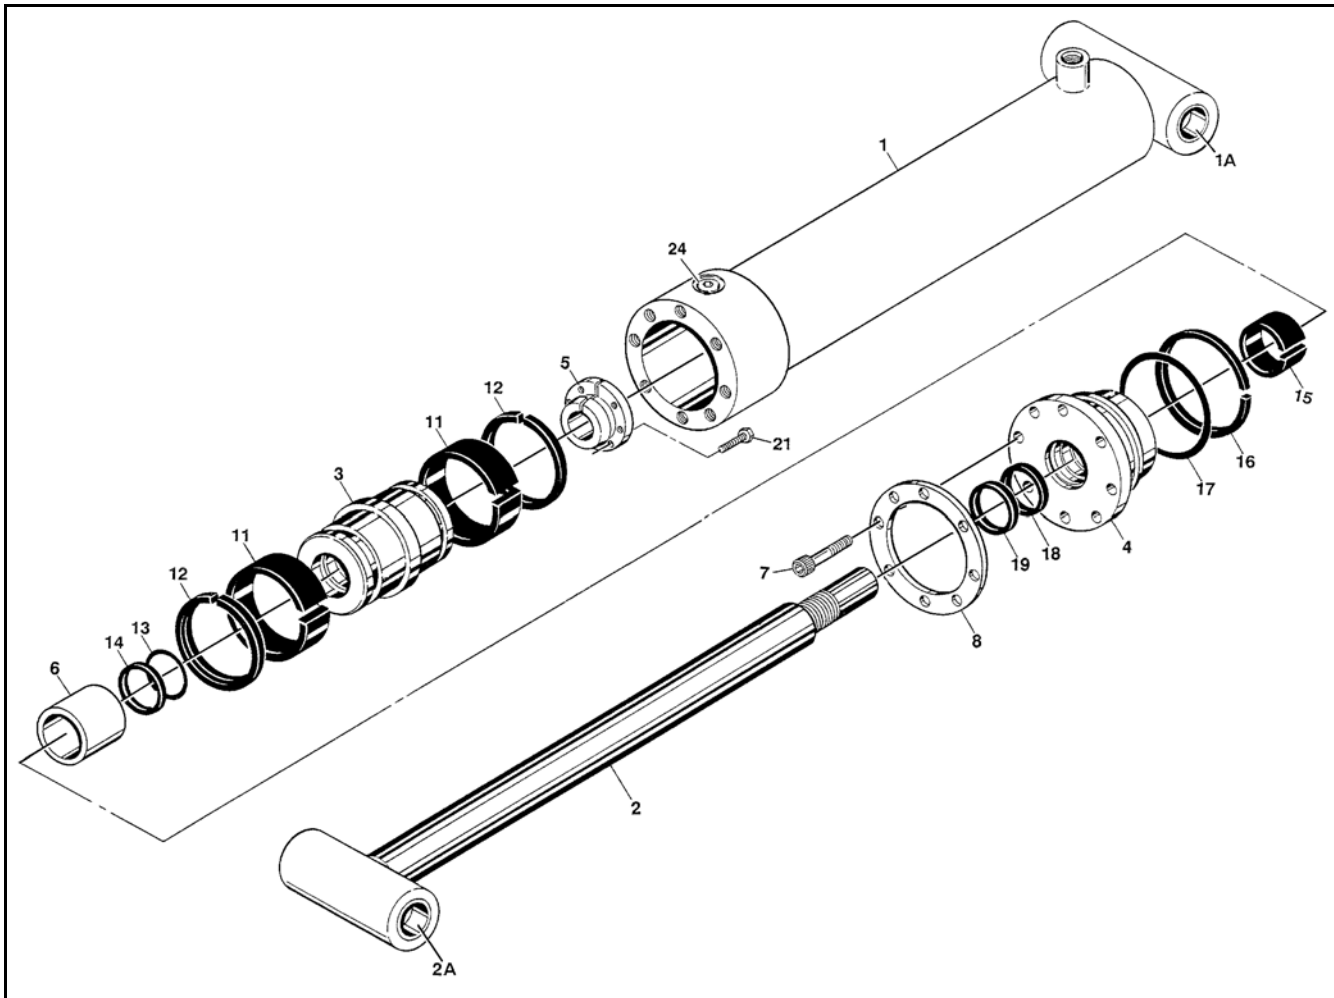


- | | | | |
|--------------------|--------------------------------|------------------|------------------------------|
| 1. Barrel | 6. Spacer | 13. O-Ring | 20. Not Used |
| 1A. Bushing | 7. Capscrew | 14. Back-Up Ring | 21. Socket Head Capscrew |
| 2. Rod | 8. Washer Ring | 15. Wear Ring | 22. Loctite #609 (Not Shown) |
| 2A. Bushing | 9. Loctite #242 (Not Shown) | 16. O-Ring | 23. Not Used |
| 3. Piston | 10. Locking Primer (Not Shown) | 17. Back-Up Ring | 24. Plug Fitting |
| 4. Head | 11. Seal | 18. Rod Seal | |
| 5. Tapered Bushing | 12. Lock Ring | 19. Wiper | |

Figure 5-22. Master Cylinder

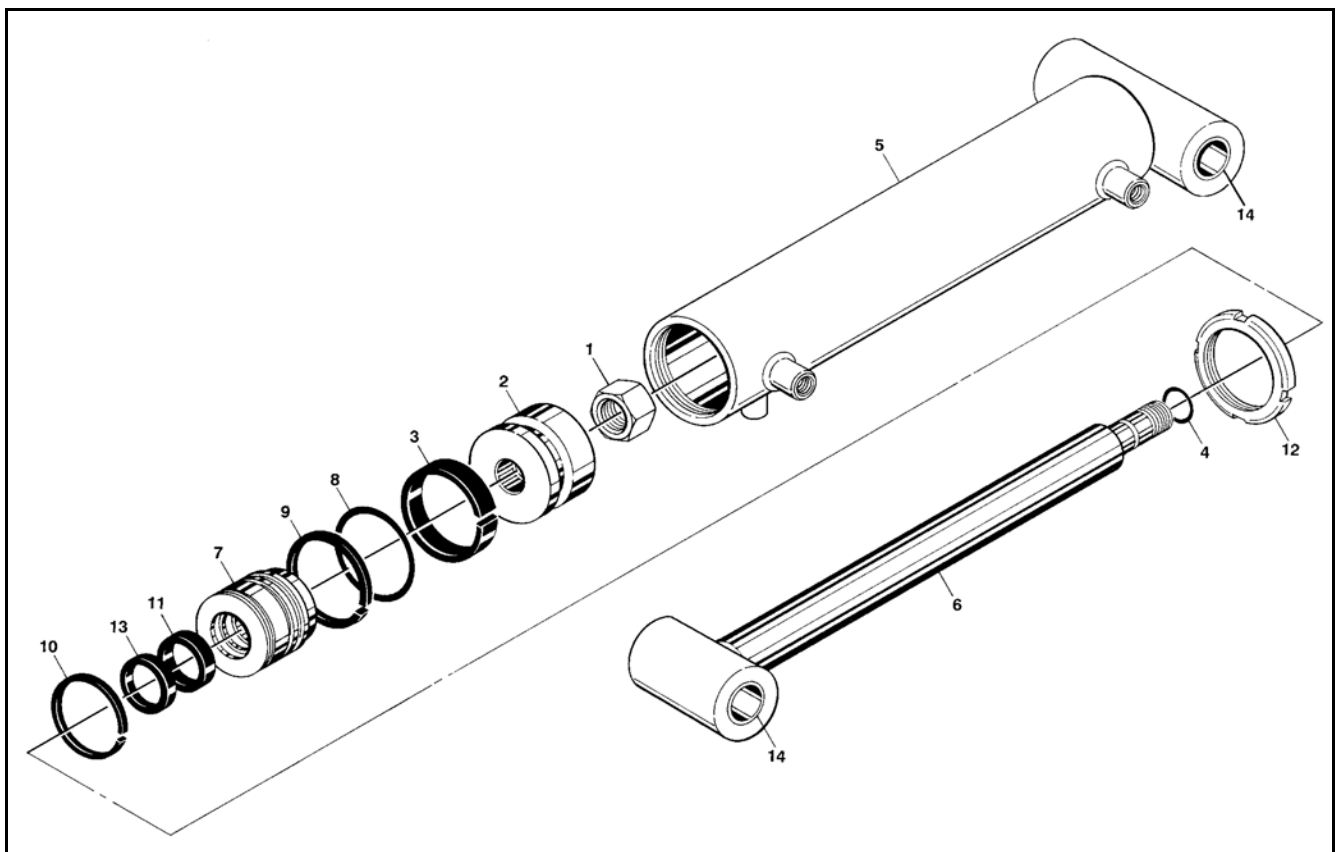


- | | | |
|------------|-------------------|-----------------|
| 1. Locknut | 6. Rod | 11. Lip Seal |
| 2. Piston | 7. Cap screw | 12. Spanner Nut |
| 3. Seal | 8. O-Ring | 13. Wiper |
| 4. O-Ring | 9. Back-Up Ring | 14. Bushing |
| 5. Barrel | 10. Retainer Ring | |

Figure 5-23. Steer Cylinder

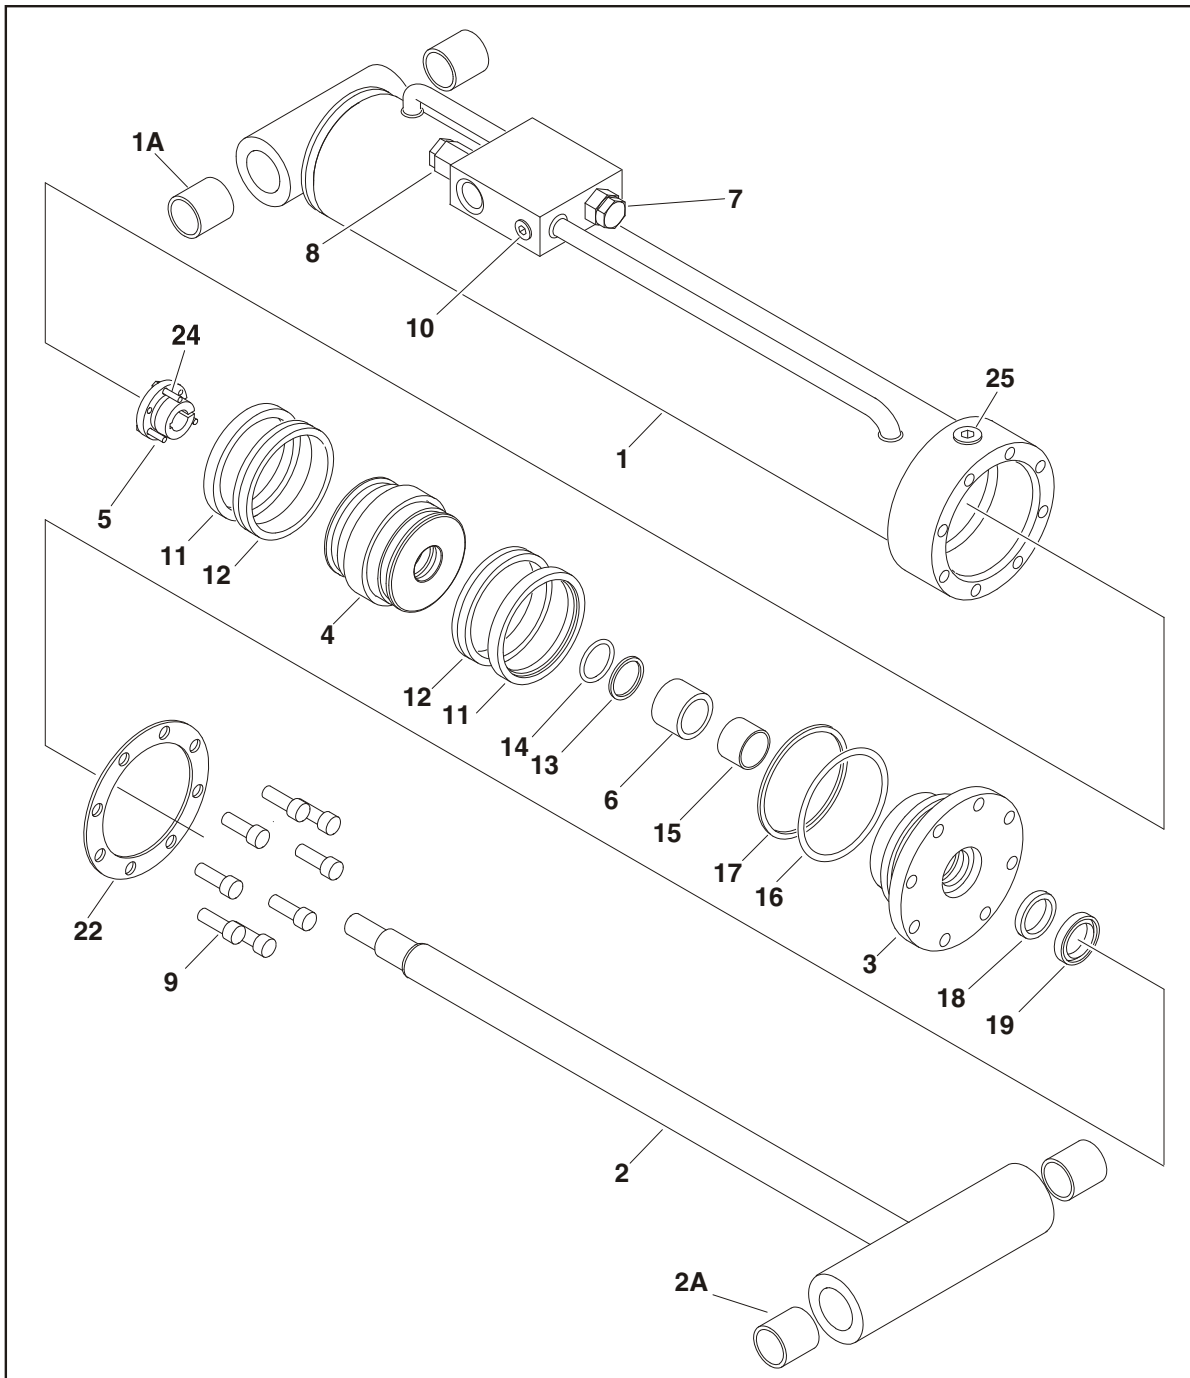


- | | | | | |
|-------------|-------------------------|--------------------|--------------------------------|------------------|
| 1. Barrel | 5. Tapered Bushing | 11. Lock Ring | 17. Back-Up Ring | 22. Washer Ring |
| 1A. Bushing | 6. Tube Spacer | 12. Hydrolock Seal | 18. Rod Seal | 23. Not Used |
| 2. Rod | 7. Valve Cartridge | 13. O-Ring | 19. Wiper Ring | 24. Bolt |
| 2A. Bushing | 8. Valve Cartridge | 14. Back-Up Ring | 20. Loctite #242 (Not Shown) | 25. O-Ring Plug |
| 3. Head | 9. Socket Head Capscrew | 15. Wear Ring | 21. Locking Primer (Not Shown) | 26. Loctite #609 |
| 4. Piston | 10. O-Ring Plug | 16. O-Ring | | |

Figure 5-24. Level (Upright) Cylinder

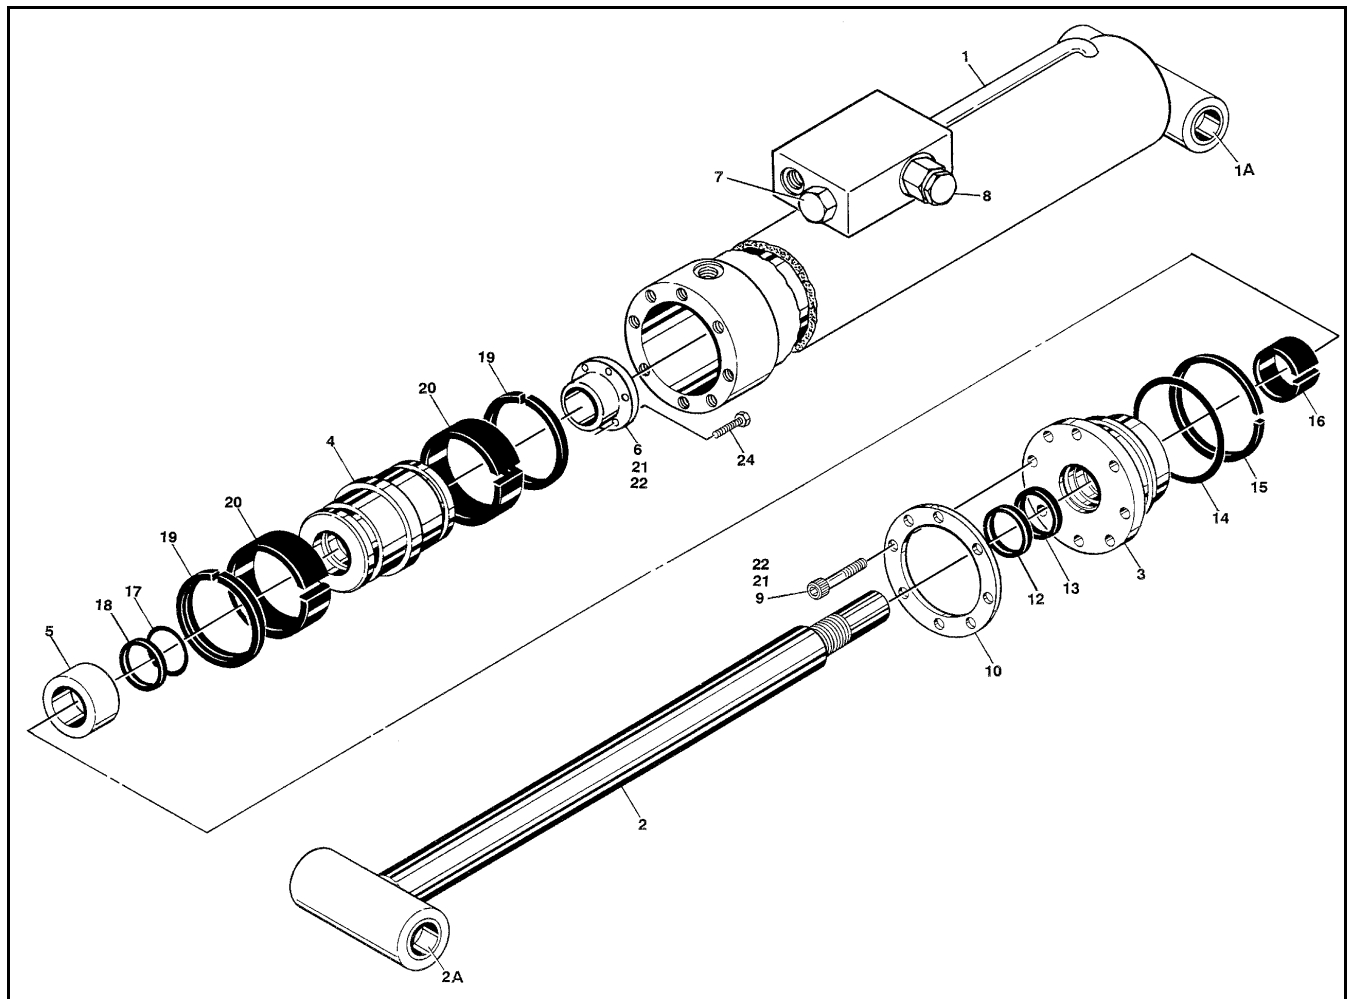


- | | | | |
|-------------|-------------------------|------------------|--------------------------------|
| 1. Barrel | 6. Tapered Bushing | 13. Rod Seal | 19. Lock Ring |
| 1A. Bushing | 7. Cartridge Valve | 14. O-Ring | 20. Seal |
| 2. Rod | 8. Cartridge Valve | 15. Back-Up Ring | 21. Loctite #242 (Not Shown) |
| 2A. Bushing | 9. Socket Head Capscrew | 16. Wear Ring | 22. Locking Primer (Not Shown) |
| 3. Head | 10. Washer Ring | 17. O-Ring | 23. Not Used |
| 4. Piston | 11. O-Ring Plug | 18. Back-Up Ring | 24. Bolt |
| 5. Spacer | 12. Wiper | | |

Figure 5-25. Main Boom Lift Cylinder

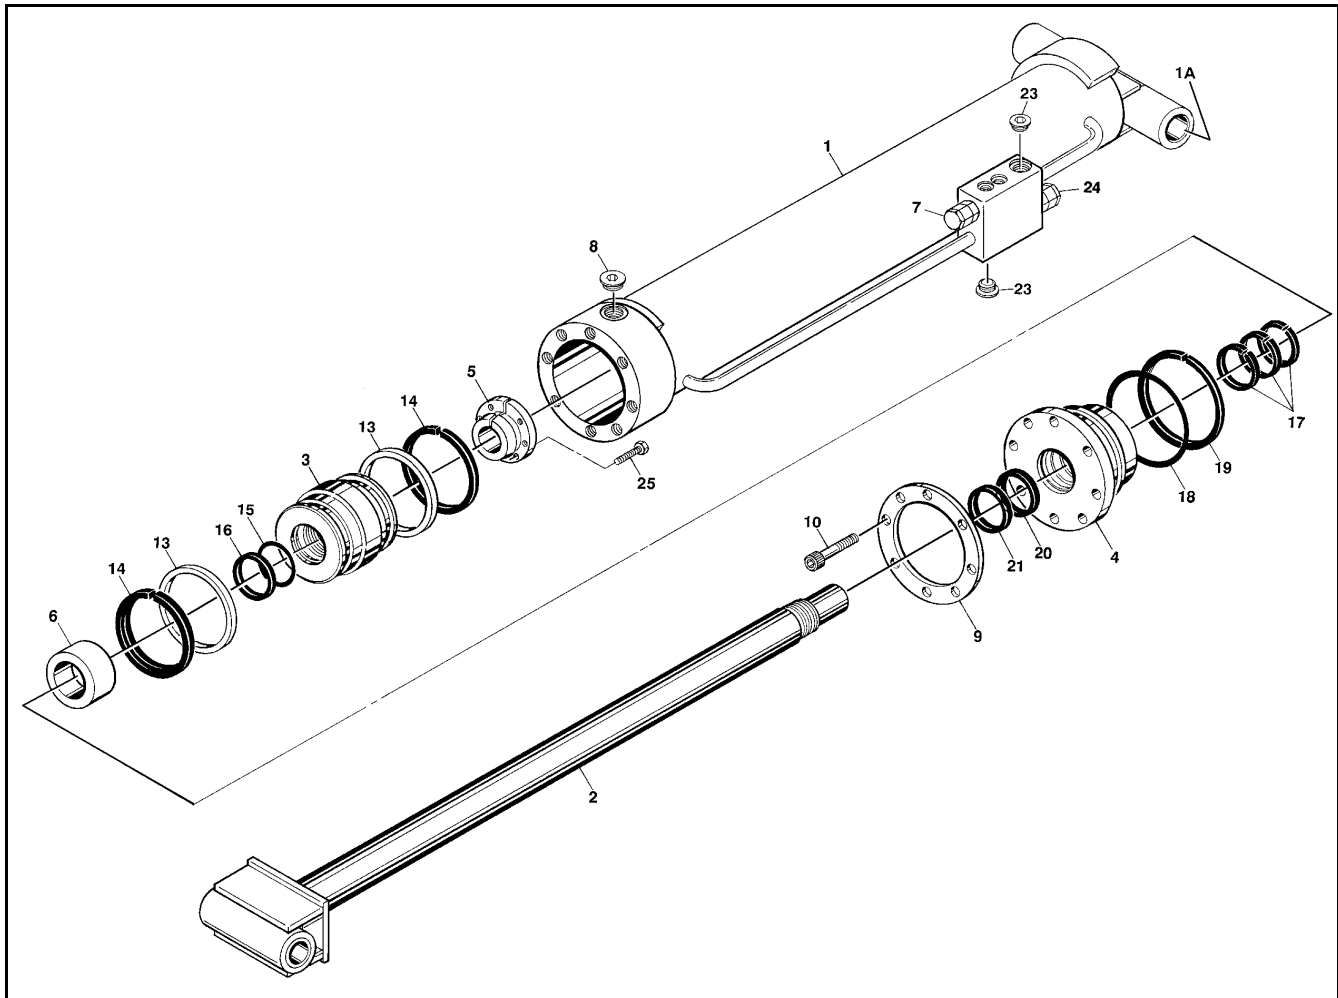


- | | | | |
|--------------------|--------------------------------|------------------|--------------------------|
| 1. Barrel | 6. Spacer | 13. Seal | 20. Rod Seal |
| 1A. Bushing | 7. Cartridge Valve | 14. Lock Ring | 21. Wiper |
| 2. Rod | 8. O-Ring Plug | 15. O-Ring | 22. Not Used |
| 2A. Bushing | 9. Washer Ring | 16. Back-Up Ring | 23. O-Ring Plug |
| 3. Piston | 10. Socket Head Capscrew | 17. Wear Ring | 24. Counterbalance Valve |
| 4. Head | 11. Loctite #242 (Not Shown) | 18. O-Ring | 25. Bolt |
| 5. Tapered Bushing | 12. Locking Primer (Not Shown) | 19. Back-Up Ring | 26. Loctite #609 |

Figure 5-26. Tower Boom Lift Cylinder

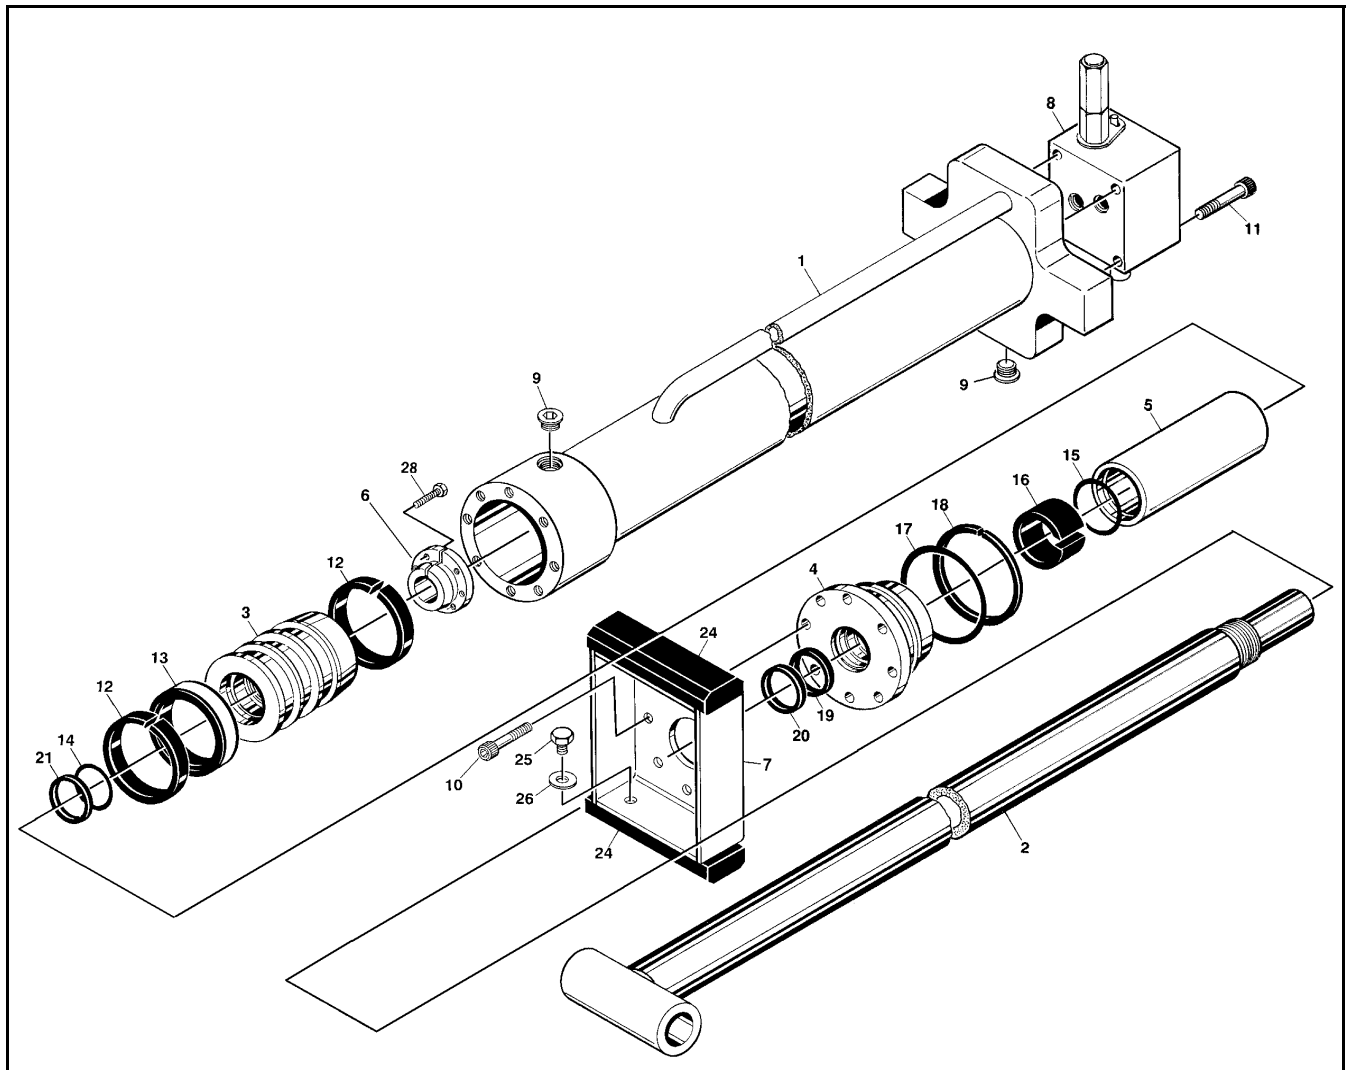

- | | | | |
|--------------------|--------------------------|------------------|--------------------------------|
| 1. Barrel | 8. Valve Block | 15. O-Ring | 22. Locking Primer (Not Shown) |
| 2. Rod | 9. O-Ring Plug | 16. Wear Ring | 23. Loctite #242 (Not Shown) |
| 3. Piston | 10. Socket Head Capscrew | 17. O-Ring | 24. Wear Pad |
| 4. Head | 11. Socket Head Capscrew | 18. Back-Up Ring | 25. Bolt |
| 5. Spacer | 12. Wear Ring | 19. Rod Seal | 26. Flatwasher |
| 6. Tapered Bushing | 13. Seal | 20. Wiper | 27. Not Used |
| 7. Plate | 14. O-Ring | 21. Back-Up Ring | 28. Bolt |

Figure 5-27. Main Boom Telescope Cylinder

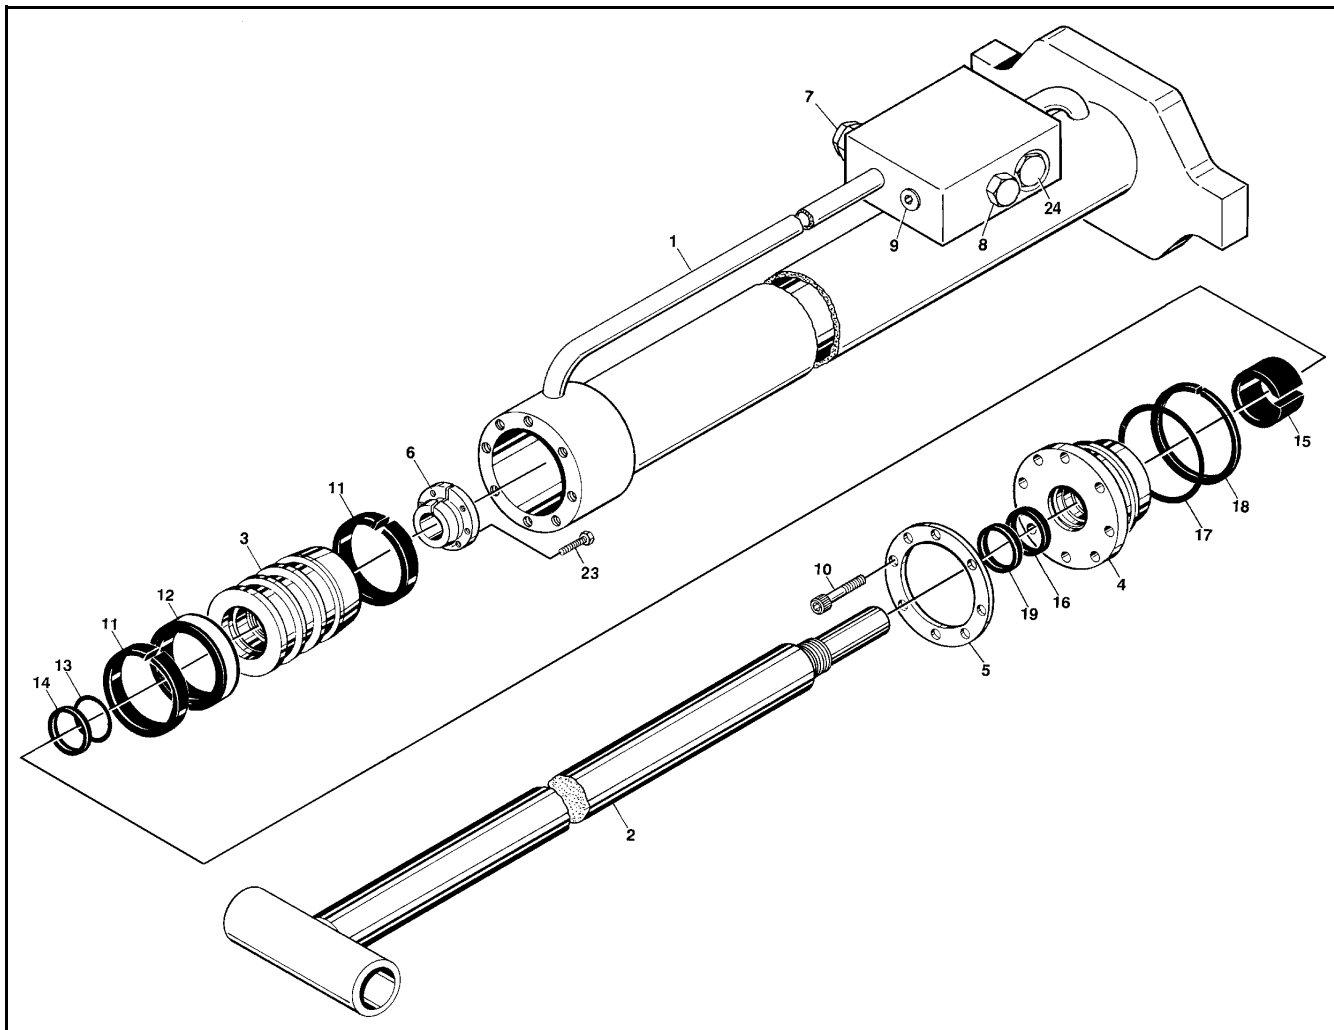

- | | | | |
|--------------------|--------------------------|--------------------------------|---------------------|
| 1. Barrel | 8. Valve Cartridge | 15. Wear Ring | 22. Not Used |
| 2. Rod | 9. O-Ring Plug | 16. Rod Seal | 23. Bolt |
| 3. Piston | 10. Socket Head Capscrew | 17. O-Ring | 24. Valve Cartridge |
| 4. Head | 11. Wear Ring | 18. Back-Up Ring | |
| 5. Washer Ring | 12. T-Seal | 19. Wiper | |
| 6. Tapered Bushing | 13. O-Ring | 20. Locking Primer (Not Shown) | |
| 7. Valve Cartridge | 14. Back-Up Ring | 21. Loctite #242 (Not Shown) | |

Figure 5-28. Tower Boom Telescope Cylinder

5.6 VARIABLE DISPLACEMENT PUMP (M46 SERIES)


Troubleshooting

GAUGE INSTALLATION

It will be necessary to install a high pressure gauge into the system pressure gauge ports to check the setting of the high pressure relief valves.

Measuring the charge pump inlet vacuum will help locate restrictions in the inlet lines, filter, etc.

Case pressure readings can help locate restrictions in the return lines, oil cooler, and return filter.

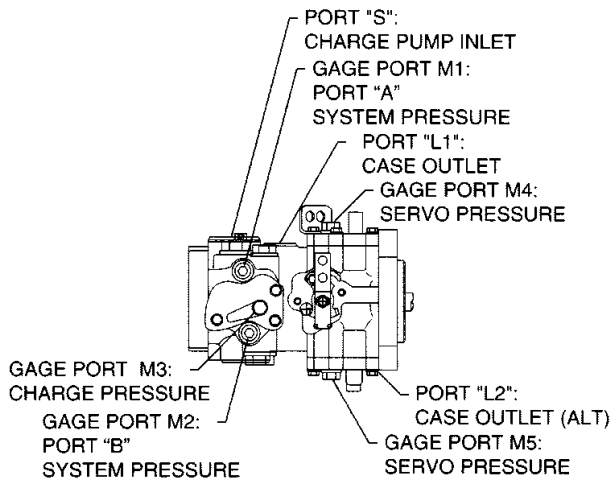

Gauge Information		
M1	System Pressure Port A	10, 000 PSI or 600 Bar Gauge
		9/16-18 O-ring Fitting
M2	System Pressure Port B	10, 000 PSI or 600 Bar Gauge
		9/16-18 O-ring Fitting
M3	Charge Pressure	1000 PSI or 60 Bar Gauge
		9/16-18 O-ring Fitting or Tee into Charge Pressure Filter Outlet Line
L1 L2	Case Pressure	1000 PSI or 60 Bar Gauge
		1-1/16-12 O-ring Fitting
S	Charge Pump Inlet Vacuum	Vacuum Gauge
		Tee into Charge Pump Inlet Line
M4	Servo Pressure	1000 PSI or 60 Bar Gauge
		9/16-18 O-ring Fitting
M5	Servo Pressure	1000 PSI or 60 Bar Gauge
		9/16-18 O-ring Fitting

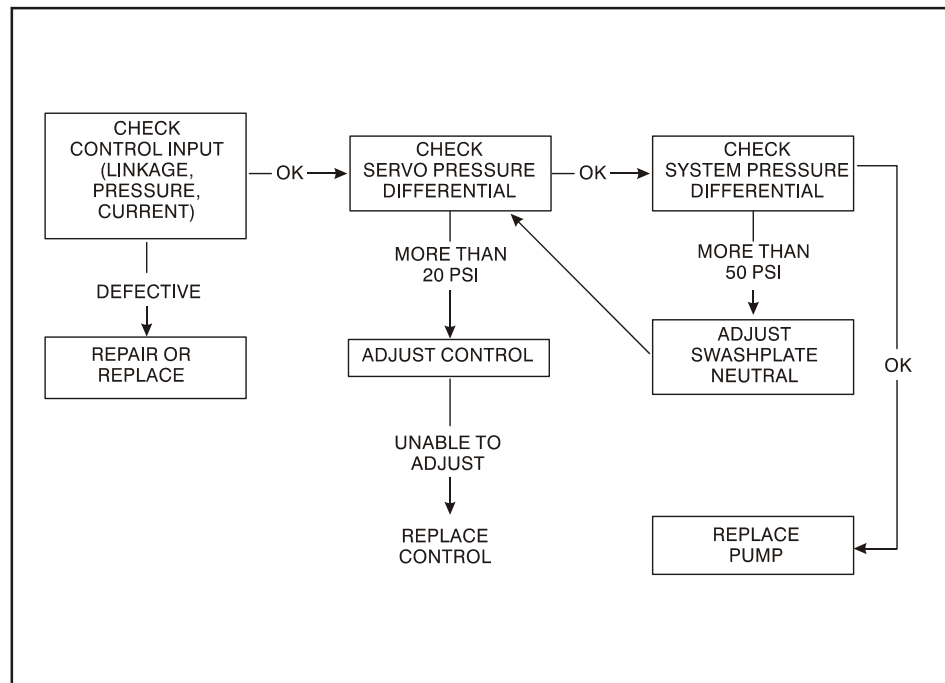


Figure 5-29. Troubleshooting - Neutral Difficult or Impossible to Find

SECTION 5 - HYDRAULICS

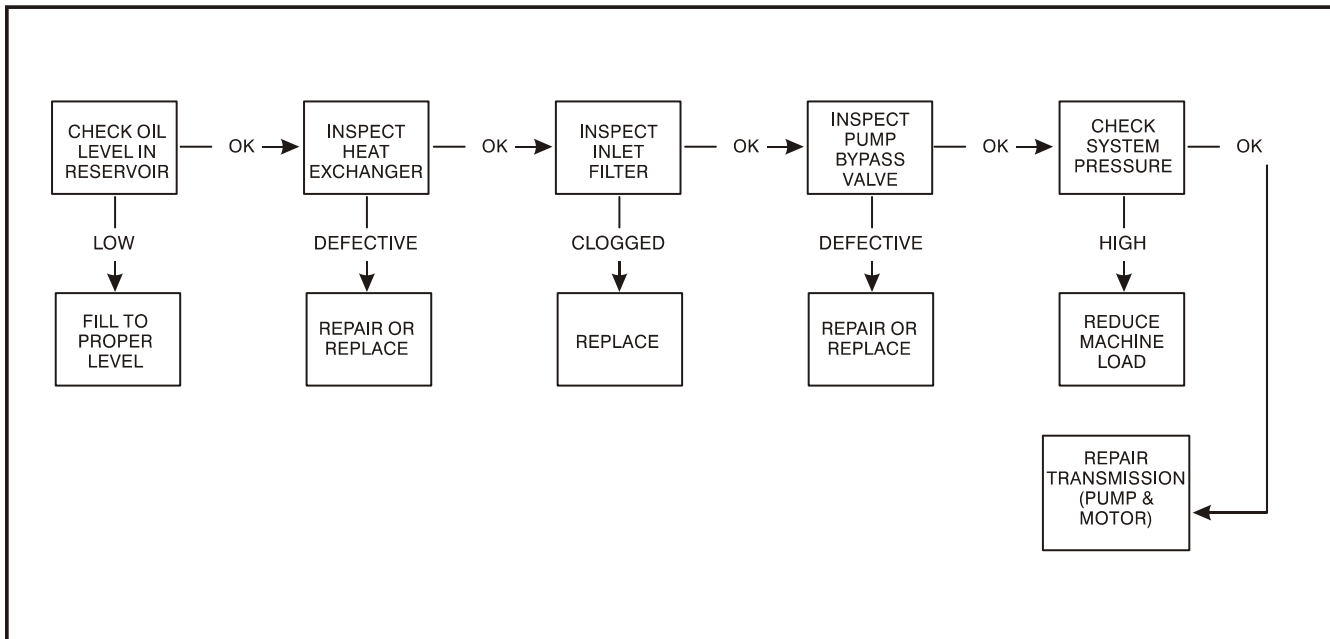


Figure 5-30. Troubleshooting - System Operating Hot

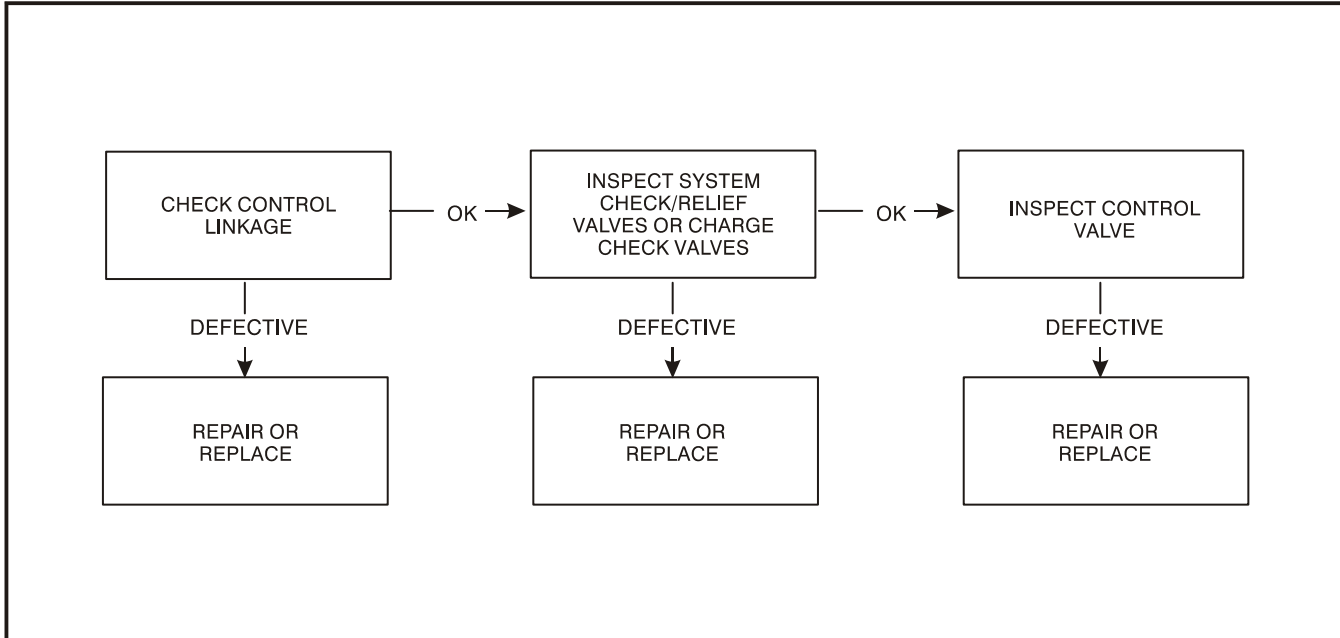


Figure 5-31. Troubleshooting - Transmission Operates in One Direction Only

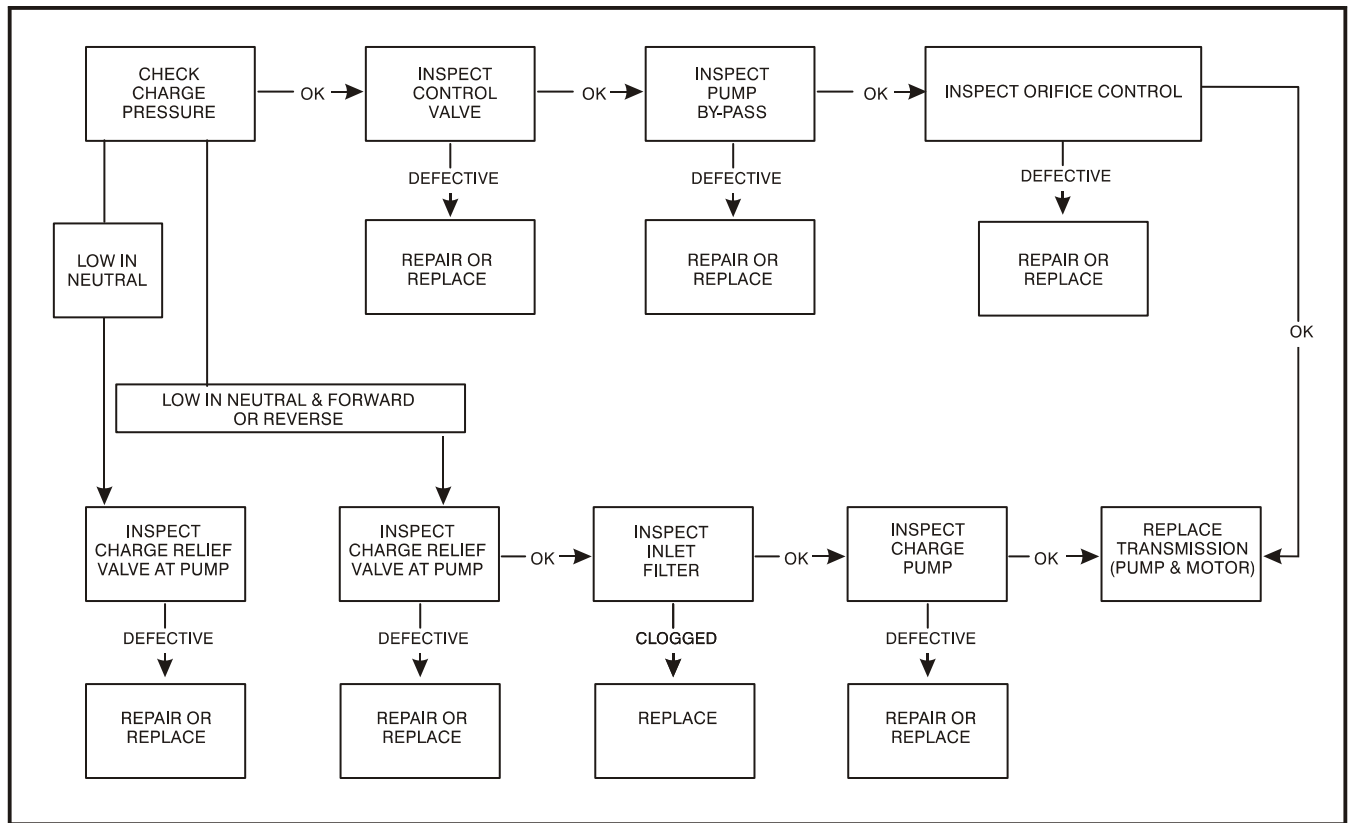


Figure 5-32. Troubleshooting - System Response is Sluggish


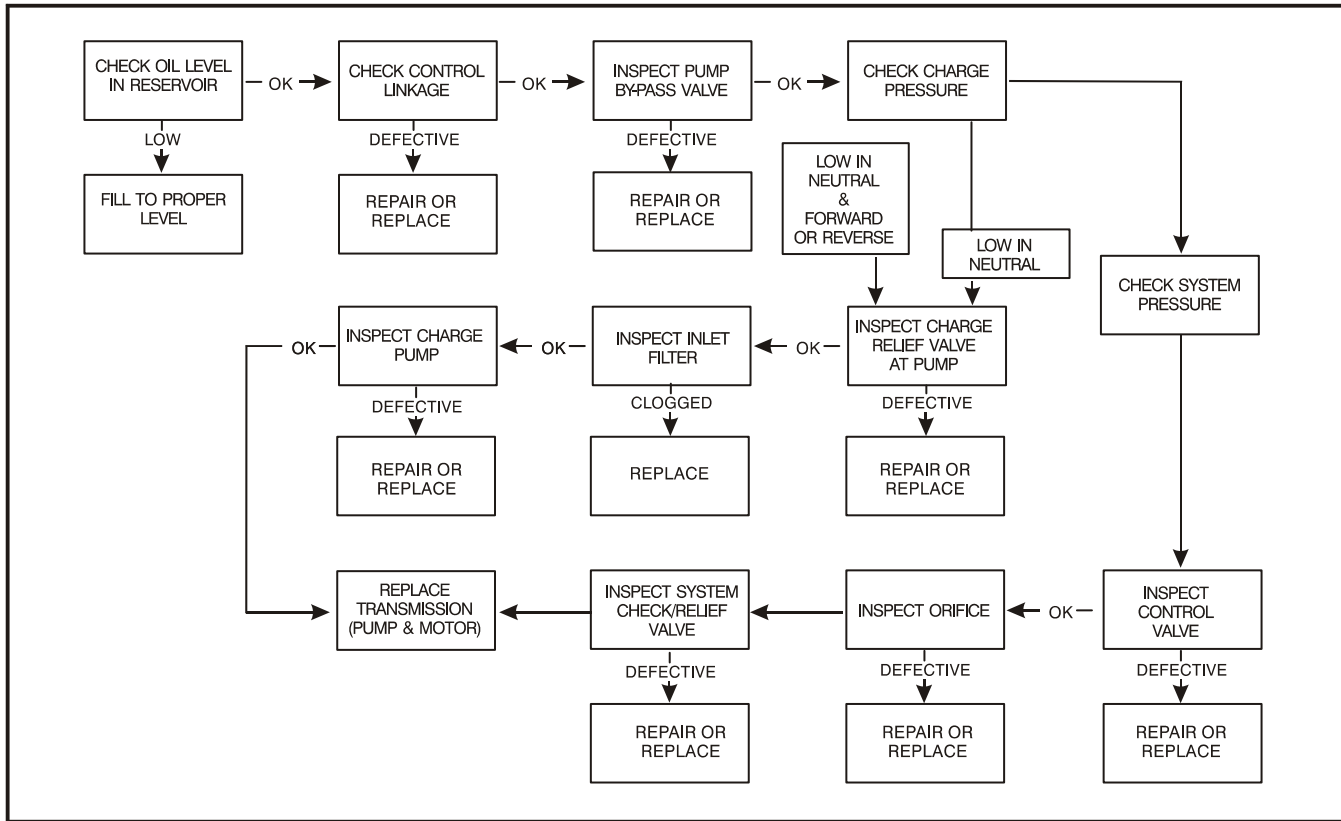


Figure 5-33. Troubleshooting - System Will Not Operate in Either Direction

Inspections and Adjustments

CHECK/HIGH PRESSURE RELIEF VALVES

The system check/relief valves have the dual purpose of providing make-up oil during by-directional rotation and providing protection from system over pressure. When the problem occurs in one direction only, interchange the check/relief valves to see if the problem changes to the other direction. If so, one check/relief valve cartridge is either malfunctioning or does not have the proper setting.

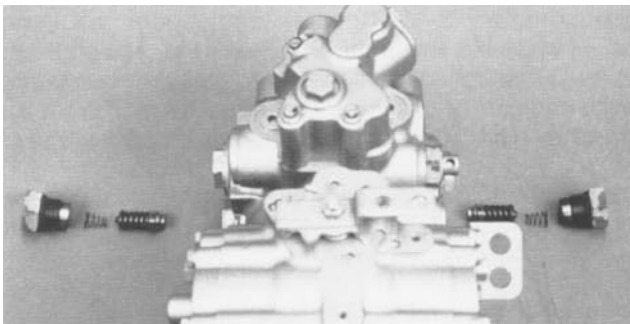


⚠ CAUTION

THE RELIEF VALVES ARE FACTORY SET AND SHOULD NOT BE TAMPERED WITH EXCEPT FOR REPLACING THE ENTIRE CARTRIDGE. DISASSEMBLY MAY CHANGE THE SETTING AND CAUSE ERRATIC UNIT OPERATION OR PREMATURE FAILURE.

PUMP CHARGE RELIEF VALVE

If charge pressure is low (less than 220 psi [15.2 Bar] above case pressure), the charge relief valve should be inspected. Inspect for foreign material holding the poppet open, and for scoring or wear on the poppet and seat in the housing.

Adjustments of the charge pressure is accomplished by changing the shim thickness behind the spring.

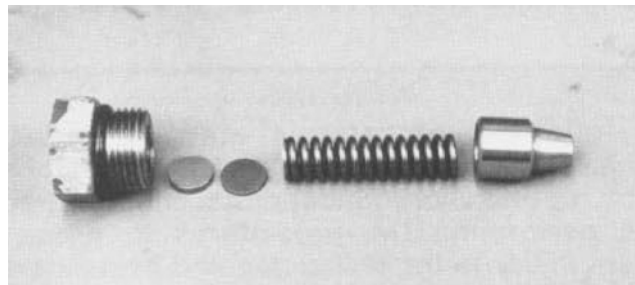


ELECTRICAL DISPLACEMENT CONTROL ORIFICES

NOTE: The pump should have two control orifices located under the servo covers.

1. With a 7/16" wrench, remove the five bolts from the servo cover opposite the neutral adjustment (cover without the adjustment screw).




2. With a 7/32" internal wrench, remove and inspect the orifice.

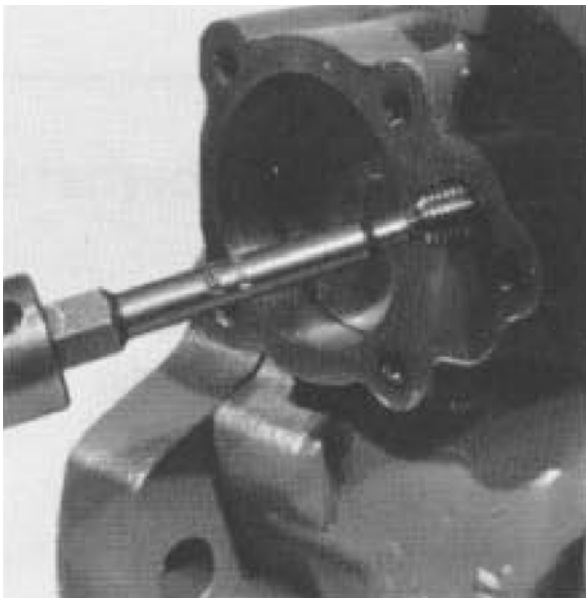

3. Remove the bolts from the servo cover on the neutral adjustment side. Install a spacer or sprocket, approximately 0.75 in. (19 mm) long, under the servo cover opposite the neutral adjustment.



4. Re-install the bolts and tighten until the servo cover on the neutral adjustment side of the pump separates 0.125 in. (3 mm) from the housing. Turn the cover and remove and inspect the orifice.

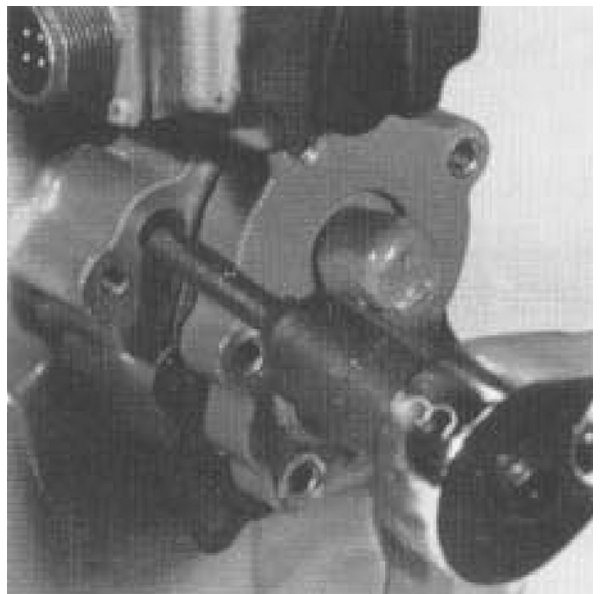


NOTE: The Displacement Control may first have to be removed in order to rotate the servo cover.


5. Remove spacer, re-install orifices, gaskets, and covers. Torque grade 5 bolts 8 to 11 ft.lbs. (10.8 to 14.9 Nm) and grade 8 bolts 11 to 13 ft.lbs. (14.9 to 17.8 Nm).

SWASHPLATE NEUTRAL ADJUSTMENT


1. Using a low pressure line (500 psi [35 Bar] min.), cross port servo port F to servo port G. This removes the effects of any control pressure on the servo piston.

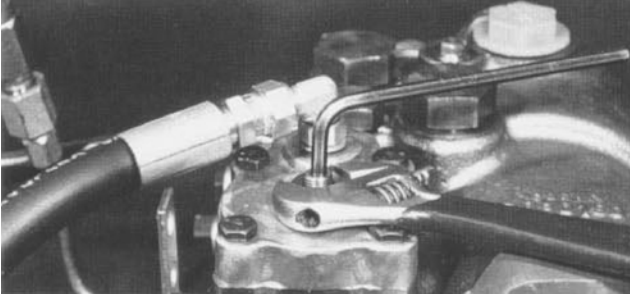

2. Install pressure gauges (10,000 psi [690 Bar]) in the system pressure gauge ports. Start the engine and slowly accelerate to normal operating RPM.
3. Remove the protective cap and loosen the servo lock nut while holding the servo adjustment screw in position.

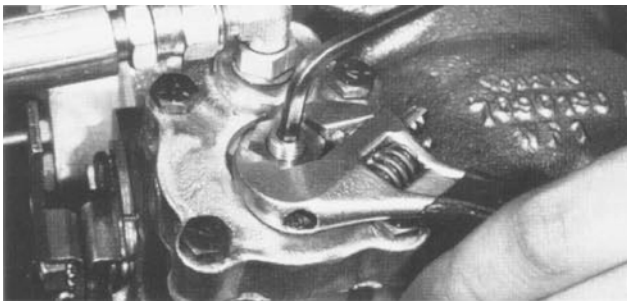

4. Turn the servo adjustment screw until the two system pressure gauge readings are equal.
5. Turn the servo adjustment screw clockwise until one of the system pressures starts to increase.

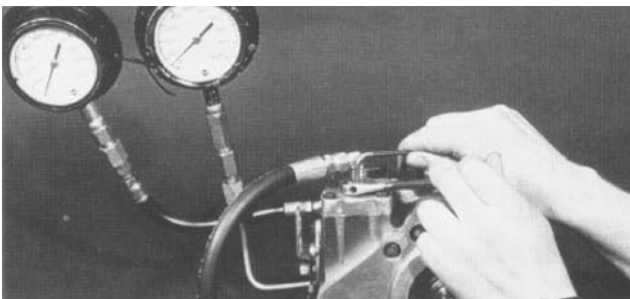

6. Noting the amount of rotation, turn the servo adjustment screw counter-clockwise until the other system pressure starts to increase.
7. Turn the servo adjustment screw clockwise half the amount of rotation noted above.

8. While holding the servo adjustment screw from turning, torque the servo lock nut 13 to 18 ft.lbs. (17.6 to 24.4 Nm). Stop the engine, install a new protective cap, remove the servo cross-port line, and proceed to the appropriate control adjustment.

EDC NEUTRAL ADJUSTMENT

1. Remove the electrical connector at the EDC. Remove the servo cross port line (installed while making the swash plate neutral adjustment) and install a 0 to 300 PSI (0 to 21 BAR) gauge in each servo port.

⚠ WARNING

THE FOLLOWING PROCEDURE MAY REQUIRE THE MACHINE TO BE DISABLED (WHEELS RAISED OFF THE GROUND, WORK FUNCTION DISCONNECTED, ETC.) WHILE PERFORMING THE PROCEDURES IN ORDER TO PREVENT INJURY TO THE TECHNICIAN AND BYSTANDERS.

2. Start the engine and accelerate to normal operating RPM.
3. Loosen lock nut with 1/2" wrench and slowly rotate the neutral adjustment screw, with 5/32" internal hex wrench, until the pressure is equal on both servo gauges.



4. Slowly rotate the neutral adjustment screw until one of the servo gauges starts to increase in pressure.
5. Noting the amount of rotation, slowly rotate the neutral adjust screw in the opposite direction until the other servo gauge begins to increase in pressure.
6. Turn the neutral adjust screw back one - half the amount noted above. Hold the neutral adjust screw and torque the lock nut to 25 to 30 in.lbs. (2.8 to 3.4 NM).
7. Stop the engine. Connect the control input. Remove the servo pressure gauges. Return the machine to normal operating condition. Restart the engine and assure that the hydrostatic system is in neutral.

Minor Repair and Replacement

Minor repairs may be performed, following the procedures in this section.

Cleanliness is a primary means of assuring satisfactory transmission life, on either new or repaired units. Cleaning parts by using solvent wash and air drying is usually adequate. As with any precision equipment, all parts must be kept free of foreign materials and chemicals.

Protect all exposed sealing surfaces and open cavities from damage and foreign material.

It is recommended that all gaskets and O-rings be replaced. Lightly lubricate all O-rings with clean petroleum jelly prior to assembly. All gasket sealing surfaces must be cleaned prior to installing new gaskets.

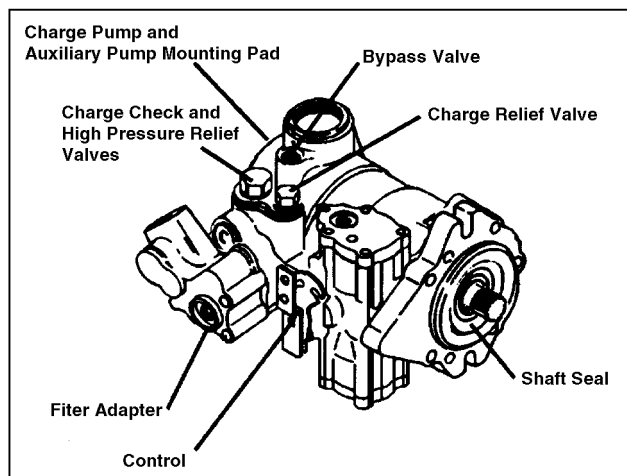


Figure 5-34. Variable Displacement Pump


SHAFT SEAL

Lip type shafts are used on Series 40 - M46 pumps and motors. These seals can be replaced without major disassembly of the unit. However, replacement of the shaft seal requires removal of the pump from the machine.

1. Remove the retaining ring from the housing.



2. Carefully remove the seal from the housing bore. The face of the seal may be punctured with a sharp instrument (such as a screw driver) to aid in prying the seal out, or a slide hammer type puller may be used to remove the seal. Care must be taken so as not to damage the housing bore or shaft. Once removed, the seal is not reusable.

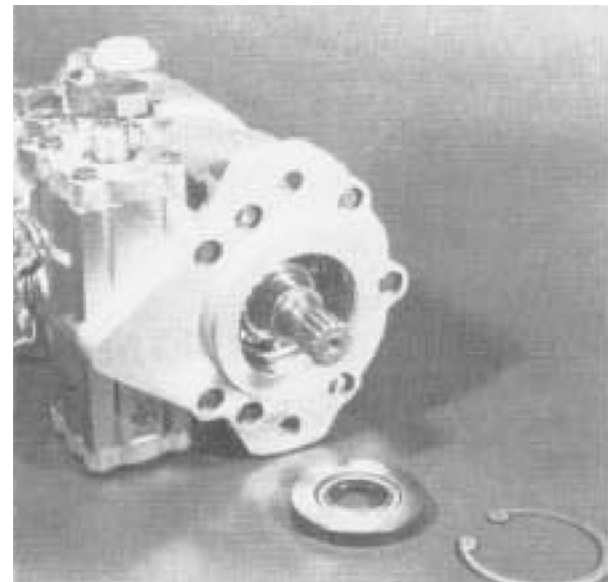


3. Prior to installing the new seal, inspect the sealing area on the shaft for rust, wear, or contamination. Polish the sealing area on the shaft if necessary.
4. Wrap the spline or key end of the shaft with thin plastic to prevent damage to the seal lip during installation. Lubricate the inside diameter of the new seal with petroleum jelly.

SECTION 5 - HYDRAULICS

NOTE: The outside diameter of the seal may be lightly coated with sealant (such as Loctite High Performance Sealant #59231) prior to installation. This will aid in preventing leaks caused by damage to the housing seal bore.


5. Slide the new seal over the shaft and press it into the housing bore. Be careful not to damage seal. A seal installer tool can be made to aid in installing the seal.

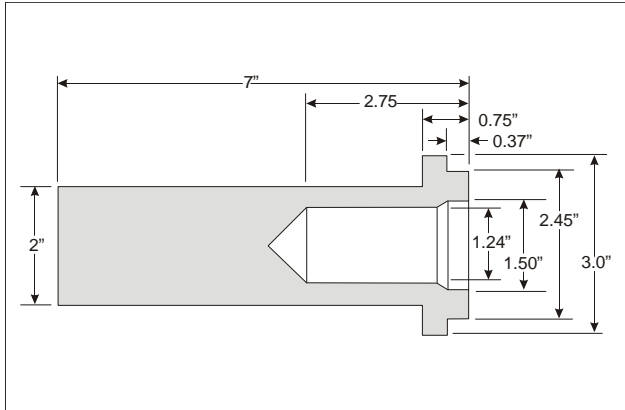

6. Reinstall the seal retaining ring.

BYPASS VALVE (PUMP)

1. Unscrew the bypass valve from the housing. Inspect the valve and mating seat for damage or foreign material. It is recommended that the O-ring and back-up ring be replaced.

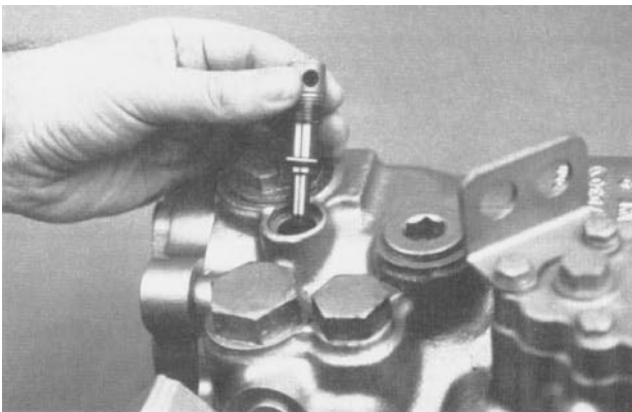


NOTE: Bypass valves are available with integral bypass orifices for specific applications. Refer to the appropriate Service Parts Manual for more information.


2. Reinstall the bypass valve into the housing. Torque to 7 to 10 ft. lbs. (9.5 - 13.6 Nm).

CHARGE CHECK AND HIGH PRESSURE RELIEF VALVES


1. Remove the charge check and high pressure relief valve hex plug.

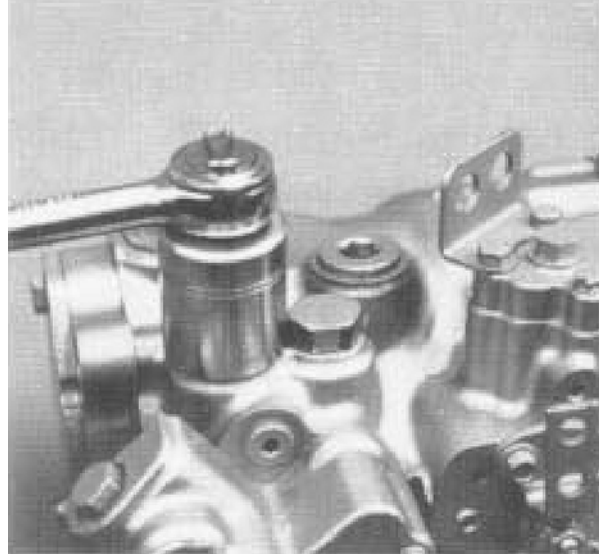

2. Remove the spring and check poppet or valve cartridge from the housing. Inspect the valve and mating seat in the housing for damage or foreign material. It will be necessary to replace the housing if the seat is damaged.

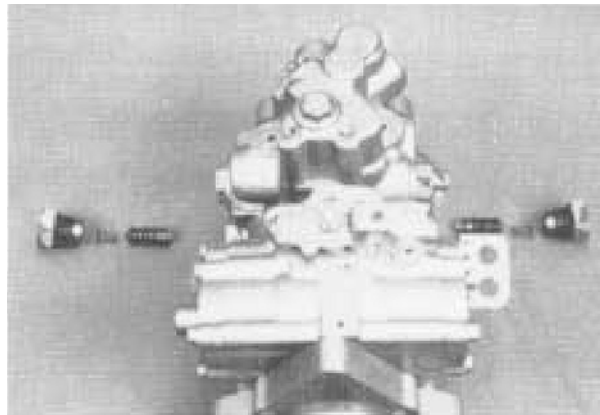

3. Several designs of charge check and high pressure relief valves have been used. Do not attempt to mix different vintage parts.

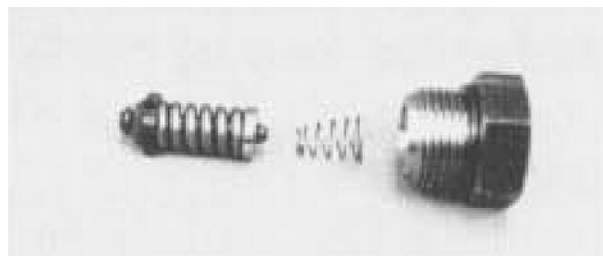

The appropriate check valve kit and/ or check and relief valve kit should be used. Refer to appropriate Service Parts Manual.

NOTE: Always replace ball type charge check valves with the poppet type.


4. Reinstall the valve cartridge, spring, and plug (with O-ring) into the housing. Torque the plug to 30 to 70 ft. lbs. (41 to 95 Nm).

⚠ CAUTION


THE RELIEF VALVES ARE FACTORY SET AND SHOULD NOT BE TAMPERED WITH EXCEPT FOR REPLACING THE ENTIRE CARTRIDGE. DISASSEMBLY MAY CHANGE THE SETTING AND CAUSE ERRATIC UNIT OPERATION OR PREMATURE FAILURE.

CHARGE PRESSURE RELIEF VALVE

1. Remove charge relief valve hex plug.

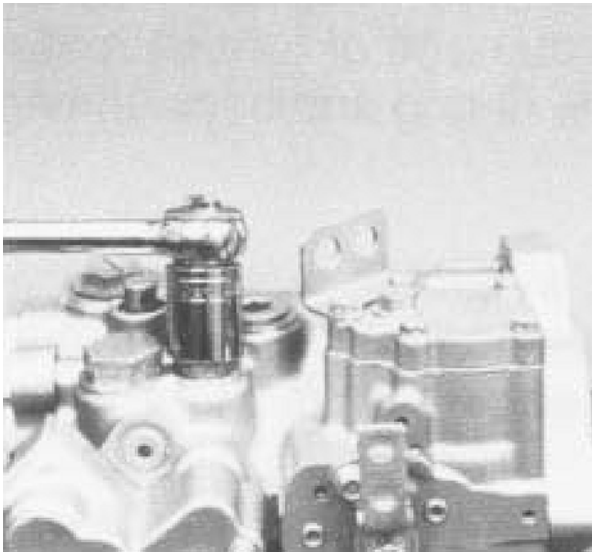

2. Remove the spring and poppet from the housing. Do not alter the shims or interchange parts with another valve. Inspect the poppet and mating seat in the end cap for damage or foreign material.

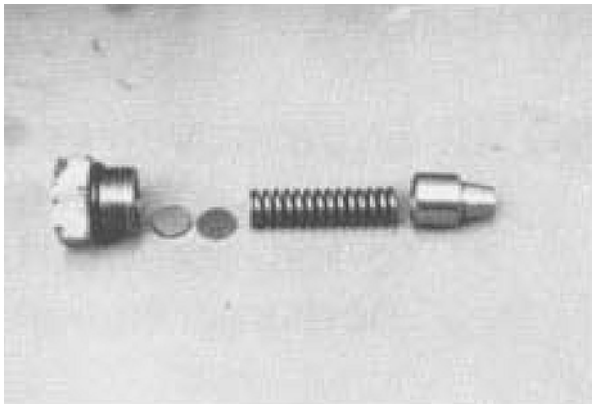

3. Reinstall the poppet, spring, and plug (with shims and O-ring) into the housing. Torque the plug to 30 to 70 ft. lbs.(41 to 95 Nm).

ELECTRICAL DISPLACEMENT CONTROLS (EDC)


⚠ CAUTION

THE REMOVAL OF ANY PORTION OF THE CONTROL MECHANISM MAY RESULT IN LOSS OF NEUTRAL, WHICH WILL NECESSITATE READJUSTMENT.

1. Remove the four control mounting screws using an internal hex wrench (3/16").




2. Carefully lift the control off the pump housing.

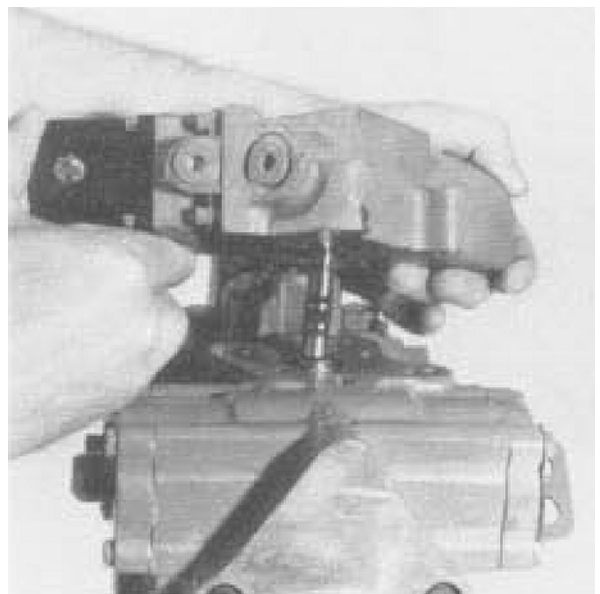


SECTION 5 - HYDRAULICS

3. Remove the control sleeve from the pump.

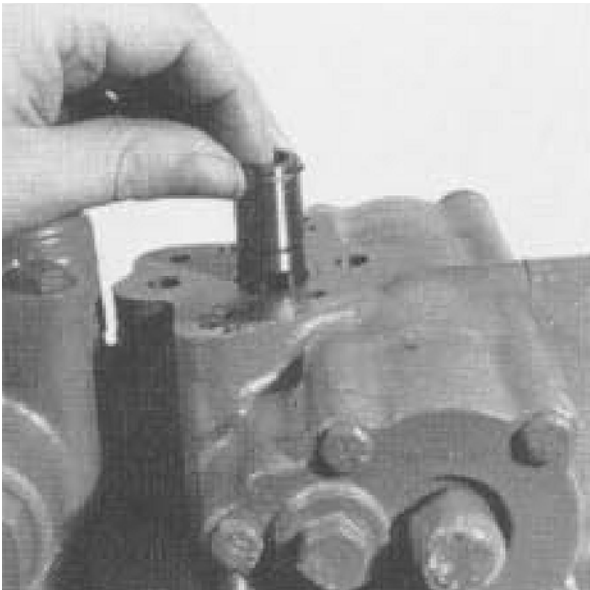


4. Remove the control inlet screen plug from the inlet passage next to the control sleeve bore, using an internal hex wrench (5/32").
5. The control orifice plugs are located in threaded passages under the servo piston cover. Remove the servo piston cover and gasket, and remove the orifice plugs using an internal hex wrench (7/32").

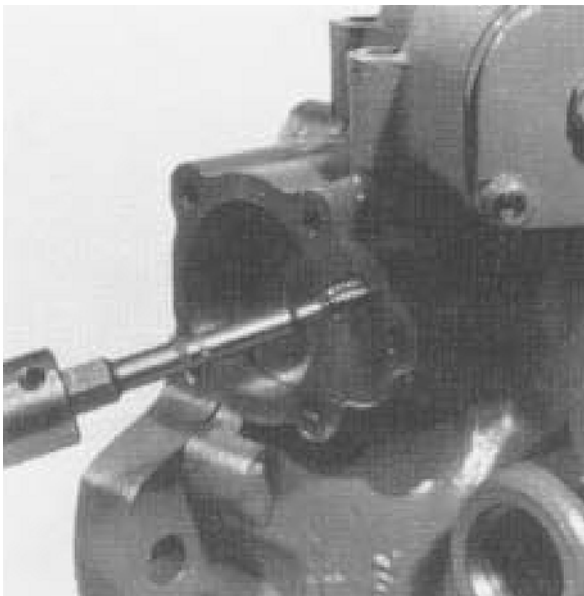


6. Replace the O-ring on the bottom of the control housing. Lightly lubricate all O-rings with clean petroleum jelly prior to assembly. The control spool and


sleeve are a matched set and are not available separately.

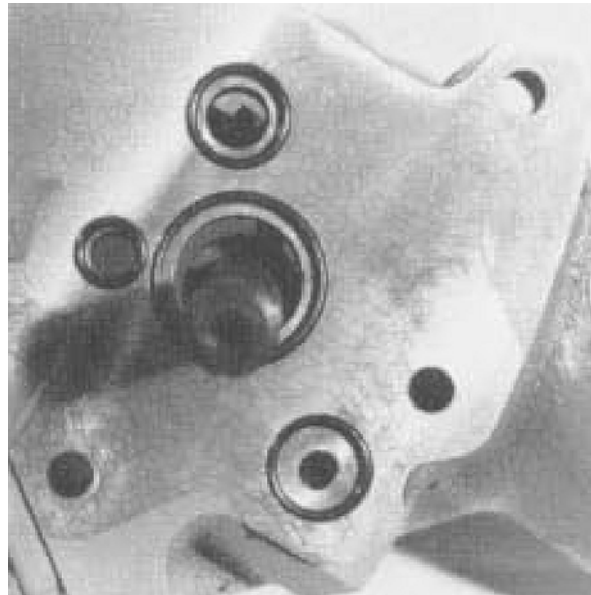

7. Reinstall the control orifice plugs into their passages and replace the servo piston covers.
8. Install the control inlet screen plug and torque to 20 to 30 in.lbs. (2.2 to 3.4 Nm). Always install a screen plug (with a 0.156" (3.96 mm.) thru hole) when servicing earlier production pumps. Pumps prior to date code 86 - 14 use a plug with a thread that is different from later units. Refer to the Service Parts Manual for plug part numbers.

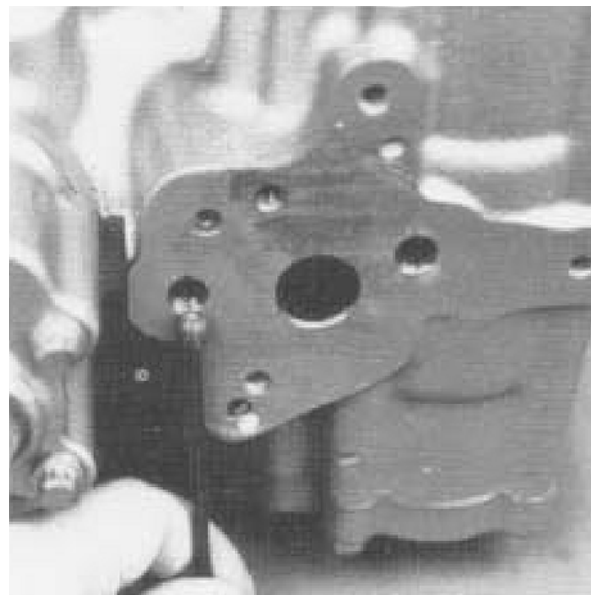

9. Align the control sleeve so its slot will engage the swash plate feedback pin (slot positioned toward the pump cover) and insert the sleeve into the housing. Carefully align the control spool with the sleeve and install the control onto the pump housing. Install the four mounting screws and torque to 10 to 11 ft.lbs. (13 to 14 Nm).

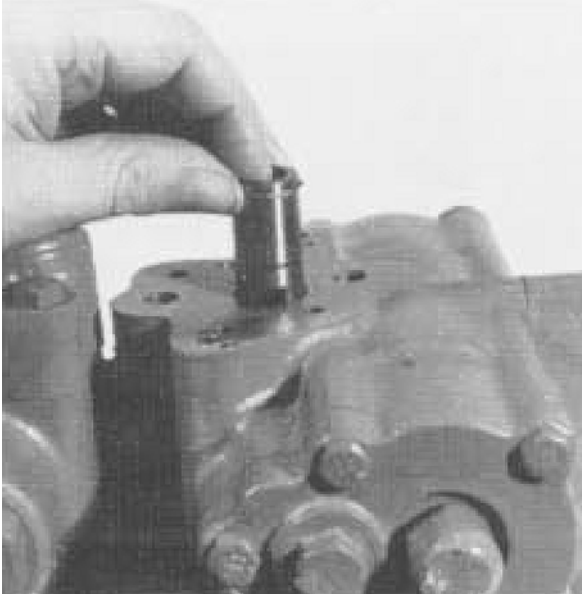

10. Install the four cover screws and torque to 18 to 24 in. lbs. (2.0 to 2.7 Nm).
11. Readjust the neutral position of the control. Refer to the instructions in the Inspections and Adjustment.

5.7 VALVES - THEORY OF OPERATION

Solenoid Control Valve - Rexroth

Control valves used are four-way three-position solenoid valves of the sliding spool design. When a circuit is activated and the control valve solenoid energizes, the spool is shifted and the corresponding work port opens to permit oil flow to the component in the selected circuit with the opposite work port opening to reservoir. Once the circuit is deactivated (control returned to neutral) the valve spool returns to neutral (center) and oil flow is then directed through the valve body and returns to reservoir. A typical control valve consist of the valve body, sliding spool, and two solenoid assemblies. The spool is machine fitted in the bore of the valve body. Lands on the spool divide the bore into various chambers, which, when the spool is shifted, align with corresponding ports in the valve body open to common flow. At the same time other ports would be blocked to flow. The spool is spring loaded to center position, therefore when the control is released, the spool automatically returns to neutral, prohibiting any flow through the circuit.

Relief Valves

Relief valves are installed at various points within the hydraulic system to protect associated systems and components against excessive pressure. Excessive pressure can be developed when a cylinder reaches its limit of travel and the flow of pressurized fluid continues from the system control. The relief valve provides an alternate path for the continuing flow from the pump, thus preventing rupture of the cylinder, hydraulic line or fitting. Complete failure of the system pump is also avoided by relieving circuit pressure. The relief valve is installed in the circuit between the pump outlet (pressure line) and the cylinder of the circuit, generally as an integral part of the system valve bank. Relief pressures are set slightly higher than the load requirement, with the valve diverting excess pump delivery back to the reservoir when operating pressure of the component is reached.

5.8 PRESSURE SETTING PROCEDURES

NOTICE

COLD TEMPERATURES HAVE A SIGNIFICANT IMPACT ON PRESSURE READINGS. JLG INDUSTRIES, INC. RECOMMENDS OPERATING THE MACHINE UNTIL THE HYDRAULIC SYSTEM HAS WARMED TO NORMAL OPERATING TEMPERATURES PRIOR TO CHECKING PRESSURES. JLG ALSO RECOMMENDS USING A CALIBRATED GAUGE. PRESSURE READINGS ARE ACCEPTABLE IF WITHIN +/- 5% OF SPECIFIED PRESSURES.

Main Relief, Steer, Swing and Lift Down

1. Install pressure gauge at quick disconnect on port MP on main valve.
2. With the aid of an assistant, activate telescope in.
3. While monitoring pressure gauge, adjust main relief to 3000 PSI (206.85 Bar).
4. With the aid of an assistant, activate steer left.
5. While monitoring pressure gauge, adjust steer left relief to 1800 PSI (124.1 Bar).
6. With the aid of an assistant, activate steer right.
7. While monitoring pressure gauge, adjust steer right relief to 1800 PSI (124.1 Bar).
8. With the aid of an assistant, activate swing left or right.
9. While monitoring pressure gauge, adjust swing relief to 1700 PSI (117.2 Bar).
10. With the aid of an assistant, activate lift down.
11. While monitoring pressure gauge, adjust lift down relief to 1200 PSI (82.7 Bar).

Platform Level

1. Install pressure gauge at quick disconnect on port M3 on main valve.
2. With the aid of an assistant, activate platform level forward.
3. While monitoring pressure gauge, adjust platform level relief to 2800 PSI (193.06 Bar).
4. Install pressure gauge at quick disconnect on port M4 on main valve.
5. With the aid of an assistant, activate platform level backward.
6. While monitoring pressure gauge, adjust platform level relief to 1800 PSI (124.11 Bar).

Articulating Jib Boom (If Equipped)

1. Install pressure gauge at quick disconnect on articulating valve.
2. With the aid of an assistant, activate articulating jib up.
3. While monitoring pressure gauge, adjust articulating jib up relief to 1500 PSI (103 Bar).
4. With the aid of an assistant, activate articulating jib down.
5. While monitoring pressure gauge, adjust activate articulating jib down relief to 1200 PSI (83 Bar).

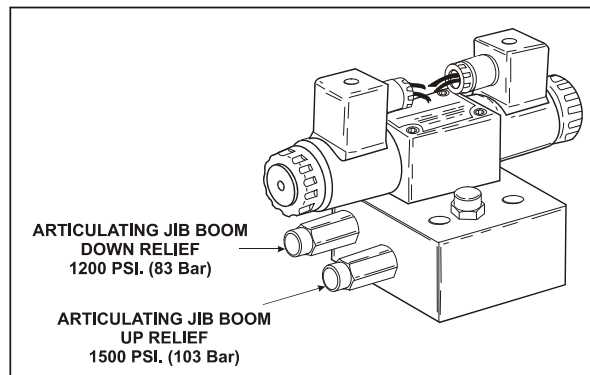


Figure 5-35. Articulating Jib Boom Pressure Adjustments

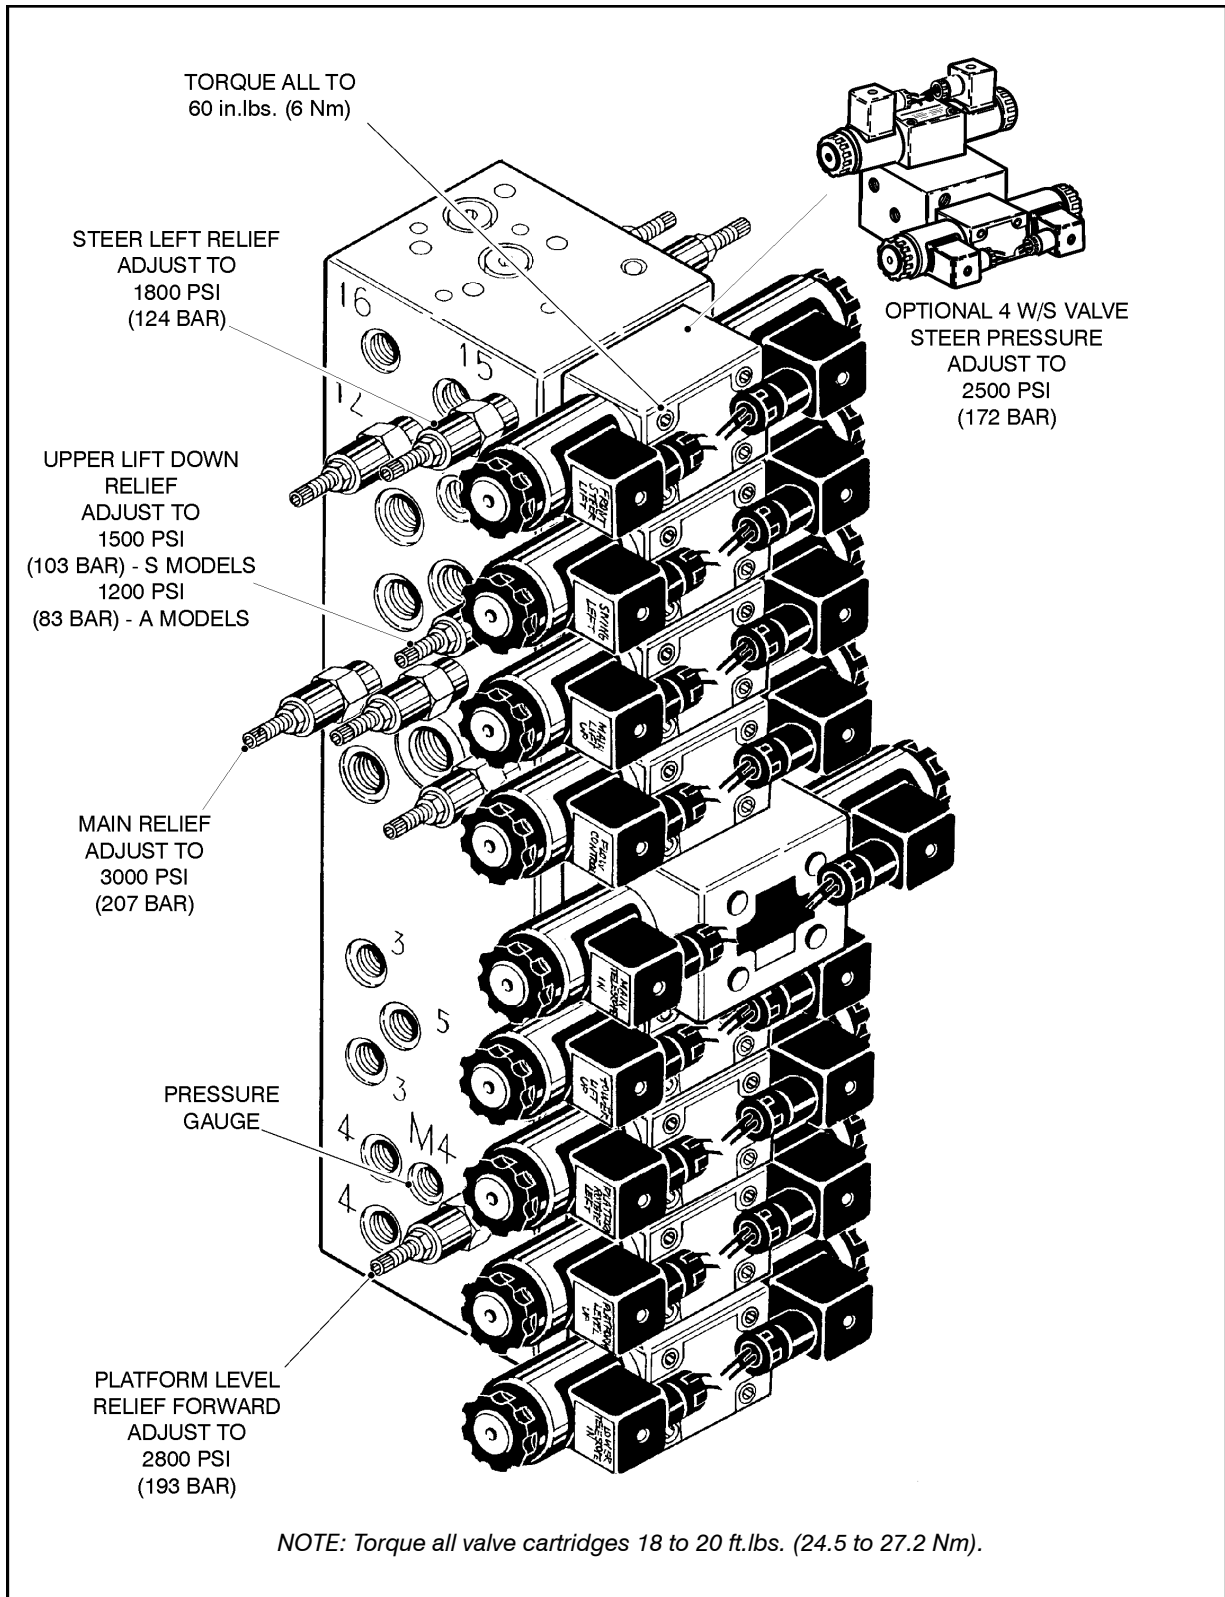


Figure 5-36. Main Control Valve Pressure Adjustments - Sheet 1 of 2

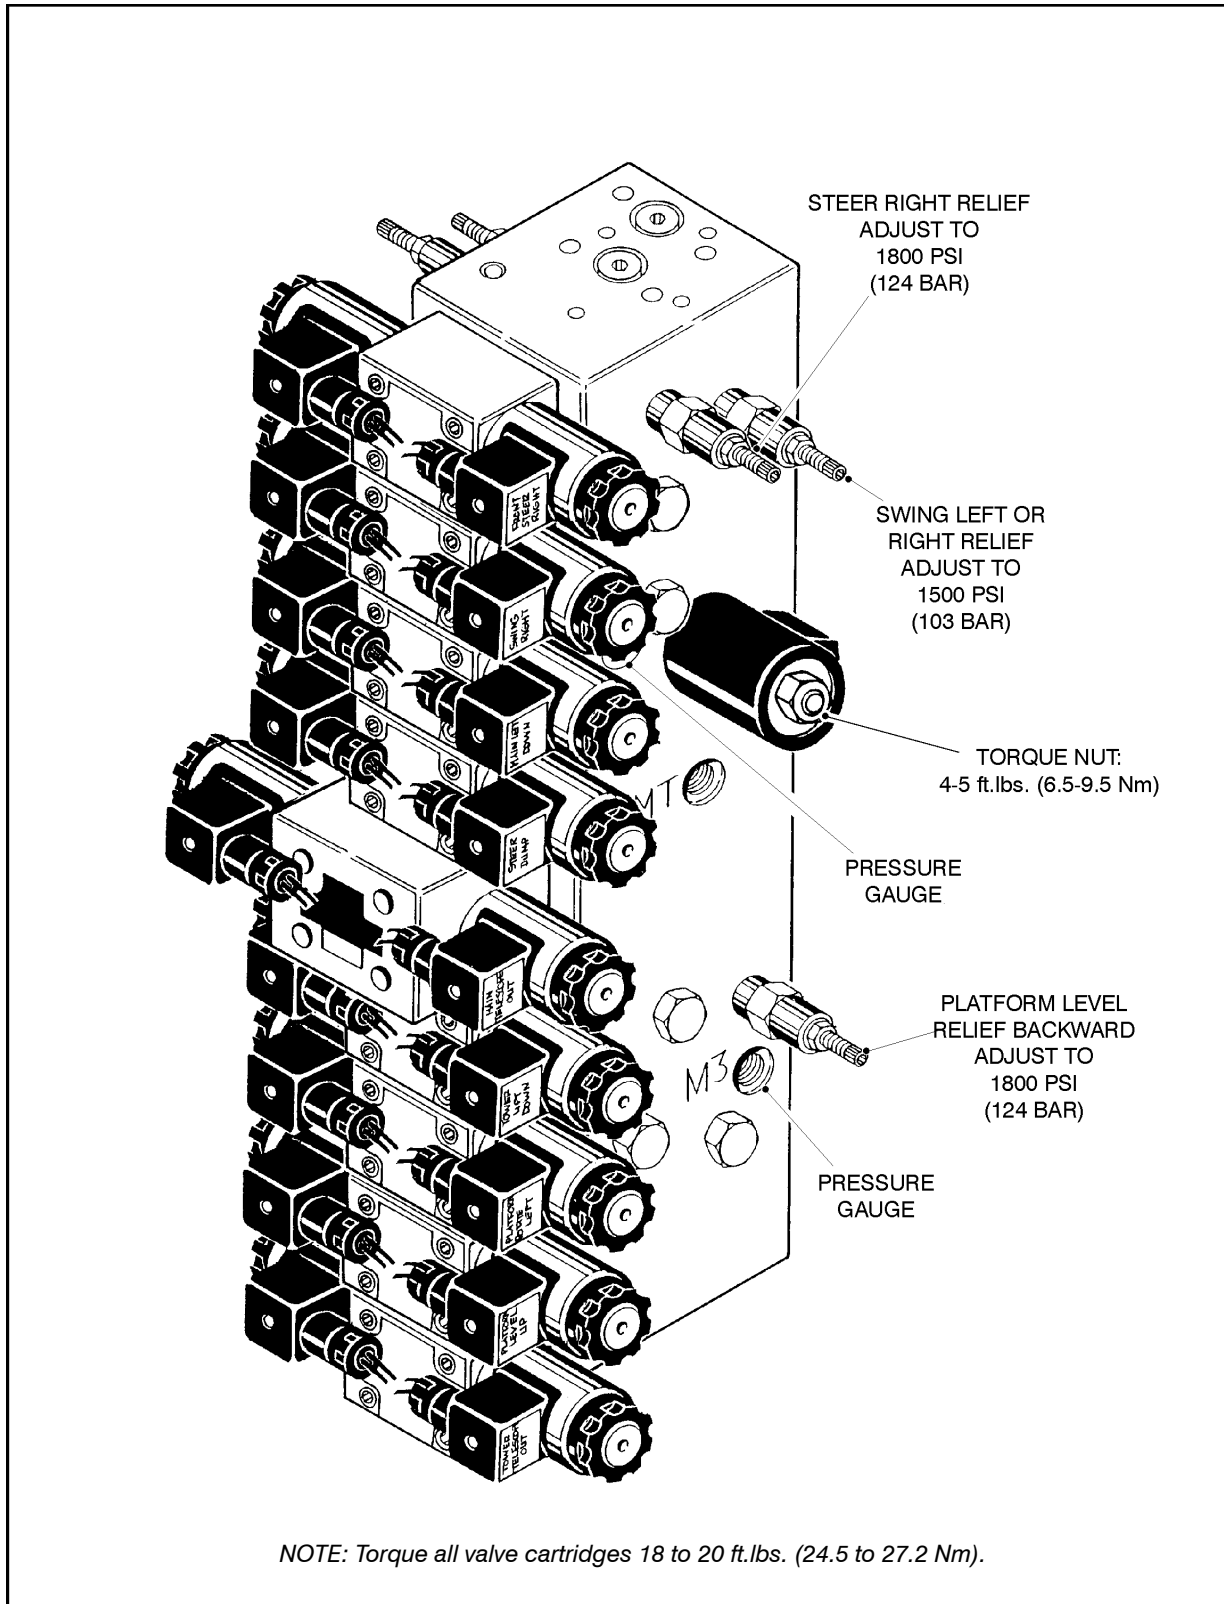


Figure 5-37. Main Control Valve Pressure Adjustments - Sheet 2 of 2

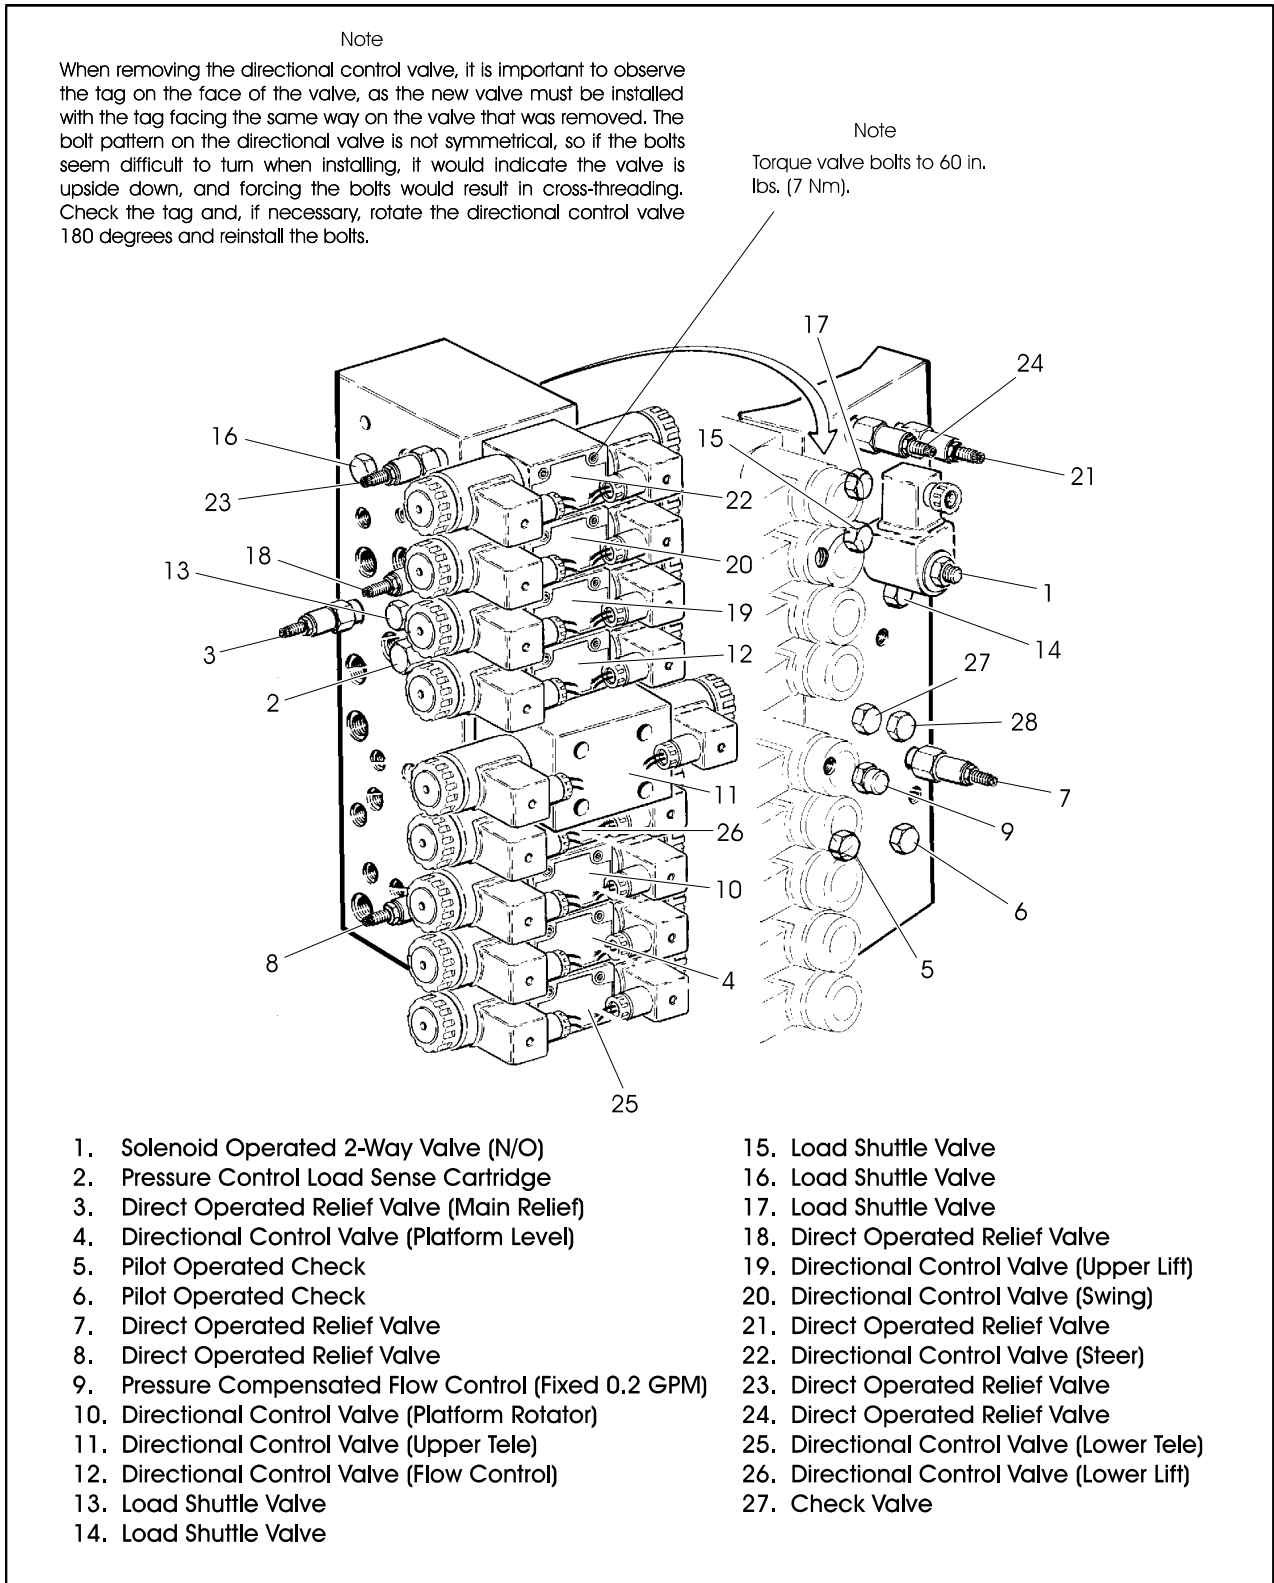


Figure 5-38. Location of Components - Main Control Valve

4 Wheel Steer (If Equipped)

1. At the platform console using the steer select switch activate "2 wheel steer".
2. Install a pressure gauge in port MP on main control valve.
3. With the aid of an assistant, activate steer left and right, adjust front steer relief valve to 2500 PSI (172.4 Bar). This pressure only affects the front axle.
4. At the platform console using the steer select switch activate "crab" or "coordinated" steer.
5. At the main control valve block disconnect the wire din connectors on the front steer valve. When steer is activated only the rear steer will work.
6. Install a pressure gauge in port MP on main control valve.
7. With the aid of an assistant, activate steer left and right, adjust rear steer relief valve to 2500 PSI (172.4 Bar). Reading at the valve bank 2500 PSI (172.4 Bar) will give you 2000PSI (137.9 Bar) at the cylinders.
8. Re-connect the front steer din connectors at the valve bank.

5.9 HYDRAULIC COMPONENT START-UP PROCEDURES AND RECOMMENDATIONS

From a hydrostatic component standpoint, the goal at system start up is to put into functional operation, the hydrostatic system in such a way as to preserve the designed life span of the system. The following start-up procedure should be adhered to whenever a new pump or motor is initially installed into a machine, or a system is restarted after either a pump or motor has been removed and/or replaced.

WARNING

THE FOLLOWING PROCEDURE MAY REQUIRE THE MACHINE TO BE DISABLED (WHEELS RAISED OFF THE GROUND, WORK FUNCTIONS DISCONNECTED, ETC.) WHILE PERFORMING THE PROCEDURE IN ORDER TO PREVENT INJURY. TAKE NECESSARY SAFETY PRECAUTIONS BEFORE MOVING THE VEHICLE/MACHINE.

Prior to installing the pump and/or motor, inspect the unit(s) for damage that may have been incurred during shipping and handling. Make certain that all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

Fill the reservoir with recommended hydraulic fluid. This fluid should be passed through a 10 micron (nominal, no bypass) filter prior to entering the reservoir. The use of contaminated fluid will cause damage to the components, which may result in unexpected vehicle/machine movement.

NOTE: *If a pump or motor is being replaced due to internal damage, the remaining units (pump or motors) need to be inspected for damage and contamination, and the entire hydraulic system will need to be flushed and the fluid replaced. Failure to do so may cause considerable damage to the entire system.*

The inlet line leading from the reservoir to the pump must be filled prior to start-up. Check the inlet line for property tightened fittings and make sure it is free of restrictions and air leaks.

NOTE: *In most cases, the reservoir is above the pump inlet so that the pressure head created by the higher oil level helps to keep the inlet pressures within an acceptable range and prevent high vacuum levels. However, due to hose routing or low reservoir locations, there may be air trapped within this line. It is important to assure that the air is bled from this line. This can be accomplished by loosening the hose at the fitting closest the pump. When oil begins to flow, the line is full, the air has been purged, and the fitting can be retightened to its specified torque. If the tank needs to be pressurized in order to start the flow of oil, a vacuum reading should be taken at the inlet of the pump during operation in order to verify that the pump is not being asked to draw an inlet vacuum higher than it is capable of.*

Be certain to fill the pump and/or motor housing with clean hydraulic fluid prior to start up. Fill the housing by pouring filtered oil into the upper case drain port.

NOTE: *It is highly recommended to use the highest possible case drain port, this ensures that the housing contains as much oil as possible and offers the greatest amount of lubrication to the internal components.*

NOTE: *In initial start-up conditions, it may be convenient to fill the housing, just prior to installing the case drain line. Component, (especially motor), location may be such that access to the case drain port after installation is not realistic.*

NOTE: *Make certain that the oil being used to fill the component housing is as clean as possible, and store the fill container in such a way as to prevent it from becoming contaminated.*

Install a 60 bar (or 1000 psi) pressure gauge in the charge pressure gauge port in order to monitor the charge pressure during start-up.

It is recommended that the external control input signal, (electrical connections for EDC), be disconnected at the pump control until after initial start-up. This will ensure that the pump remains in its neutral position.

⚠ WARNING

DO NOT START THE ENGINE UNLESS PUMP IS IN THE NEUTRAL POSITION (0 DEGREES SWASHPLATE ANGLE). TAKE PRECAUTIONS TO PREVENT MACHINE MOVEMENT IN CASE PUMP IS ACTUATED DURING INITIAL START-UP.

"Jog" or slowly rotate the engine until charge pressure starts to rise. Start the engine and run at the lowest possible RPM until charge pressure has been established. Excess air should be bled from the system lines as close to the motors as possible.

NOTE: *With the engine on low idle, "crack", (loosen-don't remove), the system lines at the motor(s). Continue to run the engine at low idle and tighten the system lines as soon as oil is observed to leak from them. When oil is observed to "leak" at the motor the line is full, the air has been purged, and the system hoses should be retightened to their specified torque.*

Once charge pressure has been established, increase speed to normal operating RPM. Charge pressure should be as indicated in the pump model code. If charge pressure is inadequate, shut down and determine the cause for improper pressure.

⚠ WARNING

INADEQUATE CHARGE PRESSURE WILL AFFECT THE OPERATOR'S ABILITY TO CONTROL THE MACHINE.

Shut down the engine and connect the external control input signal. Also reconnect the machine function(s), if disconnected earlier. Start the engine, checking to be certain the pump remains in neutral. With the engine at normal operating RPM, slowly check for forward and reverse machine operation.

Charge pressure may slightly decrease during forward or reverse operation. Continue to cycle slowly between forward and reverse for at least five minutes.

Shut down engine, remove gauges, and plug ports. Check reservoir level and add filtered fluid if needed.

The machine is now ready for operation.

5.10 HYDRAULIC PUMP W/HAYES PUMP DRIVE COUPLING LUBRICATION

Any time pump or pump drive coupling is removed coat, pump and drive coupling splines with Lithium Soap Base Grease (TEXACO CODE 1912 OR EQUIVALENT) coupling is greased prior to assembly.

SECTION 6. JLG CONTROL SYSTEM

6.1 INTRODUCTION

NOTICE

WHEN INSTALLING A NEW GROUND MODULE CONTROLLER ON THE MACHINE, IT WILL BE NECESSARY TO PROGRAM THE CONTROLLER FOR THE PROPER MACHINE CONFIGURATION, INCLUDING OPTIONS.

NOTICE

IT IS A GOOD PRACTICE TO AVOID PRESSURE-WASHING ELECTRICAL/ELECTRONIC COMPONENTS. SHOULD PRESSURE-WASHING BE UTILIZED TO WASH AREAS CONTAINING ELECTRICAL/ELECTRONIC COMPONENTS, JLG INDUSTRIES, INC. RECOMMENDS A MAXIMUM PRESSURE OF 750 PSI (52 BAR) AT A MINIMUM DISTANCE OF 12 INCHES (30.5 CM) AWAY FROM THESE COMPONENTS. IF ELECTRICAL/ELECTRONIC COMPONENTS ARE SPRAYED, SPRAYING MUST NOT BE DIRECT AND BE FOR BRIEF TIME PERIODS TO AVOID HEAVY SATURATION.

The JLG designed Control System is a 12 volt based motor control unit installed on the boom lift.

The JLG Control System has reduced the need for exposed terminal strips, diodes and trimpots and provides simplicity in viewing and adjusting the various personality settings for smooth control of: acceleration, deceleration,

creep, min speed, and max.-speed for all boom, drive, and steering functions.

The upper lift, swing, and drive are controlled by individual joysticks, with steering being controlled by a rocker switch built into the top the drive joystick. To activate Drive, Lift, and Swing simply pull up on the slide lock location on the joystick and move the handle into the direction desired.

The control system will control the voltage output to the valves and pump, as programmed for smooth operation and maximum cycle time. Ground control speeds for all boom functions can also be programmed into the control system.

The JLG Control System controller has a built in LED to indicate any faults. The system stores recent faults which may be accessed for troubleshooting. Optional equipment includes a soft touch system, head and tail lights, and ground alarm. These options may be added later but must be programmed into the control system when installed.

The Control System may be accessed utilizing a custom designed, hand held analyzer (Analyzer Kit, JLG part no. 2901443) which will display two lines of information at a time, by scrolling through the program.

NOTE: Each module has a label with the JLG part number and a serial number which contains a date code.

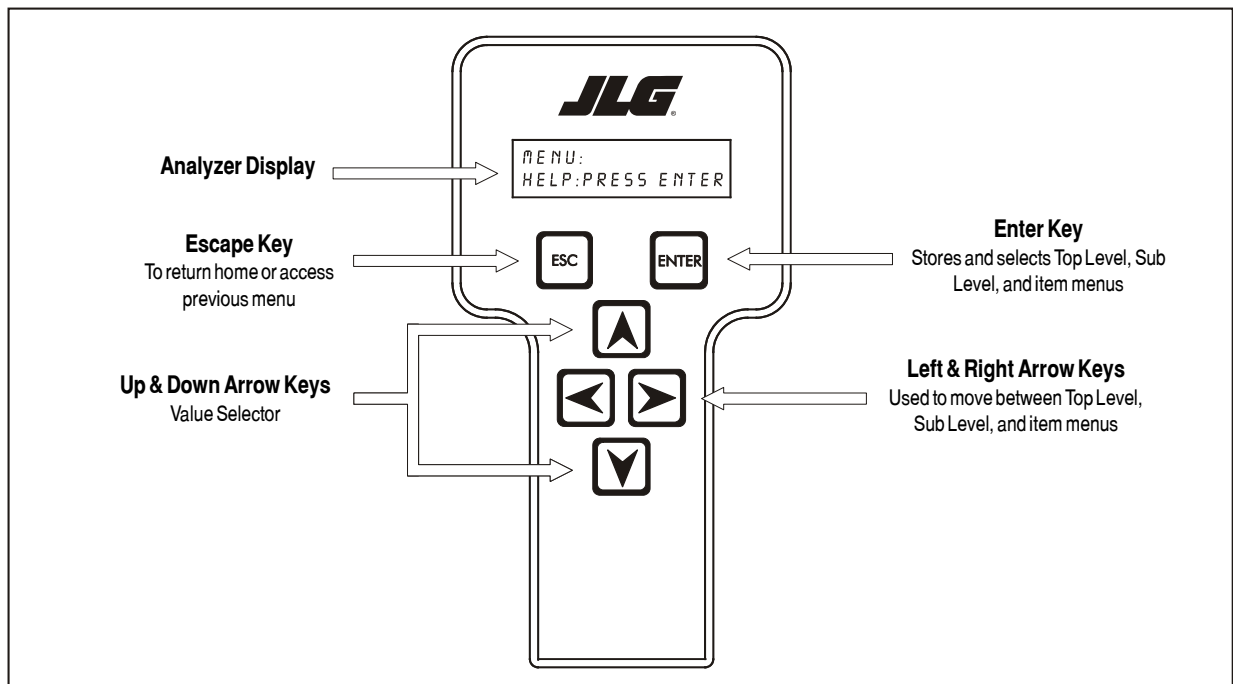


Figure 6-1. Hand Held Analyzer

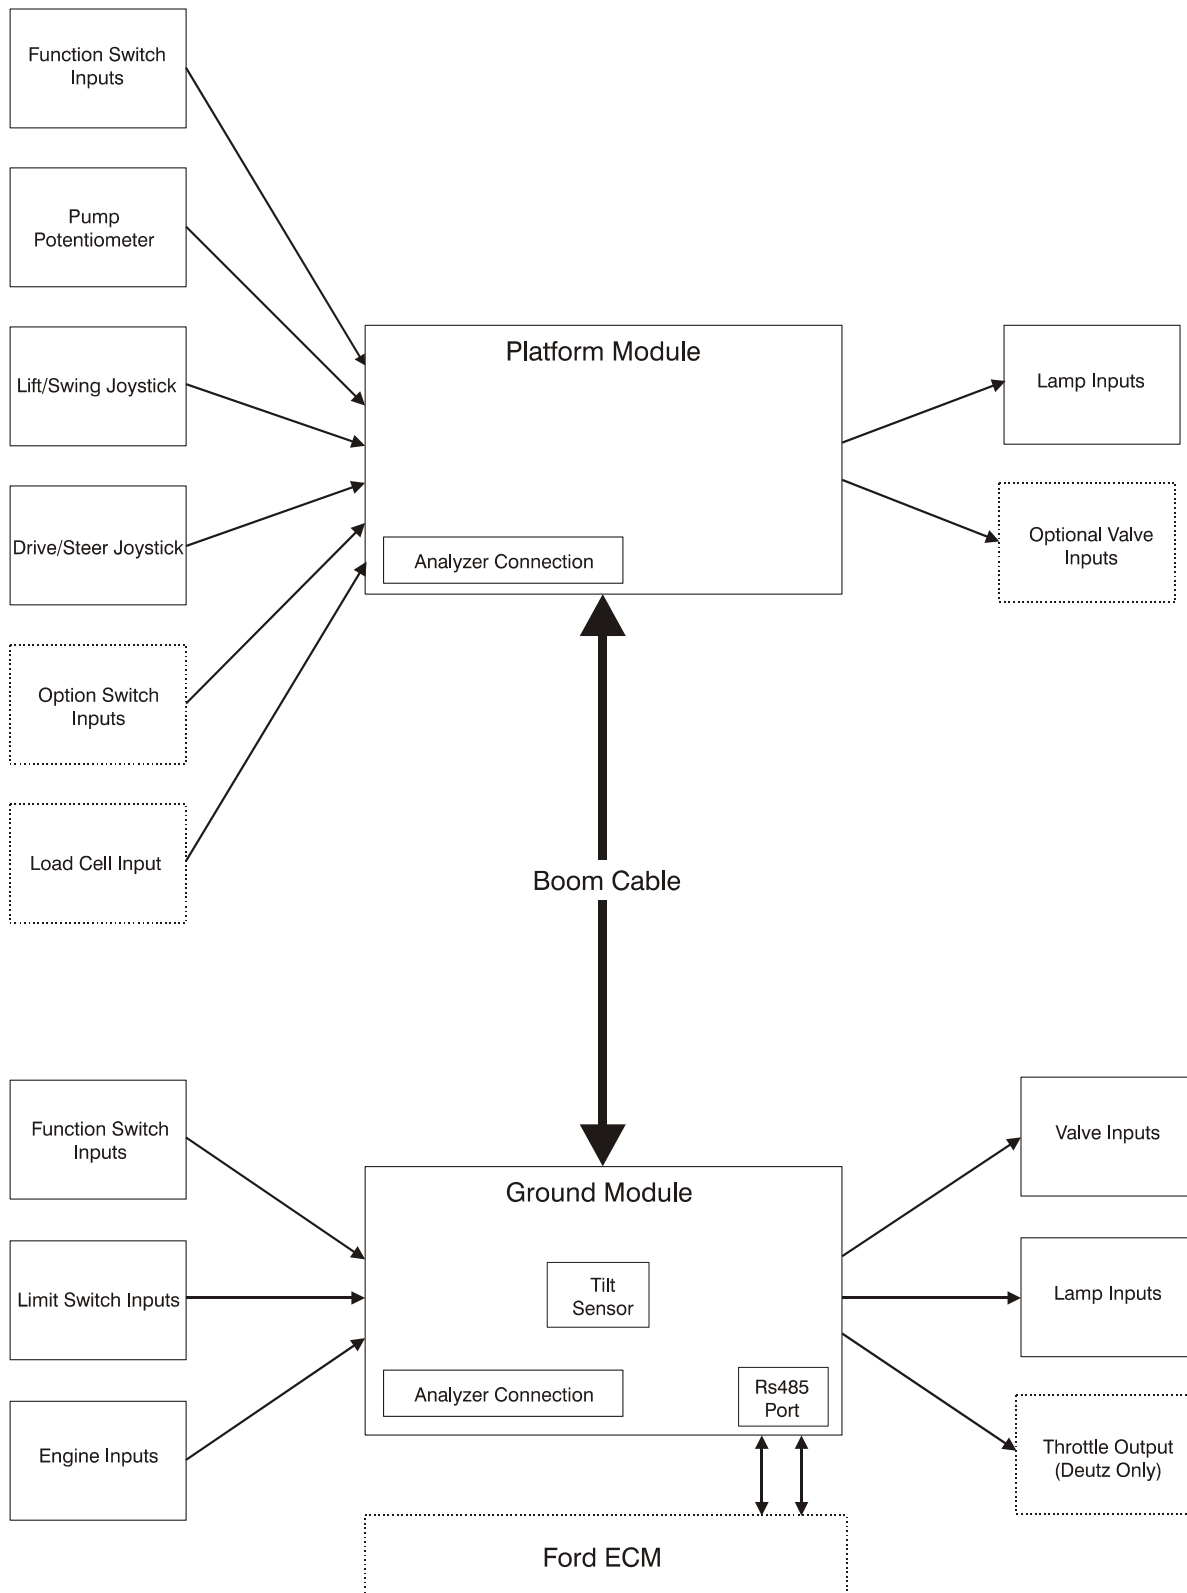


Figure 6-2. ADE Block Diagram

6.2 TO CONNECT THE JLG CONTROL SYSTEM ANALYZER


1. Connect the four pin end of the cable supplied with the analyzer, to the controller module located in the platform box or at the controller module in the ground control box and connect the remaining end of the cable to the analyzer.

NOTE: The cable has a four pin connector at each end of the cable; the cable cannot be connected backwards.

2. Power up the Control System by turning the lower key to the platform or ground position and pulling both emergency stop buttons on.

6.3 USING THE ANALYZER

With the machine power on and the analyzer connected properly, the analyzer will display the following:

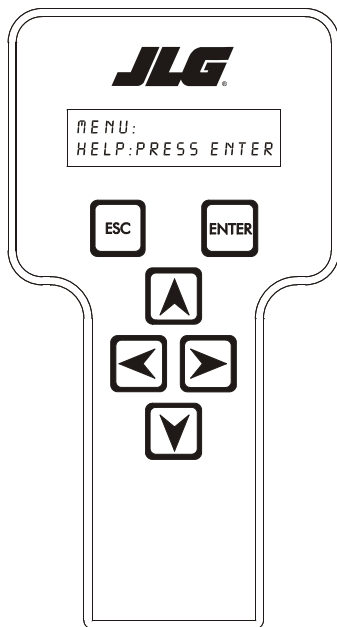

**HELP:
PRESS ENTER**


At this point, using the **RIGHT** and **LEFT** arrow keys, you can move between the top level menu items. To select a displayed menu item, press **ENTER**. To cancel a selected menu item, press **ESC.**; then you will be able to scroll using the right and left arrow keys to select a different menu item.

The top level menus are as follows:

**HELP
DIAGNOSTICS
SYSTEM TEST
ACCESS LEVEL
PERSONALITIES
MACHINE SETUP
CALIBRATIONS (view only)**

If you press **ENTER**, at the **HELP: PRESS ENTER** display, and a fault is present, the analyzer display will scroll the fault across the screen. If there was no fault detected, the display will read: **HELP: EVERYTHING OK**. If powered up at the ground station, the display will read: **GROUND OK**.

If **ENTER** is pressed again, the display moves to the following display:

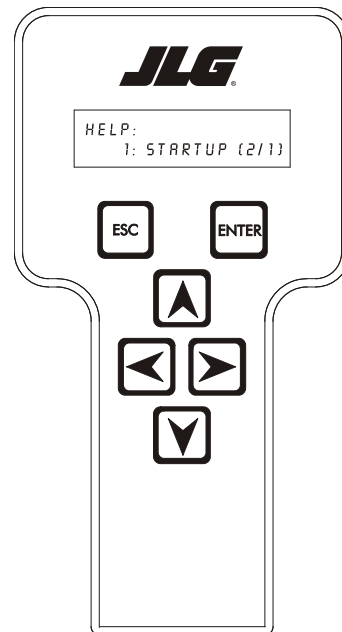


**LOGGED HELP
1: POWER CYCLE (0/0)**

At this point, the analyzer will display the last fault the system has seen, if any are present. You may scroll through the fault logs to view what the last 25 faults were. Use the right and left arrow keys to scroll through the fault logs. To return to the beginning, press **ESC.** two times. **POWER CYCLE (0/0)** indicates a power up.



PLATFORM CONNECTION

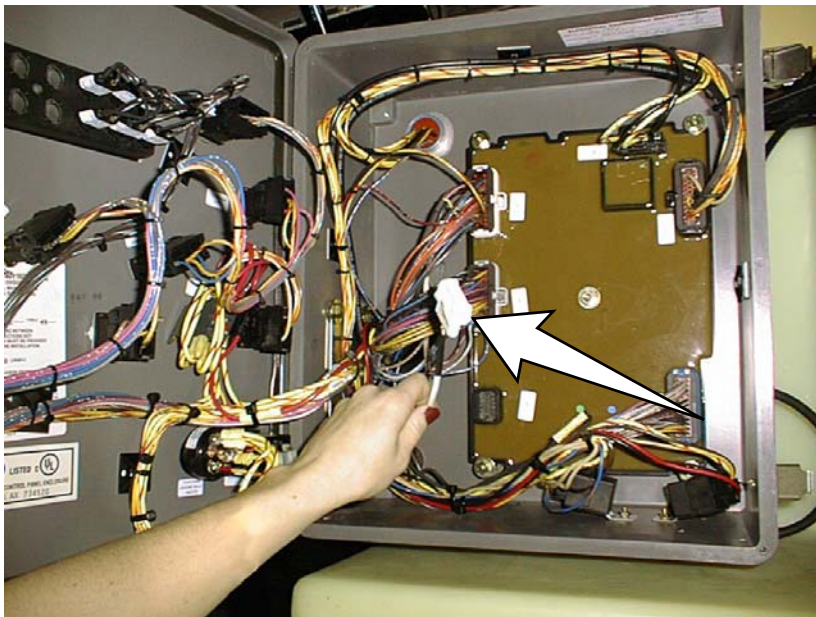

GROUND CONTROL CONNECTION

Figure 6-3. Analyzer Connecting Points


When a top level menu is selected, a new set of menu items may be offered: for example:

**DRIVE
BOOM
SYSTEM
DATALOG
VERSIONS**

Pressing **ENTER** with any of the above displayed menus, will display additional sub-menus within the selected menu. In some cases, such as **DRIVE**, the next level is the parameter or information to be changed. Refer to the flow chart for what menus are available within the top level menus. You may only view the personality settings for selected menus while in access level 2. Remember, you may always cancel a selected menu item by pressing the **ESC.** key.

6.4 CHANGING THE ACCESS LEVEL OF THE HAND HELD ANALYZER

When the analyzer is first connected, you will be in access level 2 which enables you to only view most settings which cannot be changed until you enter a password to advance to a lower level. This ensures that a setting cannot be accidentally altered. To change the access level, the correct password must be entered. To enter the password, scroll to the **ACCESS LEVEL** menu. For example:

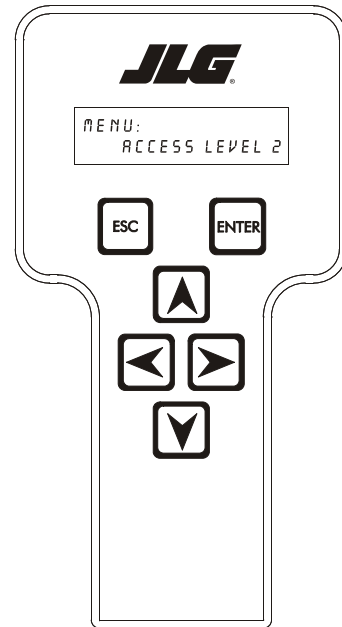

**MENU:
ACCESS LEVEL 2**

Press **ENTER** to select the **ACCESS LEVEL** menu.

Using the **UP** or **DOWN** arrow keys, enter the first digit of the password, 3.

Then using the **RIGHT** arrow key, position the cursor to the right one space to enter the second digit of the password.

Use the **UP** or **DOWN** arrow key to enter the second digit of the password which is 33271.


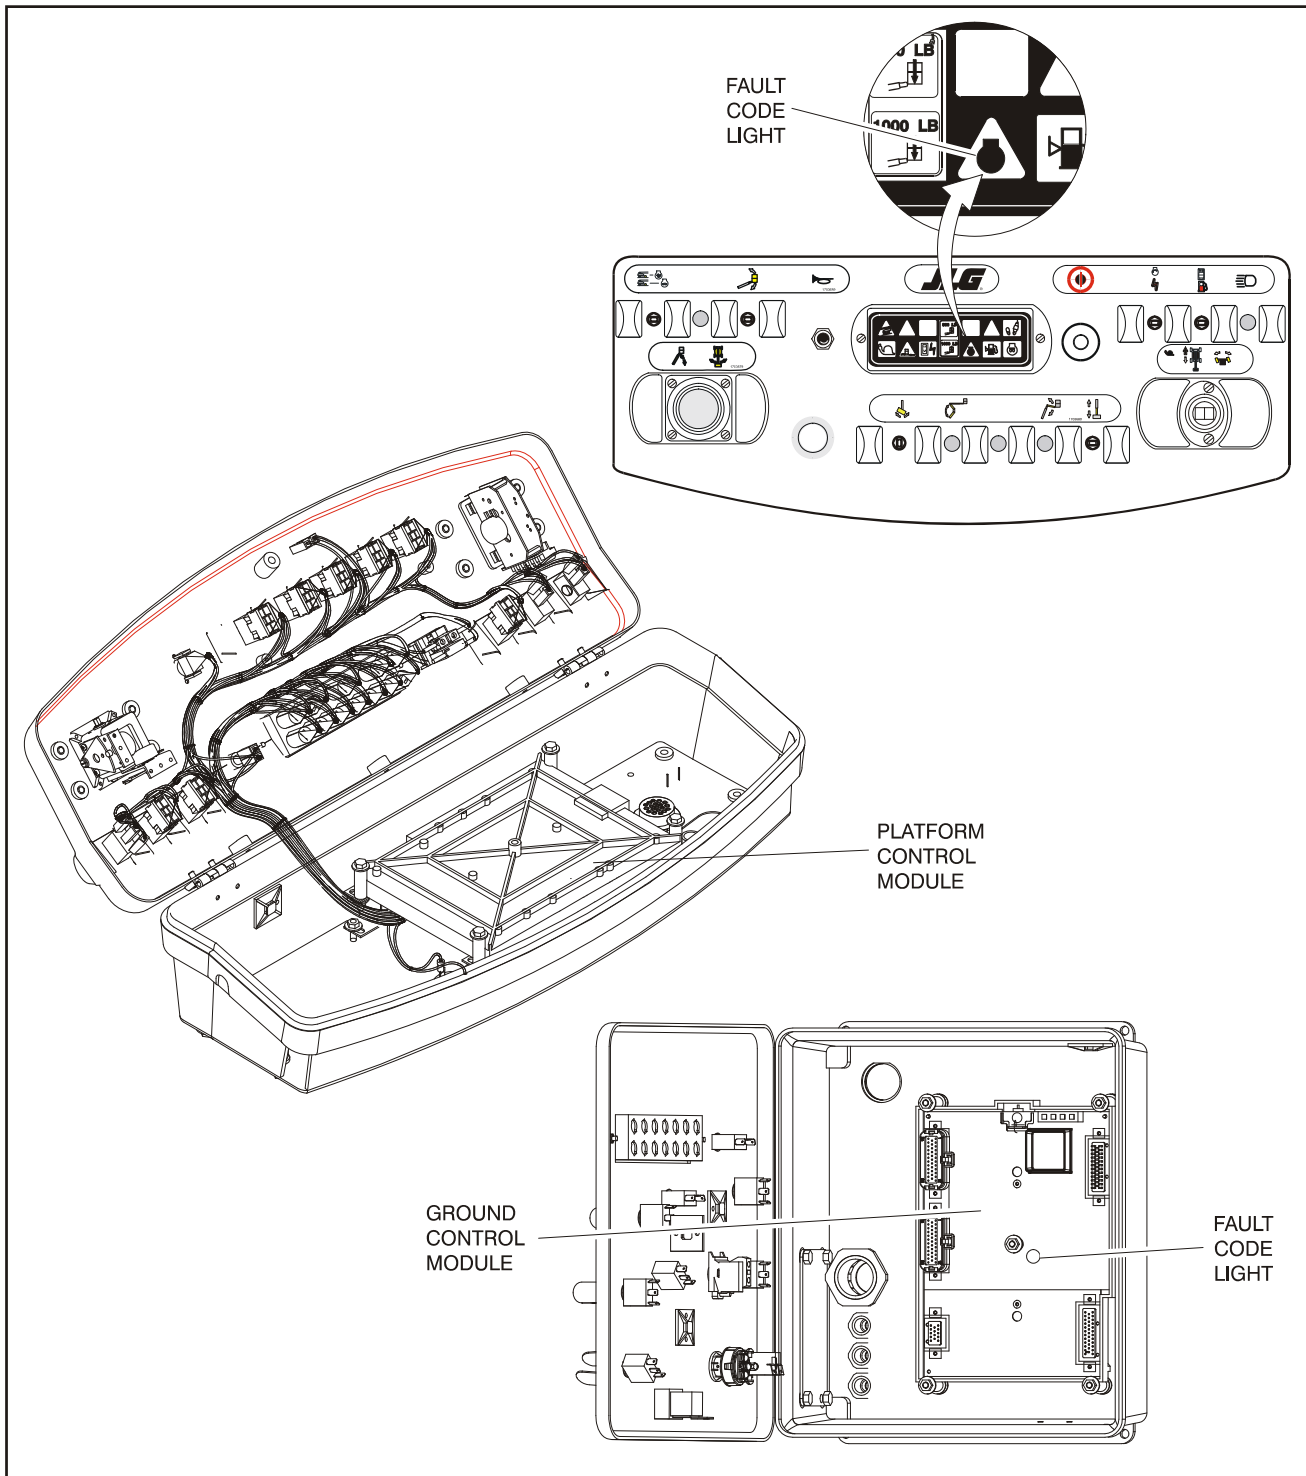


Figure 6-4. Control Module Location

Once the correct password is displayed, press **ENTER**. The access level should display the following, if the password was entered correctly:

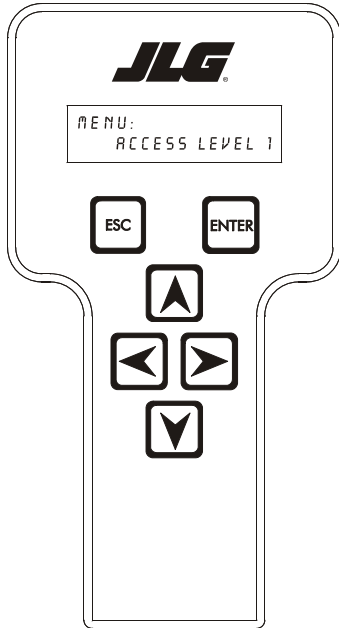


**MENU:
ACCESS LEVEL 1**

Repeat the above steps if the correct access level is not displayed or you can not adjust the personality settings.

6.5 ADJUSTING PARAMETERS USING THE HAND HELD ANALYZER

Once you have gained access to level 1, and a personality item is selected, press the **UP** or **DOWN** arrow keys to adjust its value, for example:

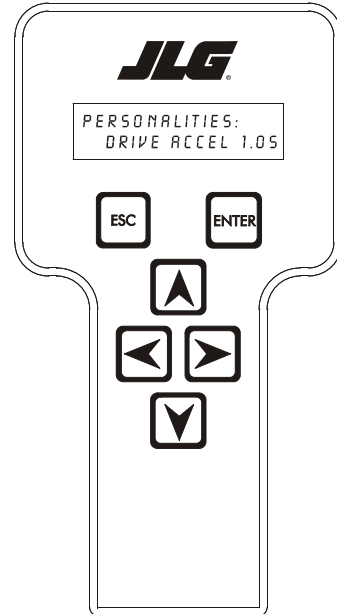


**PERSONALITIES:
DRIVE ACCEL 1.0s**

There will be a minimum and maximum for the value to ensure efficient operation. The Value will not increase if the **UP** arrow is pressed when at the maximum value nor will the value decrease if the **DOWN** arrow is pressed and the value is at the minimum value for any particular personality. If the value does not change when pressing the up and down arrows, check the access level to ensure you are at access level 1.

6.6 MACHINE SETUP

When a machine digit item is selected, press the UP or DOWN arrow keys to adjust its value, for example:

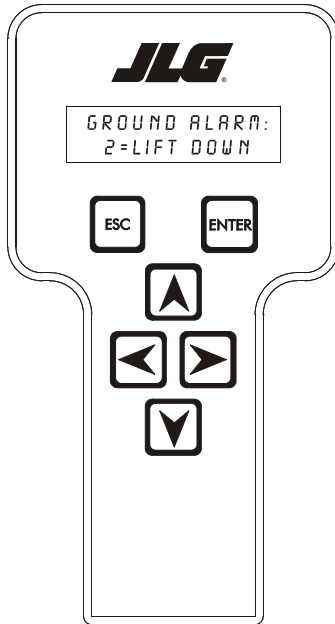

**GROUND ALARM:
2 = LIFT DOWN**

The effect of the machine digit value is displayed along with its value. The above display would be selected if the machine was equipped with a ground alarm and you wanted it to sound when lifting down. There are certain settings allowed to install optional features or select the machine model.

When selection the machine model to match the size of the machine, the personality settings will all default to the factory recommended setting.

NOTE: Refer to Table 6-1, Personality Ranges/Defaults, and in this Service Manual for the recommended factory settings.

NOTE: Password 33271 will give you access to level 1, which will permit you to change all machine personality settings.

There is a setting that JLG strongly recommends that you do not change. This setting is so noted below:

ELEVATION CUTBACK



WARNING

CHANGING THIS SETTING MAY ADVERSELY AFFECT THE PERFORMANCE OF YOUR MACHINE.

NOTICE

IT IS A GOOD PRACTICE TO AVOID PRESSURE-WASHING ELECTRICAL/ELECTRONIC COMPONENTS. SHOULD PRESSURE-WASHING BE UTILIZED TO WASH AREAS CONTAINING ELECTRICAL/ELECTRONIC COMPONENTS, JLG INDUSTRIES INC. RECOMMENDS A MAXIMUM PRESSURE OF 750 PSI (52 BAR) AT A MINIMUM DISTANCE OF 12 INCHES (30.5CM) AWAY FROM THESE COMPONENTS. IF ELECTRICAL/ELECTRONIC COMPONENTS ARE SPRAYED, SPRAYING MUST NOT BE DIRECT AND BE FOR BRIEF TIME PERIODS TO AVOID HEAVY SATURATION.


6.7 LEVEL VEHICLE DESCRIPTION

NOTICE

A NEW TILT MODULE WILL ACT AS IF IT IS TILTED ALL OF THE TIME UNTIL THE FOLLOWING PROCEDURE IS PERFORMED.

WARNING

DO NOT CALIBRATE THE LEVEL SENSOR EXCEPT ON A LEVEL SURFACE.

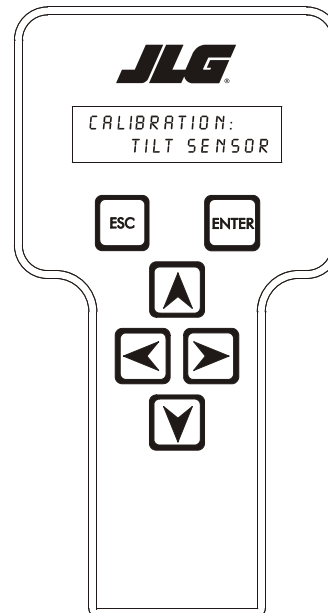

Place machine in stowed position with the boom between the rear wheels.


To level machine chose:

CALIBRATION:
TILT SENSOR

Press ENTER.

When prompted, swing machine 180°

Press ENTER.

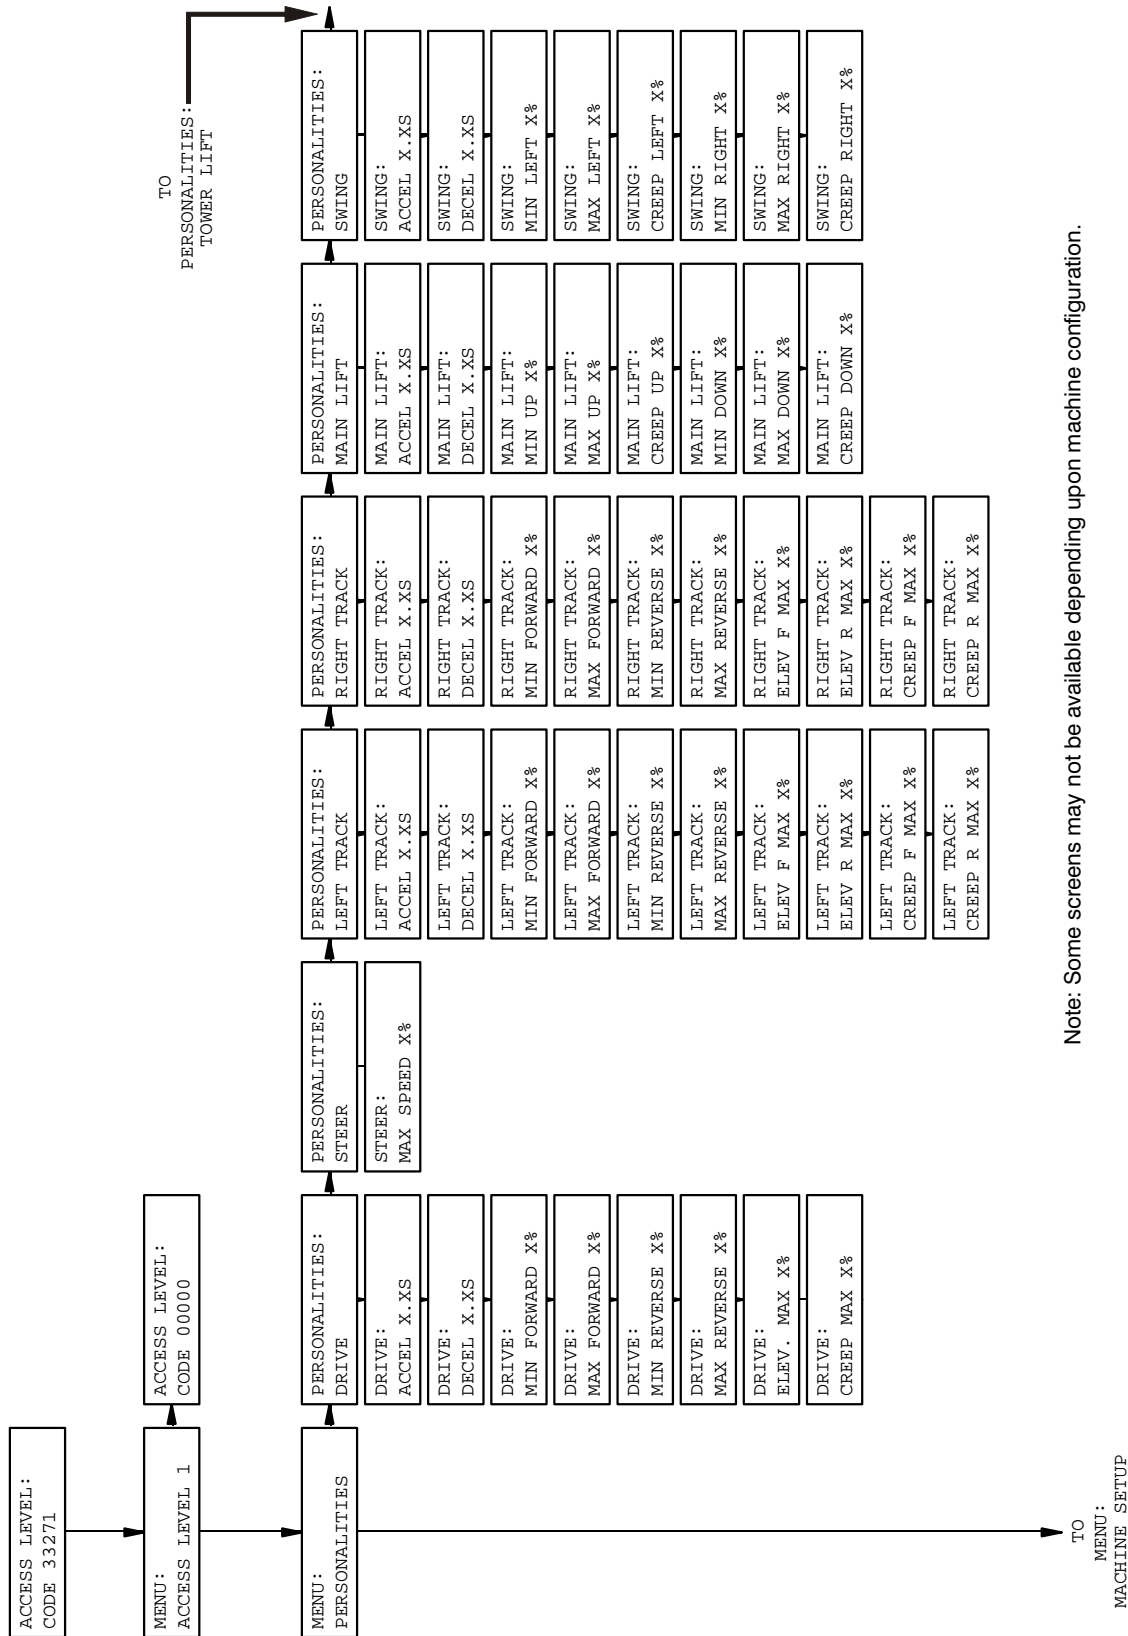

Note: Some screens may not be available depending upon machine configuration.

Figure 6-5. Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 1 of 4

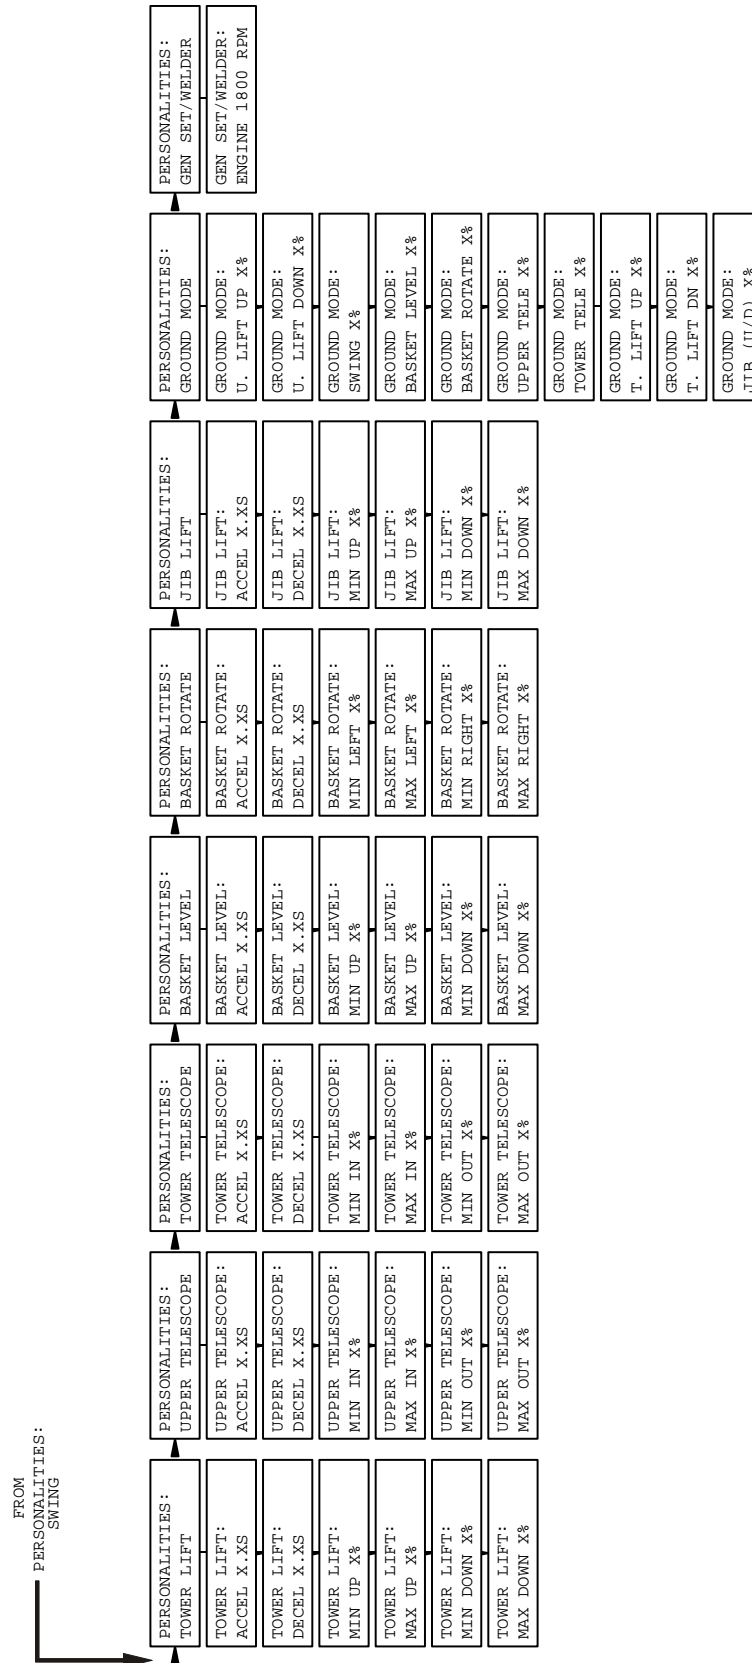


Figure 6-6. Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 2 of 4

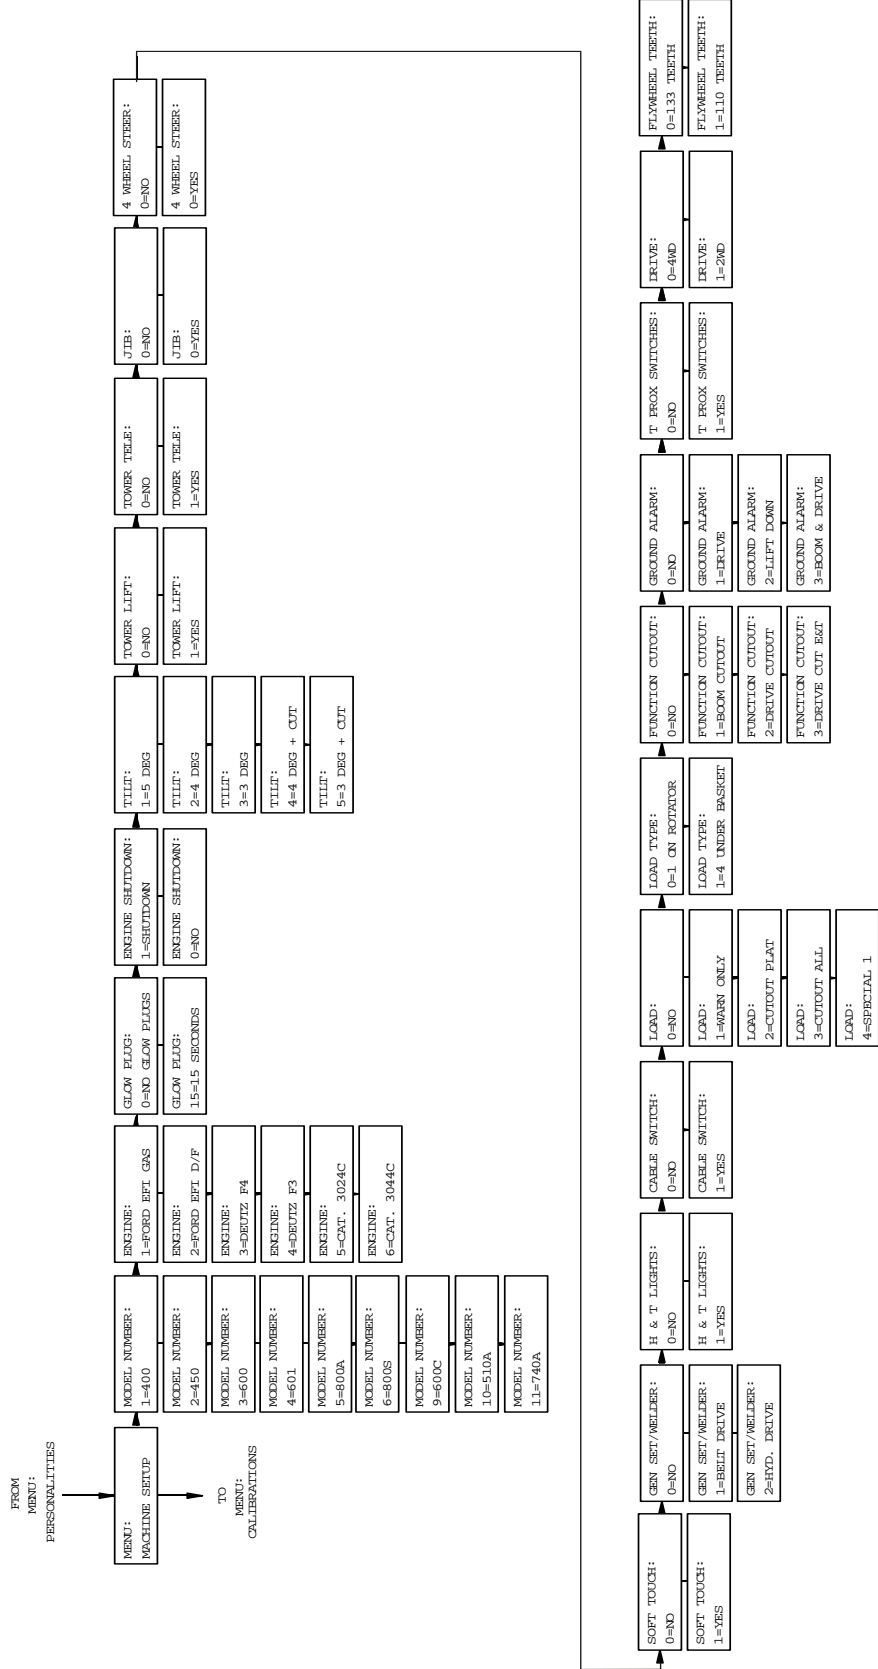


Figure 6-7. Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 3 of 4

SECTION 6 - JLG CONTROL SYSTEM


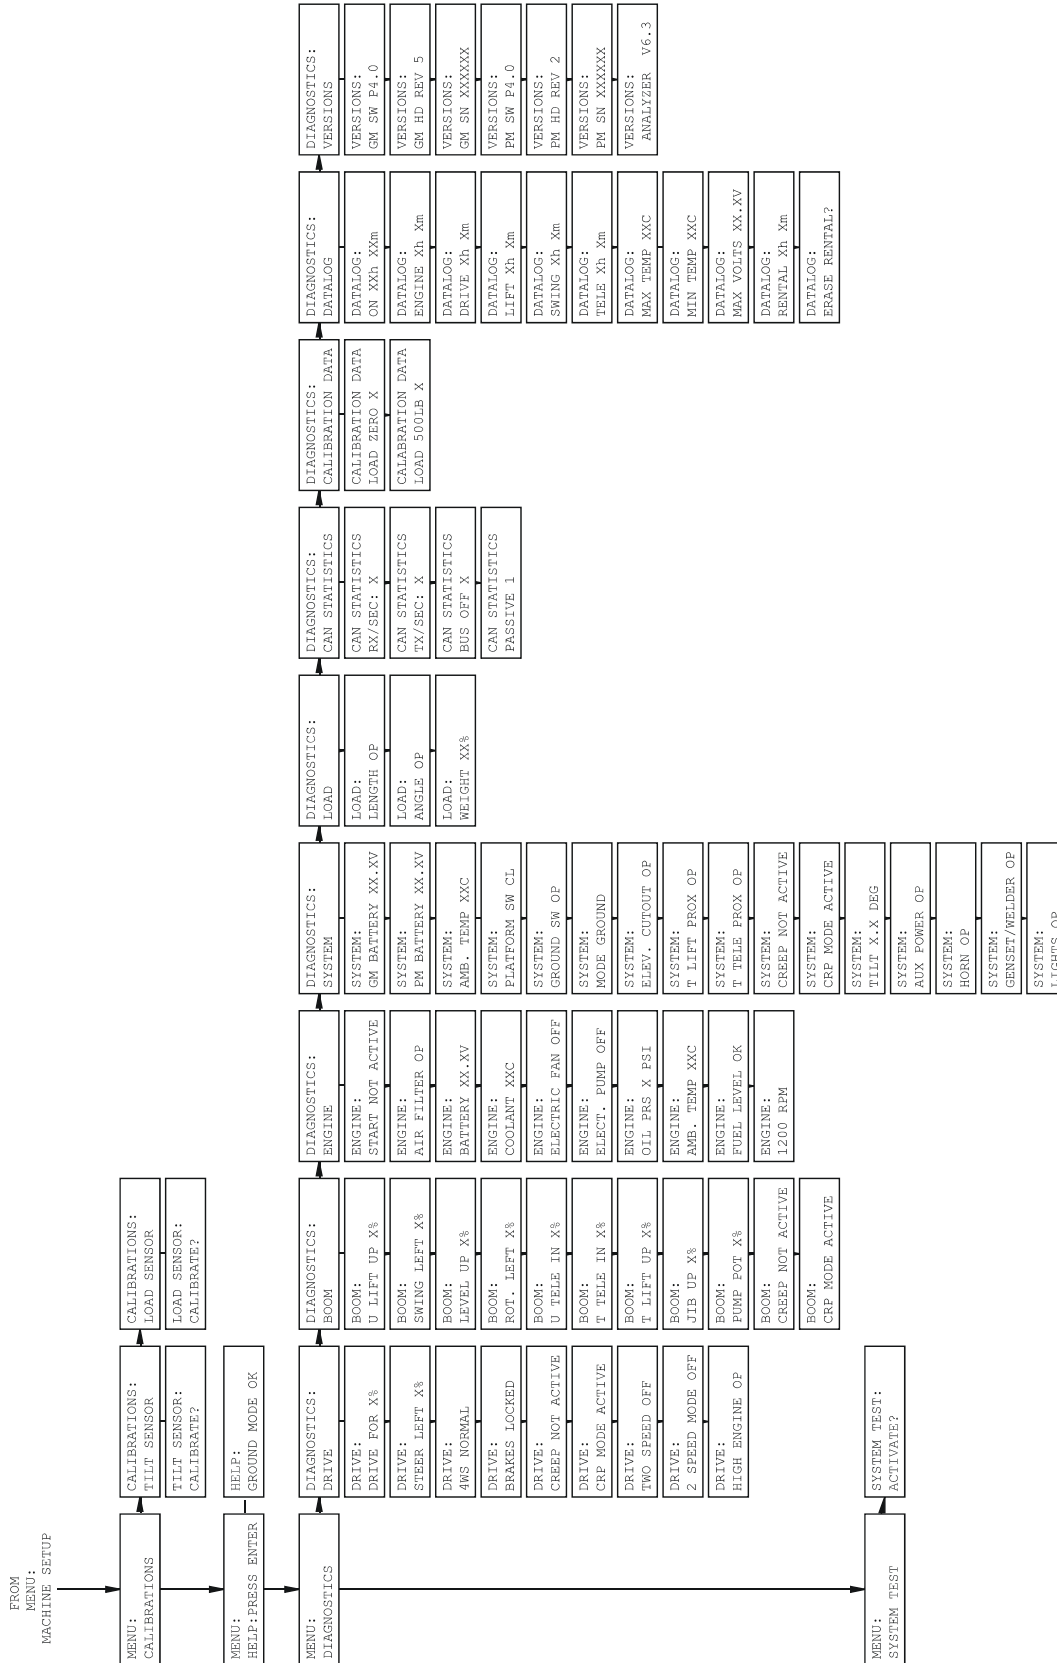


Figure 6-8. Analyzer Flow Chart, Prior to Version 5.X Software - Sheet 4 of 4

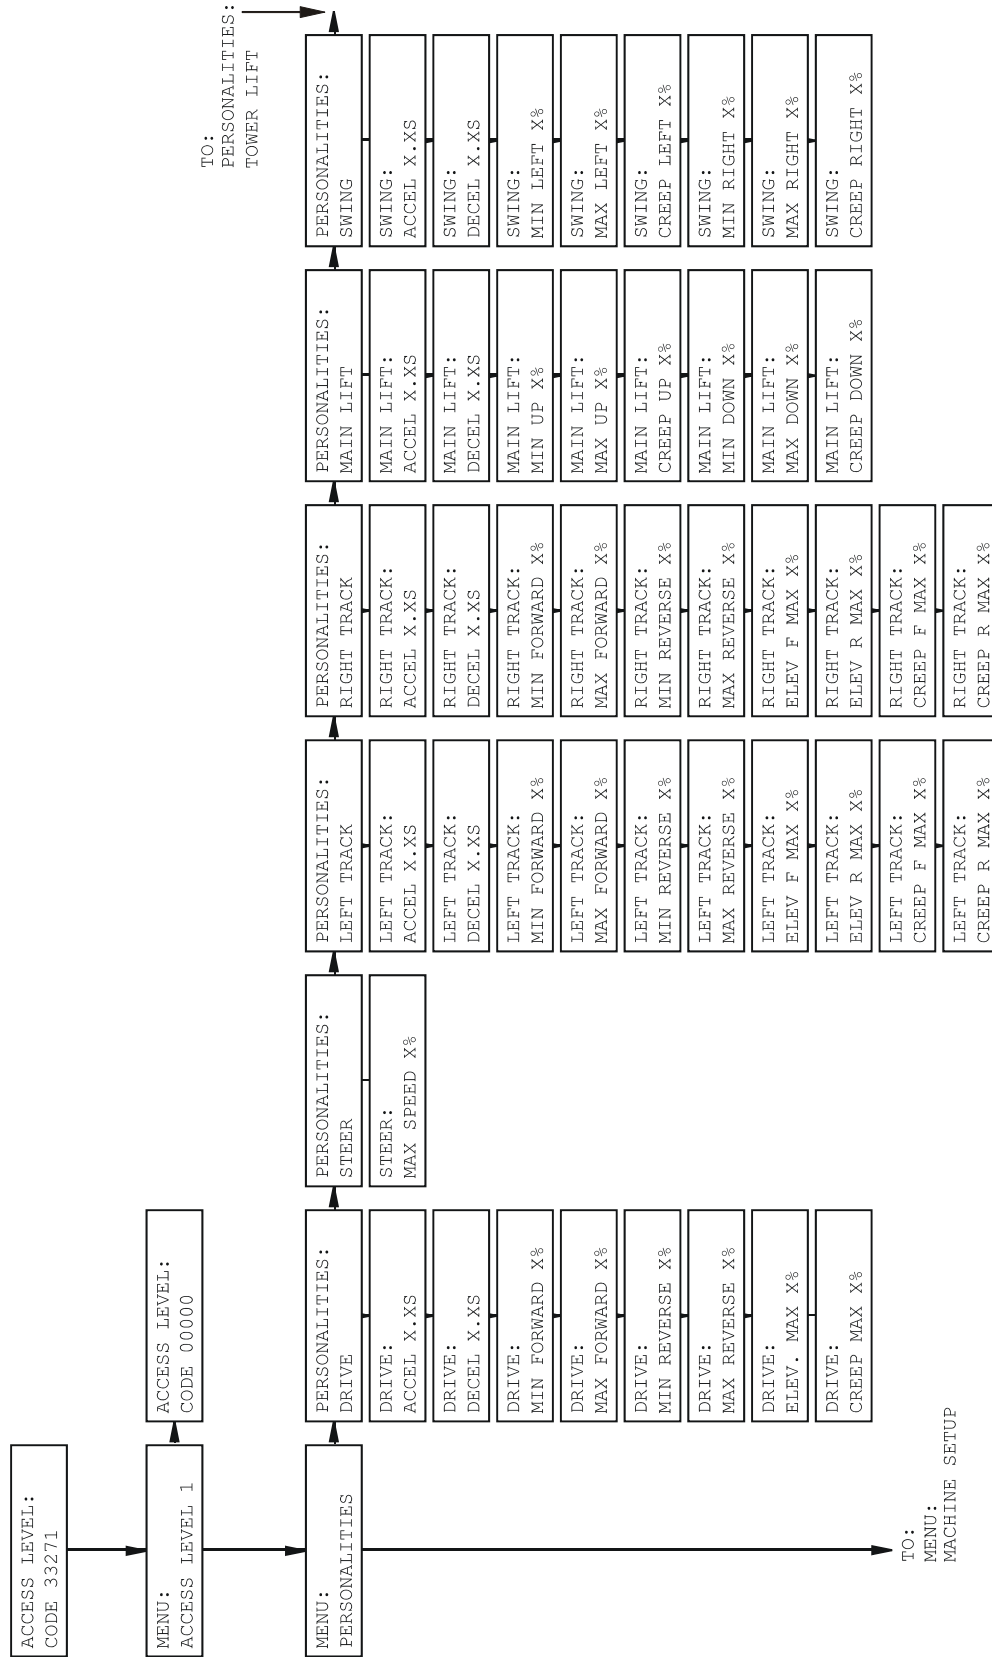

NOTE: Some screens may not be available depending upon machine configuration.

Figure 6-9. Analyzer Flow Chart, Version 5.X Software - Sheet 1 of 4

SECTION 6 - JLG CONTROL SYSTEM

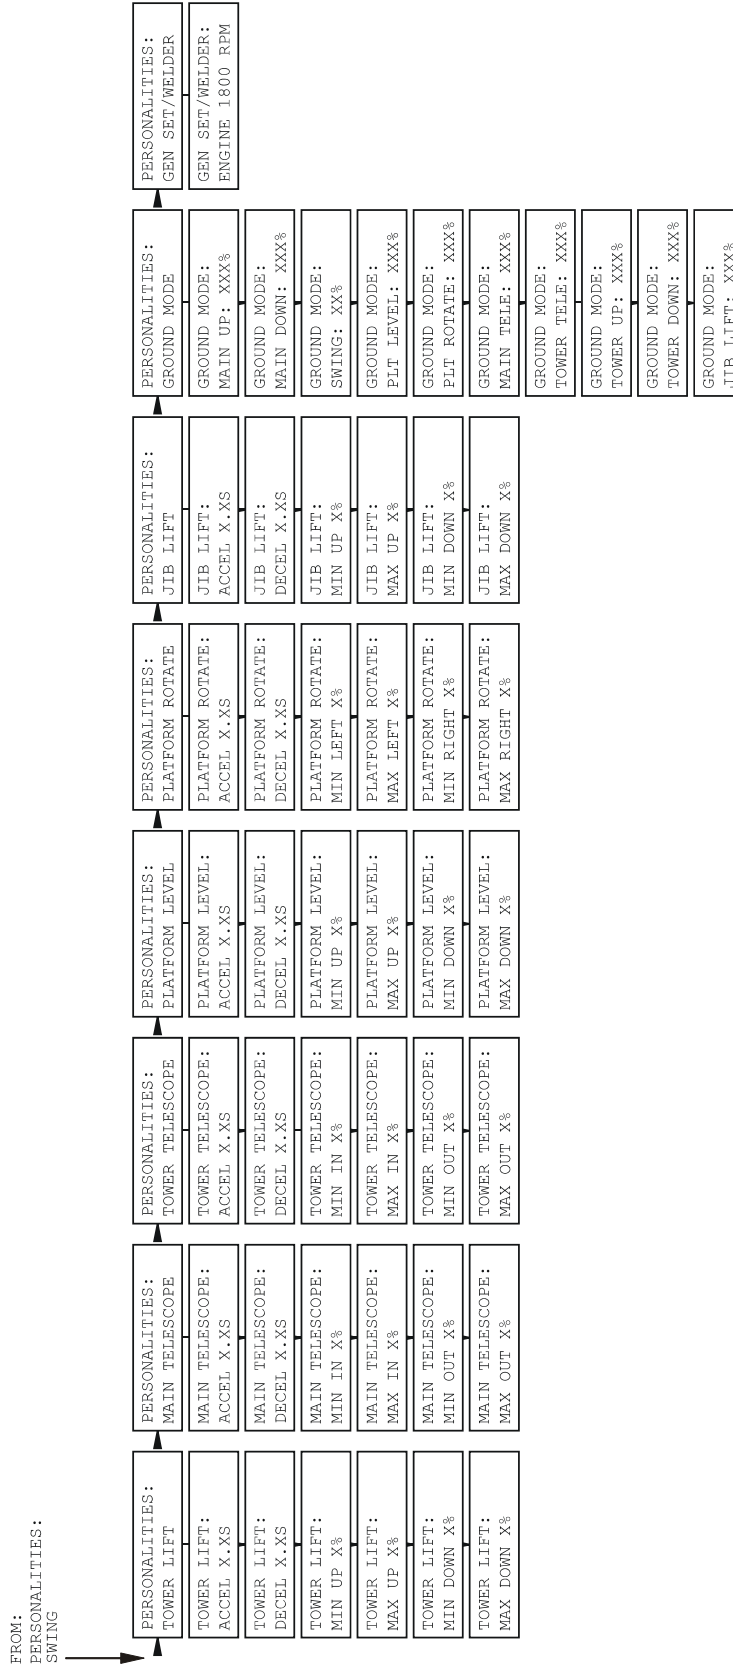


Figure 6-10. Analyzer Flow Chart, Version 5.X Software - Sheet 2 of 4

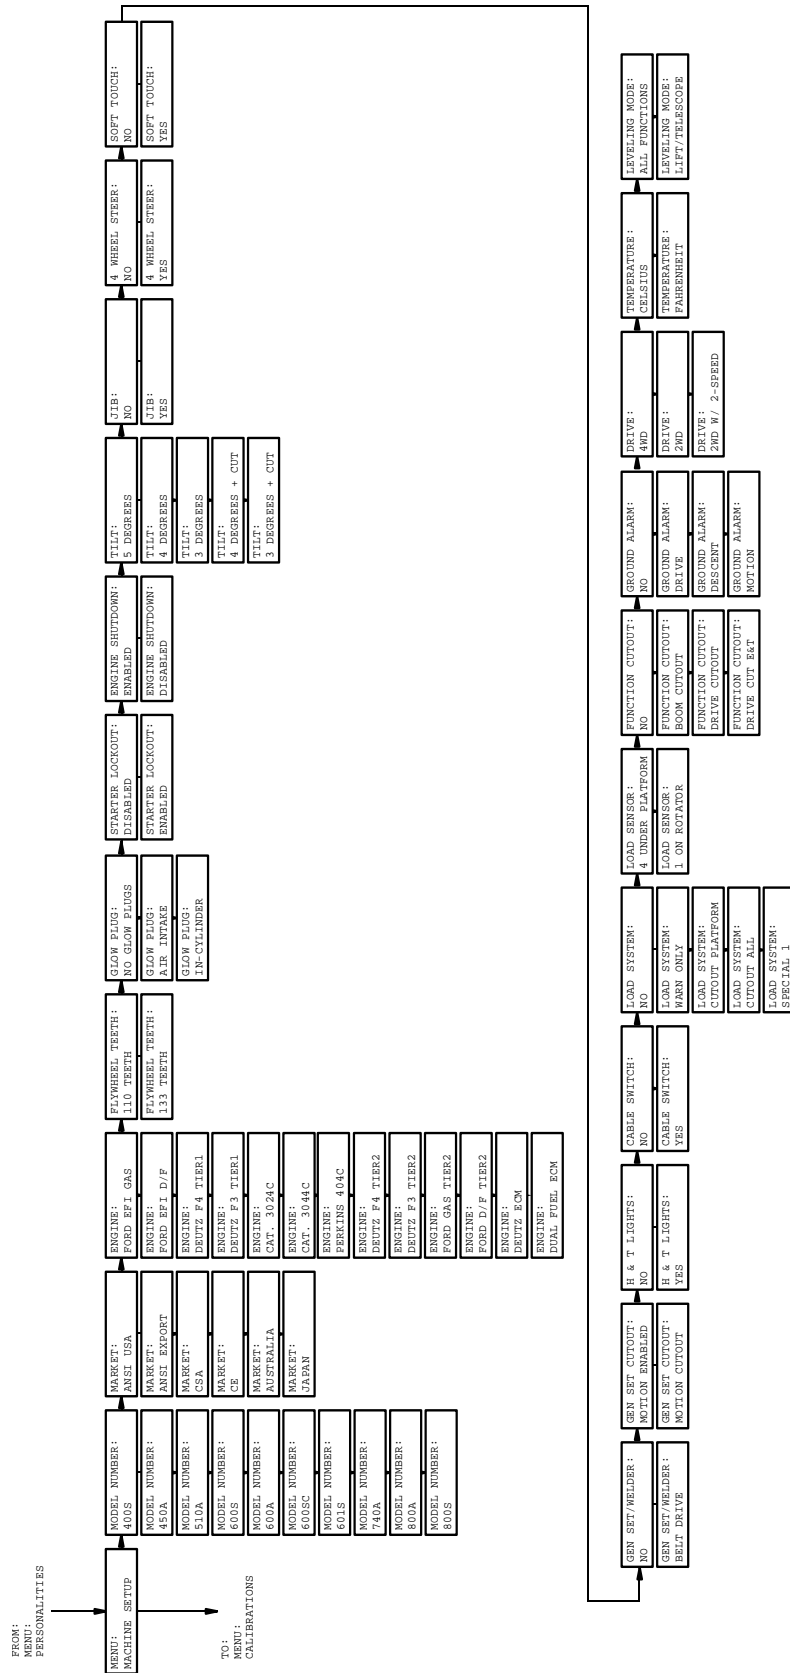


Figure 6-11. Analyzer Flow Chart, Version 5.X Software - Sheet 3 of 4

SECTION 6 - JLG CONTROL SYSTEM

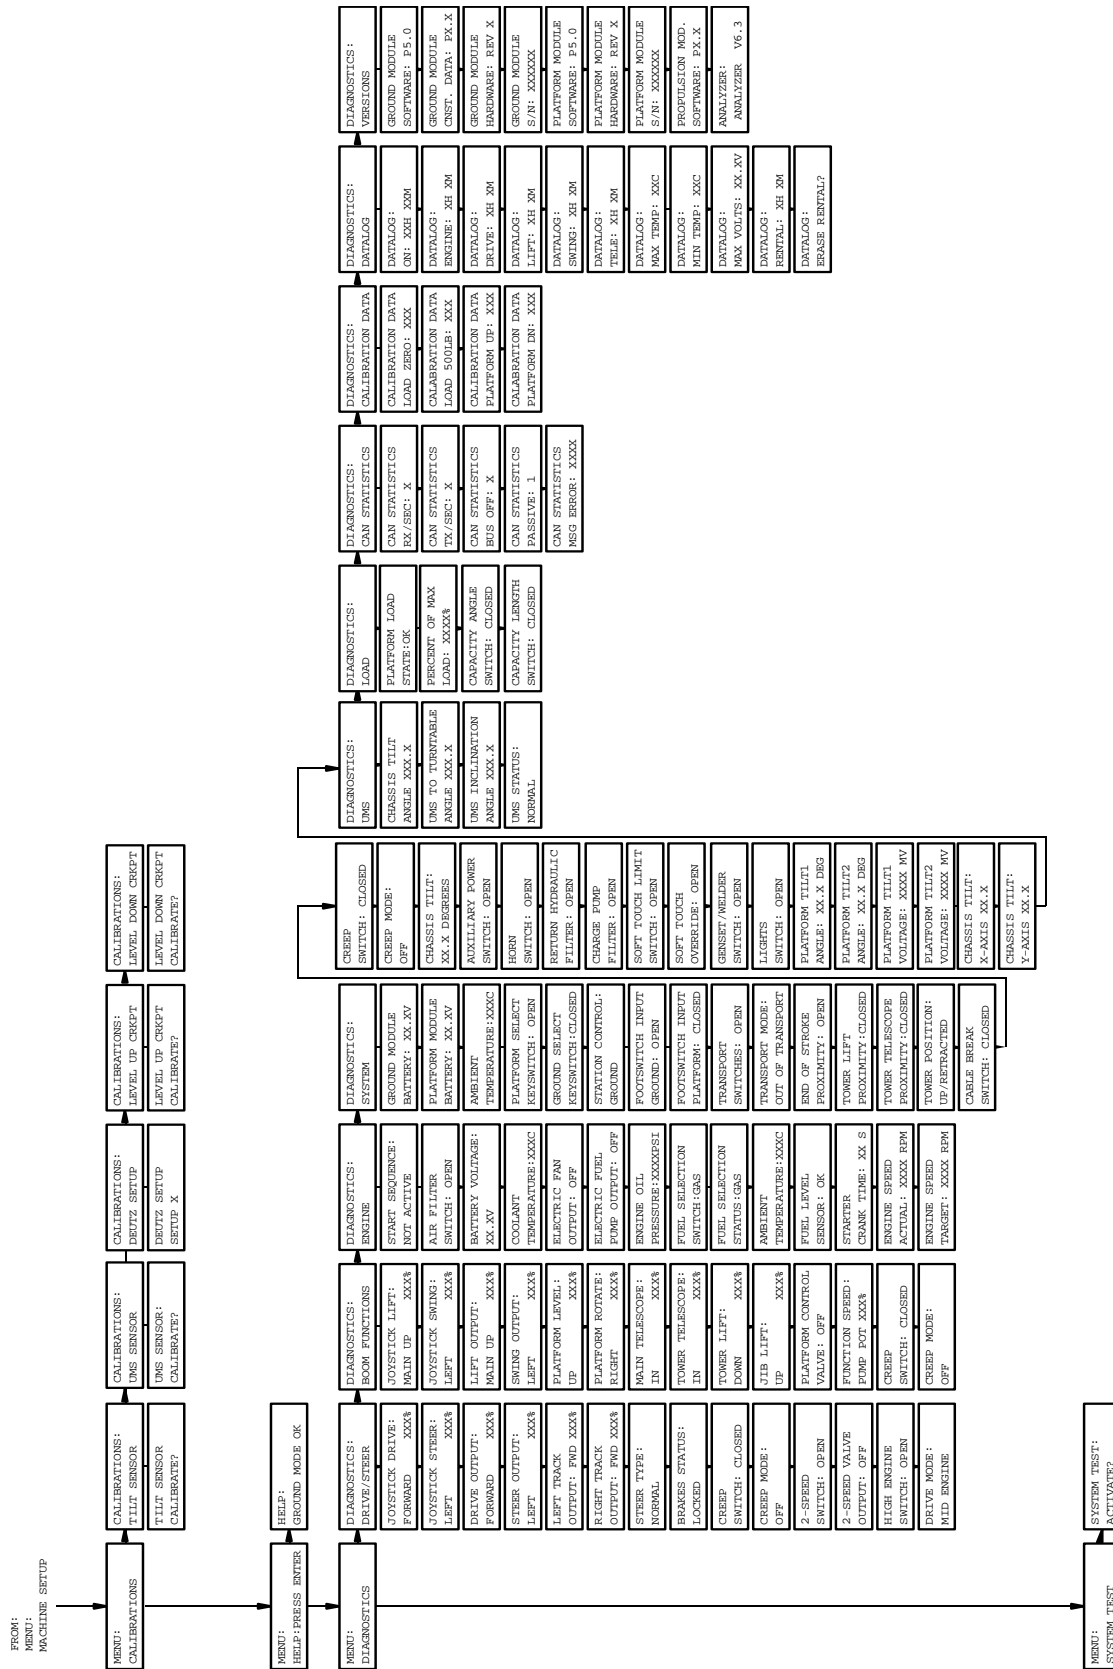


Figure 6-12. Analyzer Flow Chart, Version 5.X Software - Sheet 4 of 4

6.8 MACHINE PERSONALITY SETTINGS

NOTE: Personality settings can be adjusted within the adjustment range in order to achieve optimum machine performance.

Table 6-1. Personality Ranges/Defaults

FUNCTION	PERSONALITY	RANGE	DEFAULTS
DRIVE	ACCEleration	0.1s to 5.0s	2.0
	DECEleration	0.1s to 3.0s	2.0
	Forward MINimum speed	0 to 35%	4
	Forward MAXimum speed	0 to 100%	35
	REVerse MINimum speed	0 to 35%	4
	REVerse MAXimum speed	0 to 100%	22
	ELEVATED MAXimum speed	0 to 50%	10
	CREEP MAXimum speed	0 to 50%	25
	Engine RPM	800 to 2900	1800
TOWER LIFT	ACCEleration	0.1 to 5.0	1.0
	DECEleration	0.1 to 3.0	0.5
	MINimum UP speed	0 to 60%	50
	MAXimum UP speed	0 to 100%	100
	MINimum DOWN speed	0 to 60%	50
	MAXimum DOWN speed	0 to 100%	100
	Engine RPM	800 to 2900	1800
UPPER LIFT	ACCEleration	0.1 to 5.0	2.0
	DECEleration	0.1 to 3.0	0.7
	MINimum UP speed	0 to 60%	30
	MAXimum UP speed	0 to 100%	55
	CREEP Maximum UP speed	0 to 65%	55
	MINimum DOWN speed	0 to 60%	40
	MAXimum DOWN speed	0 to 100%	65
	CREEP maximum DOWN speed	0 to 75%	55
	Engine RPM	800 to 2900	1800

SECTION 6 - JLG CONTROL SYSTEM

Table 6-1. Personality Ranges/Defaults

FUNCTION	PERSONALITY	RANGE	DEFAULTS
SWING	ACCEleration	0.1 to 5.0s	2.0
	DECEleration	0.1 to 3.0s	1.8
	MINimum LEFT speed	0 to 50%	30
	MAXimum LEFT speed	0 to 100%	95
	CREEP maximum LEFT speed	0 to 65%	53
	MINimum RIGHT speed	0 to 50%	30
	MAXimum RIGHT speed	0 to 100%	95
	CREEP maximum RIGHT speed	0 to 65%	53
	Engine RPM	800 to 2900	1400
TELESCOPE UPPER	ACCEleration	0.1 to 5.0	3.5
	DECEleration	0.1 to 3.0	0.8
	MINimum IN speed	0 to 65%	45
	MAXimum IN speed	0 to 100%	75
	MINimum OUT speed	0 to 65%	45
	MAXimum OUT speed	0 to 100%	70
	Engine RPM	800 to 2900	1800
TELESCOPE TOWER	ACCEleration	0.1 to 5.0	1.0
	DECEleration	0.1 to 3.0	0.5
	MINimum IN speed	0 to 65%	50
	MAXimum IN speed	0 to 100%	100
	MINimum OUT speed	0 to 65%	50
	MAXimum OUT speed	0 to 100%	100
	Engine RPM	800 to 2900	1800
BASKET LEVEL	ACCEleration	0.1 to 5.0	2.5
	DECEleration	0.1 to 3.0	0.5
	MINimum UP speed	0 to 65%	48
	MAXimum UP speed	0 to 100%	52
	MINimum DOWN speed	0 to 65%	45
	MAXimum DOWN speed	0 to 100%	50
	Engine RPM	800 to 2900	1500

Table 6-1. Personality Ranges/Defaults

FUNCTION	PERSONALITY	RANGE	DEFAULTS
BASKET ROTATE	ACCEleration	0.1 to 5.0	1.8
	DECEleration	0.1 to 3.0	0.7
	MINimum LEFT speed	0 to 65%	46
	MAXimum LEFT speed	0 to 100%	50
	MINimum RIGHT speed	0 to 65%	46
	MAXimum RIGHT speed	0 to 100%	50
	Engine RPM	800 to 2900	1500
JIB LIFT	ACCEleration	0.1 to 5.0	5.0
	DECEleration	0.1 to 3.0	1.0
	MINimum UP speed	0 to 65%	46
	MAXimum UP speed	0 to 100%	52
	MINimum DOWN speed	0 to 65%	45
	MAXimum DOWN speed	0 to 100%	52
	Engine RPM	800 to 2900	1800
STEER	MAXimum speed	0 to 100%	100
	Engine RPM	800 to 2900	1800
GROUND MODE	Tower LIFT UP speed	0 to 100%	100
	Tower LIFT DOWN speed	0 to 100%	100
	Upper LIFT UP	0 to 100%	60
	Upper LIFT DOWN	0 to 100%	60
	SWING speed	0 to 100%	60
	Upper TELEscope speed	0 to 100%	70
	Tower TELEscope speed	0 to 100%	100
	BASKET ROTATE speed	0 to 100%	50
	BASKET LEVEL speed	0 to 100%	50
	JIB LIFT speed	0 to 100%	50

NOTE: Personality settings can be adjusted anywhere within the adjustment range in order to achieve optimum machine performance.

4150365-3

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
None		No flash code is indicated for the following help messages. They are intended to hint at a possible problem if the vehicle is not behaving as expected.	1
	EVERYTHING OK	The “normal” help message in platform mode	
	GROUND MODE OK	The “normal” help message in ground mode	
	FSW OPEN	A drive or boom function has been selected but footswitch is open.	
	RUNNING AT CREEP – CREEP SWITCH OPEN	All function speeds are limited to creep because the creep switch is open.	
	RUNNING AT CREEP – TILTED AND ABOVE ELEVATION	All boom function speeds are limited to creep because the vehicle is tilted and above elevation.	
	RUNNING AT CUTBACK – ABOVE ELEVATION	Drive speed is limited to “ELEVATED MAX” because the vehicle is above elevation.	
	TILT SENSOR OUT OF RANGE	The tilt sensor has indicated a tilt angle greater than 19 degrees for more than 4 seconds. Not reported during 2 second power-up.	
LOAD SENSOR READING UNDER WEIGHT	The load sensor is reading 20% or more under the calibrated zero point. This fault may occur if the basket is resting on the ground. Not reported during 2 second power-up.		
1/1		Flash code 1/1 indicates a “sleep” mode. NOT REQUIRED	
2/1		Flash code 2/1 indicates problems with footswitch.	2
	FSW FAULTY	The two footswitch inputs have read the same state for more than one second.	
	KEYSWITCH FAULTY	Both platform and ground modes are selected simultaneously	
2/2		Flash code 2/2 indicates problems with drive & steer selection. Except where noted, these faults are not reported during 2 second power-up sequence.	3
	DRIVE LOCKED – JOYSTICK MOVED BEFORE FOOTSWITCH	Drive was selected before and during footswitch closure. Can be reported during power-up sequence.	
	FSW INTERLOCK TRIPPED	Footswitch was closed for seven seconds with no function selected. Can be reported during power-up sequence.	
	STEER LOCKED – SELECTED BEFORE FOOTSWITCH	Steer was selected before and during footswitch closure.	
	STEER SWITCHES FAULTY	Both steer switches are active together.	
	DRIVE / STEER WITH NO QPROX	This fault only occurs with inductive joysticks. It occurs if the joystick is moved out of the neutral position with no Qprox sensors active.	
	D/S JOY. QPROX BAD	These faults only occur with inductive joysticks. They indicate that the Q-Prox sensor is reading above 3.18 volts.	
	D/S JOY. OUT OF RANGE LOW	Resistive joysticks: These faults do not occur. Inductive joysticks: The trigger points for these faults are dependent on the centertap voltage reading. These faults will be triggered when the voltage is less than the centertap voltage minus half the center tap voltage minus 0.3 volts. If the centertap is at the high end of the range, these faults will be triggered below 1.05 volts. If the centertap is at the low end of the range, these faults will be triggered below 0.79 volts.	

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	D/S JOY. OUT OF RANGE HIGH	Resistive joysticks: These faults do not occur if the Vref voltage is below 8.1 volts. If Vref is above 7.7 volts, Vref is operating out of tolerance or a short to battery has occurred. Inductive joysticks: The trigger points for these faults are dependent on the centertap voltage reading. These faults will be triggered when the voltage is more than the centertap voltage plus half the centertap voltage plus 0.3 volts. If the centertap is at the high end of the range, these faults will be triggered above 4.35 volts. If the centertap is at the low end of the range, these faults will be triggered above 3.8 volts.	
	D/S JOY. CENTER TAP BAD	Resistive joysticks: These faults occur when the center tap voltage is not between 3.08 volts and 3.83 volts. Due to resistor tolerances there is a +/- .1 volt range around these values where the fault may be indicated. Inductive joysticks: These faults occur when the center tap voltage is not between 2.18 volts and 2.70 volts. Due to resistor tolerances there is a +/- .1 volt range around these values where the fault may be indicated.	
	WAITING FOR FSW TO BE OPEN	Footswitch was closed when platform mode was selected. Can be reported during power-up sequence.	
2/3		Flash code 2/3 indicates problems with boom function selection.	3
	LIFT/SWING LOCKED – JOY-STICK MOVED BEFORE FOOTSWITCH	Platform upper lift or swing was selected before and during footswitch closure.	
	PUMP SWITCHES FAULTY – CHECK DIAGNOSTICS/ BOOM	A boom function (lower lift, telescope, basket level, basket rotate, jib) has both directions selected together.	
	PUMP SWITCHES LOCKED – SELECTED BEFORE FOOTSWITCH	A platform boom function (lower lift, telescope, basket level, basket rotate, jib) was selected before key switch or footswitch closure.	
	PUMP SWITCHES LOCKED – SELECTED BEFORE AUX POWER	A ground boom function (lower lift, telescope, basket level, basket rotate, jib) was selected before aux power.	
	LIFT / SWING WITH NO QPROX	This fault only occurs with inductive joysticks. It occurs if the joystick is moved out of the neutral position with no Qprox sensors active.	
	l/s joy. qprox bad	These faults only occur with inductive joysticks. They indicate that the Q-Prox sensor is reading above 3.18 volts.	
	l/s joy. out of range low	Resistive joysticks: These faults do not occur. Inductive joysticks: The trigger points for these faults are dependent on the centertap voltage reading. These faults will be triggered when the voltage is less than the centertap voltage minus half the center tap voltage minus 0.3 volts. If the centertap is at the high end of the range, these faults will be triggered below 1.05 volts. If the centertap is at the low end of the range, these faults will be triggered below 0.79 volts.	
	l/s joy. out of range high	Resistive joysticks: These faults do not occur if the Vref voltage is below 8.1 volts. If Vref is above 7.7 volts, Vref is operating out of tolerance or a short to battery has occurred. Inductive joysticks: The trigger points for these faults are dependent on the centertap voltage reading. These faults will be triggered when the voltage is more than the centertap voltage plus half the centertap voltage plus 0.3 volts. If the centertap is at the high end of the range, these faults will be triggered above 4.35 volts. If the centertap is at the low end of the range, these faults will be triggered above 3.8 volts.	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	l/s joy. center tap bad	Resistive joysticks: These faults occur when the center tap voltage is not between 3.08 volts and 3.83 volts. Due to resistor tolerances there is a +/- .1 volt range around these values where the fault may be indicated. Inductive joysticks: These faults occur when the center tap voltage is not between 2.18 volts and 2.70 volts. Due to resistor tolerances there is a +/- .1 volt range around these values where the fault may be indicated.	
	PUMP SWITCHES LOCKED – SELECTED BEFORE START SWITCH	This fault occurs when a hydraulic function switch is closed before the start switch is closed.	
	FOOTSWITCH SELECTED BEFORE START	The user attempted to start the machine with the footswitch engaged.	
2/4		Flash code 2/4 indicates that steering digital inputs are faulty. NOT REQUIRED	
2/5		Flash code 2/5 indicates that a function is prevented due to a cutout.	4
	BOOM PREVENTED – DRIVE SELECTED	A boom function is selected while a drive function is selected and drive cutout is configured to prevent simultaneous drive & boom operation.	
	DRIVE PREVENTED – ABOVE ELEVATION	Drive is selected while above elevation and drive cutout is configured to prevent drive.	
	DRIVE PREVENTED – BOOM SELECTED	Drive is selected while a boom function is selected and drive cutout is configured to prevent simultaneous drive & boom operation.	
	DRIVE PREVENTED – TILTED & ABOVE ELEVATION	Drive is selected while tilted and above elevation and tilt is configured to cutout drive.	
	MODEL CHANGED – HYDRAULICS SUSPENDED – CYCLE EMS	User changed the model number using the analyzer. User must cycle power before the hydraulics system will be active again.	11
2/7		Flash code 2/7 indicates that the accelerator input is faulty. NOT REQUIRED	
2/8		Flash code 2/8 indicates a problem with a hydraulic filter. Not reported during 2 second power-up.	5
	RETURN FILTER BYPASSED	Hydraulic return filter clogged	
	charge pump filter bypassed	Charge pump filter clogged	
3/1		Flash code 3/1 indicates that a contactor did not close when energized. NOT REQUIRED	
3/2		Flash code 3/2 indicates that a contactor did not open when energized. NOT REQUIRED	
3/3		Flash code 3/3 indicates a driver problem. All driver faults are detected in a similar manner. Open circuit faults are detected when the analog feedback reads too high and the output is commanded off. Short to ground is detected when the analog feedback reads low and the output is commanded on. Short to battery is detected when the analog feedback reads Vbat and the output is commanded off. Not reported during 2 second power-up.	6
	ALTERNATOR/ECM POWER SHORT TO GROUND		
	HOUR METER SHORT TO GROUND		

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	HOUR METER SHORT TO BATTERY		
	HORN SHORT TO GROUND		
	HORN OPEN CIRCUIT		
	HORN SHORT TO BATTERY		
	AUX POWER SHORT TO GROUND		
	AUX POWER OPEN CIRCUIT		
	AUX POWER SHORT TO BATTERY		
	GLOW PLUG SHORT TO GROUND		
	GLOW PLUG OPEN CIRCUIT		
	GLOW PLUG SHORT TO BATTERY		
	LP LOCK SHORT TO GROUND		
	LP LOCK OPEN CIRCUIT		
	LP LOCK SHORT TO BATTERY		
	LP START ASSIST SHORT TO GROUND		
	LP START ASSIST OPEN CIRCUIT		
	LP START ASSIST SHORT TO BATTERY		
	MAIN DUMP SHORT TO GROUND		
	MAIN DUMP OPEN CIRCUIT		
	MAIN DUMP SHORT TO BATTERY		
	PARKING BRAKE SHORT TO GROUND		
	PARKING BRAKE OPEN CIRCUIT		
	PARKING BRAKE SHORT TO BATTERY		
	START SOLENOID SHORT TO GROUND		
	START SOLENOID OPEN CIRCUIT		
	START SOLENOID SHORT TO BATTERY		
	STEER DUMP SHORT TO GROUND		

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	STEER DUMP OPEN CIRCUIT		
	STEER DUMP SHORT TO BATTERY		
	TWO SPEED SHORT TO GROUND		
	TWO SPEED OPEN CIRCUIT		
	TWO SPEED SHORT TO BATTERY		
	GROUND ALARM SHORT TO GROUND		
	GROUND ALARM OPEN CIRCUIT		
	GROUND ALARM SHORT TO BATTERY		
	GENERATOR SHORT TO GROUND		
	GENERATOR OPEN CIRCUIT		
	GENERATOR SHORT TO BATTERY		
	WELDER SHORT TO GROUND		
	WELDER OPEN CIRCUIT		
	WELDER SHORT TO BATTERY		
	HEAD TAIL LIGHT SHORT TO GROUND		
	HEAD TAIL LIGHT OPEN CIRCUIT		
	HEAD TAIL LIGHT SHORT TO BATTERY		
	BASKET UP OVERRIDE SHORT TO GROUND	Only occurs on machines with electronic leveling systems.	
	BASKET UP OVERRIDE OPEN CIRCUIT	Only occurs on machines with electronic leveling systems.	
	BASKET UP OVERRIDE SHORT TO BATTERY	Only occurs on machines with electronic leveling systems.	
	BASKET UP SHORT TO GROUND		
	BASKET UP OPEN CIRCUIT		
	BASKET UP SHORT TO BATTERY		
	BASKET DOWN SHORT TO GROUND		
	BASKET DOWN OPEN CIRCUIT		

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	BASKET DOWN SHORT TO BATTERY		
	BASKET DOWN OVERRIDE SHORT TO GROUND	Only occurs on machines with electronic leveling systems.	
	BASKET DOWN OVERRIDE OPEN CIRCUIT	Only occurs on machines with electronic leveling systems.	
	BASKET DOWN OVERRIDE SHORT TO BATTERY	Only occurs on machines with electronic leveling systems.	
	BASKET LEFT OPEN CIRCUIT		
	BASKET LEFT SHORT TO BATTERY		
	BASKET LEFT SHORT TO GROUND		
	BASKET RIGHT SHORT TO GROUND		
	BASKET RIGHT OPEN CIRCUIT		
	BASKET RIGHT SHORT TO BATTERY		
	JIB UP SHORT TO GROUND		
	JIB UP OPEN CIRCUIT		
	JIB UP SHORT TO BATTERY		
	JIB DOWN SHORT TO GROUND		
	JIB DOWN OPEN CIRCUIT		
	JIB DOWN SHORT TO BATTERY		
	JIB LEFT SHORT TO GROUND		
	JIB LEFT OPEN CIRCUIT		
	JIB LEFT SHORT TO BATTERY		
	JIB RIGHT SHORT TO GROUND		
	JIB RIGHT OPEN CIRCUIT		
	JIB RIGHT SHORT TO BATTERY		
	TOWER UP SHORT TO GROUND		
	TOWER UP OPEN CIRCUIT		
	TOWER UP SHORT TO BATTERY		
	TOWER DOWN SHORT TO GROUND		

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	TOWER DOWN OPEN CIRCUIT		
	TOWER DOWN SHORT TO BATTERY		
	TOWER IN SHORT TO GROUND		
	TOWER IN OPEN CIRCUIT		
	TOWER IN SHORT TO BATTERY		
	TOWER OUT SHORT TO GROUND		
	TOWER OUT OPEN CIRCUIT		
	TOWER OUT SHORT TO BATTERY		
	UPPER IN SHORT TO GROUND		
	UPPER IN OPEN CIRCUIT		
	UPPER IN SHORT TO BATTERY		
	UPPER OUT SHORT TO GROUND		
	UPPER OUT OPEN CIRCUIT		
	UPPER OUT SHORT TO BATTERY		
	LIFT UP DUMP SHORT TO GROUND		
	LIFT UP DUMP OPEN CIRCUIT		
	LIFT UP DUMP SHORT TO BATTERY		
	LIFT DOWN HOLDING SHORT TO GROUND		
	LIFT DOWN HOLDING OPEN CIRCUIT		
	LIFT DOWN SHORT TO BATTERY		
	HOUR METER OPEN CIRCUIT	This fault cannot be detected during normal operation. It may be reported during self test.	
	FORD ECM POWER OPEN CIRCUIT	This fault cannot be detected during normal operation. It may be reported during self test.	
	FORD ECM POWER SHORT TO BATTERY	This fault cannot be detected during normal operation. It may be reported during self test.	

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
3/4		Flash code 3/4 indicates a driver problem on a platform valve block valve driver. All driver faults are detected in a similar manner. Open circuit faults are detected when the analog feedback reads too high and the output is commanded off. Short to ground is detected when the analog feedback reads low and the output is commanded on. Short to battery is detected when the analog feedback reads Vbat and the output is commanded off. Not reported during 2 second power-up.	6
	BASKET UP SHORT TO BATTERY		
	BASKET UP SHORT TO GROUND		
	BASKET UP OPEN CIRCUIT		
	BASKET UP SHORT TO BATTERY OR OPEN CIRCUIT	Only occurs on machines with electronic basket leveling	
	BASKET DOWN SHORT TO BATTERY		
	BASKET DOWN SHORT TO GROUND		
	BASKET DOWN OPEN CIRCUIT		
	BASKET DOWN SHORT TO BATTERY OR OPEN CIRCUIT	Only occurs on machines with electronic basket leveling.	
	BASKET LEFT SHORT TO BATTERY		
	BASKER LEFT SHORT TO GROUND		
	BASKET LEFT OPEN CIRCUIT		
	BASKET RIGHT SHORT TO BATTERY		
	BASKET RIGHT SHORT TO GROUND		
	BASKET RIGHT OPEN CIRCUIT		
	JIB UP SHORT TO BATTERY		
	JIB UP SHORT TO GROUND		
	JIB UP OPEN CIRCUIT		
	JIB DOWN SHORT TO BATTERY		
	JIB DOWN SHORT TO GROUND		
JIB DOWN OPEN CIRCUIT			
JIB LEFT SHORT TO BATTERY			
JIB LEFT SHORT TO GROUND			

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	JIB LEFT OPEN CIRCUIT		
	JIB RIGHT SHORT TO BATTERY		
	JIB RIGHT SHORT TO GROUND		
	JIB RIGHT OPEN CIRCUIT		
	PLATFORM CONTROL VALVE SHORT TO BATTERY	Only occurs on machines with electronic basket leveling	
	PLATFORM CONTROL VALVE SHORT TO GROUND	Only occurs on machines with electronic basket leveling	
	PLATFORM CONTROL VALVE OPEN CIRCUIT	Only occurs on machines with electronic basket leveling	
3/5		Flash code 3/5 indicates a brake pressure problem. NOT REQUIRED	
4/2		Flash code 4/2 indicates that the engine is over temperature. NOT REQUIRED	
4/3		Flash code 4/3 indicates problems with the engine. Except where noted, these faults are not reported during 2 second power-up sequence.	9
	high engine temp	Occurs when the engine temperature is above 117 degrees Celsius for the Ford engines, and above 130 degrees Celsius for the Deutz engines.	
	AIR FILTER BYPASSED	Air filter clogged	
	NO ALTERNATOR OUTPUT	The engine has been running for 15 seconds or more and the battery voltage is still below 12.5 volts.	
	LOW Oil Pressure	If a Deutz engine is installed, the oil pressure is below 8 PSI and the engine has been running for at least 10 seconds. If a Ford engine is installed, the Ford ECM has reported a low oil pressure fault.	
	OIL PRESSURE SHORT TO BATTERY	If a Deutz engine is installed, this indicates that the oil pressure sensor is reading above 6.6 volts.	
	OIL PRESSURE SHORT TO GROUND	If a Deutz engine is installed, this indicates that the oil pressure sensor is reading below 0.1 volts for more than 5 seconds. This fault is not detected during crank.	
	COOLANT TEMPERATURE SHORT TO GROUND	If a Deutz engine is installed, this indicates that the coolant temperature is reading below 0.1 volts.	
	FORD FAULT CODE ##	All Ford fault codes except 63 are simply passed through from the FORD ECM. They only occur if a Ford engine is selected in the machine configuration digits. Can be reported during power-up sequence.	
	FORD FAULT CODE UNKNOWN	An unrecognized Ford ECM fault code has been received. Can be reported during power-up sequence.	
	485 communications lost	This fault only occurs with a Ford engine. It occurs when no responses are received from the ECM for 2.5 seconds. Can be reported during power-up sequence.	
	FUEL SENSOR SHORT TO BATTERY	Indicates that the fuel sensor is reading above 4.3 volts.	
	FUEL SENSOR SHORT TO GROUND	Indicates that the fuel sensor is reading below 0.2 volts.	

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
4/4		Flash code 4/4 indicates problems with the battery supply. Not reported during 2 second power-up.	7
	BATTERY LOW	Battery voltage is below 11V for more than 5 seconds. This fault is not detected during crank. This is a warning – the controller does not shut down.	
	BATTERY TOO HIGH – SYSTEM SHUT DOWN	Battery voltage is above 16V. EMS recycle required.	
	BATTERY TOO LOW – SYSTEM SHUT DOWN	Battery voltage is below 9V.	
5/5		Flash code 5/5 indicates problems with vehicle engine RPM or the encoder. Not reported during 2 second power-up.	8
	SPEED SENSOR READING INVALID SPEED	This fault is detected with diesel engines only. The RPM pickup is indicating a speed that greater than 4000 RPM or approximately 8875 Hz.	
	SPEED INPUT LOST	This fault is detected with diesel engines only. It occurs if there is no RPM detected and the oil pressure input is reading above 8 PSI for more than three seconds. This is probably due to wiring problems at the ground module or a faulty speed sensor.	
6/6		Flash code 6/6 indicates problems with the CAN bus.	10
	CAN BUS FAILURE:	The ground module or platform module is not receiving CAN messages. This is probably due to wiring problems between the platform and ground modules.	
7/7		Flash code 7/7 indicates problems with a motor. NOT REQUIRED	
9/9		Flash code 9/9 indicates problems with the controller.	11
	PLATFORM MODULE SOFTWARE UPDATE REQUIRED	Platform module code is too old to support the EIM or BPE load sensor and the machine is configured to use one of these two sensors. The PM code must be updated to a newer version.	
	HIGH RESOLUTION A2D FAILURE – INTERRUPT LOST	The ADS1213 chip in the platform module has stopped asserting its interrupt(DRDY) line for some reason. An EMS cycle is required.	
	HIGH RESOLUTION A2D FAILURE-REINIT LIMIT	The ADS1213 has needed to be reset 3 or more times.	
	PLATFORM MODULE FAILURE: hwfs CODE 1	Platform module V(Low) FET has failed	
	GROUND MODULE FAILURE: hwfs CODE 1	Ground module V(Low) FET has failed	
	GROUND SENSOR REF VOLTAGE OUT OF RANGE	These faults occur when the seven volt reference voltage used for the joysticks, sensors, etc. goes out of range. Not reported during 2 second power-up.	
	PLATFORM SENSOR REF VOLTAGE OUT OF RANGE	These faults occur when the seven volt reference voltage used for the joysticks, sensors, etc. goes out of range. Not reported during 2 second power-up.	
	EEPROM FAILURE – CHECK ALL SETTINGS	A critical failure occurred with the EEPROM. Personalities, machine configuration digits, etc. may be reset to default values and should be checked.	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-2. Help Fault Codes, Displayed Faults, and Descriptions

Fault Flash Code	Communicated (Displayed on Analyzer) Fault	Description	Priority
	CHASSIS TILT SENSOR NOT GAIN CALIBRATED	Indicates that the chassis tilt sensor calibration information has been lost. Machine will indicate that it is tilted at all times. This calibration data is programmed into the unit at the factory.	
	CHASSIS TILT SENSOR GAIN OUT OF RANGE	Indicates that the chassis tilt sensor calibration has become corrupted.	

Table 6-3. Machine Configuration Programming Information Prior to Software Version P5.3

Configuration Digit	Number	Description	Default Number
MODEL NUMBER: 1	1 2 3 4 5 6 7 8 9 10	400S 450A 510A 600S 600A 600SC 601S 740A 800A 800S	1
MARKET: 2	0 1 2 3 4 5	ANSI USA ANSI EXPORT CSA CE AUSTRALIA JAPAN	0
ENGINE: 3* * Engine selections vary depending on model selection.	1 2 3 4 5 6 7 8 9 10 11	FORD EFI GAS: Ford LRG425 EFI Gas (Tier 1) FORD EFI D/F: Ford LRG425 EFI dual fuel (Tier 1) DEUTZ F4 TIER1: Deutz F4M1011F Diesel (Tier 1) DEUTZ F3 TIER1: Deutz F3M1011F Diesel (Tier 1) CAT. 3024C: CAT 3024C Diesel (Tier 2) CAT. 3044C: CAT 3044C Diesel (Tier 2) DEUTZ F4 TIER2: Deutz F4M2011 Diesel (Tier 2) DEUTZ F3 TIER2: Deutz F3M2011 Diesel (Tier 2) FORD GAS TIER2: Ford LRG425 EFI Gas (Tier 2) FORD D/F TIER2: Ford LRG425 EFI Dual Fuel (Tier 2) DEUTZ ECM: Engine Control Module - ECM	11
FLYWHEEL TEETH: 4* * This menu item is only visible if Deutz engine selections 3 or 4 are selected.	0 1	133 TEETH: 133 flywheel teeth. 110 TEETH: 110 flywheel teeth.	1

SECTION 6 - JLG CONTROL SYSTEM

Table 6-3. Machine Configuration Programming Information Prior to Software Version P5.3

Configuration Digit	Number	Description	Default Number
GLOW PLUG: 5	0	NO GLOW PLUGS: No glow plugs installed.	1
	1	W/O STARTER LOCK: Automatic pre-glow time determined by ambient air temperature; engine start can be attempted at any time during pre-glow.	
	2	W/ STARTER LOCK: Automatic pre-glow time determined by ambient air temperature; engine start is NOT permitted until pre-glow is finished.	
ENGINE SHUTDOWN: 6	0	DISABLED: No engine shutdown.	1
	1	ENABLED: Shutdown engine when coolant temperature is greater than 110 deg. C or the oil pressure is less than 8 psi.	
TILT: 7* * Certain market selections will limit tilt options.	1	5 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 5 degrees and above elevation; also reduces drive speed to creep.	1
	2	4 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also reduces drive speed to creep.	
	3	3 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also reduces drive speed to creep.	
	4	4 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up.	
	5	3 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up. <i>Note: Any of the selections above will light the tilt lamp when a tilted condition occurs and will sound the platform alarm when the machine is also above elevation.</i>	
JIB: 8* * Only visible under certain model selections	0	NO: No jib installed.	0
	1	YES: Jib installed which has up and down movements only.	
4 WHEEL STEER: 9* * Only visible under certain model selections.	0	NO: No four-wheel steer installed.	0
	1	YES: Four-wheel steer installed.	
SOFT TOUCH: 10* * Only visible under certain model selections.	0	NO: No soft touch system installed.	0
	1	YES: Soft touch system installed.	
GEN SET/WELDER: 11	0	NO: No generator installed.	0
	1	BELT DRIVE: Belt driven setup.	

Table 6-3. Machine Configuration Programming Information Prior to Software Version P5.3

Configuration Digit	Number	Description	Default Number
GENSET CUTOFF: 12* * Only visible if Gen Set / Welder Menu selection is not 0.	0	MOTION ENABLED: Motion enabled when generator is ON.	0
	1	MOTION CUTOFF: Motion cutoff in platform mode only.	
H & T LIGHTS: 13	0	NO: No head and tail lights installed.	0
	1	YES: Head and tail lights installed.	
CABLE SWITCH: 14* * Only visible under certain model selections. * Certain market and model selections will alter the default setting.	0	NO: No broken cable switch installed.	0
	1	YES: Broken cable switch installed.	
LOAD SYSTEM: 15* * Only visible under certain model selections. * Certain market selections will limit load system options or alter default setting.	0	NO: No load sensor installed.	0
	1	WARN ONLY: Functions in creep, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	2	CUTOFF PLATFORM: All functions cutoff, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	3	CUTOFF ALL: All functions cutoff, flash overload light (500mS on, 500mS off), platform alarm beeps (5 sec ON, 2 sec OFF).	
	4	SPECIAL 1: Functions in creep, overload lamp lit, disables main telescope out & main lift up, platform alarm beeps (5 sec ON, 2 sec OFF).	
LOAD SENSOR: 16* * Only visible if Load Sensor Menu selection is not 0. * Market selections will limit certain load sensor options.	0	1 ON ROTATOR: Use the on-board load sensor for all models except those which use the Leveling Platform Module.	1
	1	4 UNDER PLATFORM: Use the EIM for load sensing.	
FUNCTION CUTOFF: 17* * Only visible under certain market selections. * Certain market selections will limit function cutoff options or alter default setting.	0	NO: No drive cutoff.	0
	1	BOOM CUTOFF: Boom function cutoff while driving above elevation.	
	2	DRIVE CUTOFF: Drive cutoff above elevation.	
	3	DRIVE CUT E&T: Drive cutoff above elevation and tilted.	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-3. Machine Configuration Programming Information Prior to Software Version P5.3

Configuration Digit	Number	Description	Default Number
GROUND ALARM: 18* * Certain market selections will alter default setting.	0	NO: No ground alarm installed.	0
	1	DRIVE: Travel alarm sounds when the drive function is active (Option).	
	2	DESCENT: Descent alarm sounds when lift down is active (Option).	
	3	MOTION: Motion alarm sounds when any function is active (Option).	
DRIVE: 19* * Only visible under certain model selections.	0	4WD: Four wheel drive.	0
	1	2WD: Two wheel drive.	
	2	2WD W/ 2-SPEED: Two wheel drive with 2-speed valve.	
TEMPERATURE: 20	0	CELSIUS: Celsius unit selection.	1
	1	FAHRENHEIT: Fahrenheit unit selection.	
LEVELING MODE: 21* * Only visible on 800S models.	0	ALL FUNCTIONS: Platform level with all functions.	0
	1	LEVEL LIFT/TELESCOPE: Platform level on lift and telescope only.	

4150364-14

Table 6-4. Machine Configuration Programming Information Software Version P5.3 to P6.1

Configuration Label/ Digit	Number	Description	Default Number
MODEL NUMBER: 1	1	400S	1
	2	450A	
	3	510A	
	4	600S	
	5	600A	
	6	600SC	
	7	601S	
	8	740A	
	9	800A	
	10	800S	
MARKET: 2	0	ANSI USA	0
	1	ANSI EXPORT	
	2	CSA	
	3	CE	
	4	AUSTRALIA	
	5	JAPAN	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-4. Machine Configuration Programming Information Software Version P5.3 to P6.1

Configuration Label/ Digit	Number	Description	Default Number
ENGINE: 3* * Engine selections vary depending on model selection.	1	FORD EFI GAS: Ford LRG425 EFI Gas (Tier 1)	7
	2	FORD EFI D/F: Ford LRG425 EFI dual fuel (Tier 1)	
	3	DEUTZ F4 TIER1: Deutz F4M1011F Diesel (Tier 1)	
	4	DEUTZ F3 TIER1: Deutz F3M1011F Diesel (Tier 1)	
	5	CAT. 3024C: CAT 3024C Diesel (Tier 2)	
	6	CAT. 3044C: CAT 3044C Diesel (Tier 2)	
	7	PERKINS 404C (Tier 2)	
	8	DEUTZ F4 TIER2: Deutz F4M2011 Diesel (Tier 2)	
	9	DEUTZ F3 TIER2: Deutz F3M2011 Diesel (Tier 2)	
	10	FORD GAS TIER2: Ford LRG425 EFI Gas (Tier 2)	
	11	FORD D/F TIER2: Ford LRG425 EFI Dual Fuel (Tier 2)	
	12	DEUTZ ECM: Engine Control Module - ECM	
	13	DUAL FUEL ECM: GM/PSI 3.0L Dual Fuel (Tier 2)	
FLYWHEEL TEETH: 4* * This menu item is only visible if Deutz engine selections 3 or 4 are selected.	0	133 TEETH: 133 flywheel teeth.	1
	1	110 TEETH: 110 flywheel teeth.	
GLOW PLUG: 5	0	NO GLOW PLUGS: No glow plugs installed.	2
	1	AIR INTAKE: Glow plugs installed in the air intake on the manifold.	
	2	IN-CYLINDER: Glow plugs installed in each cylinder.	
STARTER LOCKOUT: 6	0	DISABLED: Automatic pre-glow time determined by ambient air temperature; engine start can be attempted at any time during pre-glow.	0
	1	ENABLED: Automatic pre-glow time determined by ambient air temperature; engine start is NOT permitted until pre-glow is finished.	

Table 6-4. Machine Configuration Programming Information Software Version P5.3 to P6.1

Configuration Label/ Digit	Number	Description	Default Number
ENGINE SHUTDOWN: 7	0	DISABLED: No engine shutdown.	1
	1	ENABLED: Shutdown engine when coolant temperature is greater than 110 deg. C or the oil pressure is less than 8 PSI.	
TILT: 8* * Certain market selections will limit tilt options and alter default setting. <i>Note: Any of the selections above will light the tilt lamp when a tilted condition occurs and will sound the platform alarm when the machine is also above elevation.</i>	1	5 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 5 degrees and above elevation; also reduces drive speed to creep.	1
	2	4 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also reduces drive speed to creep.	
	3	3 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also reduces drive speed to creep.	
	4	4 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up.	
	5	3 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up.	
JIB: 9* * Only visible under certain model selections.	0	NO: No jib installed.	0
	1	YES: Jib installed which has up and down movements only.	
4 WHEEL STEER: 10* * Only visible under certain model selections.	0	NO: No four-wheel steer installed.	0
	1	YES: Four-wheel steer installed.	
SOFT TOUCH: 11* * Only visible under certain model selections.	0	NO: No soft touch system installed.	0
	1	YES: Soft touch system installed.	
GEN SET/WELDER: 12	0	NO: No generator installed.	0
	1	BELT DRIVE: Belt driven setup.	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-4. Machine Configuration Programming Information Software Version P5.3 to P6.1

Configuration Label/ Digit	Number	Description	Default Number
GEN SET CUTOUT: 13* * Only visible if Gen Set / Welder Menu selection is not 0.	0	MOTION ENABLED: Motion enabled when generator is ON.	0
	1	MOTION CUTOUT: Motion cutout in platform mode only.	
H & T LIGHTS: 14	0	NO: No head and tail lights installed.	0
	1	YES: Head and tail lights installed.	
CABLE SWITCH: 15* * Only visible under certain model selections. * Certain market and model selections will alter the default setting.	0	NO: No broken cable switch installed.	0
	1	YES: Broken cable switch installed.	
LOAD SYSTEM: 16* * Only visible under certain market selections. * Certain market selections will limit load system options or alter default set- ting.	0	NO: No load sensor installed.	0
	1	WARN ONLY: Functions in creep, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	2	CUTOUT PLATFORM: All functions cutout, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	3	CUTOUT ALL: All functions cutout, flash overload light (500mS on, 500mS off), platform alarm beeps (5 sec ON, 2 sec OFF).	
	4	SPECIAL 1: Functions in creep, overload lamp lit, disables main telescope out & main lift up, platform alarm beeps (5 sec ON, 2 sec OFF).	
LOAD SENSOR: 17* * Only visible if Load Sen- sor Menu selection is not 0 and under certain market selections. * Certain market selections will limit load sensor options.	0	1 ON ROTATOR: Use the on-board load sensor for all models except those which use the Leveling Platform Module.	1
	1	4 UNDER PLATFORM: Use the EIM for load sensing.	

Table 6-4. Machine Configuration Programming Information Software Version P5.3 to P6.1

Configuration Label/ Digit	Number	Description	Default Number
FUNCTION CUTOUT: 18* * Only visible under certain market selections. * Certain market selections will limit function cutout options or alter default set- ting.	0	NO: No drive cutout.	0
	1	BOOM CUTOUT: Boom function cutout while driving above elevation.	
	2	DRIVE CUTOUT: Drive & steer cutout above elevation.	
	3	DRIVE CUT E&T: Drive & steer cutout above elevation and tilted.	
GROUND ALARM: 19* * Certain market selections will alter default setting.	0	NO: No ground alarm installed.	3
	1	DRIVE: Travel alarm sounds when the drive function is active (Option).	
	2	DESCENT: Descent alarm sounds when lift down is active (Option).	
	3	MOTION: Motion alarm sounds when any function is active (Option).	
DRIVE: 20* * Only visible under certain model selections.	0	4WD: Four wheel drive.	0
	1	2WD: Two wheel drive.	
	2	2WD W/ 2-SPEED: Two wheel drive with 2-speed valve.	
TEMPERATURE: 21* * Certain market selections will alter default setting.	0	CELSIUS: Celsius unit selection.	1
	1	FAHRENHEIT: Fahrenheit unit selection.	
LEVELING MODE: 22* * Only visible on 800S models.	0	ALL FUNCTIONS: Platform level with all functions.	0
	1	LEVEL LIFT/TELESCOPE: Platform level on lift and telescope only.	

4150364-18

SECTION 6 - JLG CONTROL SYSTEM

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
MODEL NUMBER: 1	1	400S	1
	2	450A	
	3	510A	
	4	600S	
	5	600A	
	6	600SC	
	7	601S	
	8	740A	
	9	800A	
	10	800S	
MARKET: 2	0	ANSI USA	0
	1	ANSI EXPORT	
	2	CSA	
	3	CE	
	4	AUSTRALIA	
	5	JAPAN	

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
ENGINE: 3* * Engine selections vary depending on model selection.	1	FORD EFI GAS: Ford LRG425 EFI Gas (Tier 1)	14
	2	FORD EFI D/F: Ford LRG425 EFI dual fuel (Tier 1)	
	3	DEUTZ F4 TIER1: Deutz F4M1011F Diesel (Tier 1)	
	4	DEUTZ F3 TIER1: Deutz F3M1011F Diesel (Tier 1)	
	5	CAT. 3024C: CAT 3024C Diesel (Tier 2)	
	6	CAT. 3044C: CAT 3044C Diesel (Tier 2)	
	7	PERKINS 404C (Tier 2)	
	8	DEUTZ F4 TIER2: Deutz F4M2011 Diesel (Tier 2)	
	9	DEUTZ F3 TIER2: Deutz F3M2011 Diesel (Tier 2)	
	10	FORD GAS TIER2: Ford LRG425 EFI Gas (Tier 2)	
	11	FORD D/F TIER2: Ford LRG425 EFI Dual Fuel (Tier 2)	
	12	DEUTZ ECM: Engine Control Module - ECM (Tier 2 and Tier 3)	
	13	DUAL FUEL ECM: GM/PSI 3.0L Dual Fuel (Tier 2)	
	14	PERKINS ECM	
	15	CAT ECM	
FLYWHEEL TEETH: 4* * This menu item is only visible if Deutz engine selections 3 or 4 are selected.	0	133 TEETH: 133 flywheel teeth.	1
	1	110 TEETH: 110 flywheel teeth.	
GLOW PLUG: 5	0	NO GLOW PLUGS: No glow plugs installed.	2
	1	AIR INTAKE: Glow plugs installed in the air intake on the manifold.	
	2	IN-CYLINDER: Glow plugs installed in each cylinder.	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
STARTER LOCKOUT: 6	0	DISABLED: Automatic pre-glow time determined by ambient air temperature; engine start can be attempted at any time during pre-glow.	0
	1	ENABLED: Automatic pre-glow time determined by ambient air temperature; engine start is NOT permitted until pre-glow is finished.	
ENGINE SHUTDOWN: 7	0	DISABLED: No engine shutdown.	1
	1	ENABLED: Shutdown engine when coolant temperature is greater than 110 deg. C or the oil pressure is less than 8 PSI.	
TILT: 8* * Certain market selections will limit tilt options and alter default setting. <i>Note: Any of the selections above will light the tilt lamp when a tilted condition occurs and will sound the platform alarm when the machine is also above elevation.</i>	1	5 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 5 degrees and above elevation; also reduces drive speed to creep.	1
	2	4 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also reduces drive speed to creep.	
	3	3 DEGREES: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also reduces drive speed to creep.	
	4	4 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 4 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up.	
	5	3 DEGREES + CUT: Reduces the maximum speed of all boom functions to creep when tilted more than 3 degrees and above elevation; also disallows tower lift up, tower telescope out, drive, main telescope out and main lift up.	
JIB: 9* * Only visible under certain model selections.	0	NO: No jib installed.	0
	1	YES: Jib installed which has up and down movements only.	
4 WHEEL STEER: 10* * Only visible under certain model selections.	0	NO: No four-wheel steer installed.	0
	1	YES: Four-wheel steer installed.	
SOFT TOUCH: 11* * Only visible under certain model selections.	0	NO: No soft touch system installed.	0
	1	YES: Soft touch system installed.	

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
GEN SET/WELDER: 12	0	NO: No generator installed.	0
	1	BELT DRIVE: Belt driven setup.	
GEN SET CUTOUT: 13* * Only visible if Gen Set / Welder Menu selection is not 0.	0	MOTION ENABLED: Motion enabled when generator is ON.	0
	1	MOTION CUTOUT: Motion cutout in platform mode only.	
H & T LIGHTS: 14	0	NO: No head and tail lights installed.	0
	1	YES: Head and tail lights installed.	
CABLE SWITCH: 15* * Only visible under certain model selections. * Certain market and model selections will alter the default setting.	0	NO: No broken cable switch installed.	0
	1	YES: Broken cable switch installed.	
LOAD SYSTEM: 16* * Only visible under certain market selections. * Certain market selections will limit load system options or alter default set- ting.	0	NO: No load sensor installed.	0
	1	WARN ONLY: Functions in creep, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	2	CUTOUT PLATFORM: All functions cutout, overload lamp lit, platform alarm beeps (5 sec ON, 2 sec OFF).	
	3	CUTOUT ALL: All functions cutout, flash overload light (500mS on, 500mS off), platform alarm beeps (5 sec ON, 2 sec OFF).	
	4	SPECIAL 1: Functions in creep, overload lamp lit, disables main telescope out & main lift up, platform alarm beeps (5 sec ON, 2 sec OFF).	

SECTION 6 - JLG CONTROL SYSTEM

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
LOAD SENSOR: 17* * Only visible if Load Sensor Menu selection is not 0 and under certain market selections. * Certain market selections will limit load sensor options.	0	1 ON ROTATOR: Use the on-board load sensor for all models except those which use the Leveling Platform Module.	1
	1	4 UNDER PLATFORM: Use the EIM for load sensing.	
FUNCTION CUTOUT: 18* * Only visible under certain market selections. * Certain market selections will limit function cutout options or alter default setting.	0	NO: No drive cutout.	0
	1	BOOM CUTOUT: Boom function cutout while driving above elevation.	
	2	DRIVE CUTOUT: Drive & steer cutout above elevation.	
	3	DRIVE CUT E&T: Drive & steer cutout above elevation and tilted.	
GROUND ALARM: 19* * Certain market selections will alter default setting.	0	NO: No ground alarm installed.	3
	1	DRIVE: Travel alarm sounds when the drive function is active (Option).	
	2	DESCENT: Descent alarm sounds when lift down is active (Option).	
	3	MOTION: Motion alarm sounds when any function is active (Option).	
DRIVE: 20* * Only visible under certain model selections.	0	4WD: Four wheel drive.	0
	1	2WD: Two wheel drive.	
	2	2WD W/ 2-SPEED: Two wheel drive with 2-speed valve.	
TEMPERATURE: 21* * Certain market selections will alter default setting.	0	CELSIUS: Celsius unit selection.	1
	1	FAHRENHEIT: Fahrenheit unit selection.	

Table 6-5. Machine Configuration Programming Information Software Version P6.1 to Present

Configuration Label/ Digit	Number	Description	Default Number
LEVELING MODE: 22* * Only visible on 800S models.	0	ALL FUNCTIONS: Platform level with all functions.	0
	1	LEVEL LIFT/TELESCOPE: Platform level on lift and telescope only.	
DRIVE CONTROL: 23	0	NORMAL: Drive coils are energized from the Ground Module.	2
	1	PROPULSION: Drive coils are energized from the Propulsion Module.	
	2	ENHANCED: Drive coils are energized from the Ground Module and the ground side of the drive coils are brought back to current feedback returns.	
CLEARSKY: 24	0	NO: Clearsky (telematics) option is disabled.	0
	1	YES: Clearsky (telematics) option is enabled.	
CRIBBING OPTION: 25	0	NO: Cribbing Option is disabled.	0
	1	YES: Cribbing Option is enabled.	

4150364-19

SECTION 6 - JLG CONTROL SYSTEM

NOTE: Bold Italic Numbers indicate the default setting. Plain text indicates another available selection. Bold, Italic underlined numbers indicate the default when the option is factory installed.

600A	MODEL NUMBER	MARKET	ENGINE	FLYWHEEL TEETH		GLOW PLUGS			STARTER LOCKOUT		ENGINE SHUTDOWN		TILT					JIB		4 WHEEL STEER		SOFT TOUCH		GENSET/WELDER		GENSET CUTOFF	
				0	1	0	1	2	0	1	0	1	1	2	3	4	5	0	0	0	1	0	1	0	1		
ANSI USA	5	0	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	0	0	0	1	0	1	0	1	0	1
ANSI EXPORT	5	1	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	0	0	0	1	0	1	0	1	0	1
CSA	5	2	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	0	0	0	1	0	1	0	1	0	1
CE	5	3	11	0	1	0	1	2	0	1	0	1	X	X	3	X	5	0	0	0	1	0	1	0	1	0	1
AUSTRALIA	5	4	11	0	1	0	1	2	0	1	0	1	X	X	3	X	5	0	0	0	1	0	1	0	1	0	1
JAPAN	5	5	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	0	0	0	1	0	1	0	1	0	1

600A	HEAD & TAIL LIGHTS		CABLE BREAK SWITCH		LOAD SYSTEM				LOAD SENSOR		FUNCTION CUTOFF			GROUND ALARM			DRIVE TYPE			TEMPERATURE			LEVELING MODE			
	0	1	0	1	0	X	X	X	X	0	1	0	X	X	X	0	1	2	3	0	1	2	0	1	0	1
ANSI USA	0	1	0	1	0	X	X	X	X	0	1	0	X	X	X	0	1	2	3	0	1	2	0	1	0	1
ANSI EXPORT	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1	0	1
CSA	0	1	0	1	0	X	X	X	X	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1	0	1
CE	0	1	0	1	0	X	2	3	X	0	1	0	1	X	X	0	1	2	3	0	1	2	0	1	0	1
AUSTRALIA	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1	0	1
JAPAN	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1	0	1

SECTION 6 - JLG CONTROL SYSTEM

NOTE: Bold Italic Numbers indicate the default setting. Plain text indicates another available selection. Bold, Italic underlined numbers indicate the default when the option is factory installed.

600AJ	MODEL NUMBER	MARKET	ENGINE	FLYWHEEL TEETH		GLOW PLUGS			STARTER LOCKOUT		ENGINE SHUTDOWN			TILT					JIB	4 WHEEL STEER	SOFT TOUCH			GENSET/WELDER		GENSET CUTOFF	
				0	1	0	1	2	0	1	0	1	1	2	3	4	5	1			2	3	4	5	0	1	0
ANSI USA	5	0	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	1	0	0	1	0	1	0	1		
ANSI EXPORT	5	1	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	1	0	0	1	0	1	0	1		
CSA	5	2	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	1	0	0	1	0	1	0	1		
CE	5	3	11	0	1	0	1	2	0	1	0	1	X	X	3	X	5	1	0	0	1	0	1	0	1		
AUSTRALIA	5	4	11	0	1	0	1	2	0	1	0	1	X	X	3	X	5	1	0	0	1	0	1	0	1		
JAPAN	5	5	11	0	1	0	1	2	0	1	0	1	1	2	3	4	5	1	0	0	1	0	1	0	1		

600AJ	HEAD & TAIL LIGHTS		CABLE BREAK SWITCH		LOAD SYSTEM				LOAD SENSOR		FUNCTION CUTOFF			GROUND ALARM			DRIVE TYPE			TEMPERATURE		LEVELING MODE		
	0	1	0	1	0	X	X	X	X	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1
ANSI USA	0	1	0	1	0	X	X	X	X	0	1	0	X	X	X	0	1	2	3	0	1	2	0	1
ANSI EXPORT	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1
CSA	0	1	0	1	0	X	X	X	X	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1
CE	0	1	0	1	0	X	2	3	X	0	1	0	1	X	X	0	1	2	3	0	1	2	0	1
AUSTRALIA	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1
JAPAN	0	1	0	1	0	1	2	3	4	0	1	0	1	2	3	0	1	2	3	0	1	2	0	1

SECTION 6 - JLG CONTROL SYSTEM

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
001	EVERYTHING OK
002	GROUND MODE OK
0010	RUNNING AT CUTBACK - OUT OF TRANSPORT POSITION
0011	FSW OPEN
0012	RUNNING AT CREEP - CREEP SWITCH OPEN
0013	RUNNING AT CREEP - TILTED AND ABOVE ELEVATION
0014	CHASSIS TILT SENSOR OUT OF RANGE
0015	LOAD SENSOR READING UNDER WEIGHT
0035	APU ACTIVE
211	POWER CYCLE
212	KEYSWITCH FAULTY
213	FSW FAULTY
227	STEER SWITCHES FAULTY
2211	FSW INTERLOCK TRIPPED
2212	DRIVE LOCKED - JOYSTICK MOVED BEFORE FOOTSWITCH
2213	STEER LOCKED - SELECTED BEFORE FOOTSWITCH
2214	DRIVE/STEER LOCKED - JOYSTICK MOVED BEFORE ENABLE
2216	D/S JOY. OUT OF RANGE HIGH
2217	D/S JOY. CENTER TAP BAD
2218	L/S JOY. OUT OF RANGE LOW
2219	L/S JOY. OUT OF RANGE HIGH
2220	L/S JOY. CENTER TAP BAD
2221	LIFT/SWING LOCKED - JOYSTICK MOVED BEFORE FOOTSWITCH
2222	WAITING FOR FSW TO BE OPEN
2223	FUNCTION SWITCHES LOCKED - SELECTED BEFORE ENABLE
2224	FOOTSWITCH SELECTED BEFORE START
234	FUNCTION SWITCHES FAULTY - CHECK DIAGNOSTICS/BOOM
235	FUNCTION SWITCHES LOCKED - SELECTED BEFORE AUX POWER
236	FUNCTION SWITCHES LOCKED - SELECTED BEFORE START SWITCH
237	START SWITCH LOCKED - SELECTED BEFORE KEYSWITCH
259	MODEL CHANGED - HYDRAULICS SUSPENDED - CYCLE EMS
2513	GENERATOR MOTION CUTOUT ACTIVE
2514	BOOM PREVENTED - DRIVE SELECTED
2516	DRIVE PREVENTED - ABOVE ELEVATION
2517	DRIVE PREVENTED - TILTED & ABOVE ELEVATION
2518	DRIVE PREVENTED - BOOM SELECTED
2519	DRIVE PREVENTED - TILTED & EXTENDED OR HIGH ANGLE
2520	FUNCTIONS LOCKED OUT - CONSTANT DATA VERSION IMPROPER
2530	UMS SENSOR FORWARD LIMIT REACHED
2531	UMS SENSOR OUT OF USABLE RANGE
2532	UMS SENSOR BACKWARD LIMIT REACHED

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
331	BRAKE - SHORT TO BATTERY
332	BRAKE - OPEN CIRCUIT
3311	GROUND ALARM - SHORT TO BATTERY
3316	RIGHT FORWARD DRIVE PUMP - SHORT TO GROUND
3319	RIGHT FORWARD DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3320	RIGHT REVERSE DRIVE PUMP - SHORT TO GROUND
3323	RIGHT REVERSE DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3324	LEFT FORWARD DRIVE PUMP - SHORT TO GROUND
3327	LEFT FORWARD DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3328	LEFT REVERSE DRIVE PUMP - SHORT TO GROUND
3331	LEFT REVERSE DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3332	FORWARD DRIVE PUMP - SHORT TO GROUND
3333	FORWARD DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3334	REVERSE DRIVE PUMP - SHORT TO GROUND
3335	REVERSE DRIVE PUMP - SHORT TO BATTERY OR OPEN CIRCUIT
3336	ALTERNATOR POWER - SHORT TO GROUND
3340	AUX POWER - SHORT TO GROUND
3341	AUX POWER - OPEN CIRCUIT
3342	AUX POWER - SHORT TO BATTERY
3346	ELECTRIC FAN - SHORT TO GROUND
3347	ELECTRIC FAN - OPEN CIRCUIT
3348	ELECTRIC FAN - SHORT TO BATTERY
3349	ELECTRIC PUMP - SHORT TO GROUND
3350	ELECTRIC PUMP - OPEN CIRCUIT
3351	ELECTRIC PUMP - SHORT TO BATTERY
3352	LP LOCK - SHORT TO GROUND
3353	LP LOCK - OPEN CIRCUIT
3354	LP LOCK - SHORT TO BATTERY
3355	LP START ASSIST - SHORT TO GROUND
3356	LP START ASSIST - OPEN CIRCUIT
3357	LP START ASSIST - SHORT TO BATTERY
3358	MAIN DUMP VALVE - SHORT TO GROUND
3359	MAIN DUMP VALVE - OPEN CIRCUIT
3360	MAIN DUMP VALVE - SHORT TO BATTERY
3361	BRAKE - SHORT TO GROUND
3362	START SOLENOID - SHORT TO GROUND
3363	START SOLENOID - OPEN CIRCUIT
3364	START SOLENOID - SHORT TO BATTERY
3365	STEER DUMP VALVE - SHORT TO GROUND
3366	STEER DUMP VALVE - OPEN CIRCUIT
3367	STEER DUMP VALVE - SHORT TO BATTERY
3368	TWO SPEED VALVE - SHORT TO GROUND
3369	TWO SPEED VALVE - OPEN CIRCUIT

SECTION 6 - JLG CONTROL SYSTEM**Table 6-6. Analyzer Fault Code Listing**

DTC	Analyzer Text
3370	TWO SPEED VALVE - SHORT TO BATTERY
3371	GROUND ALARM - SHORT TO GROUND
3372	GROUND ALARM - OPEN CIRCUIT
3373	GEN SET/WELDER - SHORT TO GROUND
3374	GEN SET/WELDER - OPEN CIRCUIT
3375	GEN SET/WELDER - SHORT TO BATTERY
3376	HEAD TAIL LIGHT - SHORT TO GROUND
3377	HEAD TAIL LIGHT - OPEN CIRCUIT
3378	HEAD TAIL LIGHT - SHORT TO BATTERY
3379	HOURLY METER - SHORT TO GROUND
3382	PLATFORM LEVEL UP VALVE - SHORT TO GROUND
3383	PLATFORM LEVEL UP VALVE - OPEN CIRCUIT
3384	PLATFORM LEVEL UP VALVE - SHORT TO BATTERY
3385	PLATFORM LEVEL UP OVERRIDE VALVE - SHORT TO GROUND
3386	PLATFORM LEVEL UP OVERRIDE VALVE - OPEN CIRCUIT
3387	PLATFORM LEVEL UP OVERRIDE VALVE - SHORT TO BATTERY
3388	PLATFORM LEVEL DOWN VALVE - SHORT TO GROUND
3389	PLATFORM LEVEL DOWN VALVE - OPEN CIRCUIT
3390	PLATFORM LEVEL DOWN VALVE - SHORT TO BATTERY
3391	PLATFORM LEVEL DOWN OVERRIDE VALVE - SHORT TO GROUND
3392	PLATFORM LEVEL DOWN OVERRIDE VALVE - OPEN CIRCUIT
3393	PLATFORM LEVEL DOWN OVERRIDE VALVE - SHORT TO BATTERY
3394	PLATFORM ROTATE LEFT VALVE - SHORT TO GROUND
3395	PLATFORM ROTATE LEFT VALVE - OPEN CIRCUIT
3396	PLATFORM ROTATE LEFT VALVE - SHORT TO BATTERY
3397	PLATFORM ROTATE RIGHT VALVE - SHORT TO GROUND
3398	PLATFORM ROTATE RIGHT VALVE - OPEN CIRCUIT
3399	PLATFORM ROTATE RIGHT VALVE - SHORT TO BATTERY
33100	JIB LIFT UP VALVE - SHORT TO GROUND
33101	JIB LIFT UP VALVE - OPEN CIRCUIT
33102	JIB LIFT UP VALVE - SHORT TO BATTERY
33103	JIB LIFT DOWN VALVE - SHORT TO GROUND
33104	JIB LIFT DOWN VALVE - OPEN CIRCUIT
33105	JIB LIFT DOWN VALVE - SHORT TO BATTERY
33106	TOWER LIFT UP VALVE - SHORT TO GROUND
33107	TOWER LIFT UP VALVE - OPEN CIRCUIT
33108	TOWER LIFT UP VALVE - SHORT TO BATTERY
33109	TOWER LIFT DOWN VALVE - SHORT TO GROUND
33110	TOWER LIFT DOWN VALVE - OPEN CIRCUIT
33111	TOWER LIFT DOWN VALVE - SHORT TO BATTERY
33112	TOWER TELESCOPE IN VALVE - SHORT TO GROUND
33113	TOWER TELESCOPE IN VALVE - OPEN CIRCUIT
33114	TOWER TELESCOPE IN VALVE - SHORT TO BATTERY

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
33115	TOWER TELESCOPE OUT VALVE - SHORT TO GROUND
33116	TOWER TELESCOPE OUT VALVE - OPEN CIRCUIT
33117	TOWER TELESCOPE OUT VALVE - SHORT TO BATTERY
33118	SWING RIGHT VALVE - SHORT TO GROUND
33119	SWING RIGHT VALVE - OPEN CIRCUIT
33120	TELESCOPE IN VALVE - SHORT TO BATTERY
33121	SWING RIGHT VALVE - SHORT TO BATTERY
33122	SWING LEFT VALVE - SHORT TO GROUND
33123	TELESCOPE OUT VALVE - SHORT TO BATTERY
33124	LIFT UP DUMP VALVE - SHORT TO GROUND
33125	LIFT UP DUMP VALVE - OPEN CIRCUIT
33126	LIFT UP DUMP VALVE - SHORT TO BATTERY
33127	LIFT DOWN HOLDING VALVE - SHORT TO GROUND
33128	LIFT DOWN HOLDING VALVE - OPEN CIRCUIT
33129	LIFT DOWN HOLDING VALVE - SHORT TO BATTERY
33130	THROTTLE ACTUATOR - SHORT TO GROUND
33131	THROTTLE ACTUATOR - OPEN CIRCUIT
33132	THROTTLE ACTUATOR - SHORT TO BATTERY
33133	PLATFORM CONTROL VALVE - SHORT TO GROUND
33134	PLATFORM CONTROL VALVE - OPEN CIRCUIT
33135	PLATFORM CONTROL VALVE - SHORT TO BATTERY
33170	LIFT DOWN VALVE - OPEN CIRCUIT
33171	LIFT DOWN VALVE - SHORT TO BATTERY
33172	LIFT DOWN VALVE - SHORT TO GROUND
33175	JIB ROTATE LEFT VALVE - OPEN CIRCUIT
33176	JIB ROTATE LEFT VALVE - SHORT TO BATTERY
33177	JIB ROTATE LEFT VALVE - SHORT TO GROUND
33178	JIB ROTATE RIGHT VALVE - OPEN CIRCUIT
33179	JIB ROTATE RIGHT VALVE - SHORT TO BATTERY
33180	JIB ROTATE RIGHT VALVE - SHORT TO GROUND
33186	TELESCOPE OUT VALVE - OPEN CIRCUIT
33188	TELESCOPE OUT VALVE - SHORT TO GROUND
33189	TELESCOPE IN VALVE - OPEN CIRCUIT
33190	TELESCOPE IN VALVE - SHORT TO GROUND
33207	HORN - OPEN CIRCUIT
33208	HORN - SHORT TO BATTERY
33209	HORN - SHORT TO GROUND
33279	GLOWPLUG - OPEN CIRCUIT
33280	GLOWPLUG - SHORT TO BATTERY
33281	GLOWPLUG - SHORT TO GROUND
33295	SWING LEFT VALVE - OPEN CIRCUIT
33306	SWING LEFT VALVE - SHORT TO BATTERY
33314	FLOW CONTROL VALVE - OPEN CIRCUIT

SECTION 6 - JLG CONTROL SYSTEM

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
33315	FLOW CONTROL VALVE - SHORT TO BATTERY
33316	FLOW CONTROL VALVE - SHORT TO GROUND
33317	DRIVE FORWARD VALVE - OPEN CIRCUIT
33318	DRIVE FORWARD VALVE - SHORT TO BATTERY
33319	DRIVE FORWARD VALVE - SHORT TO GROUND
33320	DRIVE REVERSE VALVE - OPEN CIRCUIT
33321	DRIVE REVERSE VALVE - SHORT TO BATTERY
33322	DRIVE REVERSE VALVE - SHORT TO GROUND
33323	LIFT UP VALVE - OPEN CIRCUIT
33324	LIFT UP VALVE - SHORT TO BATTERY
33325	LIFT UP VALVE - SHORT TO GROUND
33331	DRIVE - CURRENT FEEDBACK READING TOO LOW
33332	LEFT TRACK - CURRENT FEEDBACK READING TOO LOW
33333	RIGHT TRACK - CURRENT FEEDBACK READING TOO LOW
33408	LEFT TRACK - CURRENT FEEDBACK READING LOST
33409	RIGHT TRACK - CURRENT FEEDBACK READING LOST
33410	DRIVE - CURRENT FEEDBACK READING LOST
341	PLATFORM LEVEL UP VALVE - OPEN CIRCUIT
342	PLATFORM LEVEL UP VALVE - SHORT TO BATTERY
343	PLATFORM LEVEL UP VALVE - SHORT TO GROUND
344	PLATFORM LEVEL UP VALVE - SHORT TO BATTERY OR OPEN CIRCUIT
345	PLATFORM LEVEL DOWN VALVE - OPEN CIRCUIT
346	PLATFORM LEVEL DOWN VALVE - SHORT TO BATTERY
347	PLATFORM LEVEL DOWN VALVE - SHORT TO GROUND
348	PLATFORM LEVEL DOWN VALVE - SHORT TO BATTERY OR OPEN CIRCUIT
349	PLATFORM ROTATE LEFT VALVE - OPEN CIRCUIT
3410	PLATFORM ROTATE LEFT VALVE - SHORT TO BATTERY
3411	PLATFORM ROTATE LEFT VALVE - SHORT TO GROUND
3412	PLATFORM ROTATE RIGHT VALVE - OPEN CIRCUIT
3413	PLATFORM ROTATE RIGHT VALVE - SHORT TO BATTERY
3414	PLATFORM ROTATE RIGHT VALVE - SHORT TO GROUND
3415	JIB LIFT UP VALVE - OPEN CIRCUIT
3416	JIB LIFT UP VALVE - SHORT TO BATTERY
3417	JIB LIFT UP VALVE - SHORT TO GROUND
3418	JIB LIFT DOWN VALVE - OPEN CIRCUIT
3419	JIB LIFT DOWN VALVE - SHORT TO BATTERY
3420	JIB LIFT DOWN VALVE - SHORT TO GROUND
3421	JIB ROTATE LEFT VALVE - OPEN CIRCUIT
3422	JIB ROTATE LEFT VALVE - SHORT TO BATTERY
3423	JIB ROTATE LEFT VALVE - SHORT TO GROUND
3424	JIB ROTATE RIGHT VALVE - OPEN CIRCUIT
3425	JIB ROTATE RIGHT VALVE - SHORT TO BATTERY
3426	JIB ROTATE RIGHT VALVE - SHORT TO GROUND

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
431	FUEL SENSOR - SHORT TO BATTERY
432	FUEL SENSOR - SHORT TO GROUND
433	OIL PRESSURE - SHORT TO BATTERY
434	OIL PRESSURE - SHORT TO GROUND
435	COOLANT TEMPERATURE - SHORT TO GROUND
436	FORD FAULT CODE ##
437	ENGINE TROUBLE CODE
438	HIGH ENGINE TEMP
439	AIR FILTER BYPASSED
4310	NO ALTERNATOR OUTPUT
4311	LOW OIL PRESSURE
4312	485 COMMUNICATIONS LOST
4313	THROTTLE ACTUATOR FAILURE
4314	WRONG ENGINE SELECTED - ECM DETECTED
4322	LOSS OF ENGINE SPEED SENSOR
4323	SPEED SENSOR READING INVALID SPEED
441	BATTERY VOLTAGE TOO LOW - SYSTEM SHUTDOWN
442	BATTERY VOLTAGE TOO HIGH - SYSTEM SHUTDOWN
445	BATTERY VOLTAGE LOW
662	CANBUS FAILURE - PLATFORM MODULE
664	CANBUS FAILURE - ACCESSORY MODULE
665	CANBUS FAILURE - PROPULSION MODULE
666	CANBUS FAILURE - ENGINE CONTROLLER
6620	CANBUS FAILURE - UMS SENSOR
671	ACCESSORY FAULT
813	CHASSIS TILT SENSOR NOT CALIBRATED
815	CHASSIS TILT SENSOR DISAGREEMENT
816	UMS SENSOR NOT CALIBRATED
817	UMS SENSOR FAULT
825	LSS HAS NOT BEEN CALIBRATED
826	RUNNING AT CREEP - PLATFORM OVERLOADED
827	DRIVE & BOOM PREVENTED - PLATFORM OVERLOADED
828	LIFT UP & TELE OUT PREVENTED - PLATFORM OVERLOADED
831	PLATFORM LEVELING OVERRIDE ON
832	PLATFORM LEVELING OVERRIDE OFF
833	PLATFORM LEVEL UP CRACKPOINT - NOT CALIBRATED
834	PLATFORM LEVEL DOWN CRACKPOINT - NOT CALIBRATED
835	PLATFORM LEVEL SENSOR #1 - NOT ZERO CALIBRATED
836	PLATFORM LEVEL SENSOR #1 - ZERO OUT OF RANGE
837	PLATFORM LEVEL SENSOR #1 - SHORT TO BATTERY
838	PLATFORM LEVEL SENSOR #1 - SHORT TO GROUND OR OPEN CIRCUIT
839	PLATFORM LEVEL SENSOR #2 - NOT ZERO CALIBRATED
8310	PLATFORM LEVEL SENSOR #2 - ZERO OUT OF RANGE

SECTION 6 - JLG CONTROL SYSTEM

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
8311	PLATFORM LEVEL SENSOR #2 - SHORT TO BATTERY
8312	PLATFORM LEVEL SENSOR #2 - SHORT TO GROUND OR OPEN CIRCUIT
8313	PLATFORM LEVEL SENSOR #1 - REFERENCE VOLTAGE OUT OF RANGE
8314	PLATFORM LEVEL SENSOR #2 - REFERENCE VOLTAGE OUT OF RANGE
8315	PLATFORM LEVELING SENSOR - DISAGREEMENT
8316	PLATFORM LEVEL SENSOR #1 - COMMUNICATIONS LOST
8317	PLATFORM LEVEL SENSOR #2 - COMMUNICATIONS LOST
8318	PLATFORM LEVELING SYSTEM TIMEOUT
8639	FRONT LEFT STEER VALVE - OPEN CIRCUIT
8640	FRONT LEFT STEER VALVE - SHORT TO BATTERY
8641	FRONT LEFT STEER VALVE - SHORT TO GROUND
8642	FRONT RIGHT STEER VALVE - OPEN CIRCUIT
8643	FRONT RIGHT STEER VALVE - SHORT TO BATTERY
8644	FRONT RIGHT STEER VALVE - SHORT TO GROUND
8645	REAR LEFT STEER VALVE - OPEN CIRCUIT
8646	REAR LEFT STEER VALVE - SHORT TO BATTERY
8647	REAR LEFT STEER VALVE - SHORT TO GROUND
8648	REAR RIGHT STEER VALVE - OPEN CIRCUIT
8649	REAR RIGHT STEER VALVE - SHORT TO BATTERY
8650	REAR RIGHT STEER VALVE - SHORT TO GROUND
8652	RIGHT TRACK FORWARD VALVE - OPEN CIRCUIT
8653	RIGHT TRACK FORWARD VALVE - SHORT TO BATTERY
8654	RIGHT TRACK FORWARD VALVE - SHORT TO GROUND
8655	RIGHT TRACK REVERSE VALVE - OPEN CIRCUIT
8656	RIGHT TRACK REVERSE VALVE - SHORT TO BATTERY
8657	RIGHT TRACK REVERSE VALVE - SHORT TO GROUND
8658	LEFT TRACK FORWARD VALVE - OPEN CIRCUIT
8659	LEFT TRACK FORWARD VALVE - SHORT TO BATTERY
8660	LEFT TRACK FORWARD VALVE - SHORT TO GROUND
8661	LEFT TRACK REVERSE VALVE - OPEN CIRCUIT
8662	LEFT TRACK REVERSE VALVE - SHORT TO BATTERY
8663	LEFT TRACK REVERSE VALVE - SHORT TO GROUND
871	RETURN FILTER BYPASSED
872	CHARGE PUMP FILTER BYPASSED
998	EEPROM FAILURE - CHECK ALL SETTINGS
9910	FUNCTIONS LOCKED OUT - PLATFORM MODULE SOFTWARE VERSION IMPROPER
9913	FUNCTIONS LOCKED OUT - PROPULSION MODULE SOFTWARE VERSION IMPROPER
9914	PLATFORM MODULE SOFTWARE UPDATE REQUIRED
9915	CHASSIS TILT SENSOR NOT GAIN CALIBRATED
9916	CHASSIS TILT SENSOR GAIN OUT OF RANGE
9917	HIGH RESOLUTION A2D FAILURE - INTERRUPT LOST
9918	HIGH RESOLUTION A2D FAILURE - REINIT LIMIT
9919	GROUND SENSOR REF VOLTAGE OUT OF RANGE

Table 6-6. Analyzer Fault Code Listing

DTC	Analyzer Text
9920	PLATFORM SENSOR REF VOLTAGE OUT OF RANGE
9921	GROUND MODULE FAILURE - HIGH SIDE DRIVER CUTOFF FAULTY
9922	PLATFORM MODULE FAILURE - HWFS CODE 1
9923	GROUND MODULE FAILURE - HWFS CODE 1
9924	FUNCTIONS LOCKED OUT - MACHINE NOT CONFIGURED
9944	CURRENT FEEDBACK GAINS OUT OF RANGE
9945	CURRENT FEEDBACK CALIBRATION CHECKSUM INCORRECT

**6.9 ANALYZER DIAGNOSTICS MENU
STRUCTURE**

In the following structure descriptions, an intended item is selected by pressing ENTER; pressing ESC steps back to the next outer level. The LEFT/RIGHT arrow keys move between items in the same level. The UP/DOWN arrow keys alter a value if allowed

Table 6-7. Adjustments - Personality Descriptions

DRIVE	
ACCEL ...	Displays/adjusts drive acceleration
DECEL ...	Displays/adjusts drive deceleration
MIN FORWARD ...	Displays/adjusts minimum forward drive speed
MAX FORWARD ...	Displays/adjusts maximum forward drive speed
MIN REVERSE ...	Displays/adjusts minimum reverse drive speed
MAX REVERSE ...	Displays/adjusts maximum reverse drive speed
ELEVATED MAX ...	Displays/adjusts maximum drive speed NOTE: used when elevation cutout switches are limiting maximum speed
CREEP MAX ...	Displays/adjusts maximum drive speed NOTE: used when creep switch on pump pot is active
STEER MAX ...	Displays/adjusts the maximum steer speed
LIFT	
ACCEL ...	Displays/adjusts upper lift acceleration
DECEL ...	Displays/adjusts upper lift deceleration
MIN UP ...	Displays/adjusts minimum upper lift up speed
MAX UP ...	Displays/adjusts maximum upper lift up speed
CREEP UP ...	Displays/adjusts maximum upper lift up speed NOTE: used when creep switch on pump pot is active
MIN DOWN ...	Displays/adjusts minimum upper lift down speed
MAX DOWN ...	Displays/adjusts maximum upper lift down speed
CREEP DOWN ...	Displays/adjusts maximum upper lift down speed NOTE: used when creep switch on pump pot is active

Table 6-7. Adjustments - Personality Descriptions

SWING	
ACCEL ...	Displays/adjusts swing acceleration
DECEL ...	Displays/adjusts swing deceleration
MIN LEFT ...	Displays/adjusts minimum swing left speed
MAX LEFT ...	Displays/adjusts maximum swing left speed
CREEP LEFT ...	Displays/adjusts maximum swing left speed NOTE: used when creep switch on pump pot is active
MIN RIGHT ...	Displays/adjusts minimum swing right speed
MAX RIGHT ...	Displays/adjusts maximum swing right speed
CREEP RIGHT ...	Displays/adjusts maximum swing right speed NOTE: used when creep switch on pump pot is active
UPPER TELESCOPE	
ACCEL ...	Displays/adjusts telescope acceleration
DECEL ...	Displays/adjusts telescope deceleration
MIN IN ...	Displays/adjusts minimum telescope in speed
MAX IN ...	Displays/adjusts maximum telescope in speed
MIN OUT ...	Displays/adjusts minimum telescope out speed
MAX OUT ...	Displays/adjusts maximum telescope out speed
BASKET LEVEL	
ACCEL ...	Displays/adjusts basket level acceleration
DECEL ...	Displays/adjusts basket level deceleration
MIN UP ...	Displays/adjusts minimum basket level up speed
MAX UP ...	Displays/adjusts maximum basket level up speed
MIN DOWN ...	Displays/adjusts minimum basket level down speed
MAX DOWN ...	Displays/adjusts maximum basket level down speed
BASKET ROTATE	
ACCEL ...	Displays/adjusts basket rotate acceleration
DECEL ...	Displays/adjusts basket rotate deceleration
MIN LEFT ...	Displays/adjusts minimum basket rotate left speed
MAX LEFT ...	Displays/adjusts maximum basket rotate left speed
MIN RIGHT ...	Displays/adjusts minimum basket rotate right speed
MAX RIGHT ...	Displays/adjusts maximum basket rotate right speed

SECTION 6 - JLG CONTROL SYSTEM

Table 6-7. Adjustments - Personality Descriptions

JIB LIFT	Not displayed if JIB = NO
ACCEL ...	Displays/adjusts jib acceleration
DECEL ...	Displays/adjusts jib deceleration
MIN UP ...	Displays/adjusts minimum jib up speed
MAX UP ...	Displays/adjusts maximum jib up speed
MIN DOWN ...	Displays/adjusts minimum jib down speed
MAX DOWN ...	Displays/adjusts maximum jib down speed
MIN LEFT ...	Displays/adjusts minimum jib left speed
MAX LEFT ...	Displays/adjusts maximum jib left speed
MIN RIGHT ...	Displays/adjusts minimum jib right speed
MAX RIGHT ...	Displays/adjusts maximum jib right speed
STEER	
MAX SPEED ...	Displays/adjusts maximum steer speed, which applies when vehicle speed is at minimum
GROUND MODE	
LIFT UP ...	Displays/adjusts fixed lift up speed
LIFT DOWN ...	Displays/adjusts fixed lift down speed
SWING ...	Displays/adjusts fixed swing speed
TELE ...	Displays/adjusts fixed telescope speed
BASKETLEVEL ...	Displays/adjusts fixed basket level speed
BASKETROTATE ...	Displays/adjusts fixed basket rotate speed
JIB (U/D) ...	Displays/adjusts jib lift speed Not displayed if JIB = NO
JIB (L/R)...	Displays/adjusts jib swing speed Not displayed if JIB = NO

Table 6-8. Diagnostic Menu Descriptions

DRIVE	
DRIVE FOR ...	Displays drive joystick direction & demand
STEER ...	Displays steer switch direction & demand NOTE: steer demand is inversely proportional to vehicle speed
BRAKES ...	Displays brake control system status
CREEP ...	Displays pump pot creep switch status
TWO SPEED ...	Displays two speed switch status
2 SPEED MODE	Displays status of two speed valve
HIGH ENGINE	Displays high engine switch status
BOOM	
U LIFT UP ...	Displays lift joystick direction & demand
SWING LEFT ...	Displays swing joystick direction & demand
LEVEL UP ...	Displays basket level switch direction & demand NOTE: demand is controlled by the pump pot
ROT. LEFT ...	Displays basket rotate switch direction & demand NOTE: demand is controlled by the pump pot
U TELE IN ...	Displays telescope switch direction & demand NOTE: demand is controlled by the pump pot
JIB UP ...	Displays jib lift switch direction & demand NOTE: demand is controlled by the pump pot Not displayed if JIB = NO
JIB LEFT ...	Displays jib swing switch direction & demand NOTE: demand is controlled by the pump pot Not displayed if JIB = NO
PUMP POT ...	Displays pump pot demand
ENGINE	
START ...	Displays start switch status
AIR FILTER ...	Displays air filter status
BATTERY ...	Displays measured battery voltage
COOLANT ...	Displays coolant temperature
OIL PRS ...	Displays oil pressure status
FUEL SELECT ...	Displays selected fuel (Dual Fuel only)
FUEL LEVEL ...	Displays fuel level status
RPM	Displays Engine RPM
GM BATTERY	Displays battery voltage at ground module

Table 6-8. Diagnostic Menu Descriptions

PM BATTERY ...	Displays battery voltage at platform module
TEMP ...	Displays ground module temperature
ELEV. CUTOUT ...	Displays elevation cutout switch status
FUNC. CUTOUT ...	Displays function cutout switch status
CREEP ...	Displays creep switch status
TILT ...	Displays measured vehicle tilt
AUX POWER ...	Displays status of auxiliary power switch
HORN ...	Displays status of horn switch
R FILTER ...	Displays status of return filter switch
C FILTER ...	Displays status of charge pump filter
LOAD LENGTH ...	Displays length switch status
ANGLE ...	Displays angle switch status
LOAD ...	Displays load sensor value NOTE: Not displayed if load = 0.
DATALOG	
ON ...	Displays total controller on (EMS) time
ENGINE ...	Displays engine run time
DRIVE ...	Displays total controller drive operation time
LIFT ...	Displays total controller lift operation time
SWING ...	Displays total controller swing operation time
TELE ...	Displays total controller tele operation time
MAX. TEMP ...	Displays maximum measured heatsink temp.
MIN. TEMP ...	Displays minimum measured heatsink temp.
MAX. VOLTS ...	Displays maximum measured battery voltage
RENTAL ...	Displays total controller operation time NOTE: can be reset
ERASE RENTAL	Not available at password level 2
YES:ENTER, NO:ESC	ENTER resets rental datalog time to zero
VERSIONS	
GROUND ...	Displays ground module software version
PLATFORM ...	Displays platform module software version
ANALYSER ...	Displays Analyzer software version

SECTION 7. BASIC ELECTRICAL INFORMATION & SCHEMATICS

7.1 GENERAL

This section contains basic electrical information and schematics to be used for locating and correcting most of the operating problems which may develop. If a problem should develop which is not presented in this section or which is not corrected by listed corrective actions, technically qualified guidance should be obtained before proceeding with any maintenance.

7.2 MULTIMETER BASICS

A wide variety of multimeters or Volt Ohm Meters (VOM) can be used for troubleshooting your equipment. This section shows diagrams of a common, digital VOM configured for several different circuit measurements. Instructions for your VOM may vary. Please consult the meter operator's manual for more information.

Grounding

"Grounding the meter" means to take the black lead (which is connected to the COM (common) or negative port) and touch it to a good path to the negative side of the Voltage source.

Backprobing

To "backprobe" means to take the measurement by accessing a connector's contact on the same side as the wires, the back of the connector. Readings can be done while maintaining circuit continuity this way. If the connector is the sealed type, great care must be taken to avoid damaging the seal around the wire. It is best to use probes or probe tips specifically designed for this technique, especially on sealed connectors. Whenever possible insert probes into the side of the connector such that the test also checks both terminals of the connection. It is possible to inspect a connection within a closed connector by backprobing both sides of a connector terminal and measuring resistance. Do this after giving each wire a gentle pull to ensure the wires are still attached to the contact and contacts are seated in the connector.

Min/Max

Use of the "Min/Max" recording feature of some meters can help when taking measurements of intermittent conditions while alone. For example, you can read the Voltage applied to a solenoid when it is only operational while a switch, far from the solenoid and meter, is held down.

Polarity

Getting a negative Voltage or current reading when expecting a positive reading frequently means the leads

are reversed. Check what reading is expected, the location of the signal and that the leads are connected to the device under test correctly. Also check that the lead on the "COM" port goes to the Ground or negative side of the signal and the lead on the other port goes to the positive side of the signal.

Scale

M = Mega = 1,000,000 * (Displayed Number)

k = kilo = 1,000 * (Displayed Number)

m = milli = (Displayed Number) / 1,000

μ = micro = (Displayed Number) / 1,000,000

Example: 1.2 k Ω = 1200 Ω

Example: 50 mA = 0.05 A

Voltage Measurement

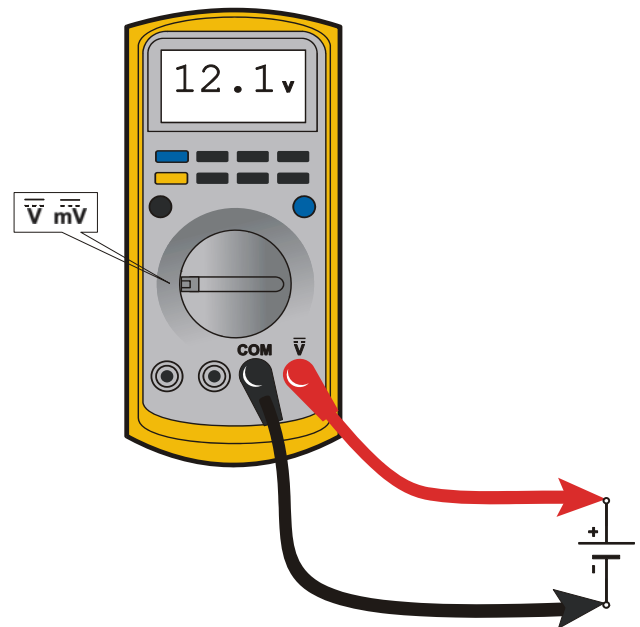


Figure 7-1. Voltage Measurement (DC)

- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual)
- Use firm contact with meter leads

Resistance Measurement

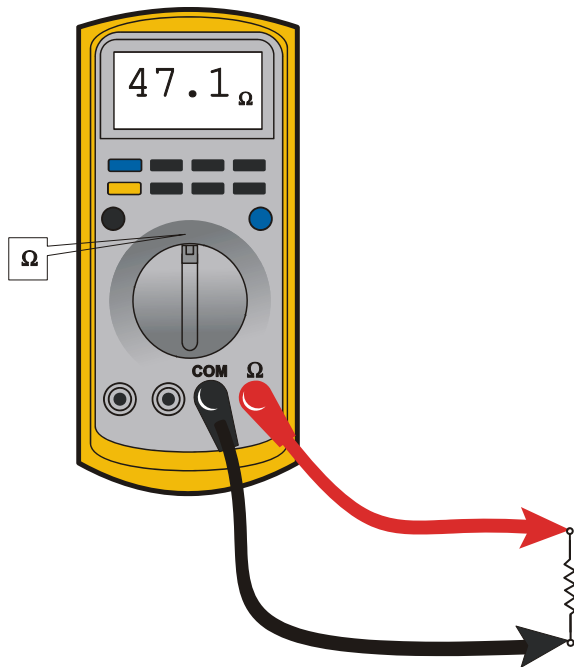


Figure 7-2. Resistance Measurement

- First test meter and leads by touching leads together. Resistance should read a short circuit (very low resistance)
- Circuit power must be turned OFF before testing resistance
- Disconnect component from circuit before testing
- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual)

- Use firm contact with meter leads

Continuity Measurement

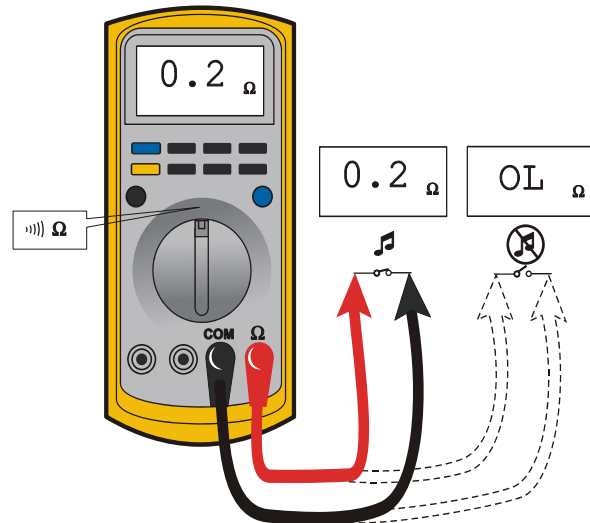


Figure 7-3. Continuity Measurement

- Some meters require a separate button press to enable audible continuity testing
- Circuit power must be turned OFF before testing continuity
- Disconnect component from circuit before testing
- Use firm contact with meter leads
- First test meter and leads by touching leads together. Meter should produce an audible alarm, indicating continuity

Current Measurement

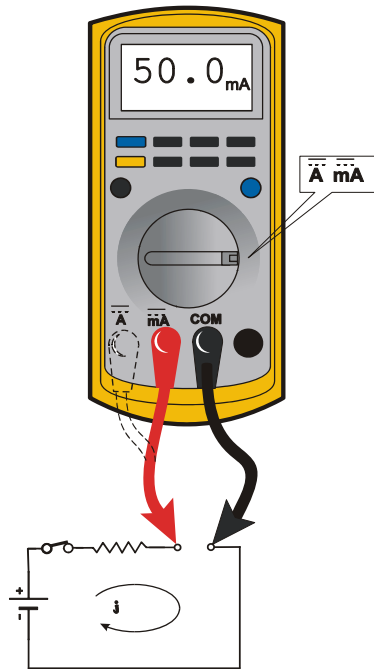


Figure 7-4. Current Measurement (DC)

- Set up the meter for the expected current range
- Be sure to connect the meter leads to the correct jacks for the current range you have selected
- If meter is not auto ranging, set it to the correct range (See multi meter's operation manual)
- Use firm contact with meter leads

7.3 APPLYING SILICONE DIELECTRIC COMPOUND TO ELECTRICAL CONNECTIONS

NOTE: Do NOT apply dielectric grease to the following connections:

- Main Boom Rotary sensor connections (on Celesco Sensor),

- LSS Modules connections,
- Deutz EMR 2 ECM connection.

Silicone Dielectric Compound must be used on all electrical connections except for those mentioned above for the following reasons:

- To prevent oxidation at the mechanical joint between male and female pins.
- To prevent electrical malfunction caused by low level conductivity between pins when wet.

Use the following procedure to apply Silicone Dielectric Compound to the electrical connectors. This procedure applies to all plug connections not enclosed in a box. Silicone grease should not be applied to connectors with external seals.

1. To prevent oxidation, silicone grease must be packed completely around male and female pins on the inside of the connector prior to assembly. This is most easily achieved by using a syringe.

NOTE: Over a period of time, oxidation increases electrical resistance at the connection, eventually causing circuit failure.

2. To prevent shorting, silicone grease must be packed around each wire where they enter the outside of the connector housing. Also, silicone grease must be applied at the joint where the male and female connectors come together. Any other joints (around strain reliefs, etc.) where water could enter the connector should also be sealed.

NOTE: This condition is especially common when machines are pressure washed since the washing solution is much more conductive than water.

3. Anderson connectors for the battery boxes and battery chargers should have silicone grease applied to the contacts only.

NOTE: Curing-type sealants might also be used to prevent shorting and would be less messy, but would make future pin removal more difficult.

7.4 AMP CONNECTOR

Applying Silicone Dielectric Compound to AMP Connectors

Silicone Dielectric Compound must be used on the AMP connections for the following reasons:

- To prevent oxidation at the mechanical joint between male and female pins.
- To prevent electrical malfunction caused by low level conductivity between pins when wet.

Use the following procedure to apply Silicone Dielectric Compound to the electrical connectors.

1. To prevent oxidation and low level conductivity, silicone dielectric grease must be packed completely around male and female pins on the inside of the connector after the mating of the housing to the header. This is easily achieved by using a syringe to fill the header with silicone dielectric compound, to a point just above the top of the male pins inside the header. When assembling the housing to the header, it is possible that the housing will become air locked, thus preventing the housing latch from engaging.
2. Pierce one of the unused wire seals to allow the trapped air inside the housing to escape.
3. Install a hole plug into this and/or any unused wire seal that has silicone dielectric compound escaping from it.

Assembly

Check to be sure the wedge lock is in the open, or as-shipped, position (See Figure 7-5.). Proceed as follows:

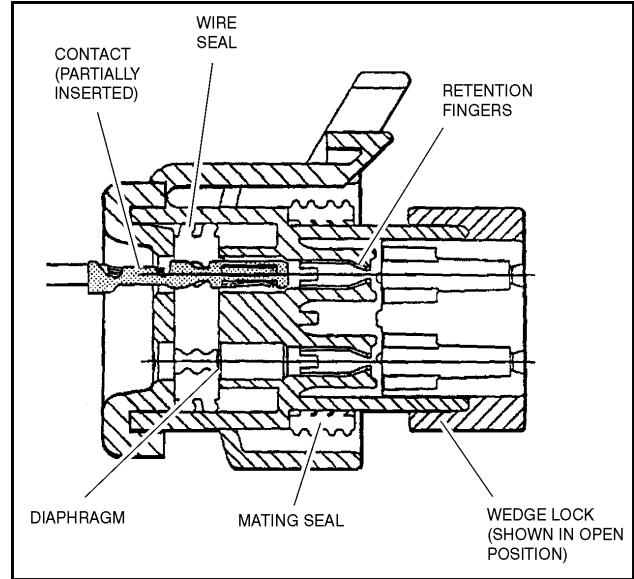


Figure 7-5. Connector Assembly Figure 1

1. To insert a contact, push it straight into the appropriate circuit cavity as far as it will go (See Figure 7-7.).
2. Pull back on the contact wire with a force of 1 or 2 lbs. to be sure the retention fingers are holding the contact (See Figure 7-7.).

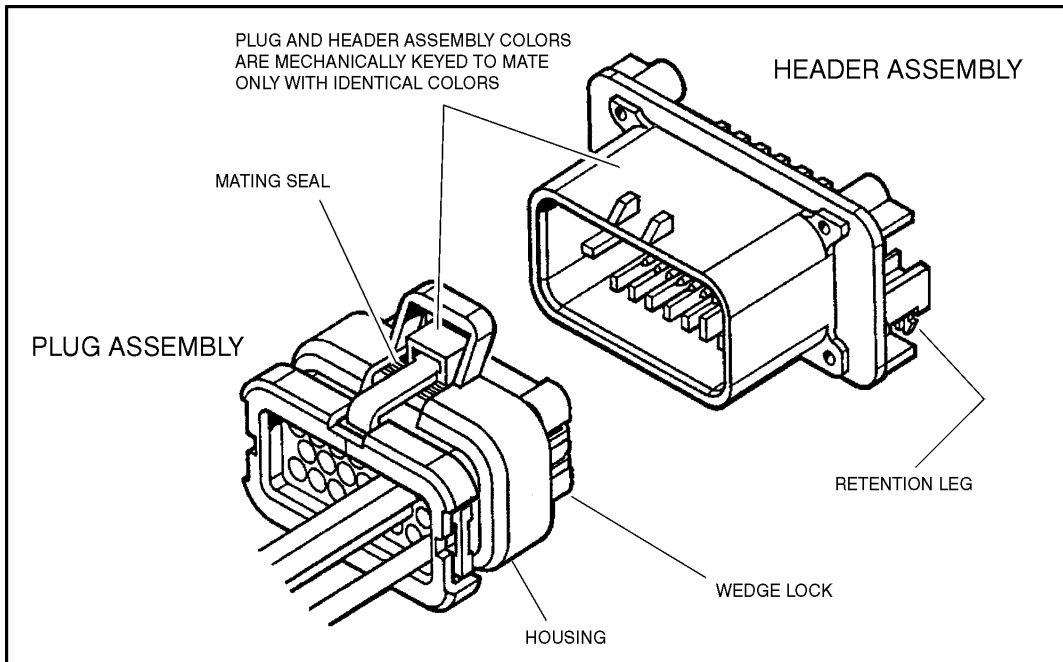


Figure 7-6. AMP Connector

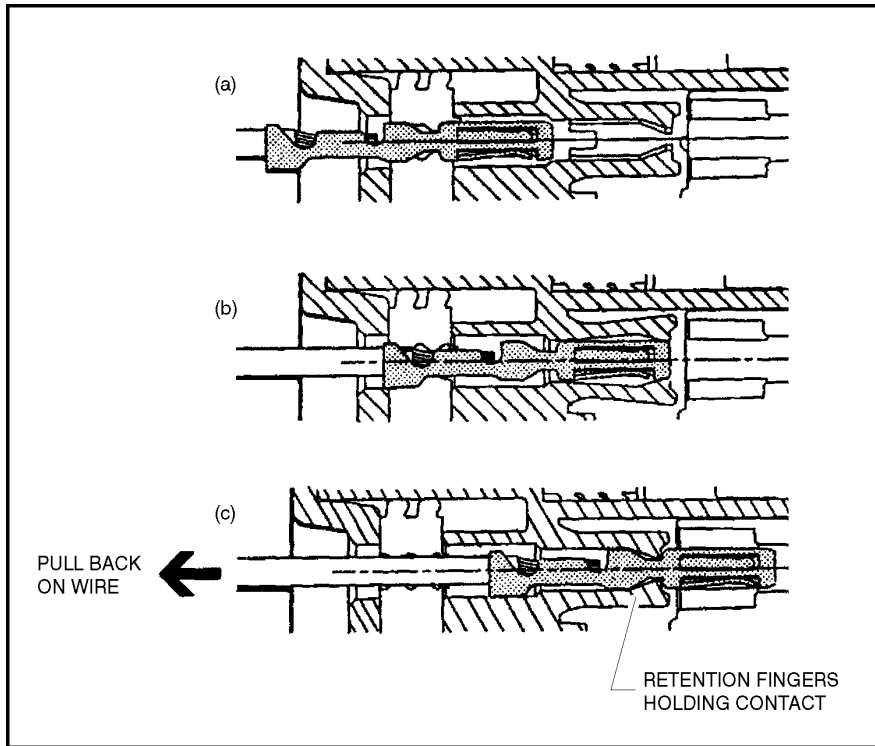


Figure 7-7. Connector Assembly Figure 2

3. After all required contacts have been inserted, the wedge lock must be closed to its locked position. Release the locking latches by squeezing them inward (See Figure 7-8.).

4. Slide the wedge lock into the housing until it is flush with the housing (See Figure 7-9.).

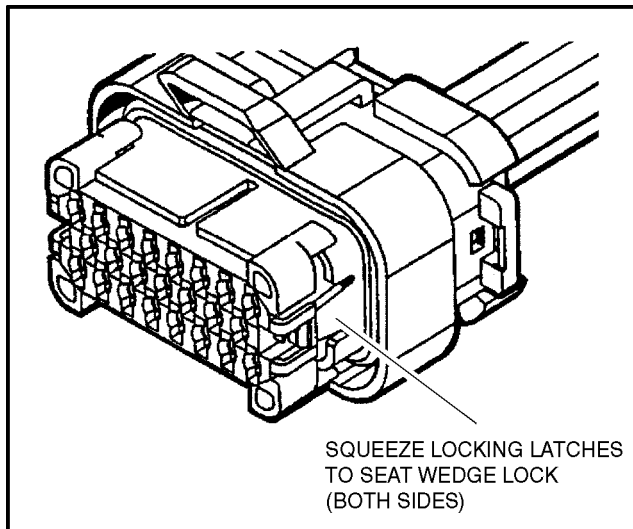


Figure 7-8. Connector Assembly Figure 3

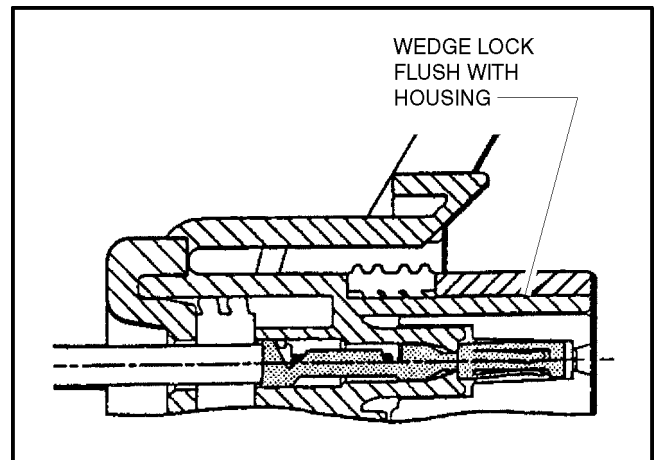


Figure 7-9. Connector Assembly Figure 4

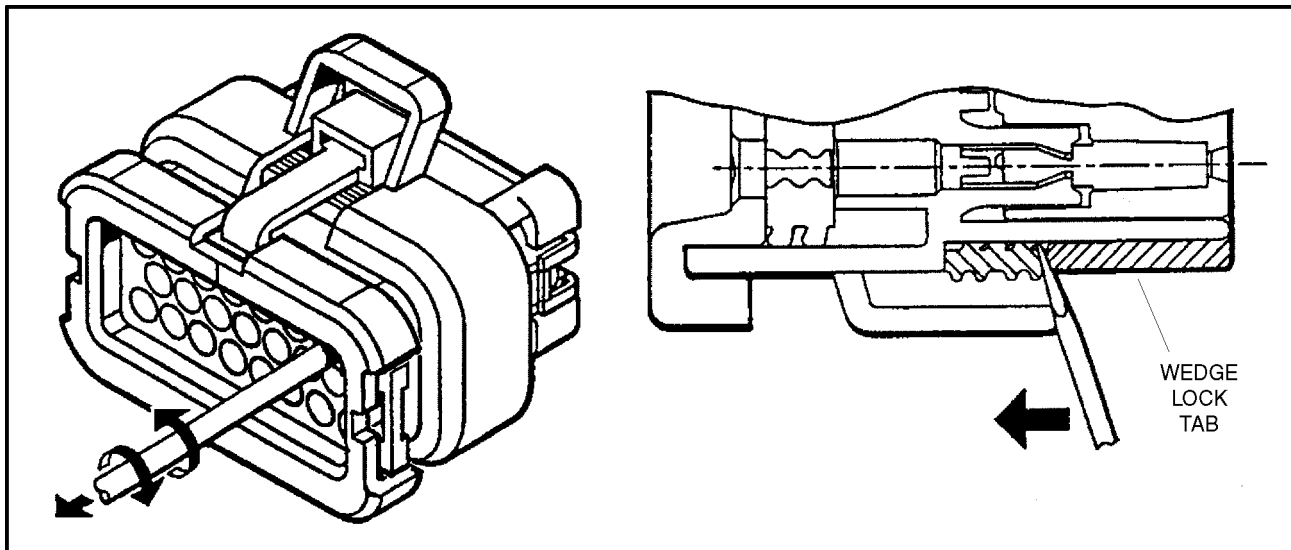


Figure 7-10. Connector Disassembly

Disassembly

1. Insert a 4.8 mm (3/16") wide screwdriver blade between the mating seal and one of the red wedge lock tabs.
2. Pry open the wedge lock to the open position.
3. While rotating the wire back and forth over a half turn (1/4 turn in each direction), gently pull the wire until the contact is removed.

NOTE: The wedge lock should never be removed from the housing for insertion or removal of the contacts.

Wedge Lock

The wedge lock has slotted openings in the forward, or mating end. These slots accommodate circuit testing in

the field, by using a flat probe such as a pocket knife. DO NOT use a sharp point such as an ice pick.

Service - Voltage Reading

⚠ CAUTION

DO NOT PIERCE WIRE INSULATION TO TAKE VOLTAGE READINGS.

It has been common practice in electrical troubleshooting to probe wires by piercing the insulation with a sharp point. This practice should be discouraged when dealing with the AMPSEAL plug assembly, or any other sealed connector system. The resulting pinholes in the insulation will allow moisture to invade the system by traveling along the wire strands. This nullifies the effectiveness of the connector seals and could result in system failure.

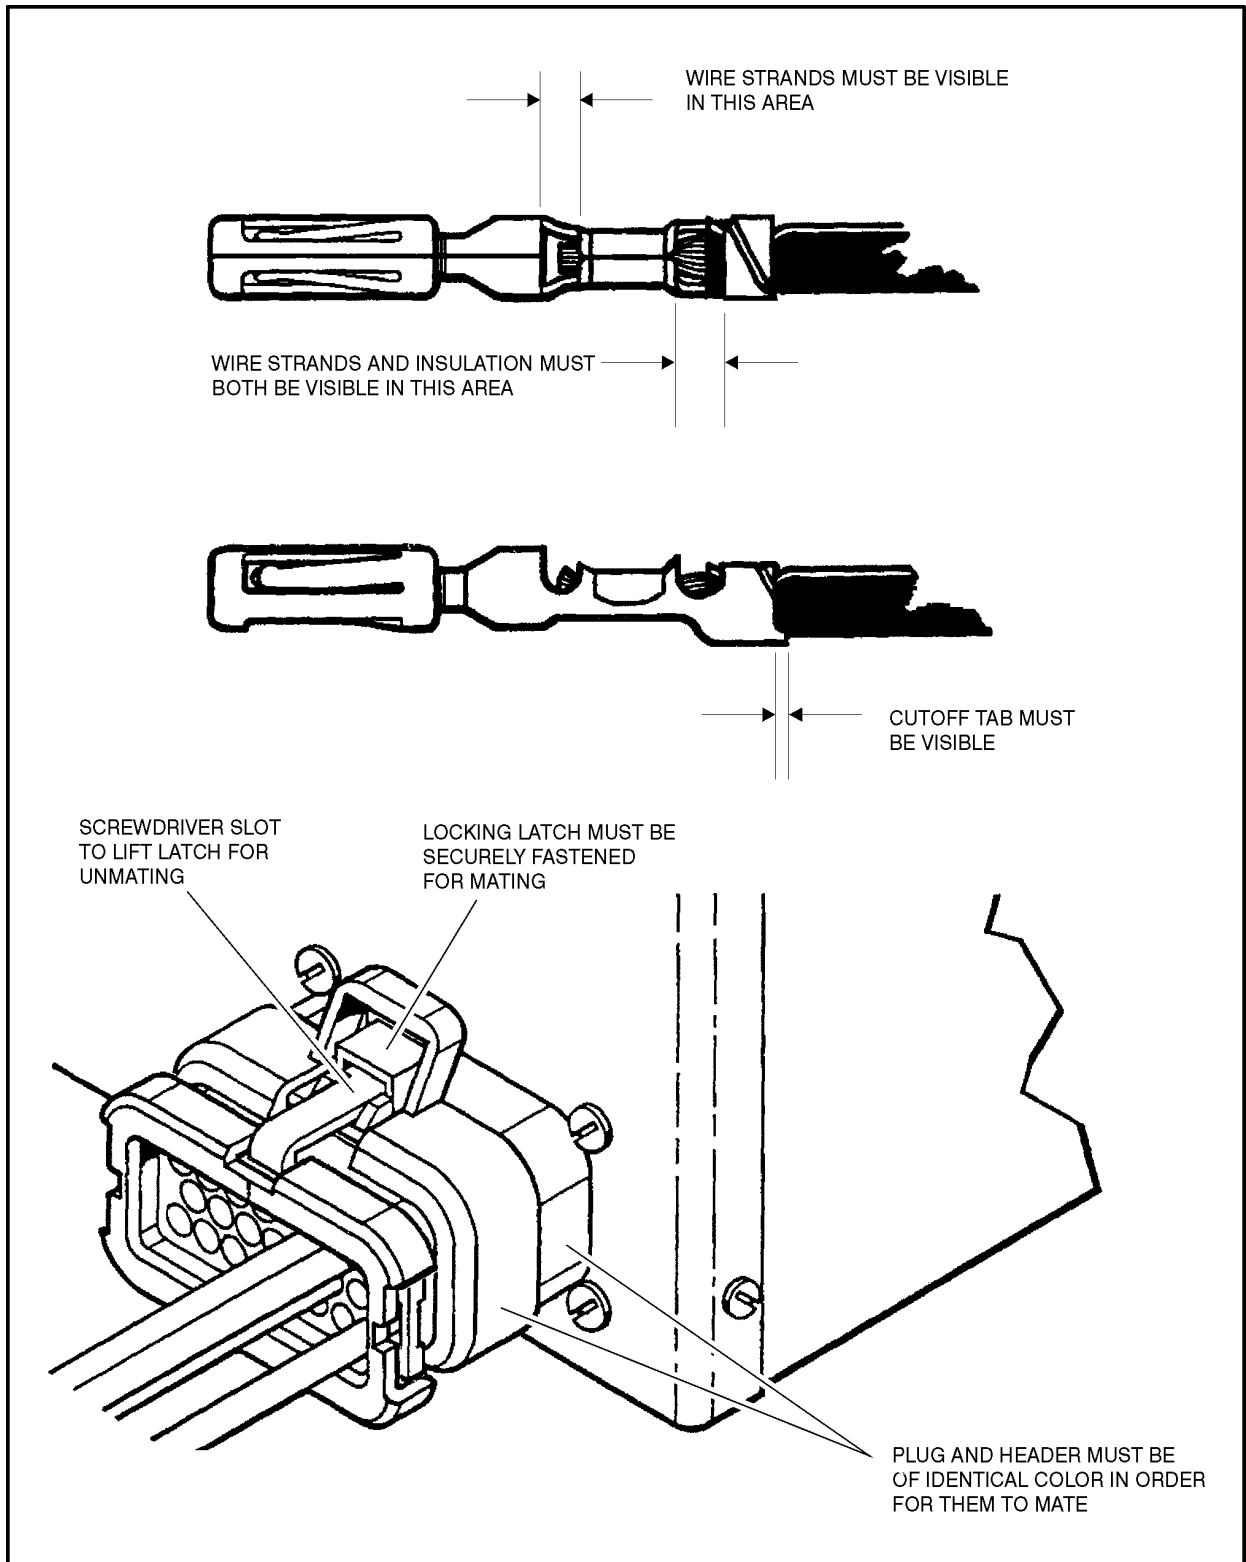


Figure 7-11. Connector Installation

7.5 DEUTSCH CONNECTORS

DT/DTP Series Assembly

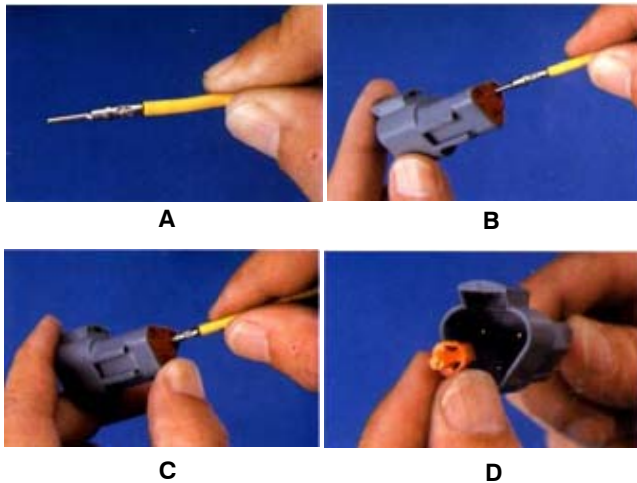


Figure 7-12. DT/DTP Contact Installation

1. Grasp crimped contact about 25mm behind the contact barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a click is felt. A slight tug will confirm that it is properly locked in place.
4. Once all contacts are in place, insert wedgelock with arrow pointing toward exterior locking mechanism. The wedgelock will snap into place. Rectangular wedges are not oriented. They may go in either way.

NOTE: The receptacle is shown - use the same procedure for plug.

DT/DTP Series Disassembly

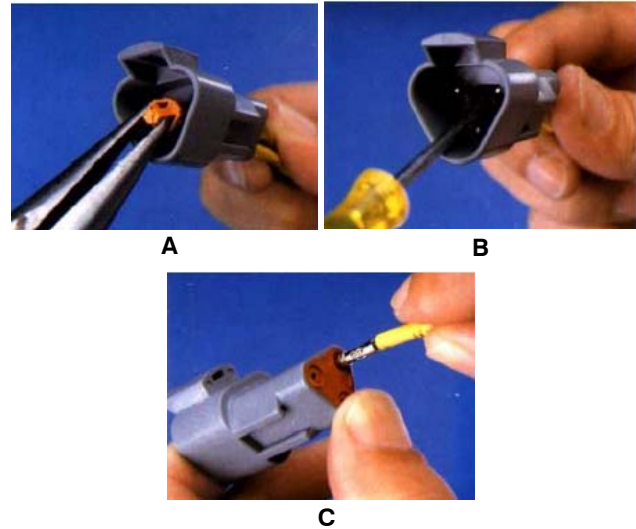


Figure 7-13. DT/DTP Contact Removal

1. Remove wedgelock using needle-nose pliers or a hook shaped wire to pull wedge straight out.
2. To remove the contacts, gently pull wire backwards, while at the same time releasing the locking finger by moving it away from the contact with a screwdriver.
3. Hold the rear seal in place, as removing the contact may displace the seal.

HD30/HDP20 Series Assembly

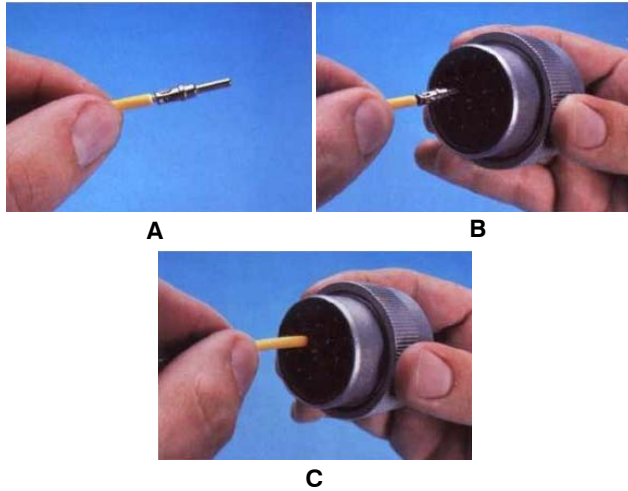


Figure 7-14. HD/HDP Contact Installation

1. Grasp contact about 25mm behind the contact crimp barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a positive stop is felt. A slight tug will confirm that it is properly locked in place.

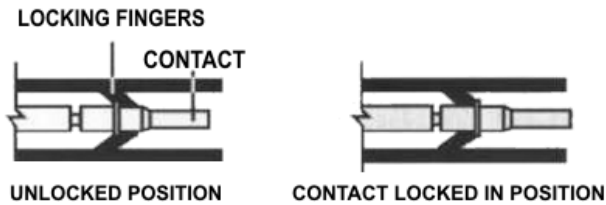


Figure 7-15. HD/HDP Locking Contacts Into Position

NOTE: For unused wire cavities, insert sealing plugs for full environmental sealing

HD30/HDP20 Series Disassembly

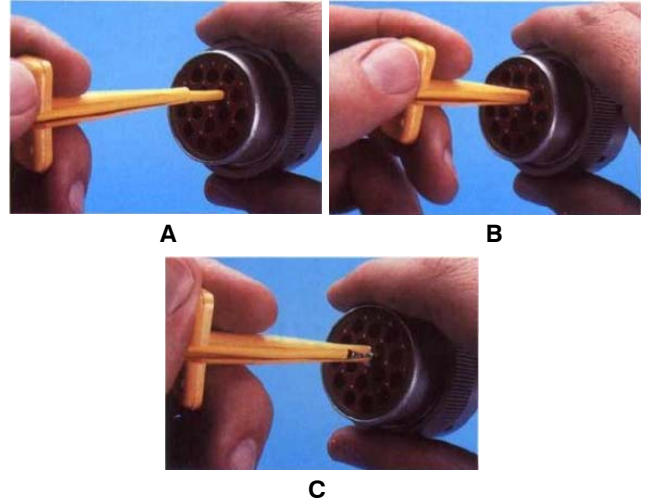


Figure 7-16. HD/HDP Contact Removal

1. With rear insert toward you, snap appropriate size extractor tool over the wire of contact to be removed.
2. Slide tool along into the insert cavity until it engages contact and resistance is felt.
3. Pull contact-wire assembly out of connector.

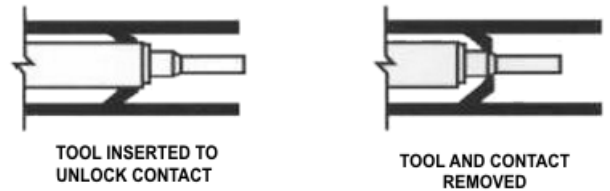


Figure 7-17. HD/HDP Unlocking Contacts

NOTE: Do Not twist or insert tool at an angle.

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

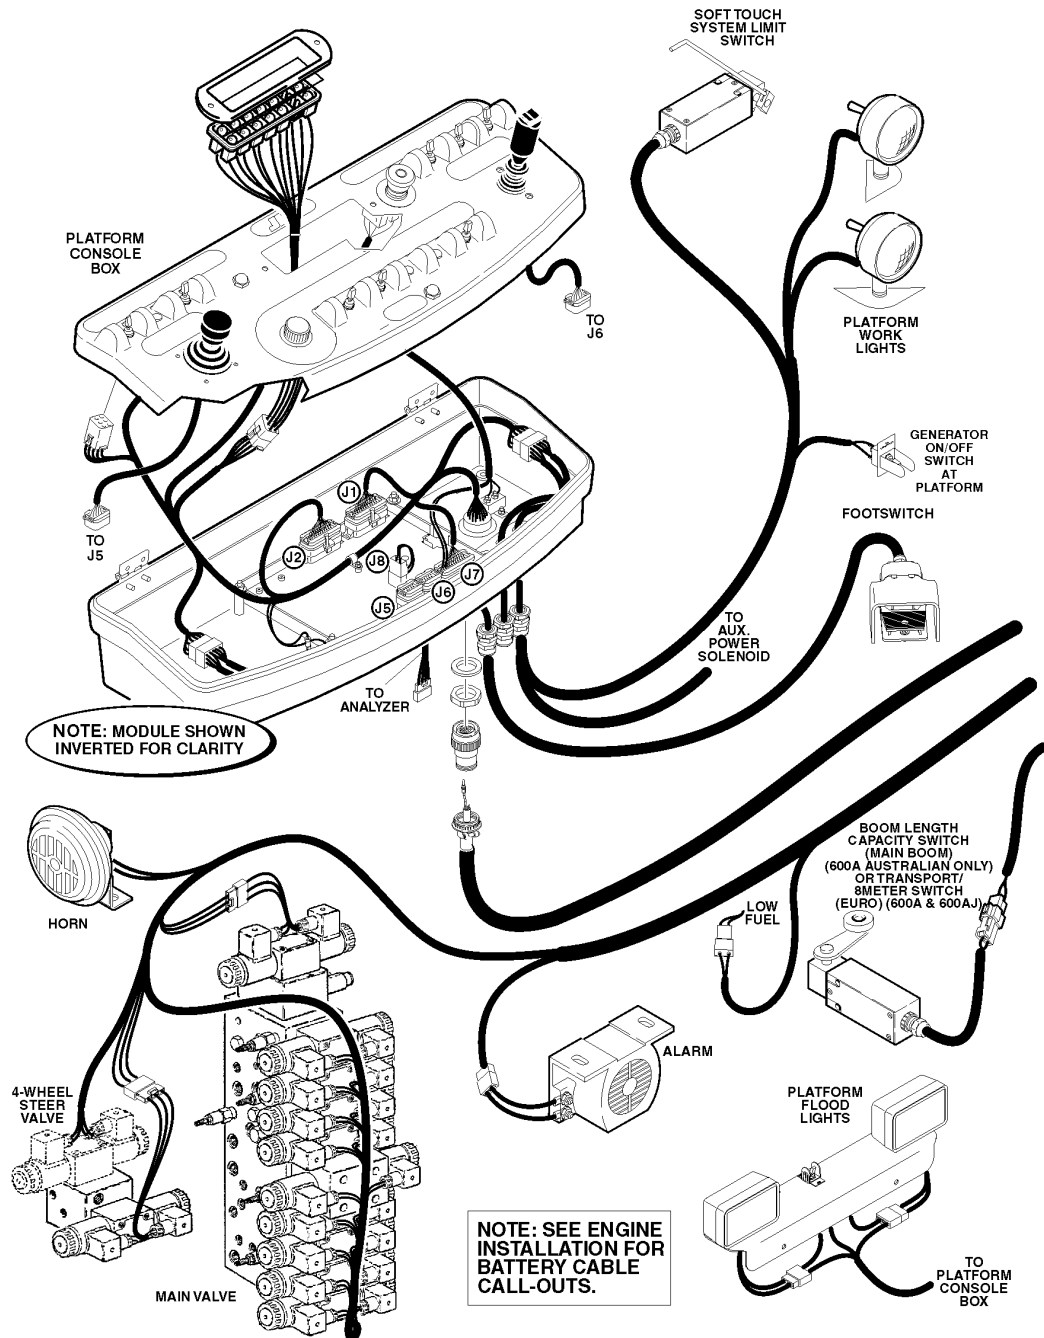


Figure 7-18. Electrical Harness - S/N 80000 to 87000 - Sheet 1 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

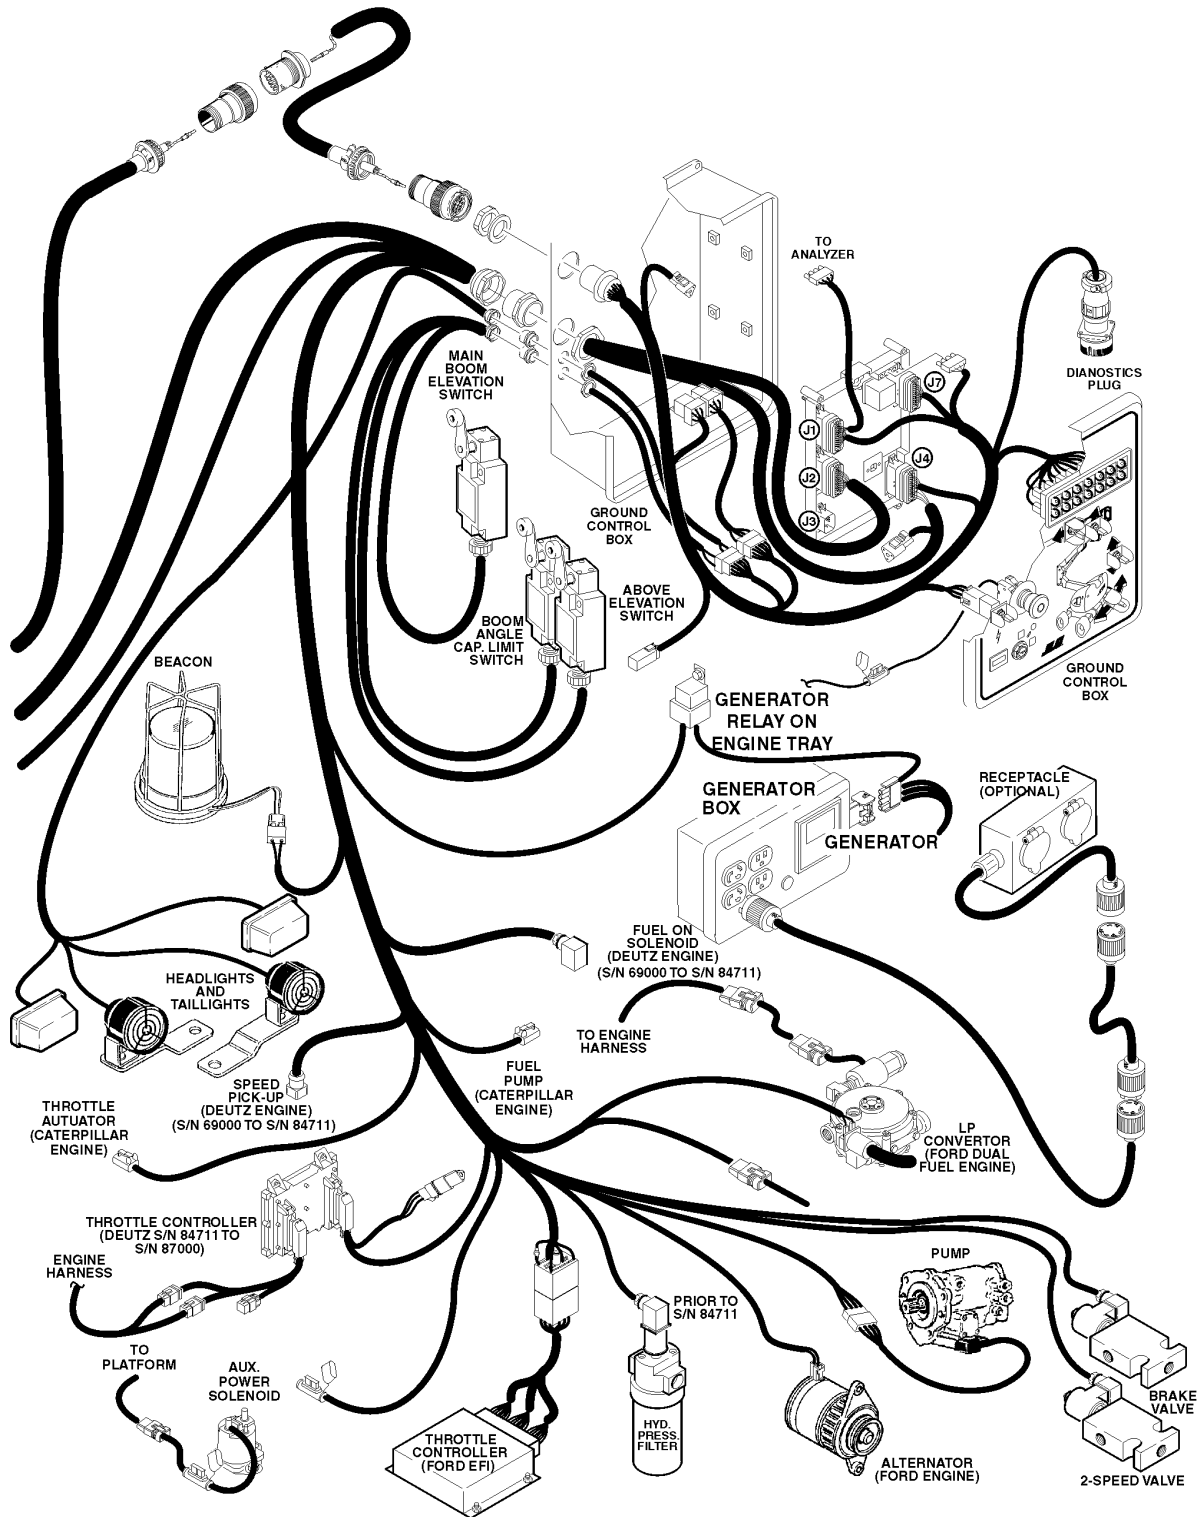


Figure 7-19. Electrical Harness - S/N 80000 to 87000 - Sheet 2 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

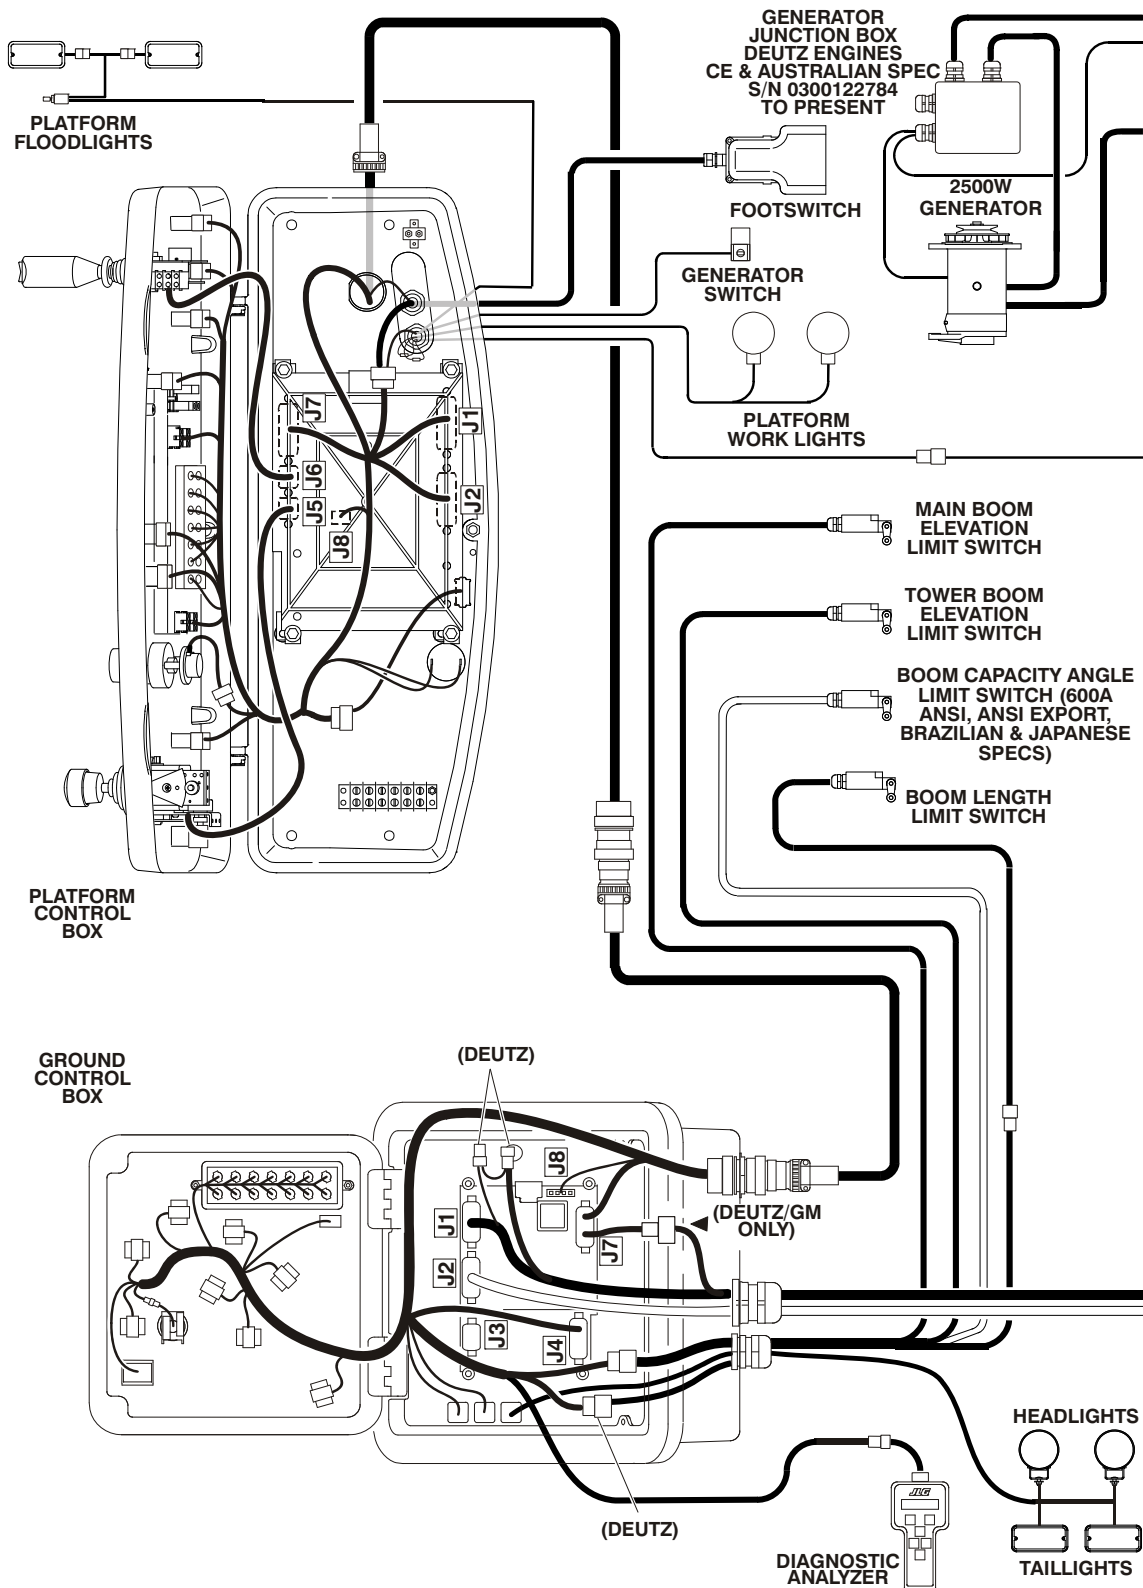


Figure 7-20. Electrical Harness - S/N 87000 to Present - Sheet 1 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


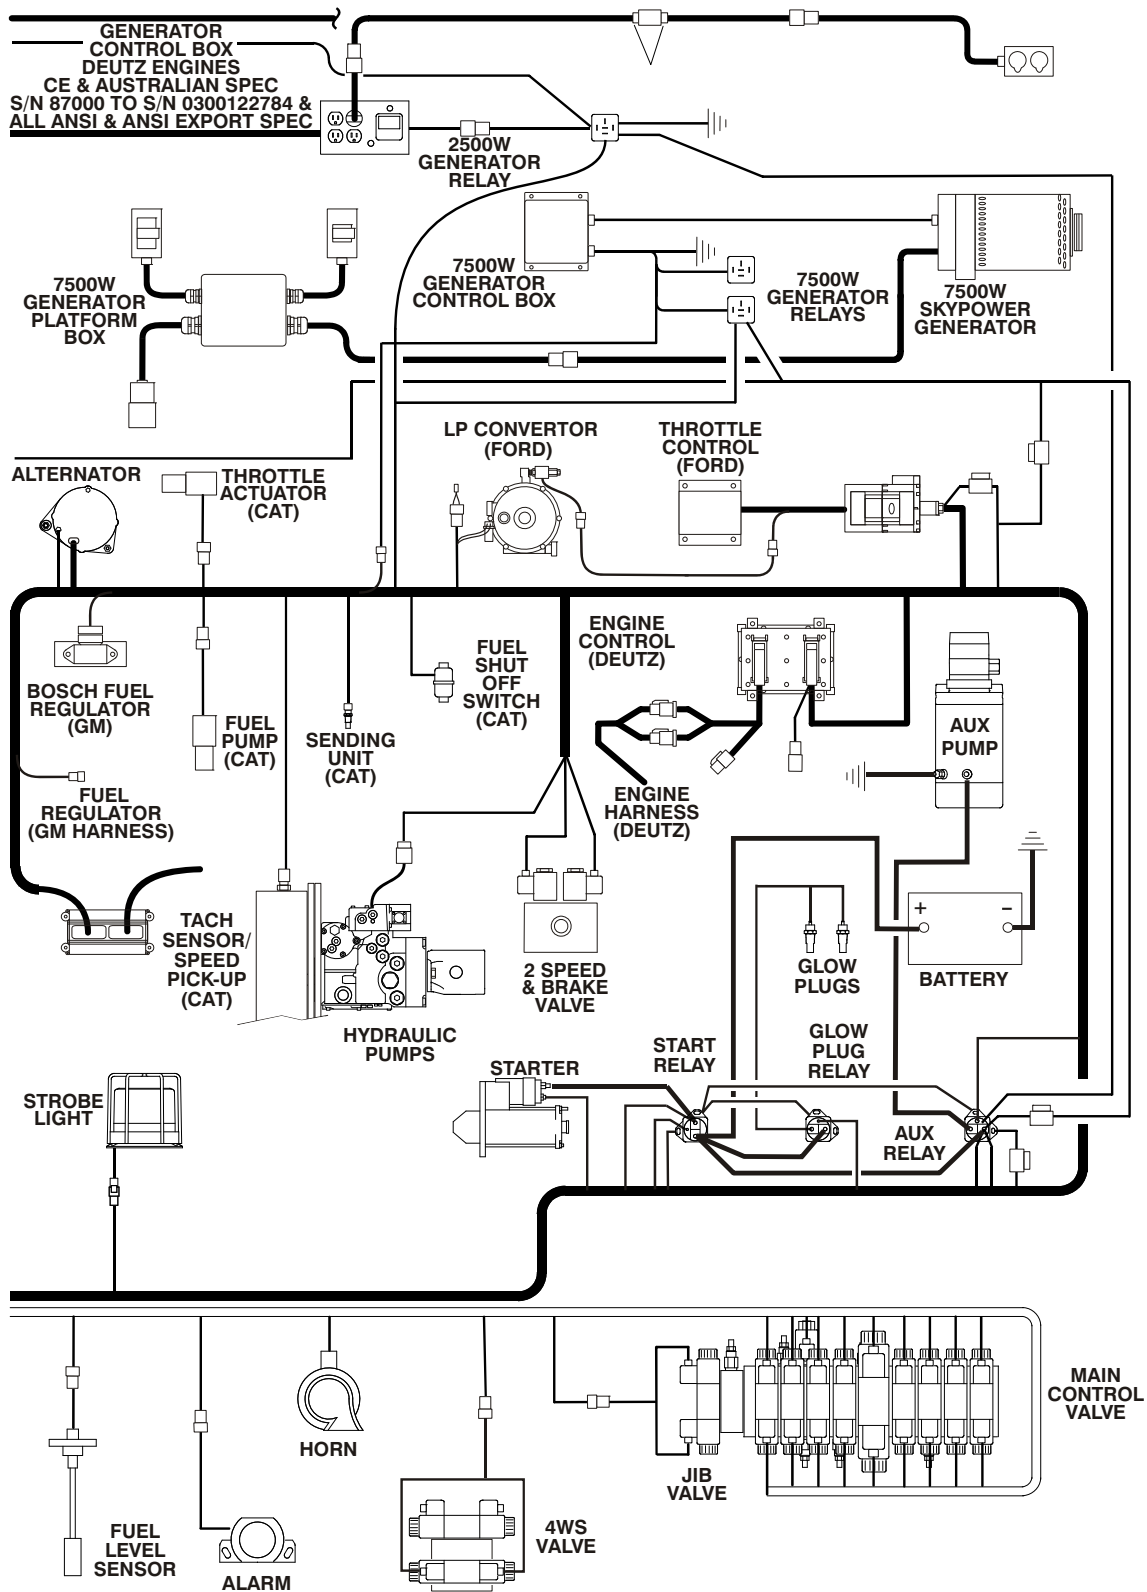


Figure 7-21. Electrical Harness - S/N 87000 to Present - Sheet 2 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

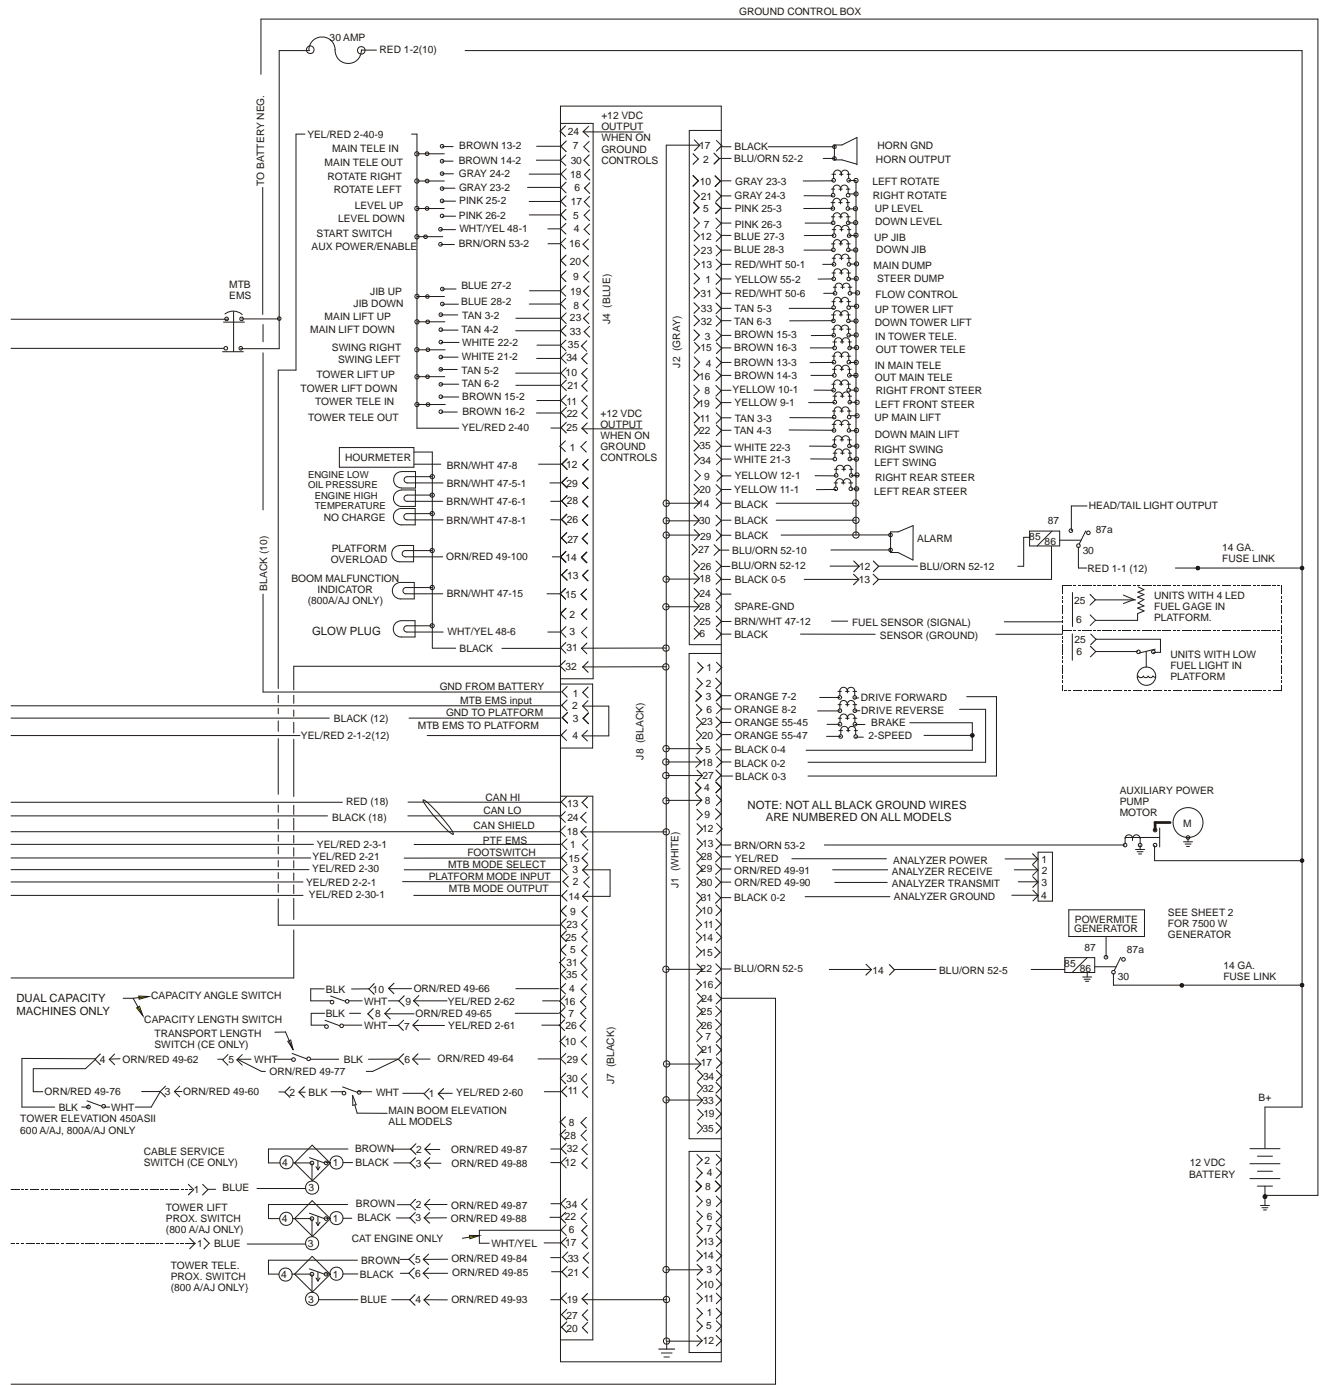

1870215 B

Figure 7-23. Electrical Schematic - ADE - Sheet 2 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


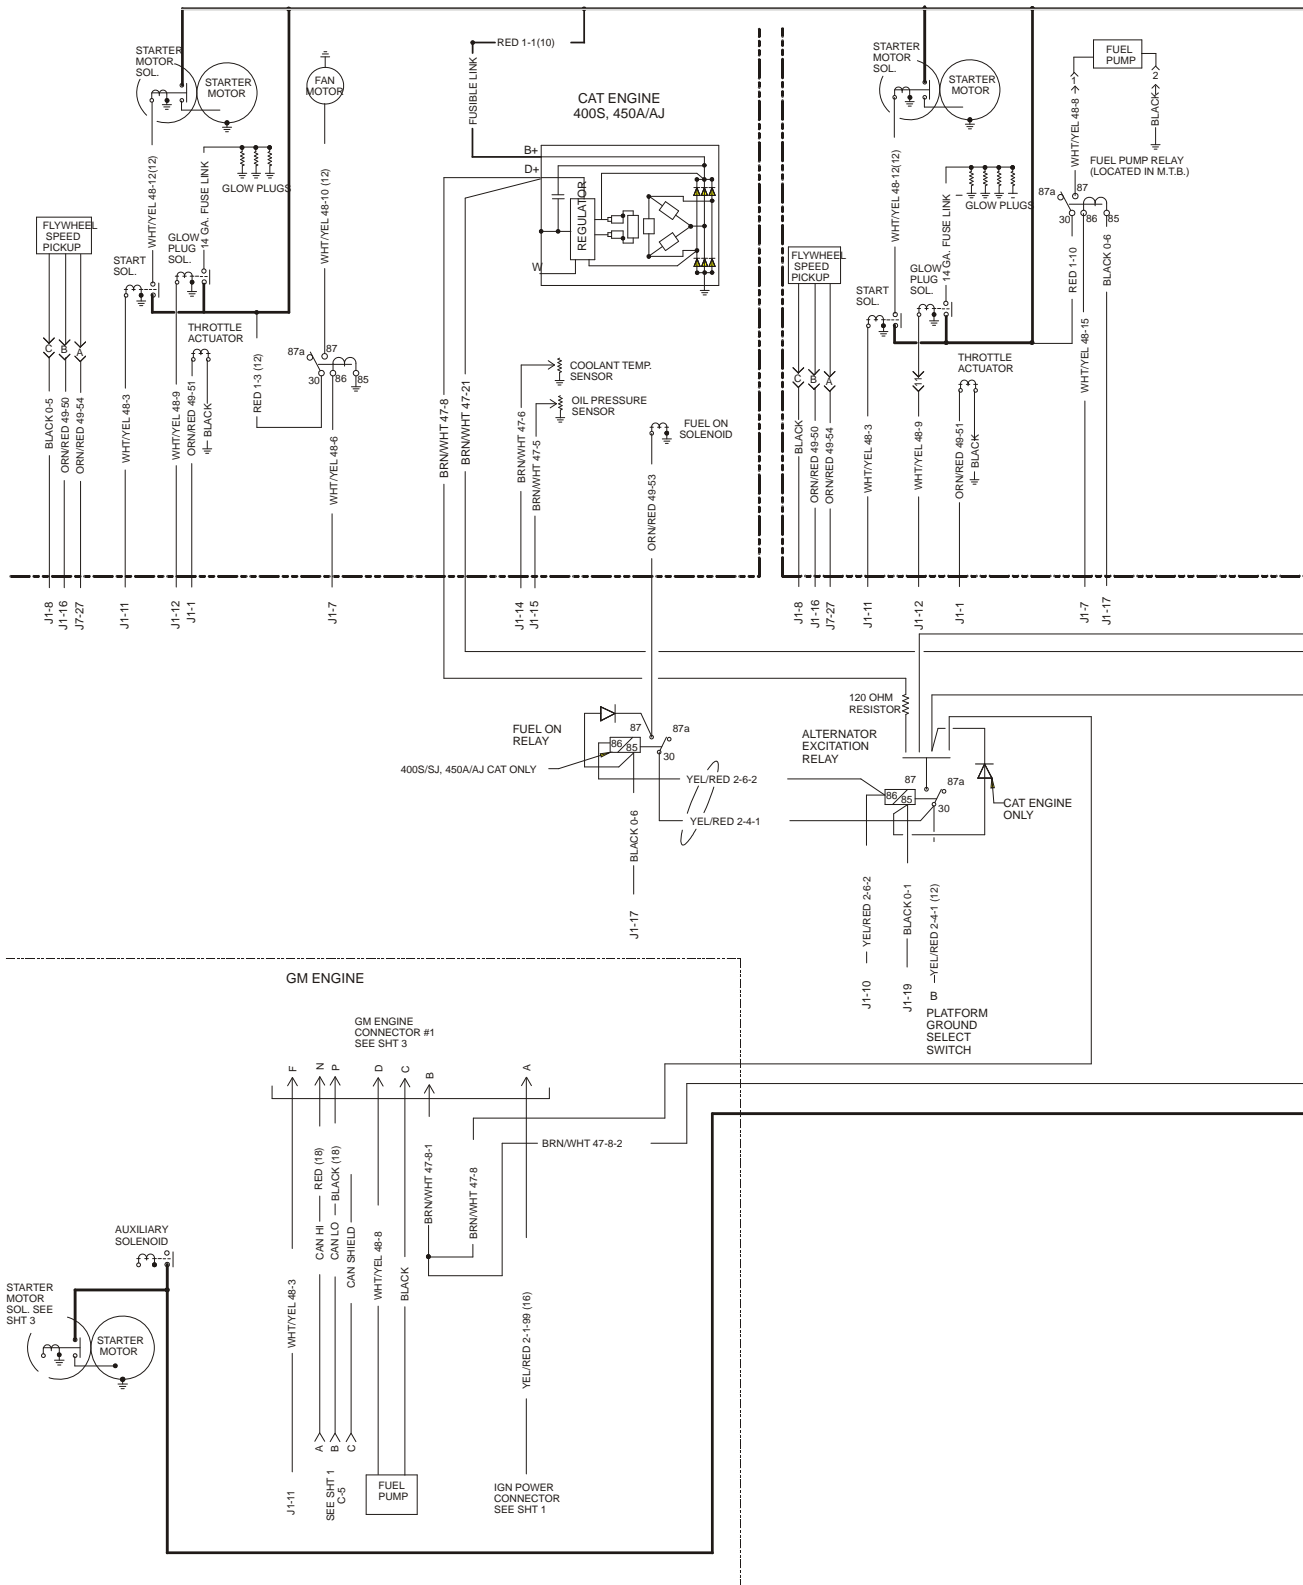


Figure 7-24. Electrical Schematic - ADE - Sheet 3 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

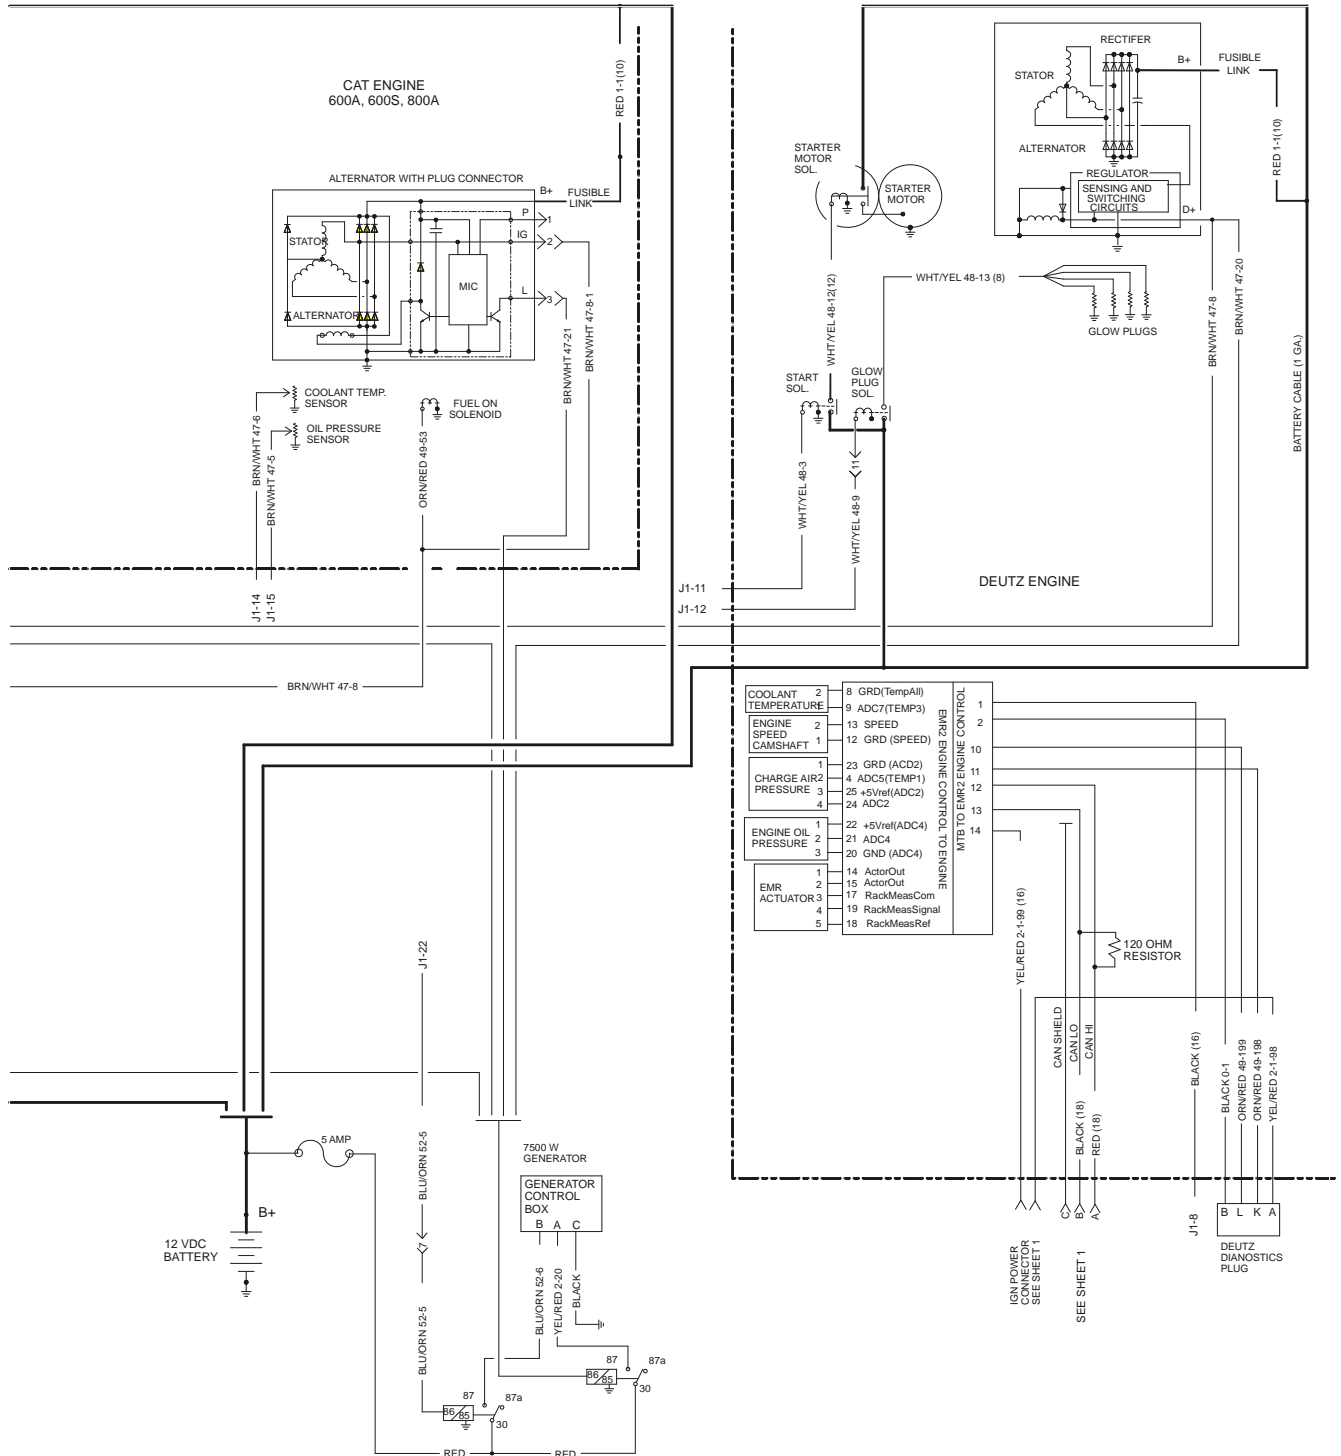

1870215 B

Figure 7-25. Electrical Schematic - ADE - Sheet 4 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


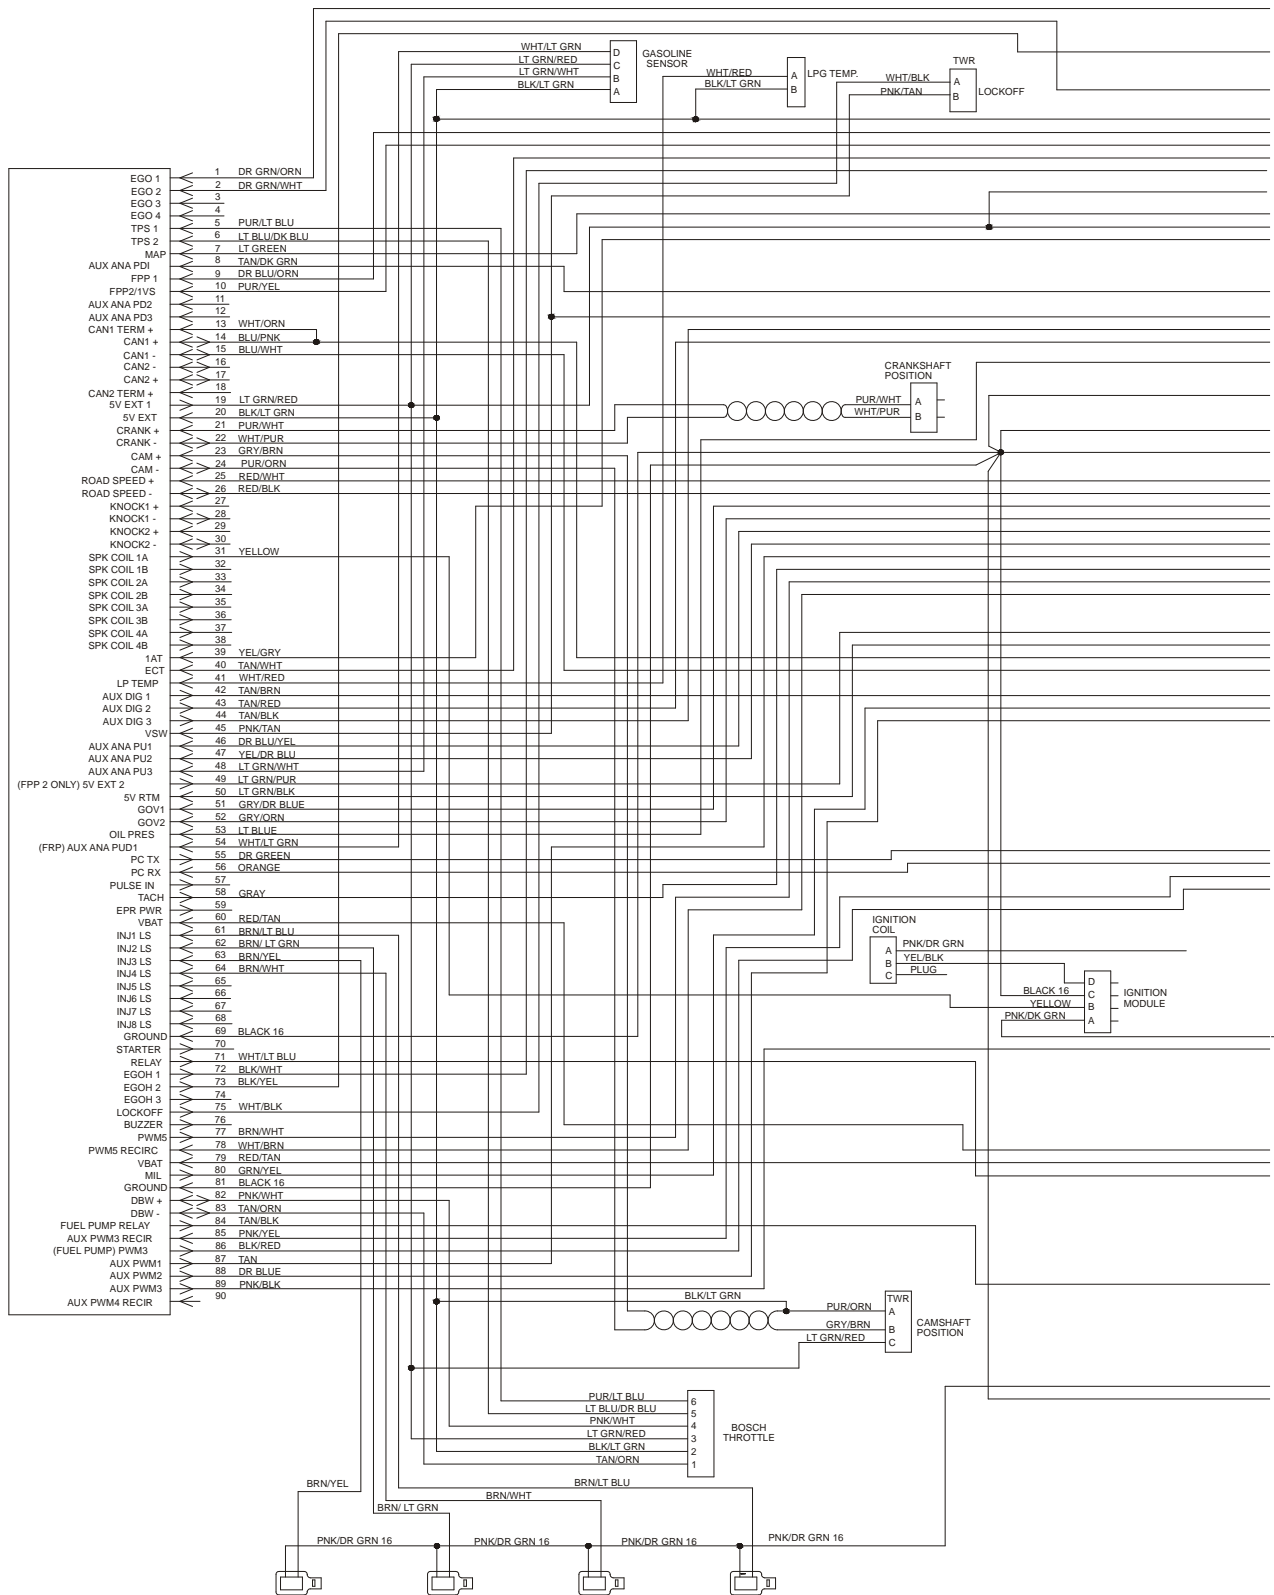


Figure 7-26. Electrical Schematic - ADE - Sheet 5 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

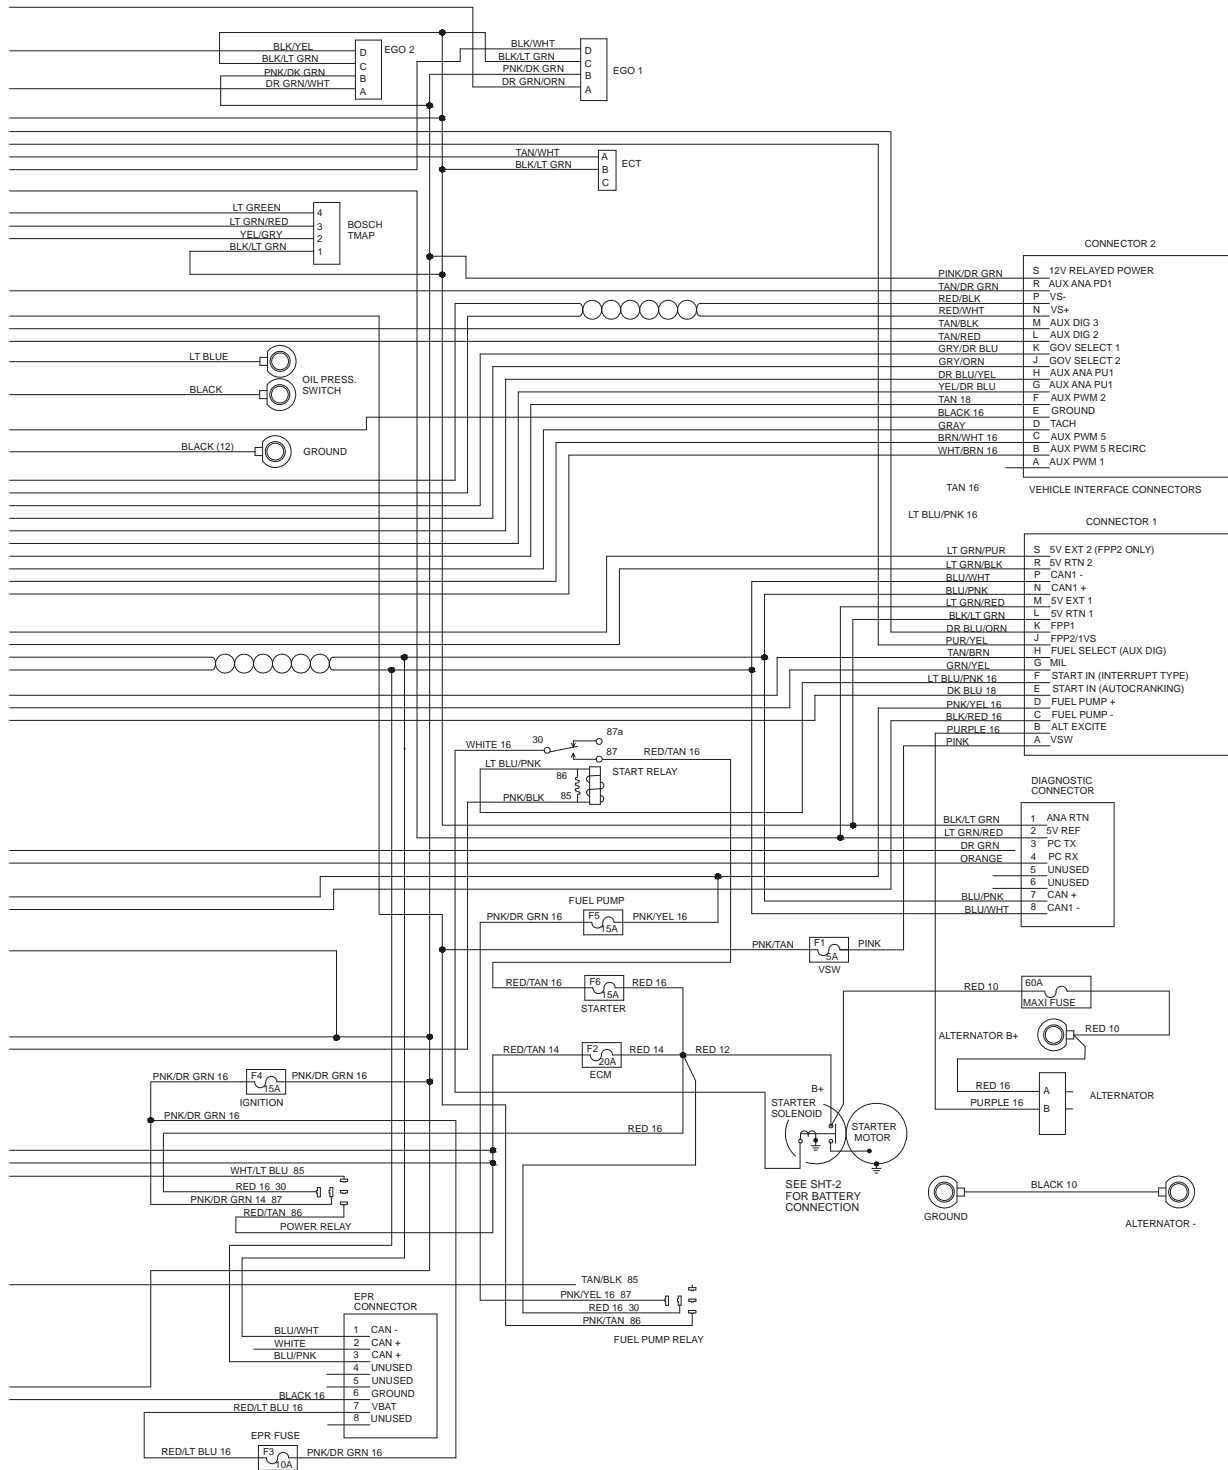

1870215 B

Figure 7-27. Electrical Schematic - ADE - Sheet 6 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

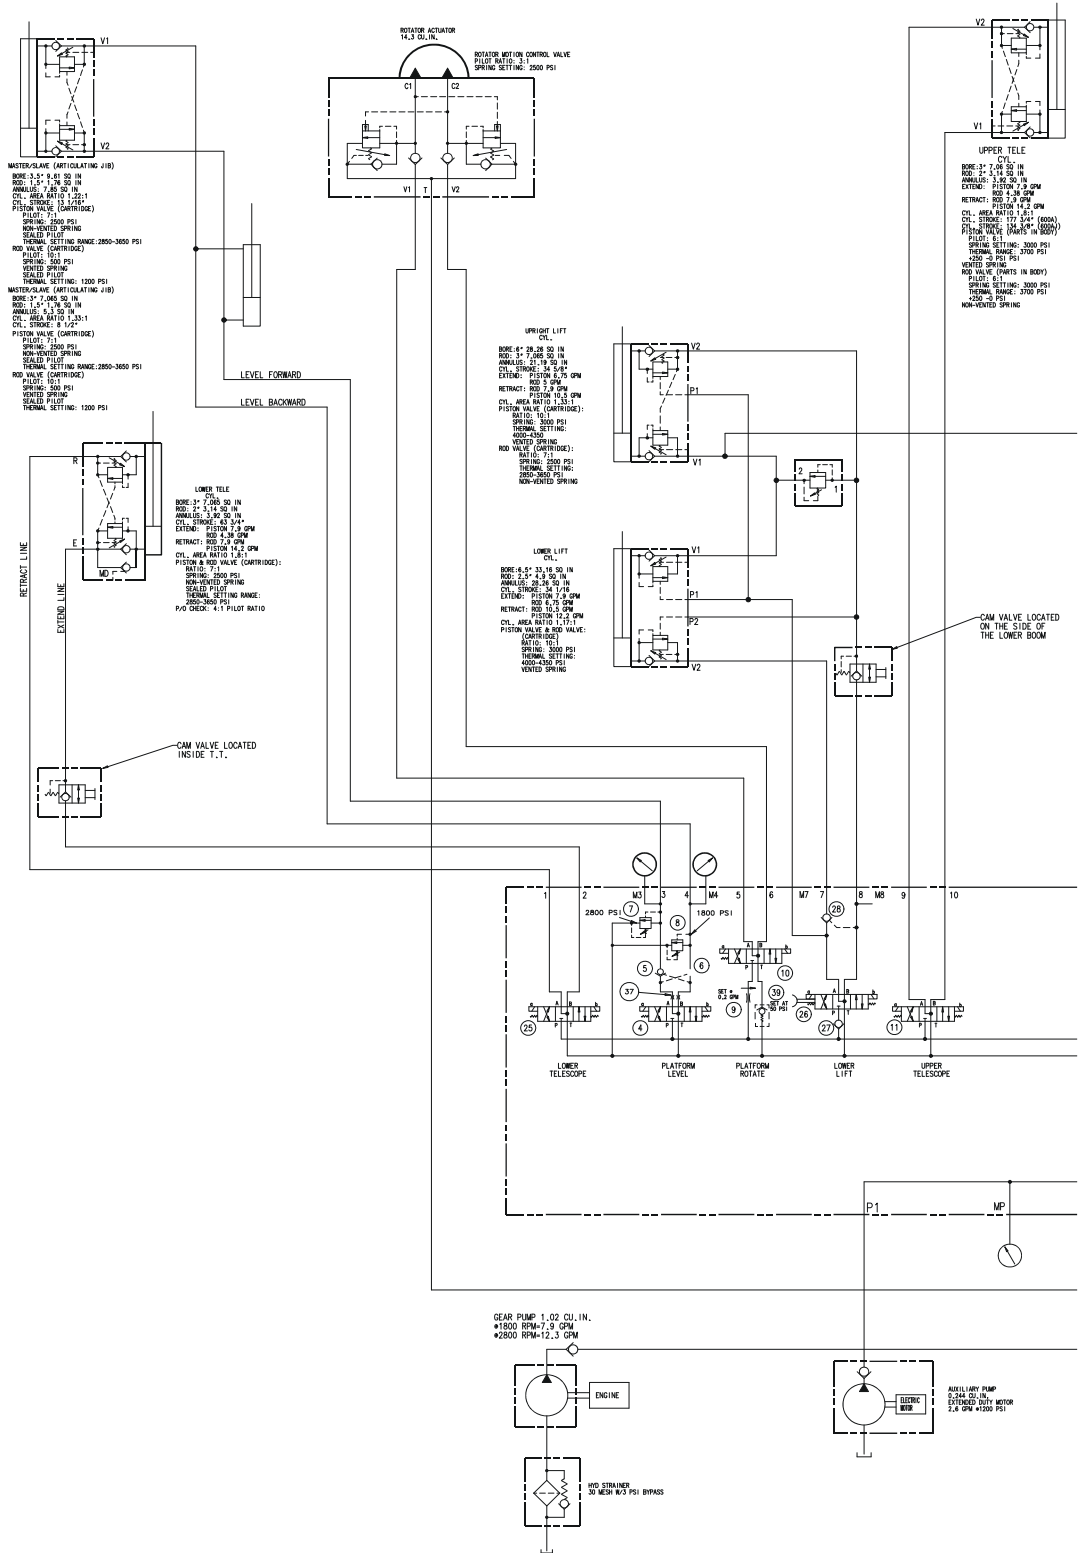


Figure 7-28. Hydraulic Schematic - Sheet 1 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

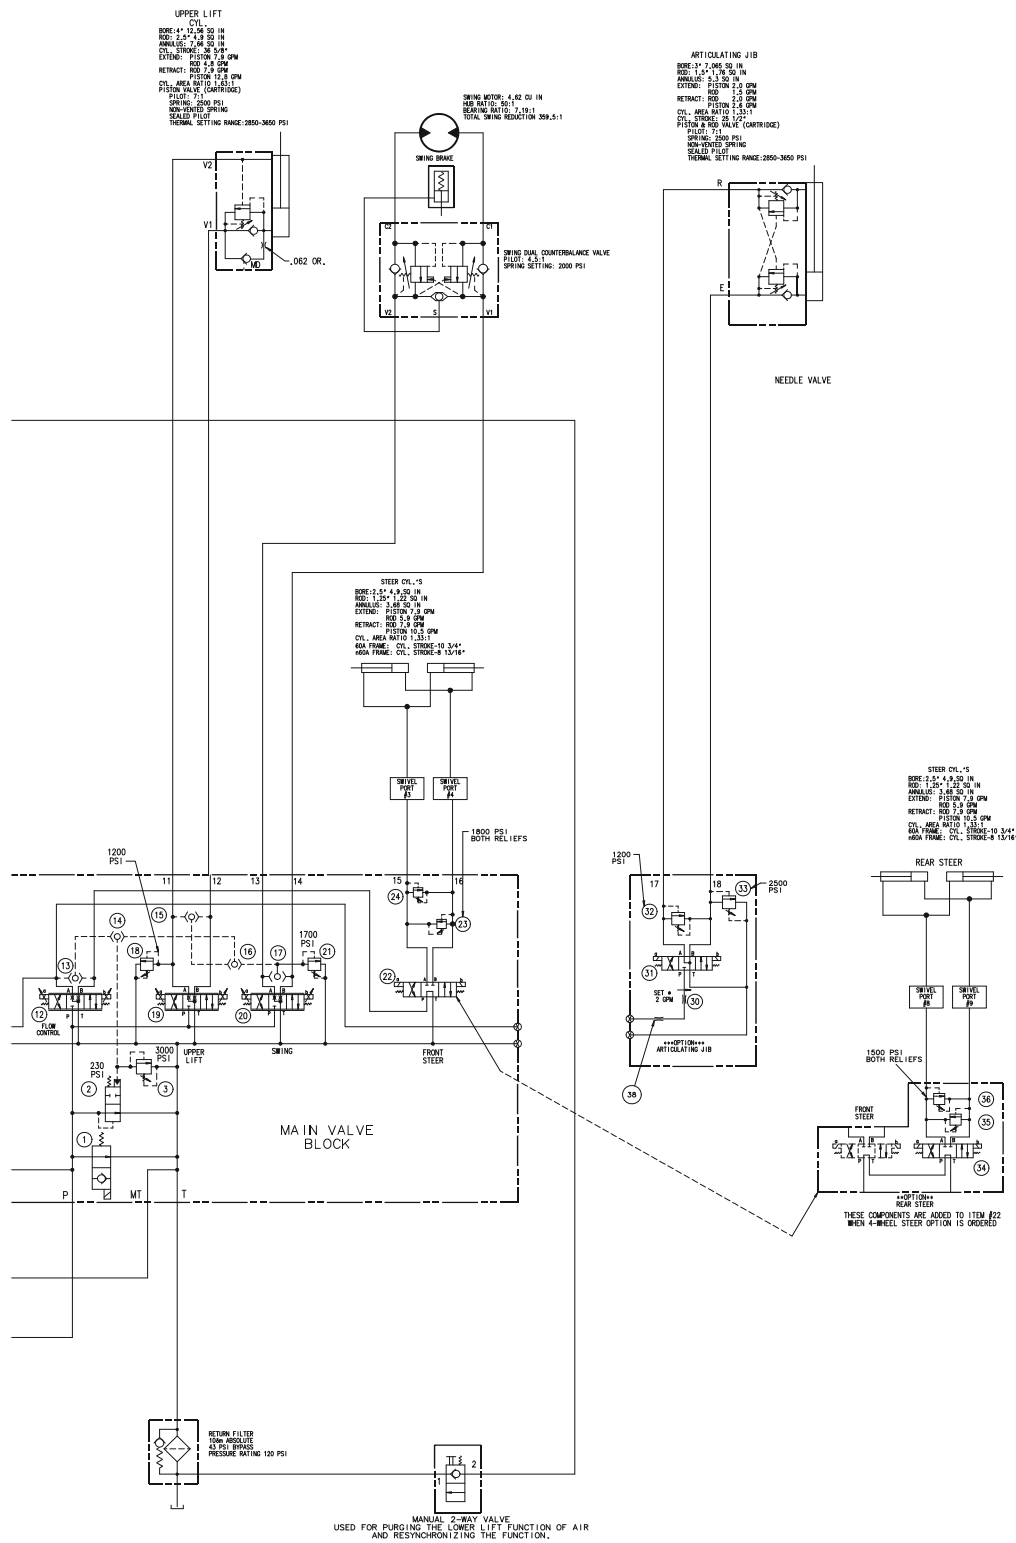


Figure 7-29. Hydraulic Schematic - Sheet 2 of 6

2792691A

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


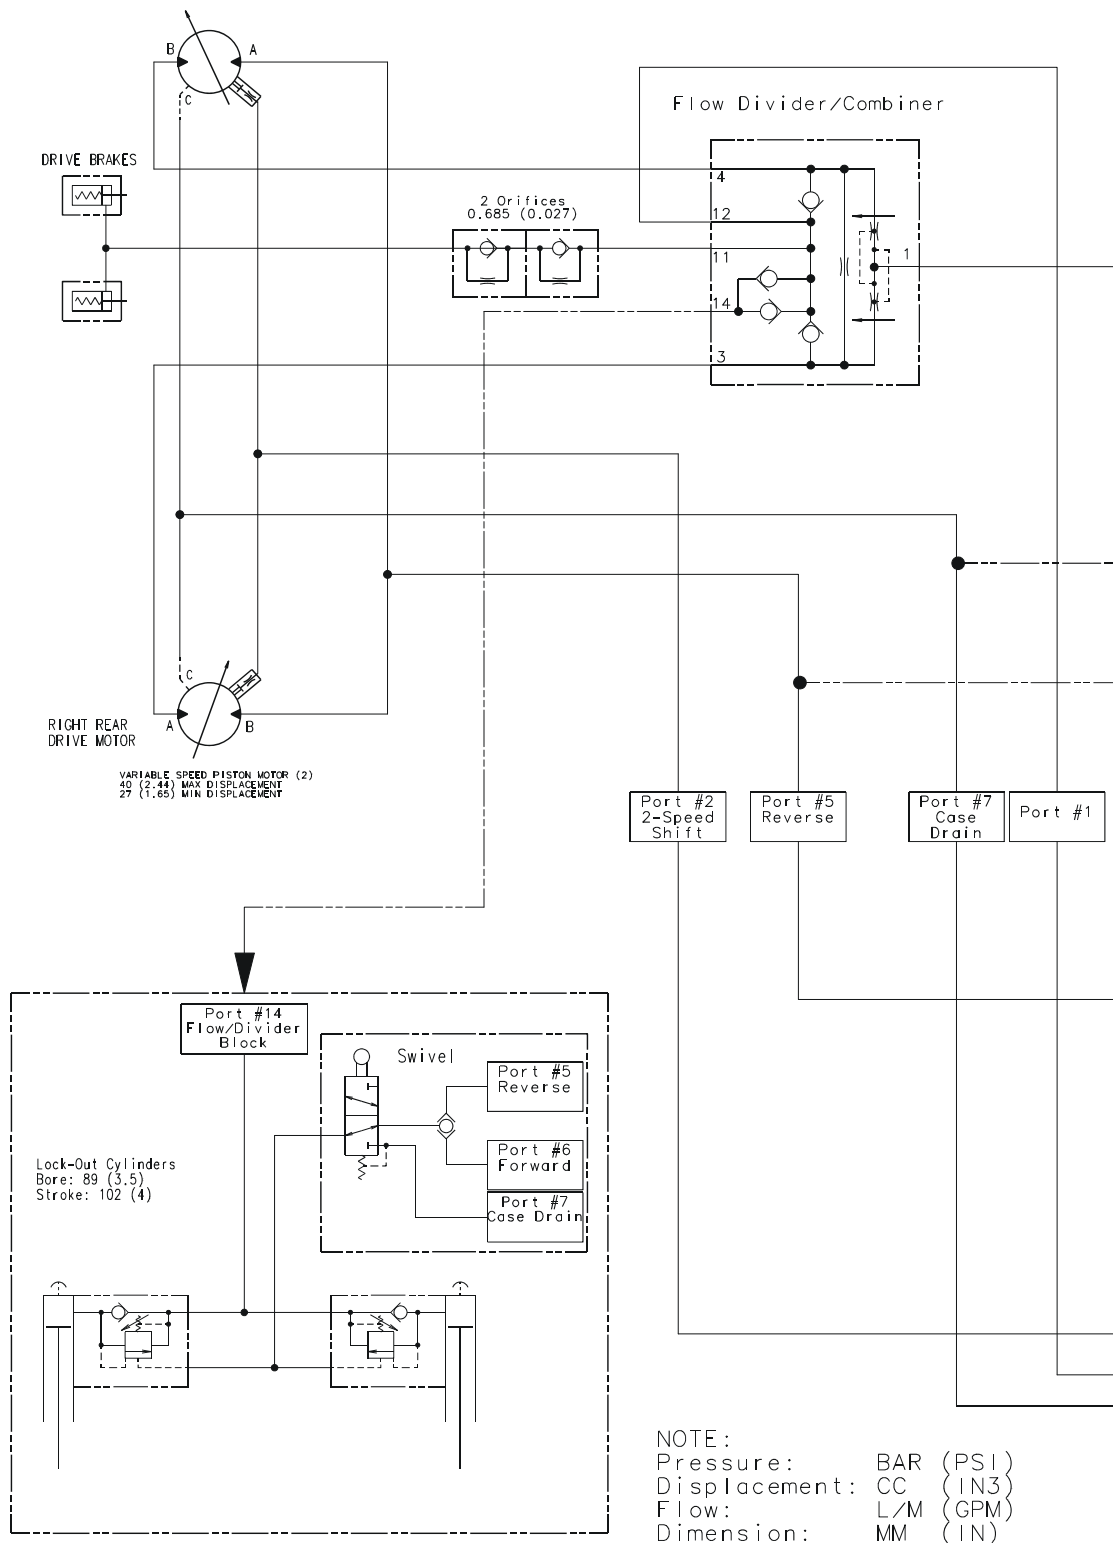


Figure 7-30. Hydraulic Schematic - Sheet 3 of 6

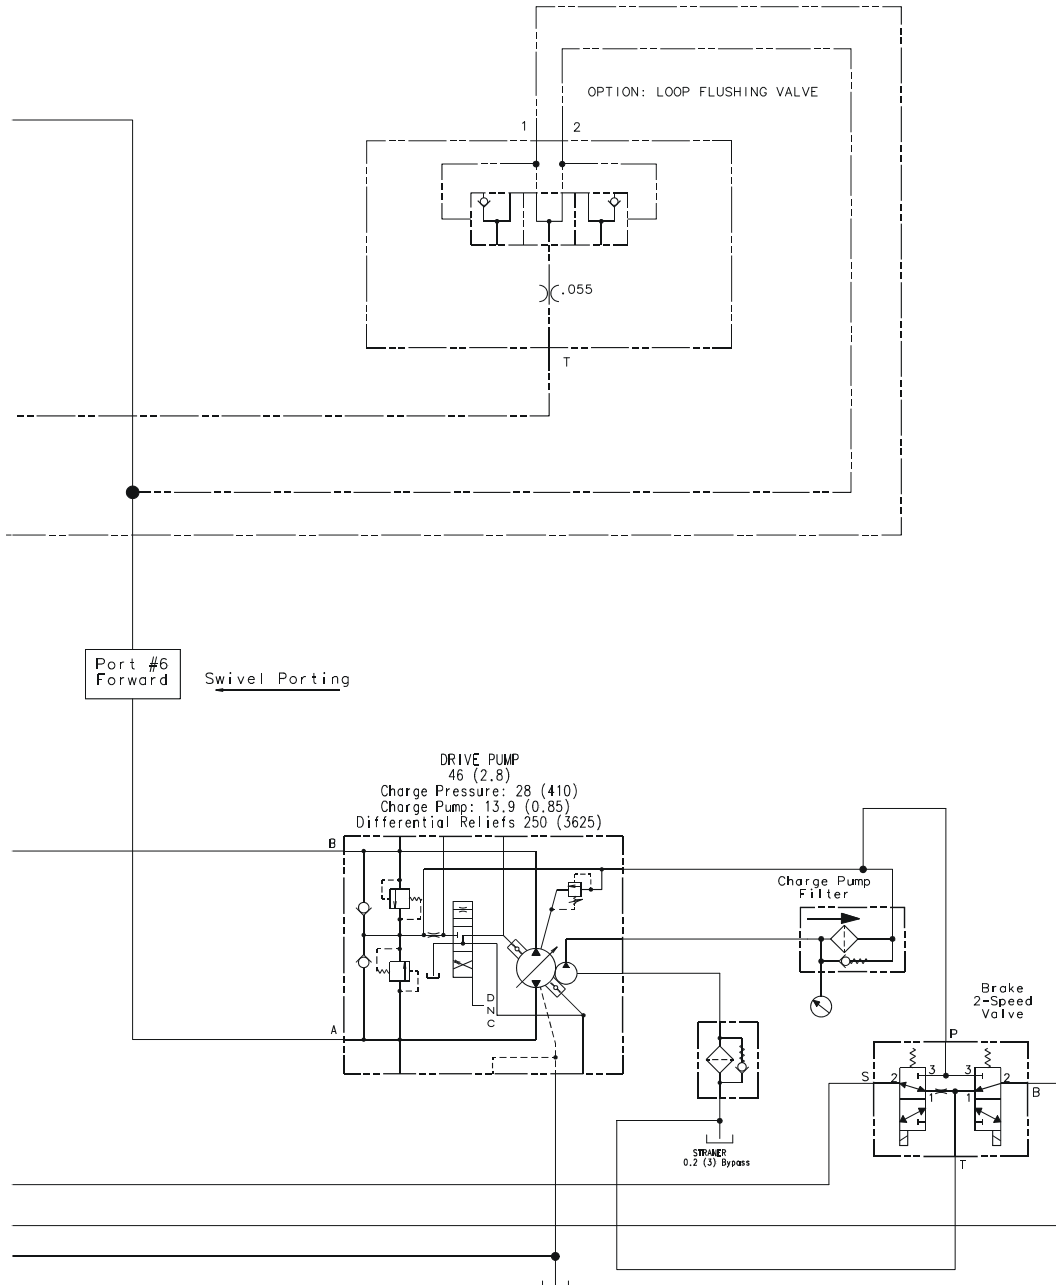

2792691A

Figure 7-31. Hydraulic Schematic - Sheet 4 of 6

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


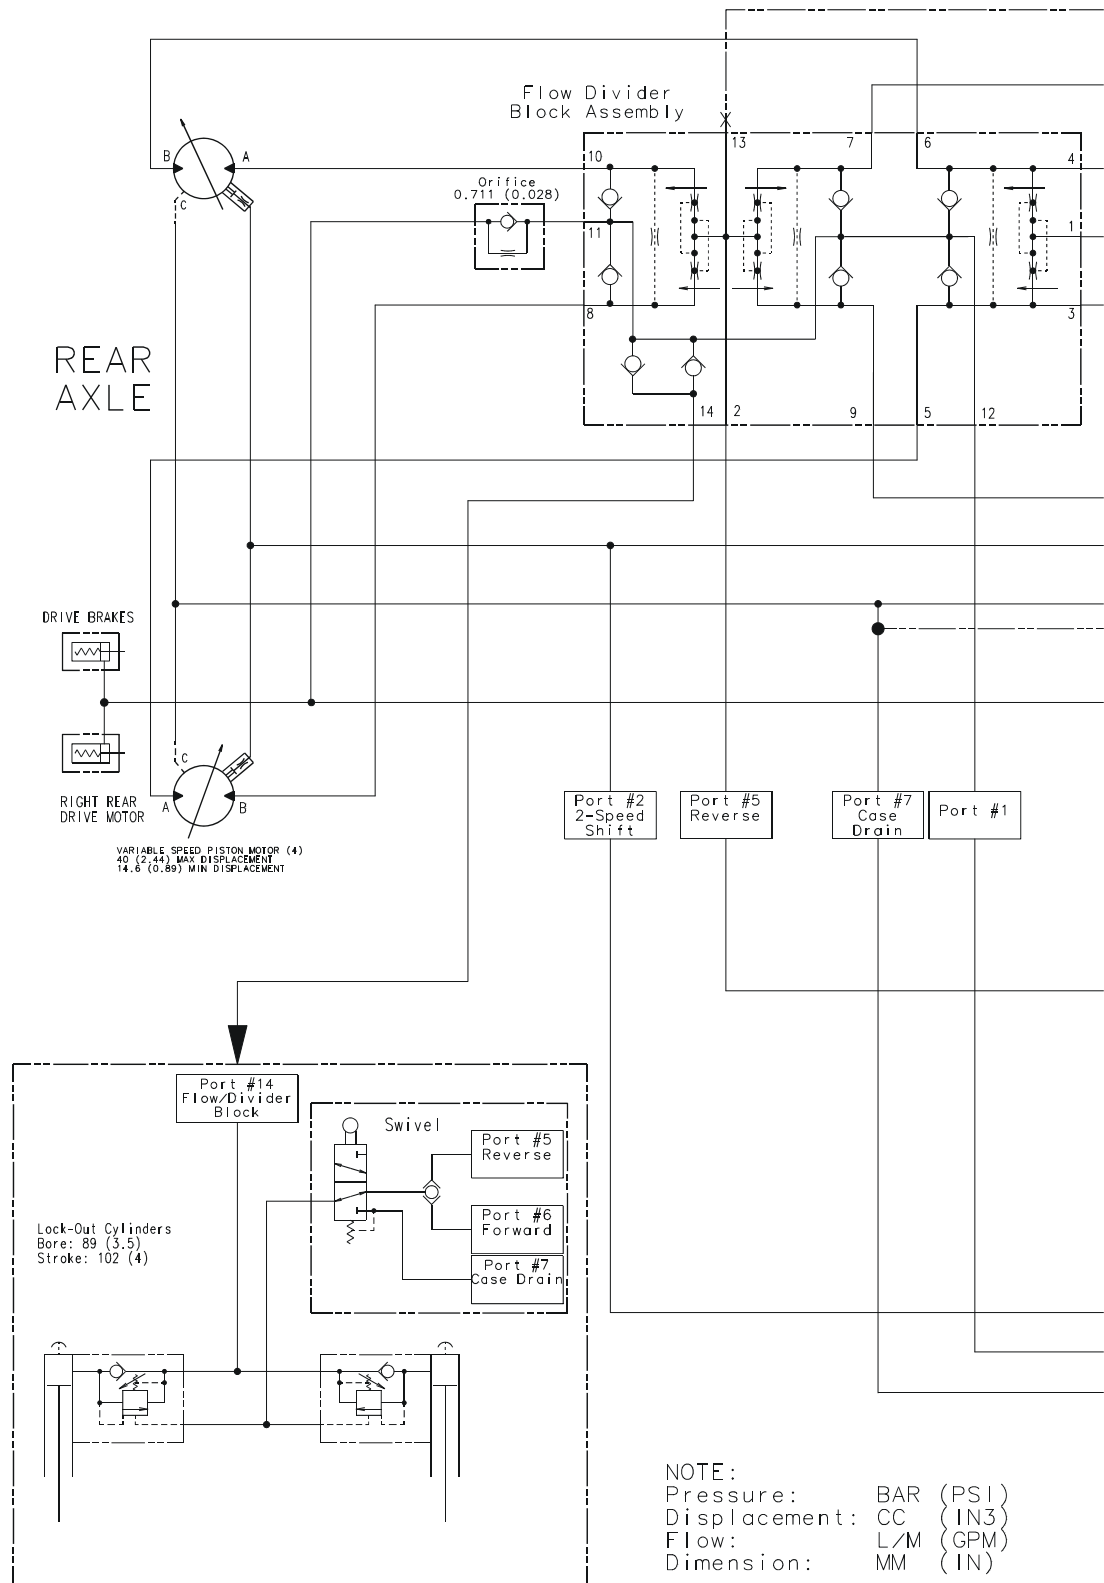


Figure 7-32. Hydraulic Schematic - Sheet 5 of 6

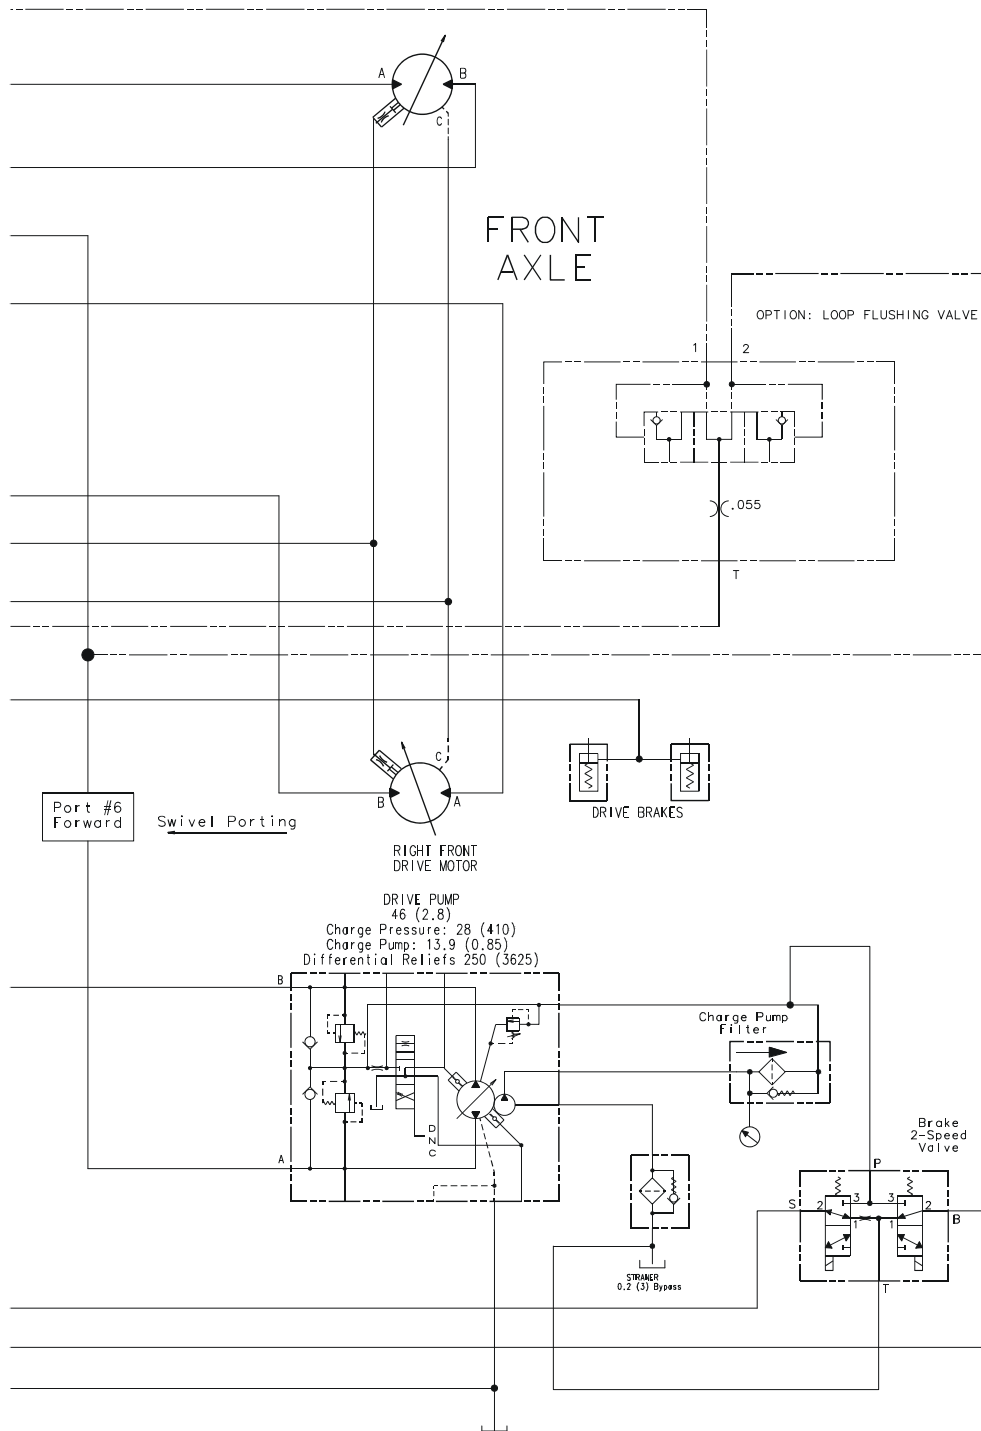

2792691A

Figure 7-33. Hydraulic Schematic - Sheet 6 of 6

PROPOSITION 65 WARNING

- **Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.**
- **Batteries also contain other chemicals known to the State of California to cause cancer.**
- **Wash hands after handling.**



WARNING:



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

1702961



3121201



An Oshkosh Corporation Company

Corporate Office
JLG Industries, Inc.
1 JLG Drive
McConnellsburg PA. 17233-9533
USA

☎ (717) 485-5161

📠 (717) 485-6417

JLG Worldwide Locations

JLG Industries (Australia)
P.O. Box 5119
11 Bolwarra Road
Port Macquarie
N.S.W. 2444
Australia

☎ +61 2 65 811111

📠 +61 2 65813058

JLG Latino Americana Ltda.
Rua Eng. Carlos Stevenson,
80-Suite 71
13092-310 Campinas-SP
Brazil

☎ +55 19 3295 0407

📠 +55 19 3295 1025

JLG Industries (UK) Ltd
Bentley House
Bentley Avenue
Middleton
Greater Manchester
M24 2GP - England

☎ +44 (0)161 654 1000

📠 +44 (0)161 654 1001

JLG France SAS
Z.I. de Baulieu
47400 Fauillet
France

☎ +33 (0)5 53 88 31 70

📠 +33 (0)5 53 88 31 79

JLG Deutschland GmbH
Max-Planck-Str. 21
D - 27721 Ritterhude - Ihlpohl
Germany

☎ +49 (0)421 69 350 20

📠 +49 (0)421 69 350 45

JLG Equipment Services Ltd.
Rm 1107 Landmark North
39 Lung Sum Avenue
Sheung Shui N. T.
Hong Kong

☎ (852) 2639 5783

📠 (852) 2639 5797

JLG Industries (Italia) s.r.l.
Via Po. 22
20010 Pregnana Milanese - MI
Italy

☎ +39 029 359 5210

📠 +39 029 359 5845

Oshkosh-JLG Singapore
Technology Equipment Pte
Ltd
29 Tuas Ave 4,
Jurong Industrial Estate
Singapore, 639379

☎ +65-6591 9030

📠 +65-6591 9031

Plataformas Elevadoras
JLG Iberica, S.L.
Trapadella, 2
P.I. Castellbisbal Sur
08755 Castellbisbal, Barcelona
Spain

☎ +34 93 772 4700

📠 +34 93 771 1762

JLG Sverige AB
Enkopingsvagen 150
Box 704
SE - 176 27 Jarfalla
Sweden

☎ +46 (0)850 659 500

📠 +46 (0)850 659 534